



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 12S802. You'll find the answers to all your questions on the BRIGGS & STRATTON 12S802 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 12S802**  
**User guide BRIGGS & STRATTON 12S802**  
**Operating instructions BRIGGS & STRATTON 12S802**  
**Instructions for use BRIGGS & STRATTON 12S802**  
**Instruction manual BRIGGS & STRATTON 12S802**

FORM MS-0028-897  
REPLACES FORM MS-0028-497  
FILE IN SECTION 3 OF SERVICE MANUAL

**12S800 to 12S899**

## Illustrated Parts List

### Model Series

### 12S800 to 12S899

#### TYPE NUMBERS

0657, 0610, 0612,  
0615, 0616, 0639,  
0644, 0646, 0652,  
0655, 0658, 0661,  
0684 through 0676,  
0684 through 0699,  
0900 through 0908,  
1111, 1116,  
1121 through 1128,  
1134 through 1141,  
1164, 1165, 1166,  
1168, 1521, 1566,  
1567.

#### TO FIND

#### THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the Illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted  
in any form or by any means, electronic or mechanical, including photocopying,  
recording or by any information storage and retrieval system, without permission  
in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 12S802 user guide](http://yourpdfguides.com/dref/3639933)  
<http://yourpdfguides.com/dref/3639933>

**Manual abstract:**

2 OF SERVICE MANUAL 12S800 to 12S899 Illustrated Parts List Model Series 12S800 to 12S899 TYPE NUMBERS 0657, 0810, 0812, 0815, 0816, 0839, 0844, 0846, 0852, 0856, 0858, 0861, 0864 through 0876, 0884 through 0899, 0900 through 0908, 1111, 1116, 1121 through 1128, 1134 through 1141, 1164, 1165, 1166, 1168, 1521, 1566, 1567. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames.

All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. @@@@COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved.

@@NO. 1 2 3 5 PART NO. @@GasketCylinder Head Breather Assembly GasketBreather ScrewHex. TubeBreather ScrewHex. GasketIntake ScrewHex. SealO Ring SealO Ring LeverGovernor Washer REF. NO. 284 306 307 337 383 523 525 562 584 585 592 615 616 227 562 284 847 523 116 525 116A 871 9 10 REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. PART NO. 11 870 307 1058 OWNER'S MANUAL PART NO. 94511 224324 94515 802592 89838 495264 495265 92613 224328 K272238 231082 94474 263175 DESCRIPTION ScrewShoulder ShieldCylinder ScrewHex. Plug-Spark WrenchSpark Plug Dipstick TubeOil Fill BoltGov. Lever CoverBreather Passage GasketBreather NutHex. Retainer CrankGovernor Note 262578 Crank Governor (Used Before Code Date 96090200).

REF. NO. 625 635 847 869 870 871 DESCRIPTION 7 K272916 8 495786 9 K272481 10 94650 11 231933 13 94547 51 K272199 54 94526 116 K280393 116A K280966 227 492349 230 67072 1019 1058 497465 ManifoldIntake 66538 BootSpark Plug 495263 Dipstick/Tube Assembly 213512 SeatValve (Intake) 213513 SeatValve (Exhaust) 262001 BushingGuide (Exhaust Valve) Note 63709 BushingGuide (Intake Valve) 494256 Label Kit 272262 Owner's Manual K Included in Gasket SetPart Number 497316. D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetSee Ref. 977. Included in Valve Overhaul Gasket SetPart No. 498528. 05292 Assemblies include all parts shown in frame 2 97 12S800 to 12S899 25 26 28 27 27 29 32 REF.

NO. 25 PART NO. DESCRIPTION REF. NO. 26 PART NO.

DESCRIPTION REF. NO. 28 PART NO. DESCRIPTION 499429 Piston Assembly (Standard) Note 493262 Piston Assy. (Standard) (Used Before Code Date 97011300).

493385 Piston Assy. (.010" O.S.) (Used Before Code Date 97011300). 493386 Piston Assy. (.020" O.S.) (Used Before Code Date 97011300).

493387 Piston Assy. (.030" O.S.) (Used Before Code Date 97011300). 27 499425 Ring Set (Standard) Note 493261 Ring Set (Standard) (Used Before Code Date 97011300). 493388 Ring Set (.010" O.S.) (Used Before Code Date 97011300).

493389 Ring Set (.020" O.S.) (Used Before Code Date 97011300). 493390 Ring Set (.

030" O.S.) (Used Before Code Date 97011300). 263190 LockPiston Pin Note 26026 LockPiston Pin (Used Before Code Date 97011300). 29 32 499423 Pin-Piston (Standard) Note 298909 PinPiston (Standard) (Used Before Code Date 97011300).

298908 PinPiston (.005" O.S.) (Used Before Code Date 97011300). 499424 RodConnecting (Standard) Note 490566 Rod Connecting (Standard) (Used Before Code Date 97011300). @@@@D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetSee Ref. 977. Included in Valve Overhaul Gasket SetPart No.

@@NO. 16 PART NO. REF. NO. PART NO. REF. NO. @@Used on Type No(s). @@493362 Crankshaft (Used Before Code Date 97011300). Used on Type No(s).

DESCRIPTION 498569 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0858, 0864, 1121, 1134, 1164, 1521. 493946 Crankshaft (Used Before Code Date 97011300). Used on Type No(s).

0858, 0864, 1121, 1134, 1164, 1521. @@@@498562 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0889, 0894, 0897, 0900, 1127, 1128, 1168. 493282 Crankshaft (Used Before Code Date 97011300).

Used on Type No(s). @@D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetSee Ref. 977. Included in Valve Overhaul Gasket Set-Part No. @@NO. 4 4A PART NO. DESCRIPTION REF. NO.

46A 83 PART NO. DESCRIPTION REF. NO. 220 263 720 721 743 PART NO. @@@@One Used in Hole Nearest Breather. @@0870, 0871, 0875, 0876, 0906, 0907, 0908. @@0884, 0889, 0897, 0900, 1128. 231759 ShaftAuxiliary Drive Used on Type No(s). 0884. K Included in Gasket SetPart Number 497316.

D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetSee Ref. 977. Included in Valve Overhaul Gasket SetPart No.

@@NO. PART NO. REF. NO. PART NO.

REF. NO. @@94525 ScrewHex. @@@@D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetSee Ref. 977. Included in Valve Overhaul Gasket SetPart No. 498528. 05296 Assemblies include all parts shown in frame 6 97 12S800 to 12S899 125A 618 124 634 634 133 104 141 131 134 108 975 137 98A 127 94 130A 95 617 110 117A 110 CHOKE SYSTEM REF.

NO. PART NO. REF. NO. 124 125A 127 PART NO. REF. NO. PART NO. DESCRIPTION DESCRIPTION DESCRIPTION 94 D493765 95 94098 98A 398185 104 D231371 108 223471 110 Dz 117A ValveIdle Adjustment ScrewSlotted ScrewIdle Speed PinFloat Hinge ValveChoke SealO-Ring (Sold in Kit Only) 493637 JetMain (Standard) Note 496063 JetMain (High Altitude) 94525 ScrewHex. 494216 Carburetor D PlugWelch (Sold in Kit Only) 130A 223470 Valve-Throttle 131 493267 ShaftThrottle 133 398187 FloatCarburetor 134 D398188 ValveNeedle GasketBowl 137 Dz (Sold in Kit Only) 141 494218 617 Dz270344 618 262749 634 Dz 975 ShaftChoke SealIntake Manifold Spring Washer (Sold in Kit Only) 493640 BowlFloat K Included in Gasket SetPart Number 497316.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 12S802 user guide](#)



D Included in Carburetor Kit See Ref. 121. z Included in Carburetor Gasket Set See Ref. 977. Included in Valve Overhaul Gasket Set Part No. 498528. 05297 Assemblies include all parts shown in frame 7 97 12S800 to 12S899 258 474 910 575 892 334 356 789 356B 269 789A 188 620 209 202 209A 236 188 620A 268 270 356A 333 851 621 258 923 922 271 267 265 621 98 621 REF. NO. 98 188 202 209 209A PART NO. 935 670 DESCRIPTION REF. NO. 269 PART NO. DESCRIPTION REF. NO. 670 789 670 PART NO. 423 DESCRIPTION 236 258 265 267 268 493280 Screw Idle Speed 94644 Screw Hex. 262579 Link Mechanical Governor 263046 Spring Governor 262666 Spring Governor Note 262654 Spring Gov. Used on Type No(s). 0844. 262656 Spring-Gov.

Used on Type No(s). 0839. 262461 Link Lock Out 94512 Screw Hex. 213146 Clamp Casing 94694 93294 Housing Blower (Used on Compliance Engines ) Note 493293 Housing Blower (Used on Non Compliance Engines) 94744 Screw Hex. K Included in Gasket Set Part Number 497316. D Included in Carburetor Kit See Ref. 121. z Included in Carburetor Gasket Set See Ref. 977. Included in Valve Overhaul Gasket Set Part No. 498528. 052911 Assemblies include all parts shown in frame 11 97 12S800 to 12S899 608 65 55 373 60A 144 459 60 369 59 58 456 461 946 REF. NO. 55 58 PART NO. DESCRIPTION REF.

NO. 60 60A 65 144 369 373 PART NO. 281434 393152 94686 498144 263073 92987 DESCRIPTION Grip Starter Rope Grip Starter Rope Screw Hex. Pulley-Rope Start Spring Friction Nut Hex. REF.

NO. 456 459 461 608 946 PART NO. 281503 281505 94943 497680 223294 DESCRIPTION Plate Pawl Friction Pawl Ratchet Screw Shoulder Starter Rewind Stop Rope 59 497440 Housing Rewind Starter 280399 Rope Starter (Cut To Required Length) 396892 Insert Grip K Included in Gasket Set Part Number 497316. D Included in Carburetor Kit See Ref. 121. z Included in Carburetor Gasket Set See Ref. 977. Included in Valve Overhaul Gasket Set Part No. 498528. 052912 Assemblies include all parts shown in frame 12 97 12S800 to 12S899 608A 55A 65 373 56A 1016 459A 60A 59 455A 57A 69 946 456A 515 69A 461A 58 REF.

NO. 55A 56A 57A 58 PART NO. DESCRIPTION REF. NO. 60A 65 69 69A 373 455A 456A 459A PART NO. 393152 94686 280973 224322 92987 224250 224321 492833 DESCRIPTION Grip Starter Rope Screw Hex. Washer Seal Washer Nut Hex. Cup Flywheel Plate Pawl Friction Spring Pawl REF. NO. @ @ D Included in Carburetor Kit See Ref.

121. z Included in Carburetor Gasket Set See Ref. 977. Included in Valve Overhaul Gasket Set Part No. @ @ NO.

74 85 309 310 510 513 PART NO. 93490 94974 494233 94051 494147 394815 DESCRIPTION Screw Hex. Screw Hex. Motor Starter Screw Slotted Hex. Drive-Starter Clutch Drive REF.

NO. 544 548 615A 782 783 784 PART NO. @ @ NO. 785 801 802 803 937 PART NO. @ @ D Included in Carburetor Kit See Ref. 121. z Included in Carburetor Gasket Set See Ref. 977. Included in Valve Overhaul Gasket Set Part No. 498528.

052914 Assemblies include all parts shown in frame 14 97 12S800 to 12S899 358 GASKET SET 116 116A 670 585 7 12 9 3 163 20 51 1095 VALVE OVERHAUL GASKET SET 163 7 9 617 977 CARBURETOR GASKET SET 121 CARBURETOR KIT 94 134 104 634 110 163 137 137 634 110 127 617 REF. NO. PART NO. REF. NO. PART NO. DESCRIPTION REF. NO. 121 PART NO. DESCRIPTION DESCRIPTION 3 K299819 7 K272916 9 K272481 12 K272198 20 K399781 51 K272199 94 D493765 104 D231371 110 Dz 116 116A Seal Oil Gasket Cylinder Head Gasket Breather Gasket Crankcase Seal Oil Gasket Intake Valve Idle Adjustment Pin Float Hinge Washer Bowl (Sold in Kit Only) K280393 Seal O Ring K280966 Seal O Ring 498260 Carburetor Kit Note 493762 Carburetor Kit (Used Before Code Date 95110300).

127 D Plug Welch (Sold in Kit Only) 134 D398188 Valve Needle (Includes Seat) 137 Dz Gasket Bowl (Sold in Kit Only) 163 KDz 272653 Gasket Air Cleaner 358 497316 Gasket Set 585 K272238 Gasket Breather 617 Dz 270344 Seal Intake Manifold 634 Dz Washer Foam (Sold in Kit Only) 670 K493823 Spacer (Includes 2) 977 498261 Gasket Set Carburetor Note 490937 Gasket Set Carburetor (Used Before Code Date 95110300). 1095 498528 Gasket Set Valve Overhaul K Included in Gasket Set Part Number 497316. D Included in Carburetor Kit See Ref. 121. z Included in Carburetor Gasket Set See Ref. 977. Included in Valve Overhaul Gasket Set Part No. 498528. 052915 Assemblies include all parts shown in frame 15 97.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 12S802 user guide](http://yourpdfguides.com/dref/3639933)  
<http://yourpdfguides.com/dref/3639933>