



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 133702. You'll find the answers to all your questions on the BRIGGS & STRATTON 133702 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 133702
User guide BRIGGS & STRATTON 133702
Operating instructions BRIGGS & STRATTON 133702
Instructions for use BRIGGS & STRATTON 133702
Instruction manual BRIGGS & STRATTON 133702

FORM MS-023-997
REPLACES FORM MS-023-487
FILE IN SECT. TOP SERVICE MANUAL
133700 to 133799

Illustrated Parts List Model Series 133700 to 133799

TYPE NUMBERS
0002, 0015, 0016,
0017, 0027, 0100,
0102, 0105, 0106,
0108, 0124, 0127,
0129, 0130, 0131,
0137 through 0142,
0145 through 0150,
0153, 0155, 0170,
0181.

TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- Refer to the illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- After the Reference Number has been identified, refer to the Numerical List, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 133702 user guide](http://yourpdfguides.com/dref/3639952)
<http://yourpdfguides.com/dref/3639952>

Manual abstract:

2 OF SERVICE MANUAL 133700 to 133799 Illustrated Parts List Model Series 133700 to 133799 TYPE NUMBERS 0002, 0015, 0016, 0017, 0027, 0100, 0102, 0105, 0106, 0108, 0124, 0127, 0129, 0130, 0131, 0137 through 0142, 0145 through 0150, 0153, 0158, 0170, 0181. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames.

All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. @@@@COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved.

@@@SEE REPAIR INSTRUCTION MANUAL. REF. NO. PART NO. DESCRIPTION REF.

NO. @@93367 93512 223804 94680 224876 802592 89838 93376 231879 281299 67738 231078 DESCRIPTION ScrewHex. ScrewHex. ShieldCylinder ScrewHex. CoverCylinder PlugSpark (Resistor Type) WrenchSpark Plug Clip TubeBreather Grommet Grommet BushingGovernor Crank 1058 OWNER'S MANUAL REF. NO. 625 635 869 870 871 PART NO. DESCRIPTION 1 496487 2 399268 3 K299819 5 214040 7 K272157 8 495758 9 K27549 10 94621 13 94221 14 51 Cylinder Assembly Bushing SealOil HeadCylinder GasketCylinder Head Breather Assembly GasketBreather ScrewHex. ScrewHex. (2 3/32" Long) 94679 ScrewHex.

(2 15/32" Long) K270070 GasketIntake 1019 1058 490193 ManifoldIntake 66538 BootSpark Plug 211787 SeatValve (Intake) 211436 SeatValve (Exhaust) (Exhaust) 262001 BushingGuide (Exhaust Valve) Note 63709 BushingGuide (Intake Valve) 496660 Label Kit 272704 Owner's Manual K Included in Gasket SetPart No. 496659. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. Included in Valve Overhaul Gasket SetPart No. @@2 97 133700 to 133799 29 24 25 27 28 27 26 33 741 146 34 41 36 32 45 40 35 16 REF. NO. 16 PART NO.

DESCRIPTION REF. NO. 25 PART NO. DESCRIPTION REF. NO.

33 PART NO. DESCRIPTION 24 495473 Crankshaft Note 397109 Crankshaft Used on Type No(s). 0015, 0139. 492092 Crankshaft Used on Type No(s). 0138.

493410 Crankshaft Used on Type No(s). 0017, 0027, 0141, 0147. 493634 Crankshaft Used on Type No(s). 0145, 0148. 495475 Crankshaft Used on Type No(s). 0002, 0102, 0124, 0127, 0129, 0130, 0142. 496842 Crankshaft Used on Type No(s). 0140, 0146, 0153, 0158, 0170. 498234 Crankshaft Used on Type No(s). 0150.

222698 KeyFlywheel 26 27 28 29 32 393819 Piston Assembly (Standard) 393820 Piston Assy. (.010" O.S.) 393821 Piston Assy. (.020" O.S.) 393822 Piston Assy. (.030" O.S.) 399067 Ring Set (Standard) 399014 Ring Set (.010" O.S.)

) 399015 Ring Set (.020" O.S.) 399016 Ring Set (.030" O.

S.) 26026 LockPiston Pin 298909 PinPiston (Standard) 298908 PinPiston (.005" O.S.) 299430 RodConnecting (Standard) 390459 Rod Connecting (.020" Undersize) 94699 ScrewHex. 34 35 36 40 41 45 146 741 262464 ValveExhaust Note 211119 ValveExhaust Used on Type No(s). 0140, 0153, 0170. 261044 ValveIntake 260552 SpringValve (Intake) 262750 SpringValve (Exhaust) Note 26478 SpringValve (Exhaust) Used on Type No(s). 0140, 0153, 0170.

93312 RetainerValve 491442 RetainerValve (Exhaust) 260642 TappetValve 94388 KeyTiming Note 230978 Pin Crankshaft (Used Before Code Date 94062800). 262992 GearTiming Note 261696 GearTiming (Used Before Code Date 94062800). @@@496659. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. Included in Valve Overhaul Gasket SetPart No. @@@@NO. 4 12 PART NO.

DESCRIPTION REF. NO. 15 15A PART NO. 22 REF. NO.

20 22 46 47 622 PART NO. @@@@0158, 0170. K Included in Gasket SetPart No. 496659. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. Included in Valve Overhaul Gasket SetPart No. @@@@NO. PART NO. REF. NO. 124 125 127 130 131 133 134 137 141 PART NO. REF.

NO. @@@@496659. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. Included in Valve Overhaul Gasket SetPart No. @@@@NO. PART NO. REF.

NO. 124 125A 127 130 131 133 PART NO. REF. NO. @@@@496659.

D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. Included in Valve Overhaul Gasket SetPart No. @@@@NO. 98A 188 201 202 209 PART NO. DESCRIPTION REF. NO. @@@NO. 271 353 354 447 507 520 605 620 PART NO. @@ScrewHex. @@0017, 0131, 0139. SwitchStop ScrewShoulder LeverLinkage SleeveLever 493280 ScrewIdle Speed 94117 ScrewHex. 260649 LinkMechanical Governor 262961 Link 262662 SpringGovernor Note 262656 Spring Governor Used on Type No(s).

0148. 262657 Spring Governor Used on Type No(s). 0017, 0102, 0127, 0130, 0131, 0137, 0139, 0142, 0146. 262659 Spring Governor Used on Type No(s). 0100, 0105. 262660 Spring Governor Used on Type No(s). 0015, 0016, 0027, 0106, 0108, 0141, 0145, 0147, 0158. 268 269 270 262661 Spring Governor Used on Type No(s). 0140, 0153, 0170, 0181. 262663 Spring Governor Used on Type No(s).

0124, 0129. 263052 Spring Governor Used on Type No(s). 0138. 66986 CasingWire (48" Long Cut to Required Length) Note 65616 CasingWire (72" Long Cut to Required Length) 26099 WireControl (54" Long Cut to Required Length) Note 26633 WireControl (78" Long Cut to Required Length) 63426 Locknut-Casing 621 623 624 843 396847 231520 496288 272616 K Included in Gasket SetPart No.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 133702 user guide](http://yourpdfguides.com/dref/3639952)
<http://yourpdfguides.com/dref/3639952>

496659.

D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. Included in Valve Overhaul Gasket SetPart No. @ @ 7 97 133700 to 133799 335 847 356 523 356A 729 227 562 592 851 333 284 116 258 422 525 942 923 236 482 616 230 941 616A 615 REF. NO. 422 482 523 525 529 562 592 614 615 PART NO. 224903 93621 495228 280133 K281370 92613 231082 93306 93307 REF. NO. 616 616A 621 729 847 851 922 923 941 942 PART NO. 495242 231076 396847 280470 496271 221798 261647 394867 281285 493248 614 529 621 REF. NO. 116 227 230 236 258 284 307 333 335 356 356A PART NO. K270920 391967 94927 262461 94018 94602 94680 397358 93414 398808 398838 DESCRIPTION SealO-Ring Lever-Governor WasherFlat LinkLock Out ScrewHex.

ScrewHex. ScrewHex. ArmatureMagneto ScrewHex. WireStop WireStop 922 307 DESCRIPTION Clamp ScrewHex. Dipstick TubeOil Fill SealFill Tube Bolt-Governor Lever NutHex. @ @ 496659. D Included in Carburetor KitPart No. 493762. zSetPart No. 490937. Included in Valve Overhaul Gasket SetPart No. @ @ @ NO. 55 56 57 58 PART NO. DESCRIPTION REF. NO. 60 65 73 373 PART NO. @ @ ScreenRotating NutHex. REF. NO. 455 456 459 608 623 689 PART NO.

225121 281503 281505 496650 94943 263073 DESCRIPTION CupFlywheel RetainerSpring PawlRatchet StarterRewind ScrewShoulder SpringFriction 497440 HousingRewind Starter 498144 PulleyStarter 498144 SpringRewind Starter 280399 RopeStarter (Cut To Required Length) K Included in Gasket Set-Part No. 496659. D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. Included in Valve Overhaul Gasket Set-Part No. @ @ 13 97 133700 to 133799 977 CARBURETOR GASKET SET 110 617 137 634A 634 137 617 121 CARBURETOR KIT 94 104 134 127 634A 634 110 358 GASKET SET 1095 VALVE OVERHAUL GASKET SET 9 883 12 7 3 20 REF. NO. PART NO.

REF. NO. PART NO. REF. NO. PART NO. 529 116 883 163 9 7 51 DESCRIPTION DESCRIPTION DESCRIPTION 3 K299819 7 K272157 9 K27549 12 K270069 20 SealOil GasketCylinder Head GasketBreather GasketCrankcase Note K270122 Gasket Crankcase (.005" Thick) K270123 Gasket Crankcase (.009" Thick) K391485 SealOil 51 K270070 94 D493765 104 D231371 110 Dz 116 121 127 134 137 GasketIntake ValveIdle Adjustment PinFloat Hinge GasketSealing (Sold in Kit Only) K270920 SealO-Ring 493762 Carburetor Kit D PlugWelch (Sold in Kit Only) D398188 ValveNeedle Dz GasketFloat Bowl (Sold in Kit Only) 163 K272653 GasketAir Cleaner 358 496659 Gasket Set 529 K281370 SealFill Tube 617 Dz270344 SealIntake Manifold 634 Dz280566 WasherFoam 634A Dz SealChoke Shaft (Sold in Kit Only) 883 K272309 GasketExhaust 977 490937 Gasket Set Carburetor 1095 498532 Gasket SetValve Overhaul K Included in Gasket SetPart No. 496659.

D Included in Carburetor KitPart No. 493762. z Included in Carburetor Gasket SetPart No. 490937. Included in Valve Overhaul Gasket SetPart No. @ @ 14 97 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 133702 user guide](http://yourpdfguides.com/dref/3639952)
<http://yourpdfguides.com/dref/3639952>