



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 21A900 TO 21A999. You'll find the answers to all your questions on the BRIGGS & STRATTON 21A900 TO 21A999 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 21A900 TO 21A999
User guide BRIGGS & STRATTON 21A900 TO 21A999
Operating instructions BRIGGS & STRATTON 21A900 TO 21A999
Instructions for use BRIGGS & STRATTON 21A900 TO 21A999
Instruction manual BRIGGS & STRATTON 21A900 TO 21A999



FORM MS-5069-020708
REPLACES FORM MS-5068-10/26/2007
FILE IN SECT. 2 OF SERVICE MANUAL
21A900

Illustrated Parts List Model Series 21A900

TYPE NUMBERS
0101 through 0199.

TABLE OF CONTENTS

Air Cleaner	7
Alternator	10
Blower Housing	7
Camshaft	3
Carburetor	5, 6
Controls	9
Crankshaft	3
Cylinder	2
Cylinder Head	4
Electric Starter	8
Engine Sump	2
Exhaust System	7
Flywheel	8
Fuel Supply	9
Gasket Set - Engine	4
Gasket Set - Valve	4
Governor Spring	9
Ignition	9
Intake Manifold	4
Kit - Carburetor Overhaul	5
Lubrication	3
Operator's Manual	2
Piston, Rings, Connecting Rod	3
Rewind Starter	6
Valves	4
Warning Label	2



PRINTED IN U.S.A.
COPYRIGHT BY BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 21A900 TO 21A999 user guide](http://yourpdfguides.com/dref/3640119)
<http://yourpdfguides.com/dref/3640119>

Manual abstract:

2 OF SERVICE MANUAL 21A900 Illustrated Parts List Model Series 21A900 TYPE NUMBERS 0101 through 0199. TABLE OF CONTENTS Air Cleaner . . .

.....
.....
.....
..... 7 Alternator
.....
.....
.....
.. 10 Blower Housing
.....
.....
..... 7 Camshaft ..
.....
.....
.....
3 Carburetor
.....
.....
..... 5, 6 Controls
.....
.....
.....
..... 9 Crankshaft
.....
.....
..... 3 Cylinder .
.....
.....
.....
..... 2 Cylinder Head ...
.....
.....
..... 4 Electric Starter .
.....
.....
..... 8 Engine Sump
.....
.....
..... 2 Exhaust System
.....
.....
..... 7 Flywheel
.....
.....
.....
..... 8 Fuel Supply
.....
.....
..... 9 Gasket Set - Engine
.....
.....
..... 4 Gasket Set - Valve
.....
.....
..... 4 Governor Spring
.....

.....
. 9 Ignition
.....
.....
.....
9 Intake Manifold
.....
.....
. 4 Kit - Carburetor Overhaul
. . . 5 Lubrication
.....
.....
. 3 Operator's Manual
.....
.....
. 2 Piston, Rings, Connecting Rod
.....
. . . 3 Rewind Starter
.....
.....
. 8 Valves
.....
.....
.....
. 4 Warning Label
.....
.....
. . . 2 PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 21A900 1058 OPERATOR'S MANUAL 1319 WARNING LABEL REQUIRED when replacing parts with warning labels affixed. 1 2 3 11 10 584 9 1264 1263 552 691 850 718 4 4A 306 12 12 1017 307 22 15 20 1024 1024A 20 415 1027 239 965 943 750 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5069-2 Assemblies include all 2 parts shown in frames. 02/07/2008 21A900 25 27 26 28 27 847 523 842 29 32 16 24 525 146 357 524 741 46 45 43 758 1270 757 759 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5069-3 Assemblies include all parts shown in frames. 3 02/07/2008 21A900 45 1026 5 34 42 36 238 33 42 868 337 883 635 383 7 35 1022 1034 830 51 617 1029 192 1022 914 654 14 705 850 13 53 50 617 51 1023 54 358 ENGINE GASKET SET 3 12 7 1095 VALVE GASKET SET 868 7 1022 51 9 51 524 617 20 691 842 868 883 1266A 1266 1022 943 Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 5069-4 Assemblies include all 4 parts shown in frames. 02/07/2008 21A900 125 141 131 See text for correct Choke Shaft Kit. See text for correct Choke Shaft Kit. 141 125A 131A 141A 117 118 141B 130 95 987 93 634 141B 108 130A 95A 987A 108A 634A 98A 98 692 51 94 633 108 51 94A 1091 105A 133A 104A 127A 135A 137A 142 LMT / PART NUMBER LOCATIONS 105 133 104 1091 127 106 143 975A 137A 137A 975 137 1127 NIKKI 276 950 WALBRO 121A CARBURETOR OVERHAUL KIT 51 105A 137A 987A 1266 987 617 634 276 1266 1266A 977A CARBURETOR GASKET SET 137A 51 95A 104A 127A 617 634A 1266A 121 CARBURETOR OVERHAUL KIT 51 104 105 93 95 106 127 142 137 977 CARBURETOR GASKET SET 51 137 276 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5069-5 Assemblies include all parts shown in frames. 5 02/07/2008 21A900 125B 131A 130A 95A 987A 108A 634A 98A 1146 51 94A 1091 141A 118 117 141C 105A 133A 104A 127A 135A 137A 975A 137A 137A 1127 NIKKI 121A CARBURETOR OVERHAUL KIT 51 105A 1266 95A 104A 127A 617 634A 1266A 137A 987A 977A CARBURETOR GASKET SET 137A 51 Illustrations cover a range of engines. @@@@Parts shown without corresponding text may not be used on your specific engine. 5069-9 Assemblies include all parts shown in frames. 9 02/07/2008 21A900 DUAL CIRCUIT 474B 877 1059 DC ONLY 474A 877A 1059 5 - 9 AMP 474C 877B 1059 10 - 16 AMP 474D 877C 1059 578 878 578 578 526A 501C NOTE: All stators use a No. 1119 mounting screw. NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information. 526A 501A 526B 501B 526B 501D Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 5069-10 Assemblies include all 10 parts shown in frames. 02/07/2008 21A900 REF. NO. 1 2 PART NO.

DESCRIPTION REF. NO. 22 23 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 697377 Cylinder Assembly 399265 Kit-Bushing/Seal (Magneto Side) 3 K391086S Seal-Oil (Magneto Side) 4 697106 Sump-Engine 4A 697188 Sump-Engine Used on Type No(s). 0101, 0105, 0115, 0119, 0121, 0122, 0129, 0156, 0157, 0165, 0172, 0173, 0176, 0178, 0179, 0180, 0186, 0187, 0188, 0189, 0190, 0191, 0192, 0195, 0197, 0198, 0199. 5 792964 Head-Cylinder 7K273280S Gasket-Cylinder Head 9 K697109 Gasket-Breather (Used Before Code Date 07071900). (After Date Code Use Liquid Sealant Reference 850) 10 697157 Screw (Breather Assembly) 11 794683 Tube-Breather (Used After Code Date 07071800).

----- Note ----- 697113 Tube-Breather (Used Before Code Date 07071900). 12 K697110 Gasket-Crankcase (.015" Thick) (Standard) 13 690360 Screw (Cylinder Head) 14 790560 Stud (Cylinder Head) 15 690946 Plug-Oil Drain (3/8" Standard) 16A 697390 Crankshaft 20 K791892 Seal-Oil (PTO Side) 692125 Screw (Crankcase Cover/Sump) 693556 Flywheel Used on Type No(s). 0115, 0137, 0157, 0192. ----- Note ----- 693557 Flywheel Used on Type No(s). 0145, 0147, 0150, 0159, 0176, 0191. 698281 Flywheel Used on Type No(s). 0101, 0104, 0105, 0119, 0120, 0121, 0122, 0123, 0124, 0125, 0128, 0129, 0131, 0140, 0143, 0152, 0153, 0155, 0158, 0162, 0164, 0169, 0172, 0173, 0178, 0183, 0185, 0186, 0187. 698282 Flywheel Used on Type No(s). 0113, 0133, 0154, 0156, 0165, 0167, 0179, 0180, 0189, 0195, 0197, 0198, 0199. 790924 Flywheel Used on Type No(s). 0113, 0156, 0167. 693555 Flywheel (Rewind Starter) Used on Type No(s). 0117, 0134, 0139, 0141, 0142, 0149, 0151, 0161, 0166, 0168, 0170, 0171, 0184, 0188, 0190. ----- Note ----- 698283 Flywheel (Rewind Starter) Used on Type No(s). 0127, 0134, 0136, 0138, 0144. 24 222698S Key-Flywheel 25 792305 Piston Assembly (Standard) ----- Note ----- 792728 Piston Assembly (.020" Oversize) 26 792306 Ring Set (Standard) ----- Note ----- 792643 Ring Set (.020" Oversize) 27 698469 Lock-Piston Pin (Used After Code Date 02100300). ----- Note ----- 698138 Lock-Piston Pin (Used Before Code Date 02100400). 28 697099 Pin-Piston 29 791633 Rod-Connecting (Standard) ----- Note ----- 697262 Rod-Connecting (.020" Undersize) (Used Before Code Date 05040400).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 21A900 TO 21A999 user guide](http://yourpdfguides.com/dref/3640119)
<http://yourpdfguides.com/dref/3640119>

32 791118 Screw (Connecting Rod) 33 695760 Valve-Exhaust 34 695761 Valve-Intake 35 691279 Spring-Valve (Intake) 36 691279 Spring-Valve (Exhaust) 37 697352 Guard-Flywheel 37A 697626 Guard-Flywheel (Electric Start) Used on Type No(s). 0117, 0127, 0134, 0136, 0138, 0139, 0141, 0142, 0144, 0149, 0151, 0161, 0166, 0168, 0170, 0171, 0176, 0184, 0188, 0190. 23A K Included in Engine Gasket Set-Ref. No. 358. D Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

z Included in Carburetor Gasket Set-Ref. No. 977 or 977A. Included in Valve Gasket Set-Ref. No. 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5069-11 Assemblies include all parts shown in frames. 11 02/07/2008 21A900 REF.

NO. PART NO. DESCRIPTION REF. NO. 81 93 94 94A 95 95A 98 98A 104 104A 105 105A 106 PART NO.

DESCRIPTION REF. NO. 125 PART NO. DESCRIPTION 42 499586 Keeper-Valve 43 691968 Slinger-Governor/Oil 45 690564 Tappet-Valve 46 793880 Camshaft 50 697361 Manifold-Intake 51KDz692137 Gasket-Intake 53 690227 Stud (Carburetor) 54 691148 Screw (Intake Manifold) 55 695130 Housing-Rewind Starter 56 695129 Pulley-Starter 57 695131 Spring-Rewind Starter 58 695132 Rope-Starter 60 494212 Grip-Starter Rope 65 690759 Screw (Rewind Starter) (Used After Code Date 07040800). ----- Note ----- 697725 Screw (Rewind Starter) (Used Before Code Date 07040900).

73 Screen-Rotating (Service With Flywheel Fan 794440) (Used Before Code Date 07040900). 73A 794437 Screen-Rotating (Used After Code Date 07040800). 74 697897 Screw (Rotating Screen) (Used Before Code Date 07040900). 75 690582 Washer (Flywheel) 75 690582 Washer (Flywheel) 78 691003 Screw (Flywheel Guard) 78A 690364 Screw (Flywheel Guard)(Electric Start) 691178 Lock-Muffler Screw D690602 Bushing-Throttle Shaft 498030 Kit-Idle Mixture (Walbro) 695425 Kit-Idle Mixture (Nikki) D691636 Screw (Throttle Valve) (Walbro) D690718 Screw (Throttle Valve)(Nikki) 495800 Kit-Idle Speed (Walbro) 695408 Kit-Idle Speed (Nikki) D690525 Pin-Float Hinge (Walbro) D694918 Pin-Float Hinge (Nikki) D231855S Valve-Float Needle (Walbro) D696136 Valve-Float Needle (Nikki) D690577 Seat-Inlet (Walbro)(Gravity Feed) ----- Note ----- D691780 Seat-Inlet (Walbro)(Pump Feed) 691227 Valve-Choke (Walbro) 698773 Valve-Choke (Nikki) 699897 Jet-Main (Standard) (Used Before Code Date 07122600). @@699898 Jet-Main (High Altitude) (Used Before Code Date 07122600). @@@@Used on Type No(s). 0142, 0166. 791266 Carburetor (Nikki) (Used Before Code Date 07122600). @@794215 Carburetor (Nikki) (Used Before Code Date 07122600). @@@@@@No.

358. D Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A. Included in Carburetor Gasket Set-Ref. No. 977 or 977A. Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be use03 Screw (Cylinder Shield) 693551 Motor-Starter 690323 Screw (Starter Motor) 497608 Brush Set 795315 Armature-Magneto 691061 Screw (Magneto Armature) 491055S Plug-Spark ----- Note ----- 691043 Plug-Spark Used on Type No(s). @@@@0156, 0171. @@@@@@@@@@@@0140, 0143, 0145, 0162, 0164. 696459 Alternator (Dual Circuit) Used on Type No(s).

@@No. 358. D Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

Included in Carburetor Gasket Set-Ref. No. 977 or 977A. Included in Valve Gasket Set-Ref. No. 1095. z Illustrations cover a range of engines. @@14 02/07/2008 21A900 REF. NO. 474C PART NO.

DESCRIPTION REF. NO. 523 524 525 PART NO. DESCRIPTION REF. NO. 584 PART NO. @@@@696458 Alternator (10 To 16 Amp Regulated) Used on Type No(s). 0115, 0165, 0189, 0197. 691188 Regulator (5 To 9 Amp Regulated) Used on Type No(s). @@698315 Regulator (5 To 9 Amp Regulated) Used on Type No(s).

0176. 790292 Regulator (Dual Circuit) Used on Type No(s). 0147, 0150. 691185 Regulator (10 To 16 Amp Regulated) Used on Type No(s). 0115, 0165, 0189, 0197.

@@0121, 0122, 0123, 0124, 0125, 0127, 0128, 0172, 0173, 0178, 0186. @@0115, 0121, 0122, 0133, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0147, 0149, 0150, 0151, 0153, 0154, 0157, 0159, 0161, 0162, 0164, 0165, 0166, 0170, 0173, 0178, 0179, 0185, 0187, 0188, 0189, 0191, 0197, 0199. 697088 Screw (Regulator)(5 To 9 Amp Regulated) 697348 Screw 792167 Clamp-Tube 692034 Armature-Starter 697144 Bushing-Governor Crank 697561 Screw (Remote Choke Stop) Used on Type No(s). 0142, 0166, 0170, 0185. 693675 Screw (Remote Choke Stop) Used on Type No(s).

0170, 0185. 691119 Bolt (Governor Control Lever) 692306 Wire Assembly 691029 Nut (Starter Cable) 794682 Cover-Breather Passage (Used After Code Date 07071800). (Use With Liquid Sealant Reference 850) ----- Note ----- 697112 Cover- Breather Passage (Used Before Code Date 07071900). 691696 Screw (Pawl Friction Plate) 791850 Clamp-Hose 691038 Clamp-Hose 695058 Starter-Rewind 691416 Screw (Muffler) 691678 Screw (Muffler) 690297 Screw (Muffler) 691620 Pin-Cotter 692012 Crank-Governor KD692138 Seal-O Ring (Intake Manifold) 692310 Switch-Stop Used on Type No(s). 0101, 0105, 0119, 0120, 0134, 0138, 0139, 0140, 0141, 0142, 0144, 0145, 0147, 0149, 0150, 0151, 0154, 0156, 0157, 0159, 0161, 0166, 0168, 0176, 0179, 0180, 0184, 0192, 0195, 0198, 0199. 690597 Seal-Choke/Throttle Shaft Used on Type No(s). 0142, 0166. D690802 Spring/Seal Assembly (Walbro) D698779 Spring/Seal Assembly (Nikki) 691909 Boot-Spark Plug 697155 Retainer-Air Filter 690958 Nut (Carburetor) 474D 597 601 601A 608 613 613A 613B 614 616 617 621 501A 526A 526B 527 544 552 559 501B 501C 559A 501D 562 578 579 505 507 510 513 520 521 633 634 634A 635 643 654 K Included in Engine Gasket Set-Ref. No. 358.

D Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A. z Included in Carburetor Gasket Set-Ref. No. 977 or 977A. Included in Valve Gasket Set-Ref. No. 1095. Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 5069-15 Assemblies include all parts shown in frames. 15 02/07/2008 21A900 REF. NO. 676 PART NO.

DESCRIPTION REF. NO. 757 758 759 783 789 789A 797 801 802 803 PART NO. 697607 697391 697392 693713 698329 790544 693167 691283 691286 DESCRIPTION Link-Counterweight Counterweight Pin-Counterweight Gear-Pinion Harness-Wiring Harness-Wiring Nut (Brush Retainer) Cap-Drive Cap-End Housing-Starter (Not Serviced Separately, Order Starter Motor 693551) Screw (Muffler Adapter) Stud-Rocker Arm Guard-Muffler Used on Type No(s). 0147, 0149, 0150, 0151, 0184.

Screw-Muffler Guard Seal-O Ring (Dipstick Tube) Sleeve-Lever Used on Type No(s). 0139, 0140, 0142, 0166. Dipstick/Tube Assembly ----- Note ----- 790443 Dipstick/Tube Assembly Used on Type No(s). 0115, 0121, 0122, 0133, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0147, 0149, 0150, 0151, 0153, 0154, 0157, 0159, 0161, 0162, 0164, 0165, 0166, 0170, 0173, 0178, 0179, 0185, 0187, 0188, 0189, 0191, 0197, 0199. Sealant-Liquid (Rocker Cover Gasket and Breather Gasket) (Used After Code Date 07071800). REF. NO. PART NO. DESCRIPTION 393761 Deflector-Muffler (Side Out) Used on Type No(s).

[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 21A900 TO 21A999 user guide](#)



<http://yourpdfguides.com/dref/3640119>

0101, 0105, 0115, 0117, 0119, 0120, 0121, 0122, 0134, 0136, 0137, 0138, 0139, 0140, 0141, 0142, 0144, 0145, 0147, 0149, 0150, 0151, 0153, 0154, 0157, 0159, 0161, 0162, 0166, 0168, 0172, 0173, 0176, 0179, 0180, 0184, 0185, 0186, 0187, 0188, 0191, 0192, 0195, 0198, 0199.

396903 Deflector-Muffler (Side Out) Used on Type No(s). 0178. 690661 Screw (Muffler Deflector) 697175 Slide-Control Used on Type No(s). 0139, 0140, 0142, 0166. 690395 Cap-Friction Used on Type No(s). 0139, 0140, 0142, 0166. 691855 Spring-Friction 690529 Spring-Friction Used on Type No(s). 0139, 0140, 0142, 0166. K692407 Seal-Governor Shaft 691301 Spring-Detent 690372 Screw (Drive Cap) 790561 Nut (Fuel Tank) 690959 Pin-Locating 691335 Clip-Wire (Wire Retainer) 691224 Clip-Wire (Starter Motor) 694123 Clip-Wire 697128 Gear-Timing 790832 Screw (Oil Pump Cover) 851 692424 Terminal-Spark Plug 864 697346 Adapter-Muffler 868 K690968 Seal-Valve 877 393456 Wire/Connector- Alternator (Dual Circuit) 877A 393814 Wire/Connector- Alternator (DC Only) 877B 393537 Wire/Connector- Alternator (5 To 9 Amp Regulated) 877C 399916 Wire/Connector- Alternator (10 To 16 Amp Regulated) 878 398661 Harness-Alternator 883 K692236 Gasket-Exhaust 884 691956 Clamp-Muffler Used on Type No(s). 0121, 0122, 0173.

914 691108 Screw (Rocker Cover) 918 791851 Hose-Vacuum (Molded) 920 691656 Solenoid-Starter Used on Type No(s). 0147, 0150, 0172, 0186. 943 K690589 Seal-O Ring (Oil Pump Cover) 950 691657 Screw-Float Bowl (Bottom Of Bowl) 957 792647 Cap-Fuel Tank (Plastic) 958 698183 Valve-Fuel Shut Off (Plastic) Used on Type No(s). 0141, 0144, 0146, 0154, 0156, 0157, 0159, 0161, 0167, 0171, 0172, 0179, 0185, 0186, 0190, 0191. 965 499613 Cover-Oil Pump 967 697292 Filter-Pre Cleaner 823 830 832 698941 691095 790293 676A 677 687 836 842 843 690367 K691031 697158 688 847 790442 689 689A 691 692 697 705 718 729 729A 729B 741 750 850 100100 K Included in Engine Gasket Set-Ref.

No. 358. D Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

Included in Carburetor Gasket Set-Ref. No. 977 or 977A. Included in Valve Gasket Set-Ref. No. 1095. z Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5069-16 Assemblies include all parts shown in frames. 16 02/07/2008 21A900 REF.

NO. 968 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION REF. NO. 1070 PART NO. DESCRIPTION 697420 Cover-Air Cleaner (Black) ----- Note ----- 697422 Cover-Air Cleaner (Red) 972 792168 Tank-Fuel (Plastic) 975 495933 Bowl-Float (Walbro) 975A 698783 Bowl-Float (Nikki) 977 690192 Gasket Set-Carburetor 977A 790032 Gasket Set-Carburetor (Nikki) 987 D691326 Seal-Throttle Shaft 987A D698777 Seal-Throttle Shaft (Nikki) 1005 794439 Fan-Flywheel (Used After Code Date 07040800). 1005A 794440 Fan-Flywheel (Used Before Code Date 07040900).

1017 690770 Screen-Oil Pump 1022K272475S Gasket-Rocker Cover (Used Before Code Date 07091000). @@1024A 794644 Pump-Oil (Used After Code Date 07051600). @@@@1040A 697381 Plate-Trim Used on Type No(s). @@1044 698139 Screw (Flywheel) 1051 691265 Ring-Retaining 1054 280275 Tie-Cable 1058 276344 Manual-Operator's ----- Note ----- MS3787 Manual- Operator's Used on Type No(s). 0101, 0134, 0164, 0165, 0170, 0189, 0197.

MS3788 Manual- Operator's Used on Type No(s). 0105, 0191. 1059 698516 Kit-Screw/Washer 690372 Screw (Flywheel Fan) (Used Before Code Date 07040900). 690363 Screw (Flywheel Fan) (Used After Code Date 07040800). 691293 Retainer-Brush 691333 Cap-Limiter 691581 Gasket Set-Valve 691183 Screw (Alternator) 695407 Screw (Float Bowl) 690278 Screw (Control Bracket)(High Speed Control) Used on Type No(s).

0139, 0140, 0142, 0166. 793380 Screw (Choke Shaft)(Manual Choke) 697124 Reed-Breather 697104 Screw (Breather Reed) KD691917 Seal-O Ring (Intake Elbow) KD697123 Seal-O Ring (Intake Elbow) 697419 Latch-Blower Housing (Black) ----- Note ----- 697424 Latch-Blower Housing (Red) 697156 Plug-AVS Counterweight 794467 Label-Warning 791219 Washer (Blower Housing) 1070A 1090 1091 1095 1119 1127 1136 1146 1263 1264 1266 1266A 1267 1270 1319 1397 K Included in Engine Gasket Set-Ref. No. 358. D Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A. z Included in Carburetor Gasket Set-Ref. No. 977 or 977A.

Included in Valve Gasket Set-Ref. No. 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5069-17 Assemblies include all parts shown in frames. 17 02/07/2008 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 21A900 TO 21A999 user guide](http://yourpdfguides.com/dref/3640119)
<http://yourpdfguides.com/dref/3640119>