



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 282707. You'll find the answers to all your questions on the BRIGGS & STRATTON 282707 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 282707**  
**User guide BRIGGS & STRATTON 282707**  
**Operating instructions BRIGGS & STRATTON 282707**  
**Instructions for use BRIGGS & STRATTON 282707**  
**Instruction manual BRIGGS & STRATTON 282707**

FORM MS-243-1197  
REPLACES FORM MS-243-497  
FILE IN SECTION OF SERVICE MANUAL  
**282700 to 282799**

## Illustrated Parts List Model Series 282700 to 282799

TYPE NUMBERS  
0026, 0028, 0101,  
0110, 0111, 0113,  
0116, 0119, 0122,  
0123, 0125, 0157,  
0170, 0172, 0504.

### TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- Refer to the Illustrations and compare the original part with Illustration. The number next to the Illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.



PRINTED IN U.S.A.  
COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted  
in any form or by any means, electronic or mechanical, including photocopying,  
recording or by any information storage and retrieval system, without permission  
in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 282707 user guide](http://yourpdfguides.com/dref/3639829)  
<http://yourpdfguides.com/dref/3639829>

**Manual abstract:**

2 OF SERVICE MANUAL 282700 to 282799 Illustrated Parts List Model Series 282700 to 282799 TYPE NUMBERS 0026, 0028, 0101, 0110, 0111, 0113, 0116, 0119, 0122, 0123, 0125, 0167, 0170, 0172, 0604. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames.

All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."

" If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number. © COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. © SEE REPAIR INSTRUCTION MANUAL. REF. NO.

PART NO. TubeBreather ScrewHex. StudHex. Drive ManifoldIntake GasketIntake StudCarb. @NO. 123 305 306 307 308 337 353 354 383 552 635 869 870 PART NO. 94913 94786 224545 94930 491490 802592 94315 94726 89838 491986 1019 LABEL KIT DESCRIPTION 1058 OWNER'S MANUAL REF. NO. 871 PART NO. DESCRIPTION 1 496414 2 399264 3 K391086 5 494240 7 K271866 8 495735 9 K27803 10 94719 11 280100 13 94622 13A 93781 50 213819 51 K272554 53 94637 87 K491323 ScrewTorxR Hex.

ScrewHex. ShieldCylinder ScrewHex. CoverCylinder PlugSpark WasherLock NutHex. WrenchSpark Plug BushingGovernor Crank 66538 BootSpark Plug 261463 SeatValve (Intake) 262924 SeatValve (Exhaust) 965 1019 1058 261961 BushingGuide (Exhaust Valve) Note 231218 Bushing Guide (Intake Valve) (Brass) 94010 NutHex. 491252 Label Kit 272697 Owner's Manual Note 273131 Owner's Manual Used on Type No(s). 0604. K Included in Gasket SetPart No. 494241. Included in Valve Overhaul KitPart No. 498539.

D Included in Carburetor KitSee Ref. No. 121. z Included in Carburetor Gasket SetPart No. 494385.

24312 Assemblies include all parts shown in frames. 2 117 282700 to 282799 29 31 1045 27 741 146 1021 40 1020 34 357 25 26 27 758 757 761 33 36 35 41 42 45 45 16 1044 32 28 24 759 REF. NO. 16 24 25 PART NO. REF.

NO. 27 28 PART NO. DESCRIPTION DESCRIPTION REF. NO. 41 42 45 146 357 741 PART NO. 292260 494553 262248 94196 91540 262932 DESCRIPTION RetainerValve KeeperValve TappetValve KeyTiming KeyDrive Pulley GearTiming Note 262135 GearTiming (Used Before Code Date 92080300). LinkCounterweight Counterweight PinCounterweight ScrewHex. Eccentric PinGroove ScrewShoulder ExtensionCrankshaft 26 498971 Crankshaft 222698 KeyFlywheel 499956 Piston Assembly (Standard) Note 499957 Piston Assy. (.010" O.

S.) 499958 Piston Assy. (.020" O.S.) 499959 Piston Assy. (.030" O.S.) 499996 Ring Set (Standard) Note 392331 Ring Set (Std.

Chrome) 499997 Ring Set (.010" O.S.) 499998 Ring Set (.020" O.

S.) 499999 Ring Set (.030" O.S.) 29 31 32 33 34 35 36 40 260924 LockPiston Pin 299691 PinPiston (Standard) Note 391286 PinPiston (.005" O.S.) 490348 RodConnecting (Standard) Note 490469 Rod Connecting (.020" Undersize) 222299 LockRod Screw 94671 ScrewConnecting Rod 262246 ValveExhaust 262247 ValveIntake 65906 SpringValve 26828 SpringValve 221596 RetainerValve 757 758 759 761 1020 1021 1044 1045 213998 399891 230787 94593 262243 94853 94673 231828 K Included in Gasket SetPart No. 494241. Included in Valve Overhaul KitPart No. 498539. D Included in Carburetor KitSee Ref. No. 121.

z Included in Carburetor Gasket SetPart No. 494385. 24313 Assemblies include all parts shown in frames. 3 117 282700 to 282799 46 43 4 12 22 15 20 REF. NO. 4 12 PART NO. DESCRIPTION REF. NO. 15 20 22 PART NO. DESCRIPTION REF.

NO. 43 46 PART NO. @494241. Included in Valve Overhaul KitPart No. 498539.

D Included in Carburetor KitSee Ref. No. 121. z Included in Carburetor Gasket SetPart No. @@@@SEE REPAIR INSTRUCTION MANUAL. @NO. PART NO. DESCRIPTION REF. NO. 125 PART NO. DESCRIPTION REF. NO. 142 PART NO. @@@@494241. Included in Valve Overhaul KitPart No.

@@(Standard) (LMT 5,37,41,77, 81,157) 497737 NozzleCarb. (High Altitude) (LMT 92,96) 497567 NozzleCarb. @No. 121. z Included in Carburetor Gasket SetPart No. @@@@NO. @NO. 268 PART NO. DESCRIPTION REF. NO.

507 520 523 524 525 525A 621 657 663 847 847A PART NO. @@Used on Type No(s). 0026, 0028, 0116, 0122. @@92791 WasherLock 90576 NutHex. @@ScrewHex.

@494241. Included in Valve Overhaul KitPart No. 498539. D Included in Carburetor KitSee Ref. No.

121. z Included in Carburetor Gasket SetPart No. @@@@NO. 227 230 333 334 356 356A 474 474A 474B PART NO. @@WireStop Wire Stop Alternator Alternator Alternator REF. NO. 482 501 526 562 592 614 615 616 616A PART NO. @@Regulator ScrewHex. BoltGovernor Lever NutHex. PinCotter RetainerE-Ring CrankGovernor CrankGovernor REF.

NO. 814 851 877 877A 877B 878 878A 878B 1054 PART NO. 392606 493880 393456 393814 393537 393362 393422 399916 280275 DESCRIPTION HarnessAlternator TerminalCable WireAlternator WireAlternator WireAlternator HarnessAlternator HarnessAlternator HarnessAlternator TieCable K Included in Gasket SetPart No. 494241. Included in Valve Overhaul KitPart No. 498539. D Included in Carburetor KitSee Ref. No. 121. z Included in Carburetor Gasket SetPart No.

494385. 24317 Assemblies include all parts shown in frames. 7 117 282700 to 282799 467 R 445 872 526A 161 171 537 300 526 613 646 284 663 725 REF.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 282707 user guide](http://yourpdfguides.com/dref/3639829)  
<http://yourpdfguides.com/dref/3639829>

NO. PART NO.

883 REF. NO. 161 171 284 300 445 PART NO. 494237 281051 94704 491413 496894 DESCRIPTION BaseAir Cleaner Nut ScrewHex. MufflerExhaust Filter-Air REF.

NO. PART NO. DESCRIPTION NutAir Cleaner ScrewHex ScrewHex. GasketAir Cleaner ScrewShoulder DESCRIPTION Brace ScrewHex. ShieldHeat Cover-Air Cleaner GasketExhaust 467 493903 526 94863 526A 94786 537 K281106 613 93927 646 224546 663 94929 725 223023 872 281104 883 K272293 K Included in Gasket SetPart No. 494241. Included in Valve Overhaul KitPart No. 498539. D Included in Carburetor KitSee Ref. No.

121. z Included in Carburetor Gasket SetPart No. 494385. 24318 Assemblies include all parts shown NO. 309A PART NO. DESCRIPTION For Replacement Starter Motor, See Ref 309, Previous Page. Bolt (Starter Motor) (For 3 5/8" Housing Length) Note 95035 Bolt (Starter Motor) (For 4 3/8" Housing Length) Brush Set (For 3 5/8" Housing Lengths ) StrapStarter DriveStarter REF. NO. 513 544A PART NO. DESCRIPTION REF.

NO. @ @494241. Included in Valve Overhaul KitPart No. 498539. D Included in Carburetor KitSee Ref.

No. 121. z Included in Carburetor Gasket SetPart No. @ @ @ @ @NO. 121 PART NO.

DESCRIPTION REF. NO. 147 PART NO. DESCRIPTION 3 K391086 7 K271866 9 K27803 12 K271916 20 K291675 51 K272554 51A Dz272465 87 K491323 95 D94098 104 D231789 105 D231855 106 D231854 116 K270920 127 137 138 142 499220 Carburetor Kit (Used After Code Date 96072500). (LMT 92, 96) Note 499231 Carburetor Kit (Used After Code Date 96072500). (LMT 157) 497481 Carburetor Kit (Used Before Code Date 96072600). D PlugWelch (Sold in Kit Only) Dz281165 GasketFloat Bowl Dz281164 Washer D497736 NozzleCarburetor (Standard) (LMT 92,96) Note D497566 Nozzle-Carb. (Standard) (LMT 5,37,41,77, 81,157) D497472 JetPilot LMT 5,37,41,77,81) 358 494241 Gasket Set 524 K281370 SealFill Tube 537 K281106 Gasket-Air Cleaner 634 D494453 SealSpring Assembly (Manual Choke) 634A D494455 SealSpring Assembly (ChokeAMatic) 634B D281167 Seal (Throttle Shaft) (LMT 5,37,39) 883 K272293 GasketExhaust 977 494385 Gasket Set Carburetor 987 D281166 SealThrottle Shaft 1095 498539 Gasket SetValve Overhaul K Included in Gasket SetPart No. 494241. Included in Valve Overhaul KitPart No.

498539. D Included in Carburetor KitSee Ref. No. 121. z Included in Carburetor Gasket SetPart No. 494385. 243113 Assemblies include all parts shown in frames. 13 117.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 282707 user guide](http://yourpdfguides.com/dref/3639829)  
<http://yourpdfguides.com/dref/3639829>