



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 282H00 TO 282H99. You'll find the answers to all your questions on the BRIGGS & STRATTON 282H00 TO 282H99 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 282H00 TO 282H99
User guide BRIGGS & STRATTON 282H00 TO 282H99
Operating instructions BRIGGS & STRATTON 282H00 TO 282H99
Instructions for use BRIGGS & STRATTON 282H00 TO 282H99
Instruction manual BRIGGS & STRATTON 282H00 TO 282H99



FORM MS-5448-04/19/2007
REPLACES FORM MS-5448-02/05/2007
FILE IN SECT. 2 OF SERVICE MANUAL
282H00

Illustrated Parts List Model Series 282H00

TYPE NUMBERS
0105 through 0600.

TABLE OF CONTENTS

Air Cleaner	5
Alternator	7
Blower Housing	5
Camshaft	2
Carburetor	4
Controls	7
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Flywheel	6
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	3
Governor Spring	7
Ignition	7
Kit - Carburetor Overhaul	4
Lubrication	3
Piston, Rings, Connecting Rod	2
Valves	3



PRINTED IN U.S.A.
COPYRIGHT BY BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 282H00 TO 282H99 user guide](http://yourpdfguides.com/dref/3639874)
<http://yourpdfguides.com/dref/3639874>

Manual abstract:

2 OF SERVICE MANUAL 282H00 Illustrated Parts List Model Series 282H00 TYPE NUMBERS 0105 through 0600. TABLE OF CONTENTS Air Cleaner . . .

.....
.....
.....
..... 5 Alternator
.....
.....
.....
.. 7 Blower Housing
.....
.....
..... 5 Camshaft ..
.....
.....
.....
2 Carburetor
.....
.....
..... 4 Controls
.....
.....
.....
..... 7 Crankshaft
.....
.....
.....
2 Cylinder
.....
.....
..... 2 Cylinder Head ..
.....
.....
.....
.....
. 3 Electric Starter
.....
.....
..... 7 Engine Sump ..
.....
.....
..... 2 Flywheel
.....
.....
.....
..... 6 Fuel Supply
.....
.....
..... 4 Gasket Set - Engine .
.....
.....
.....
..... 2 Gasket Set - Valve
.....
.....
..... 3 Governor Spring
.....
.....
..... 7 Ignition

.....
.....
.....
... 7 Kit - Carburetor Overhaul

..... 4 Lubrication

.....
.....
.....

3 Piston, Rings, Connecting Rod 2 Valves ...

.....
.....
.....

..... 3 PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 282H00 1 29 32 23 28 552 718 25 27 46 1035 306 45 27 691 26 307 16 43 11 10 358 ENGINE GASKET SET 3 12 883 943 7 20 51 9 524 617 741 691 842 868 1022 1266 758 1270 146 357 24 584 9 1264 1263 757 759 1058 OWNER'S MANUAL 4 15 4A 1330 REPAIR MANUAL 12 12 1032 1017 239 22 20 20 415 5448-2 Illustrations cover a range of engines. @@@@ 04/19/2007 282H00 304 968 1267 1040 305A 643 967 445 305 1036 EMISSIONS LABEL 5448-5 Illustrations cover a range of engines. @ 5 04/19/2007 282H00 74 73 1005A 415A 1070 73A 1070A 1005 363 1044 78 37 23 1051 783 5448-6 Illustrations cover a range of engines.

@ 6 04/19/2007 282H00 DC ONLY 474 877A DUAL CIRCUIT 474A 877 1059 877B 474B TRI CIRCUIT 1059 5/9 AMP REGULATED 578 878 878A 501 526 NOTE: All stators use a No. 1119 mounting screw. NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information. 789 729 789A 309 1051 510 783 513 803 1090 462 579 797 802 616 404 227 505 614 562 216 202 232 268 269 271 222 209 559 270 265 267 188 311 310 521 801 729A 697 544 333 851 334 503 356 1054 5448-7 Illustrations cover a range of engines.

@ 7 04/19/2007 282H00 REF. NO. 1 2 PART NO. DESCRIPTION REF. NO. 24 25 PART NO. DESCRIPTION REF. NO. 35 PART NO. DESCRIPTION 794087 Cylinder Assembly 399265 Kit--Bushing/Seal (Magneto Side) 3 K391086s Seal--Oil (Magneto Side) 4 697106 Sump--Engine 4A 697188 Sump--Engine Used on Type No(s).

0242, 0257. 5 794538 Head--Cylinder 6 690310 Washer (Cylinder Head) (Used After Code Date 07010900). 7K273280s Gasket--Cylinder Head 9 K697109 Gasket--Breather 10 697157 Screw (Breather Assembly) 11 697113 Tube--Breather 12 K697110 Gasket--Crankcase 13 690360 Screw (Cylinder Head) (Used Before Code Date 07011000). 13A 793988 Screw (Cylinder Head) (Used After Code Date 07010900). 15 690946 Plug--Oil Drain (Square Head) 16 697127 Crankshaft 20 K791892 Seal--Oil (PTO Side) 22 692125 Screw (Crankcase Cover/ Sump) 23 693557 Flywheel Used on Type No(s).

@@ 791935 Valve--Intake (Used After Code Date 06011900). @ 73A 794437 Screen--Rotating (Used After Code Date 07040800). @ No.358. D Included in Carburetor Overhaul Kit--Ref. No. 121 & 121A. z Included in Carburetor Gasket Set--Ref. No. 977.

ncluded in Valve Gasket Set--Ref. No 1095. 5448-8 Illustrations cover a range of engines. @ 8 04/19/2007 282H00 REF. NO. 121 PART NO. DESCRIPTION REF. NO. 209 PART NO. DESCRIPTION REF. NO. 267 PART NO. @ 0125, 0200. @ 0196, 0200, 0231, 0239, 0242, 0257, 0262, 0334, 0600. @ 0188, 0382.

690576 Spring-Governor Used on Type No(s). 0110, 0115, 0120, 0125, 0198, 0199, 0423. 691795 Spring-Governor Used on Type No(s). 0105, 0111, 0113, 0116, 0117, 0119, 0122. @ 0110, 0117, 0121, 0122. 691024 Clamp--Casing 690804 Screw (Casing Clamp) Used on Type No(s). @ 0125, 0196, 0198, 0200, 0231, 0239, 0242, 0257, 0262. 792629 Screw (Casing Clamp) Used on Type No(s). 0334, 0423, 0600. @ 0119.

@ 0110, 0111. @ No.358. D Included in Carburetor Overhaul Kit--Ref. No. 121 & 121A. z Included in Carburetor Gasket Set--Ref. No. 977. ncluded in Valve Gasket Set--Ref. No 1095. 5448-9 Illustrations cover a range of engines. @ 9 04/19/2007 282H00 REF. NO. 337 PART NO. DESCRIPTION REF. NO. 462 474 PART NO. DESCRIPTION REF. NO.

526 527 544 552 559 562 PART NO. DESCRIPTION 691043 Plug--Spark Used on Type No(s). 0105, 0110, 0111, 0113, 0115, 0116, 0117, 0119, 0120, 0121, 0125, 0199, 0239, 0262, 0382. - - - - - Note - - - - - 491055s Plug--Spark Used on Type No(s). 0188, 0196, 0198, 0200, 0231, 0242, 0257, 0334, 0600. 792015 Plug--Spark Used on Type No(s). 0423. 693675 Screw (Cable Clamp) 697089 Wire--Stop 691483 Key--Drive Pulley Used on Type No(s). 0115, 0116, 0119, 0199. 697151 Gasket Set--Engine 19203 Puller--Flywheel 89838 Wrench--Spark Plug 694476 Screw (Fuel Pump) 690297 Screw (Fuel Pump) 697090 Pump--Fuel (Includes Mounting Bracket) Used on Type No(s).

0110, 0117, 0121, 0123, 0257. 808656 Pump--Fuel Used on Type No(s). 0110, 0117, 0121, 0122, 0257. 691691 Washer (Governor Crank) 690283 Plug (Sump) 794129 Plug (Cover/Retainer) 697122 Elbow--Intake 698083 Filter--Air Cleaner Cartridge (Non Washable) 691261 Washer (Starter Cable) 696578 Alternator (DC Only) Used on Type No(s). 0110.

696459 Alternator (Dual Circuit) Used on Type No(s) (Bottom Of Bowl) 958 698183 Valve--Fuel Shut Off (Plastic) 499613 Cover--Oil Pump Used on Type No(s). 0242, 0257. 967 697015 Filter--Pre Cleaner 968 698403 Cover--Air Cleaner 975 495933 Bowl--Float 975A 699502 Bowl--Float 977 690192 Gasket Set--Carburetor 987 D691326 Seal--Throttle Shaft 987A D698777 Seal--Throttle Shaft Used on Type No(s). 0242, 0257. 1005 794438 Fan--Flywheel (Used After Code Date 07040800).

1005A 794436 Fan--Flywheel (Used Before Code Date 07040900). 1017 690770 Screen--Oil Pump 1022K272475s Gasket--Rocker Cover 1023 791079 Cover--Rocker (Used After Code Date 05013100). - - - - - Note - - - - - 692492 Cover--Rocker (Used Before Code Date 05020100). 1024 499054 Pump--Oil Used on Type No(s). 0242, 0257. 1026 692003 Rod--Push (Intake) - - - - - Note - - - - - 692011 Rod--Push (Exhaust) 1027 492932

*Filter--Oil Used on Type No(s). 0242, 0257. 1029 691751 Arm--Rocker 1032 491710 Ball--Oil Pump 1034 690822 Guide--Push Rod 1035 693784
Shaft--Pump Used on Type No(s). 0242, 0257. 1036 Label--Emissions (Available From A Briggs & Stratton Authorized Dealer) 757 758 759 783 788 789
789A 797 801 802 803 830 842 847 K Included in Engine Gasket Set--Ref.*



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 282H00 TO 282H99 user guide](http://yourpdfguides.com/dref/3639874)
<http://yourpdfguides.com/dref/3639874>

No.358. D Included in Carburetor Overhaul Kit--Ref. No. 121 & 121A. z Included in Carburetor Gasket Set--Ref. No. 977. ncluded in Valve Gasket Set--Ref. No 1095.

5448-11 Illustrations cover a range of engines. @@11 04/19/2007 x REF. NO. 1040 1044 1051 1054 1058 1059 1070 282H00 PART NO. DESCRIPTION REF.

NO. 1090 1091 1095 1119 1127 1263 1264 PART NO. @@NO. 1267 PART NO. @@690363 Screw (Flywheel Fan) (Used After Code Date 07040800). @@0119, 0121. 697156 Plug--AVS Counterweight 272147 Repair Manual 1270 1330 1070A 1266 KD691917 1266A D697123 K Included in Engine Gasket Set--Ref. No.358. D Included in Carburetor Overhaul Kit--Ref. No. 121 & 121A. z Included in Carburetor Gasket Set--Ref. No. 977.

ncluded in Valve Gasket Set--Ref. No 1095. 5448-12 Illustrations cover a range of engines. @@12 04/19/2007 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 282H00 TO 282H99 user guide](http://yourpdfguides.com/dref/3639874)
<http://yourpdfguides.com/dref/3639874>