



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 285707. You'll find the answers to all your questions on the BRIGGS & STRATTON 285707 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 285707**  
**User guide BRIGGS & STRATTON 285707**  
**Operating instructions BRIGGS & STRATTON 285707**  
**Instructions for use BRIGGS & STRATTON 285707**  
**Instruction manual BRIGGS & STRATTON 285707**

FORMS-2700-1197  
REPLACES FORM MS-2700-497  
FILE IN SEC. 2 OF SERVICE MANUAL  
**285700 to 285799**

## **Illustrated Parts List** **Model Series** **285700 to 285799**

TYPE NUMBERS  
0101, 0113, 0114,  
0143, 0604, 0613.

### **TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW**

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the Illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.



PRINTED IN U.S.A.  
COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted  
in any form or by any means, electronic or mechanical, including photocopying,  
recording or by any information storage and retrieval system, without permission  
in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 285707 user guide](http://yourpdfguides.com/dref/3639833)  
<http://yourpdfguides.com/dref/3639833>

**Manual abstract:**

2 OF SERVICE MANUAL 285700 to 285799 Illustrated Parts List Model Series 285700 to 285799 TYPE NUMBERS 0101, 0113, 0114, 0143, 0604, 0613. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. @@@@The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."

" If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply. PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. B. C. D.

E. F. 285700 to 285799 1 2 3 307 306 8 11 9 10 7 552 87 869 870 383 337 REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. REF. NO. PART NO. 13 5 871 308 305 1019 LABEL KIT 1058 OWNER'S MANUAL 635 REF. NO. 306 307 308 337 383 552 635 869 870 PART NO.

224545 94386 491490 802592 89838 491986 REF. NO. DESCRIPTION Cylinder Assembly Bushing SealOil HeadCylinder GasketCylinder Head Breather Assembly GasketBreather ScrewHex. TubeBreather ScrewHex. SealGovernor Shaft ScrewHex. DESCRIPTION PART NO. DESCRIPTION 1 496414 2 399265 3 K391086 5 494240 7 K271866 8 495735 9 K27803 10 94621 11 280100 13 94622 87 K491323 305 94786 ShieldCylinder ScrewHex. CoverCylinder PlugSpark WrenchSpark Plug BushingGovernor Crank 66538 BootSpark Plug 261463 SeatValve (Intake) 262924 SeatValve (Exhaust) 871 1019 1058 261961 BushingGuide (Exhaust Valve) Note 231218 Bushing Guide (Intake Valve) (Brass) 491252 Label Kit 272697 Owner's Manual Note 273131 Owner's Manual Used on Type No(s). 0604, 0613. K Included in Gasket SetPart Number 494241.

D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetPart No. 494385. Included in Valve Overhaul Gasket SetPart No. 498539. 27922 Assemblies include all parts shown in frames. 2 117 285700 to 285799 45 40 35 34 36 33 146 741 46 29 25 26 28 27 15 20 REF. NO. 4 12 PART NO.

DESCRIPTION REF. NO. 26 PART NO. DESCRIPTION REF. NO. 31 32 33 34 35 36 40 41 42 43 45 46 146 741 757 758 759 761 1044 1045 PART NO. DESCRIPTION 16 1044 45 24 758 761 42 41 1045 759 757 4 12 43 27 32 31 22 15 16 20 22 24 25 494238 SumpEngine K271916 GasketCrankcase (.015" Thick) Note K271997 Gasket Crankcase (.005" Thick) K271996 Gasket Crankcase (.009" Thick) 94239 PlugOil Drain 495162 Crankshaft K291675 SealOil 94624 ScrewHex.

@@(.010" O.S.) 391288 Piston Assy. (.020" O.S.) 391289 Piston Assy. @@@@D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetPart No. 494385. Included in Valve Overhaul Gasket SetPart No. @@@@NO. PART NO.

@@@@SeatInlet (Used After Code Date 92071900). @@@@NO. 125 PART NO. DESCRIPTION REF. NO. 142 PART NO. @@@@(Standard) (LMT 37,41,81,157) 497737 NozzleCarb. (High Altitude) (LMT 92,96) 497567 NozzleCarb. @@D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetPart No. 494385. Included in Valve Overhaul Gasket SetPart No. @@@@NO. 116 227 230 333 334 356 422 423 PART NO.

@@WireStop BracketOil Fill ScrewShoulder REF. NO. 523 524 525 525A 562 592 614 615 PART NO. @@PinCotter Retainer REF. NO. @@@@D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetPart No. 494385. Included in Valve Overhaul Gasket SetPart No. 498539. 27925 Assemblies include all parts shown in frames. 5 117 285700 to 285799 474 878 878A 222 265 209 663 187 657 240 601 216 216A 232 482 877 271 268 1054 269 270 PART NO. 63426 290568 393474 93621 93053 93496 94620 393456 393362 399916 280275 REF. NO. 187 PART NO. DESCRIPTION REF. NO. 240 PART NO. DESCRIPTION REF.

NO. 270 271 474 482 601 657 663 877 878 878A 1054 DESCRIPTION LocknutCasing LeverControl Alternator ScrewHex. ClampHose ScrewSlotted Hex. ScrewHex. WireAlternator HarnessAlternator HarnessAlternator TieCable 209 216 216A 222 232 299146 LineFuel (Cut to Required Length) 260871 Spring-Governor Note 261306 Spring Governor Used on Type No(s). 0113, 0613. 262766 LinkChoke 262767 LinkChoke 495611 BracketControl 262785 Spring-Link 265 268 269 298090 FilterFuel Note 394358 FilterFuel Used on Type No(s). 0143. 221535 ClampCasing 65616 CasingWire (72" Long) (Cut to Required Length) 26633 WireControl (78" Long) (Cut to Required Length) K Included in Gasket SetPart Number 494241. D Included in Carburetor KitSee Ref.

121. z Included in Carburetor Gasket SetPart No. 494385. Included in Valve Overhaul Gasket SetPart No. 498539. 27926 Assemblies include all parts shown in frames. 6 117 285700 to 285799 467 872 965 53 171 R 51A 445 50 123 224 161 646 284 663 537 REF. NO. PART NO. DESCRIPTION REF.

NO. 171 224 284 445 467 PART NO. 281051 94513 94704 496894 493903 DESCRIPTION Nut ScrewHex. ScrewHex. FilterAir NutAir Cleaner REF. NO. PART NO. DESCRIPTION GasketAir Cleaner Brace ScrewHex. CoverAir Cleaner NutHex. 50 213819 ManifoldIntake 51A K272554 GasketIntake 53 94637 StudCarburetor Mounting 123 94616 ScrewTorxRHex.

161 494237 BaseAir Cleaner 537 K281106 646 224546 663 94620 872 281104 965 94010 K Included in Gasket SetPart Number 494241.



**You're reading an excerpt. Click here to read official BRIGGS & STRATTON 285707 user guide**  
<http://yourpdfguides.com/dref/3639833>

*D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetPart No. 494385. Included in Valve Overhaul Gasket SetPart No. 498539. 27927 Assemblies include all parts shown in frames. @ @NO. 23 37 73 75 78 188 304 PART NO.*

*@ @ @ @REF. NO. 305 346 363 423 455 668 726 PART NO. @ @ScrewHex. Flywheel Puller ScrewShoulder CupFlywheel Spacer GearRing (Includes Mounting Hardware) 668 75 455 23 726 REF. NO. 727 729 1005 1006 1036 PARTy;Spring Assembly (Manual Choke) 634A D494455 SealSpring Assembly (Choke A Matic) 977 494385 Gasket Set Carburetor 987 D281166 SealThrottle Shaft 1095 498539 Gasket SetValve Overhaul K Included in Gasket SetPart Number 494241. D Included in Carburetor KitSee Ref. 121. z Included in Carburetor Gasket SetPart No. 494385. Included in Valve Overhaul Gasket SetPart No. 498539. 279211 Assemblies include all parts shown in frames. 11 117 .*



**[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 285707 user guide](http://yourpdfguides.com/dref/3639833)**  
**<http://yourpdfguides.com/dref/3639833>**