



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 305400 TO 305499. You'll find the answers to all your questions on the BRIGGS & STRATTON 305400 TO 305499 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 305400 TO 305499**

**User guide BRIGGS & STRATTON 305400 TO 305499**

**Operating instructions BRIGGS & STRATTON 305400 TO 305499**

**Instructions for use BRIGGS & STRATTON 305400 TO 305499**

**Instruction manual BRIGGS & STRATTON 305400 TO 305499**



FORM MS-6141-02/04/2007  
REPLACE FORM MS-6141-11/01/2006  
FILE IN SECT. 2 OF SERVICE MANUAL

**305400**

## Illustrated Parts List

### Model Series

**305400**

TYPE NUMBERS

0005 to 0158, 0165 to 1410.

#### TABLE OF CONTENTS

Air Cleaner .....	7
Alternator .....	15
Blower Housing .....	12
Camshaft .....	2
Carburetor .....	6
Carburetor Overhaul Kit .....	6
Controls .....	10
Crankcase Cover/Sump .....	4
Crankshaft .....	2
Cylinder .....	2
Cylinder Head .....	3
Electric Starter .....	16
Engine Gasket Set .....	2
Exhaust System .....	8
Flywheel .....	13
Fuel Supply .....	9
Governor Spring .....	10
Ignition .....	15
Intake Manifold .....	4
Inverter .....	15
Lubrication .....	5
Piston/Rings/Connecting Rod .....	2
Rewind Starter .....	14
Shrouds .....	11
Valves Gasket Set .....	3



PRINTED IN U.S.A.  
COPYRIGHT BY BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 305400 TO 305499 user guide](http://yourpdfguides.com/dref/3639759)

<http://yourpdfguides.com/dref/3639759>

**Manual abstract:**

2 OF SERVICE MANUAL 305400 Illustrated Parts List Model Series 305400 TYPE NUMBERS 0005 to 0158, 0165 to 1410. TABLE OF CONTENTS Air

Cleaner . . . . .  
.....  
.....  
..... 7 Alternator . . . . .  
.....  
.....  
.....  
.. 15 Blower Housing . . . . .  
.....  
.....  
.....  
... 12 Camshaft . . . . .  
.....  
.....  
.....  
2 Carburetor . . . . .  
.....  
.....  
.....  
..... 6 Carburetor Overhaul Kit . . . . .  
.....  
..... 6 Controls . . . . .  
.....  
.....  
.....  
.. 10 Crankcase Cover/Sump . . . . .  
.....  
.....  
.....  
. 4 Crankshaft . . . . .  
.....  
.....  
..... 2 Cylinder . . . . .  
.....  
.....  
.....  
..... 2 Cylinder Head . . . . .  
.....  
.....  
.....  
. 3 Electric Starter . . . . .  
.....  
.....  
..... 16 Engine Gasket Set . . . . .  
.....  
.....  
..... 2 Exhaust System . . . . .  
.....  
.....  
.....  
..... 8 Flywheel . . . . .  
.....  
.....  
.....  
..... 13 Fuel Supply . . . . .  
.....  
.....  
.....  
..... 9 Governor Spring . . . . .  
.....  
.....  
..... 10 Ignition . . . . .

.....  
.....  
.....  
..... 15 Intake Manifold ...

.....  
.....  
.....  
... 4 Inverter ...

.....  
.....  
.....  
.. 15 Lubrication ...

.....  
.....  
.. 5 Piston/Rings/Connecting Rod ...  
.....  
2 Rewind Starter .....

.....  
.....  
.....  
.. 14 Shrouds ...

.....  
.....  
.....  
11 Valves Gasket Set .....  
.....  
..... 3 PRINTED IN U.

S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 305400 1 10 11 11A 8 9 1058 OWNER'S MANUAL 2 3 572 25 26 601 1330 REPAIR MANUAL 718 15 15 28 27 29 27 27 46 598 1025 16 741 146 357 17 1133 3 7 R GRAPHOIL 377 32 358 ENGINE GASKET SET 868 51 276A 338 12 51A 163 273 9 20 468 1022 691 883 439 988 6141-2 Assemblies include all parts shown in frames. 2 02/24/2007 305400 21 338 1023 1095B VALVE GASKET SET 7 R GRAPHOIL 868 883 1022 1023B 276A 914 1023C 1022 51A 918 601B 1023D 5 830 1100 1029 40 36 1022 40 35 1023E 192 276 830 1254 276A 871 5A 1022 830 868 7 33 42 R GRAPHOIL 34 42 34 42 33 42 1026 45 7 868 R GRAPHOIL 871 1254 276A 36 1100 1029 35 40 830 13 337 635 383 192 13 6141-3 Assemblies include all parts shown in frames. 3 02/24/2007 305400 122 50 51 1176 51A 415 54 365 51A 18 616 552A 615 691 552 12 439 276 691 552 18A 691 552 276C 12 439 17 17 20 22 20 6141-4 Assemblies include all parts shown in frames. 4 02/24/2007 305400 816 565 1028 988 710 737 988A 415 402 1027 650 39 1024 287 525 525A 523A 1017 479 468 273 596 460 1346 524 6141-5 Assemblies include all parts shown in frames. 5 02/24/2007 305400 121 CARBURETOR OVERHAUL KIT 94 1091 104 117 142 255 276 633 633B 681 947A 125B 105 119 118 118A 681 102A 104 955A 276B 133A 91 108A 276F 231 276B 365A 102A 109 633 142 94 255 109B 217 633 110 121A CARBURETOR OVERHAUL KIT 94 1091 104 105 117 102A 142 255 133A 807 276 633 633B 681 633B 1091 142B 98 98A 987 276 117 130A 95 97 807 97D 742 637 637A 633C 629A 633 187A 601B 437 187 601 6141-6 Assemblies include all parts shown in frames. 6 02/24/2007 305400 968B 971 996C 968 467 643 163B 967 161C 971 996 445 163 833 862 161 833B 1004 163 862 167 643A 967C 445B 161B 11A

862D 11 163 163B 6141-7 Assemblies include all parts shown in frames. 7 02/24/2007 305400 676C 677B 676 725B 677B 676B 300E 300K 728 725 677B 994 837 346 837 728A 819D 300B 300G 819C 836 613 300G 613A 819 819 863 300D 832 884 836A 884A 819A 355A 863A 151 436C 436A 436 436B 6141-8 Assemblies include all parts shown in frames. 8 02/24/2007 305400 9 QUART 972A 957A 467 210 958A 958B 601B 187B 187C 601A 674A 187D 601B 240B 601 674 385 387 387A 628 1054 674A 788 628A 240 527 725 182F 187A 601B 187 601 182G 182J 190A 182E 190 182H 6141-9 Assemblies include all parts shown in frames. 9 02/24/2007 305400 205 203 561 227 278 505 562 268 "Z" 271 282 347 222 663 281 269 270 222A 267 265 1012 208A 188 1344 206 188 209 209A 211 211A 212 234 212A 216 226 232 629A 629B 1038A 262 280 432 689 208 843 703 6141-10 Assemblies include all parts shown in frames. @@@@ @@@@ 14 02/24/2007 305400 DUAL CIRCUIT 474B 1059 10 - 16 AMP 474D 1059 474E 20 AMP 1059 20 AMP POWER LINK 474F 877 877C 877D 877D 878 578 578 578 NOTE: All stators use a No.

1119 mounting screw. 526 501 526B 501B 1271 577 789 683 899 555 892 990 664 500 813 920 239 493A 318 927 1048 1272 1323 356 774 879 506 729 529 879A 578B 356A 356B 578A 493 356E 1085 1231 318B 77 333 1054 507 520 359 373 532 334 851 6141-15 Assemblies include all parts shown in frames. 15 02/24/2007 305400 309 510 802 1051 803 544 310 311 801 697 797 309A 802A 1090 510 1051 803A 544A 310A 413 801 311A 797A 797 NOTE: For Replacement Starter Motor, See Reference 309. 697 503 1009 801B 920A 893 309D 683 388 6141-16 Assemblies include all parts shown in frames. 16 02/24/2007 305400

REF. NO.  
1 PART NO. DESCRIPTION REF. NO. 16 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 692178 Cylinder Assembly ----- Note -----  
841829 Cylinder Assembly Used on Type No(s). 0111. 841081 Cylinder Assembly Used on Type No(s).

0126, 0146. 2 808534 Kit-Bushing/Seal (Magneto Side) 3 K805101s Seal-Oil (Magneto Side) 5 809200 Head-Cylinder 5A 809201 Head-Cylinder 7K806085s Gasket-Cylinder Head 8 808984 Breather Assembly 9 K809094 Gasket-Breather 10 690751 Screw (Breather Assembly) 11 691556 Tube-Breather 11A 806083s Tube-Breather 12 K691684 Gasket-Crankcase 13 692059 Screw (Cylinder Head) 15 690946 Plug-Oil Drain 692161 Crankshaft ----- Note -----  
692168 Crankshaft Used on Type No(s). 0178. 692163 Crankshaft Used on Type No(s). 0005, 0078, 0112, 0113, 0115, 0116, 0132, 0133, 0145, 0171, 0175, 0197, 1409. 808740 Crankshaft Used on Type No(s). 0121. 808975 Crankshaft Used on Type No(s). 0119, 1410. 841827 Crankshaft Used on Type No(s).

0110, 0111. 809212 Crankshaft Used on Type No(s). 0172. 692162 Crankshaft Used on Type No(s). 0077, 0124, 0144, 0192.  
692165 Crankshaft Used on Type No(s). 0169, 0194. 692169 Crankshaft Used on Type No(s). 0127, 0143. 690752 Bearing-Ball ----- Note ----- 691541  
Bearing-Ball Used on Type No(s).

0127, 0143, 0144. 808847 Cover-Crankcase ----- Note ----- 808508 Cover- Crankcase Used on Type No(s). 0005, 0145, 1409, 1410. 808851 Cover-  
Crankcase Used on Type No(s). 0127, 0144. 20 K805049s Seal-Oil (PTO Side) 21 809500 Cap-Oil Fill 22 807362 Screw (Crankcase Cover/Sump) 23 841825  
Flywheel ----- Note ----- 841830 Flywheel Used on Type No(s). 0111. 841908 Flywheel Used on Type No(s). 0114, 0121, 0123, 0127, 0156, 1409, 1410.  
842514 Flywheel Used on Type No(s).

0119, 0135, 0139, 0147, 0177, 0180, 0181, 0184, 0186.



[You're reading an excerpt. Click here to read official BRIGGS &  
STRATTON 305400 TO 305499 user guide  
http://yourpdfguides.com/dref/3639759](http://yourpdfguides.com/dref/3639759)

842515 Flywheel Used on Type No(s). 0142. 841657 Flywheel Used on Type No(s). 0169, 0170, 0194. 25 807619 Piston Assembly (Standard) ----- Note ----- 807809 Piston Assembly (.020" Oversize) 26 807620 Ring Set (Standard) ----- Note ----- 807810 Ring Set (.020" Oversize) 27 690683 Lock-Piston Pin 28 807621 Pin-Piston (Standard) 29 807900s Rod-Connecting (Standard) ----- Note ----- 807803 Rod-Connecting (.020" Undersize) 17 18 18A K Engine Gasket Set-Reference 358 D Carburetor Overhaul Kit-Reference 121 or 121A Valve Gasket Set-Reference 1095B 6141-17 Assemblies include all parts shown in frames. 17 02/24/2007 305400 REF.

NO. 32 33 34 35 36 37 39 40 42 45 46 PART NO. DESCRIPTION REF. NO. 74 74A 75 77 78 91 PART NO.

DESCRIPTION REF. NO. 98 98A 102A 104 105 PART NO. DESCRIPTION 690698 Screw (Connecting Rod) 807681 Valve-Exhaust 807680 Valve-Intake 692084 Spring-Valve (Intake) 692084 Spring-Valve (Exhaust) 841309 Guard-Flywheel 690745 Deflector-Oil 692058 Retainer-Valve 807683 Keeper-Valve 690977 Tappet-Valve 691557 Camshaft ----- Note ----- 692157 Camshaft Used on Type No(s). 0005, 0145, 1409, 1410.

690754 Manifold-Intake ----- Note ----- 692124 Manifold- Intake Used on Type No(s). 1409. 691694 Gasket-Intake K692035 Gasket-Intake 690676 Screw (Intake Manifold) 691568 Housing-Rewind Starter 692085 Pulley-Starter 692086 Spring-Rewind Starter 66574 Rope-Starter 805957 Insert-Grip 808167 Grip-Starter Rope 841233 Screw (Rewind Starter) 841662 Screen-Rotating 841440 Screen-Rotating 841582 Screen-Rotating Used on Type No(s). 0154, 0178, 0193. 841441 Screw (Rotating Screen) 691647 Screw (Rotating Screen) 691490 Washer (Flywheel) 690819 Motor-Servo Used on Type No(s). 0005, 0145. 690688 Screw (Flywheel Guard) 809208 Body-Upper Carburetor ----- Note ----- 807919 Body-Upper Carburetor Used on Type No(s). 0023, 0027, 0068, 0113, 0114, 0115, 0117, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0130, 0132, 0139, 0143, 0156, 0172, 0173, 0174, 0175, 0177, 0180, 0183, 0190, 0193, 0194, 0197. 808980 Body-Upper Carburetor Used on Type No(s). 1410.

842236 Body-Upper Carburetor Used on Type No(s). 0119. 808964 Body-Upper Carburetor Used on Type No(s). 1409. D808257 Kit-Idle Mixture 690718 Screw (Throttle Valve) 809007 Shaft-Throttle ----- Note ----- 807495 Shaft-Throttle Used on Type No(s). 0178. 809095 Shaft-Throttle Used on Type No(s). 1409, 1410. 808177 Kit-Idle Speed 808981 Kit-Idle Speed D692077 Gasket-Carburetor Body D690723 Pin-Float Hinge 805620 Valve-Float Needle Used on Type No(s). 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0126, 0127, 0143, 0156, 0172, 0177, 0183, 0190, 0194, 0197.

690719 Valve-Choke 808398 Shaft-Choke 809096 Shaft-Choke ----- Note ----- 808962 Shaft-Choke Used on Type No(s). 1409. 806861 Washer (Choke Shaft) D690862 Jet-Main (Standard) ----- Note ----- 805537 Jet-Main (Standard) Used on Type No(s). 1410. 842238 Jet-Main (Standard) Used on Type No(s).

0119. 842314 Jet-Main (Standard) Used on Type No(s). 0110, 0111. 806859 Jet-Main (Standard) Used on Type No(s). 149.

108A 109 109B 50 110 117 51 51A 54 55 56 57 58 59 60 65A 73 73A 73B 94 95 97 97D K Engine Gasket Set-Reference 358 D Carburetor Overhaul Kit-Reference 121 or 121A Valve Gasket Set-Reference 1095B 6141-18 Assemblies include all parts shown in frames. 18 02/24/2007 305400 REF. NO. 118 PART NO. DESCRIPTION REF. NO. 119 PART NO. DESCRIPTION REF. NO. 142 PART NO.

DESCRIPTION 842311 Jet-Main (High Altitude) ----- Note ----- 842837 Jet-Main (High Altitude) (Over 5000 Feet) Used on Type No(s). 0110, 0111. 842838 Jet-Main (High Altitude) (6500 Ft.) Used on Type No(s). 0110, 0111. 842840 Jet-Main (High Altitude) (10,000 Feet) Used on Type No(s). 0110, 0111. 842841 Jet-Main (High Altitude) (Over 5000 Feet) Used on Type No(s). 0119. 842318 Jet-Main (High Altitude) (6500 Ft.) Used on Type No(s). 0119. 842842 Jet-Main (High Altitude) (10,000 Feet) Used on Type No(s). 0119. 807012 Jet-Main (High Altitude) (5,000 to 7,500 Feet) Used on Type No(s).

1410. ----- Note ----- 807011 Jet-Main (High Altitude) (Over 7,500 Feet) Used on Type No(s). 1410. 807114 Jet-Main (High Altitude) (5000 Ft.) Used on Type No(s).

1409. 842311 Jet-Main (High Altitude) (8500 Feet) Used on Type No(s). 1409. 690720 Screw (Upper To Lower Carburetor Body) ----- Note ----- 842761 Screw (Upper To Lower Carburetor Body) Used on Type No(s). 0119. 809020 Kit-Carburetor Overhaul 809021 Kit-Carburetor Overhaul 690691 Spacer-Carburetor 809011 Carburetor ----- Note 55 262 265 267 268 269 270 K Engine Gasket Set-Reference 358 D Carburetor Overhaul Kit-Reference 121 or 121A Valve Gasket Set-Reference 1095B 6141-20 Assemblies include all parts shown in frames. 20 02/24/2007 305400 REF. NO. 271 273 276 276A 276B 276C PART NO. DESCRIPTION REF.

NO. 304 PART NO. DESCRIPTION REF. NO. 310 PART NO. @0124, 0127, 0144. 693497 Washer-Sealing Used on Type No(s). 0119. @@0150, 0151. 692099 Muffler Used on Type No(s). @@690906 Muffler Used on Type No(s). 0147, 0152, 0154, 0165, 0168, 0184, 0189, 0190, 0197. ----- Note ----- 690931 Muffler Used on Type No(s). 0193. 691562 Muffler Used on Type No(s).

0194,1410. 808379 Muffler Used on Type No(s). 0194,1410. @@@@0175, 0178, 0193. @@0175, 0178, 0193.

@@0111, 0126, 0146. @@0111, 0126, 0146. @@0005, 0145. @@0119, 0142, 0178. 792015 Plug-Spark Used on Type No(s). @21 02/24/2007 305400 REF. NO. @@DESCRIPTION REF. NO. 436 436A 436B 436C 437 439 445 445B PART NO.

DESCRIPTION REF. NO. 479 PART NO. @@0005, 0145. @@0152, 0153. @@0178. @@0150, 0158. 691502 Manifold-Exhaust Used on Type No(s). 0151. @@0111.

@@0119, 0135, 0139, 0147, 0177, 0181, 0184, 0186, 0194. @0142. @0005, 0145, 1409, 1410. 691518 Bracket-Mounting Used on Type No(s). 0005, 0145.

@@0117, 0118. 841170 Regulator Used on Type No(s). 0142. 691573 Regulator Used on Type No(s). 0119, 0135, 0139, 0142, 0147, 0177, 0181, 0184, 0186. 691532 Strap-Starter 690238 Nut (Governor Control Lever) 807120 Screw (Carburetor Cover) 691972 Insulator 496881 Drive-Starter 691528 Spring-Pawl 691084 Terminal-Ground 491832 Plug-Dipstick/Fill 693175 Dipstick 693172 Seal-Dipstick Tube 693174 Tube-Dipstick 693173 Tube-Dipstick 493 493A 500 501 447 455 456 459 460 467 468 474B 474D 474E 501B 503 505 385 387 387A 388 402 413 415 432 506 507 510 515 520 522 523A 524 525 525A 474F K Engine Gasket Set-Reference 358 D Carburetor Overhaul Kit-Reference 121 or 121A Valve Gasket Set-Reference 1095B 6141-22 Assemblies include all parts shown in frames. 22 02/24/2007 305400 REF. NO. 526 526B PART NO. DESCRIPTION REF. NO. 577 578 578A 578B PART NO. 690795 692306 692319 691377 DESCRIPTION Cable-Starter Wire Assembly Wire Assembly Wire Assembly Used on Type No(s). 0005, 0145. Nut (Rewind Starter) Screw (Oil Pump) Screw (Pawl Friction Plate) Shim-End Play (Crankshaft or Camshaft Bearing) Clamp-Hose Clamp-Hose Starter-Rewind Screw (Muffler) Screw (Muffler) Retainer-Governor Shaft Crank-Governor Screw (Fuel Pump Bracket) Spring-Throttle Return ----- Note ----- 806716 Spring- Throttle Return Used on Type No(s).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 305400 TO 305499 user guide](http://yourpdfguides.com/dref/3639759)  
<http://yourpdfguides.com/dref/3639759>

0005, 0145. Spring-Throttle Return Used on Type No(s). 0005, 0145. Seal-Choke/Throttle Shaft Seal-Choke/Throttle Shaft Seal-Choke/Throttle Shaft Used on Type No(s). 1409, 1410. Boot-Spark Plug REF. NO. 637 637A 638 638A 643 643A 650 663 664 668A 674 674A 676 PART NO. DESCRIPTION 692067 Screw (Regulator) 691547 Screw (Regulator) Used on Type No(s). 0119, 0135, 0139, 0142, 0147, 0177, 0181, 0184, 0186. 690423 Clamp-Tube 690744 Grommet 691527 Grommet 691115 Nut (Mounting Bracket) Used on Type No(s). 0005, 0145. Armature-Starter (For Replacement Armature, Order Reference 309) Armature-Starter (For Replacement Armature, Order Reference 309) 690701 Bushing-Governor Crank 806686 Bushing-Governor Crank 692067 Screw (Starter Solenoid) 690713 Nut (Control Lever) 690239 Bolt (Governor Control Lever) 690682 Stud (Oil Filter Adapter) 690686 Baffle-Breather 841310 Plate-Back ----- Note ----- 841311 Plate-Back Used on Type No(s). 0111. 841127 Plate-Back Used on Type No(s). 0126, 0146. 841314 Plate-Back Used on Type No(s). 0142. 806999 Washer (Throttle Shaft) 807000 Washer (Throttle Shaft) 691551 Washer (Cylinder Head Cover) 690706 Washer (Cylinder Head Cover) 692079 Retainer-Air Filter 690447 Retainer-Air Filter 692539 Screw (Oil Deflector) 692083 Screw (Control Panel) 691087 Nut (Key Switch) 691500 Spacer 692062 Screw (Fuel Tank Bracket) 692056 Screw (Fuel Tank Bracket) 393761 Deflector-Muffler Used on Type No(s). 0127, 0143, 0144, 0145, 0150, 0151, 0173. 396903 Deflector-Muffler 495518 Deflector-Muffler 690661 Screw (Muffler Deflector) D808798 Kit-Needle/Seat 691029 Nut (Starter Solenoid) 691272 Spring-Friction K690680 Seal-Governor Shaft 692062 Screw (Drive Cap) 807116 Clip 807689 Cover-Oil Filter 806469 Pin-Locating 690740 Pin-Locating (28MM) 841581 Pin-Locating (32MM) 280866 Shield-Heat 691498 Shield-Heat Used on Type No(s). 0154, 0184, 0197. 592 596 597 598 690939 691492 690876 807625 527 529 529A 532 544 544A 601 601A 601B 608 613 613A 615 616 628 629A 691038 691522 791850 841729 691902 692067 691550 806685 806660 807004 552 552A 555 561 562 565 572 573 676B 676C 677B 681 683 689 691 697 703 710 718 718A 718B 725 725B 629B 806717 633 633B 633C D806131 690722 807003 635 692076 K Engine Gasket Set-Reference 358 D Carburetor Overhaul Kit-Reference 121 or 121A Valve Gasket Set-Reference 1095B 6141-23 Assemblies include all parts shown in frames. 23 02/24/2007 305400 REF. NO. 726 727 728 728A 729 732 732A 737 741 742 773 774 788 789 841313 691514 692067 690586 690688 841233 690679 691530 807001 690875 692067 691559 691996 PART NO. DESCRIPTION Gear-Ring (Steel)(See Reference 23 for Service) Cover-Starter Drive Screw (Heat Shield) Screw (Heat Shield) Clip-Wire Screw (Starter Drive Cover) Screw (Starter Drive Cover) Screw (Oil Filter Adapter) Gear-Timing Retainer-E Ring Retainer Screw (Stop Wire) Bracket-Fuel Pump Harness-Wiring ----- Note ----- 691578 Harness- Wiring Used on Type No(s). 0119, 0135, 0139, 0147, 0181, 0184, 0186. 841318 Harness- Wiring Used on Type No(s). 0126, 0146. Nut (Brush Retainer) Nut (Brush Retainer) Cap-Drive Cap-Drive Cap-End Cap-End REF. NO. 803 PART NO. DESCRIPTION REF. NO. 863 863A 865 865A PART NO. DESCRIPTION 690854 Housing-Starter ----- Note ----- 820783 Housing- Starter Used on Type No(s). 0111, 0126, 0146. 693547 Housing-Starter 805557 Spacer-Throttle 690635 Clamp 690706 Washer (Oil Filter Adapter) 692056 Screw (Muffler Bracket) 690943 Screw (Muffler Bracket) 692067 Screw (Muffler Bracket) Used on Type No(s). 0127, 0156. 692062 Screw (Muffler Bracket) Used on Type No(s). 0165. 809157 Stud-Rocker Arm 691571 Guard-Muffler 807084 Screw (Air Cleaner Mounting Strap/Stud) 691593 Screw (Air Cleaner Mounting Strap/Stud) 691514 Screw (Muffler Guard) 692067 Screw (Muffler Guard) 808085 Spacer-Muffler 691322 Sleeve-Lever 691088 Screw (Stub Shaft) 493880s Terminal-Spark Plug 692153 Strap/Stud-Air Cleaner Mounting 691565 Strap/Stud-Air Cleaner Mounting 691513 Bracket-Muffler 690756 Bracket-Muffler Used on Type No(s). 0127, 0156. 807119 Cover-Air Guide 841319 Cover-Air Guide (Aluminum) Used on Type No(s). 0178. K691963 Seal-Valve 692057 Bushing-Valve Guide 393456 Wire/Connector- Alternator 399916 Wire/Connector- Alternator 698092 Wire/Connector- Alternator 398661 Harness-Alternator 842123 Cover-Carburetor ----- Note ----- 842269 Cover- Carburetor Used on Type No(s). 0142, 0150, 0151, 0152, 0154, 0165, 0169, 0187, 0189, 0191, 0209. 807460 Cover-Carburetor ----- Note ----- 842124 Cover- Carburetor Used on Type No(s). 0005, 0075, 0077, 0078, 0116, 0130, 0132, 0133, 0135, 0139, 0144, 0145, 0146, 0147, 0168, 0181, 0184, 0186, 0192. K691613 Gasket-Exhaust 690898 Clamp-Muffler 691956 Clamp-Muffler Used on Type No(s). 0150, 0151, 0158, 0165. 803A 807 813 816 819 819A 819C 868 871 877 877C 877D 878 879 819D 830 832 833 833B 836 836A 837 843 849 851 862 862D 879A 797 797A 801 801B 802 802A 691029 693167 808778 691283 496813 691286 883 884 884A K Engine Gasket Set-Reference 358 D Carburetor Overhaul Kit-Reference 121 or 121A Valve Gasket Set-Reference 1095B 6141-24 Assemblies include all parts shown in frames. 24 02/24/2007 305400 REF. NO. 892 893 899 914 918 920 920A 927 PART NO. DESCRIPTION REF. NO. 987 988 988A PART NO. DESCRIPTION REF.

NO. 1038A 1046 1046A 1047 1048 PART NO. 691567 692082 843068 841580 690669 DESCRIPTION Rod-Fuel Shut Off Plug-Blower Housing Plug-Blower Housing Shaft-Stub Module-Electronic Governor Used on Type No(s). 0005, 0145. Ring-Retaining Tie-Cable Operator's Manual Kit-Screw/Washer Module-Ignition Retainer-Brush ----- Note ----- 825412 Retainer- Brush Used on Type No(s). 0111, 0126, 0146. Cap-Limiter Gasket Set-Valve Pivot-Rocker Arm Screw (Alternator) ----- Note ----- 841835 Screw (Alternator) Used on Type No(s). 0111. Screw (Crankshaft) Nut (Exhaust Manifold) Screw (Ignition Module) Screw (Rocker Cover Stud) Inverter Gasket-Inverter Receptacle-Powerlink Repair Manual Cable-Choke Valve-Oil Drain Shut Off Used on Type No(s). 0150, 0152. Nut (Rewind Guard) Used on Type No(s). 0132, 0151, 0189. @ @0005, 0145. 841490 Guard-Rewind Used on Type No(s). 0132, 0151, 0184, 0189. @ @0119. @ @0110, 0111, 0119. @ @0169, 0170. 692008 Valve-Fuel Shut Off (Plastic) 272490s Filter-Pre Cleaner 271794s Filter-Pre Cleaner 699959 Cover-Air Cleaner 841822 Cover-Air Cleaner Used on Type No(s). 0110, 0111, 0119. 807084 Screw (Air Cleaner Base to Carburetor) 690663 Tank-Fuel (Plastic) 807002 Seal-Throttle Shaft K692063 Gasket-Oil Adapter 690687 Gasket-Oil Adapter Used on Type No(s). 0123, 0124, 0144, 0152, 0175, 0196. 990 691959 Key Set 994 392390 Arrestor-Spark 996 691577 Shield-Carburetor 996C 841826 Shield-Carburetor 1004 841656 Duct-Air 1009 806474 Screw (Starter Motor) 1012 690592 Retainer-Link 1017 690900 Screen-Oil Pump 1022K806039s Gasket-Rocker Cover 1023 690758 Cover-Rocker 1023B 691494 Cover-Rocker 1023C 690910 Cover-Rocker 1023D 691558 Cover-Rocker 1023E 691531 Cover-Rocker (Used On Engines Equipped With 9 Quart Fuel Tanks) 1024 693185 Pump-Oil 1025 690689 Spool-Governor 1026 691836 Rod-Push (Steel)(Intake) ----- Note ----- 691758 Rod-Push (Aluminum)(Exhaust) 1027 842921 Filter-Oil 1028 808235 Adapter-Oil Filter ----- Note ----- 808033 Adapter-Oil Filter Used on Type No(s).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 305400 TO 305499 user guide](http://yourpdfguides.com/dref/3639759)  
<http://yourpdfguides.com/dref/3639759>

0068, 0132, 0133, 0135, 0143, 0145, 0150, 0165, 0172, 0173, 0174, 0184, 0186. 1029 807323 Arm-Rocker 1036 Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer) 1051 1054 1058 1059 1085 1090 691124 280275 276343 698516 809093 691293 930 947A 1091 1095B 1100 1119 D691516 842723 791959 691552 955A 1133 1176 1231 1254 1271 1272 1323 1330 1344 1346 690342 842067 692067 807084 697261 697260 699146 272144 841129 492031 957A 958A 958B 967 967C 968 968B 971 972A 1392 690939 K Engine Gasket Set-Reference 358 D Carburetor Overhaul Kit-Reference 121 or 121A Valve Gasket Set-Reference 1095B 6141-25 Assemblies include all parts shown in frames. 25 02/24/2007 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 305400 TO 305499 user guide](#)

<http://yourpdfguides.com/dref/3639759>