



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 326400 TO 326499. You'll find the answers to all your questions on the BRIGGS & STRATTON 326400 TO 326499 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 326400 TO 326499
User guide BRIGGS & STRATTON 326400 TO 326499
Operating instructions BRIGGS & STRATTON 326400 TO 326499
Instructions for use BRIGGS & STRATTON 326400 TO 326499
Instruction manual BRIGGS & STRATTON 326400 TO 326499



FORM MS-6179-08/03/2007
REPLACES FORM MS-6179-05/21/2007
FILE IN SECT. 2 OF SERVICE MANUAL

326400

Illustrated Parts List

Model Series

326400

TYPE NUMBERS

0010 through 0080,
0110 through 0399,
0611, 0620,
0630 through 0799,
0801, 0802, 0803, 0804, 0805,
1160, 2520, 2521, 2522, 2526, 2527,
2528, 2529, 2530, 2550, 2560, 2561,
2562, 2563, 2560, 2561, 2582, 2583, 2596.

PRINTED IN U.S.A.



COPYRIGHT BY BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 326400 TO 326499 user guide](http://yourpdfguides.com/dref/3639705)
<http://yourpdfguides.com/dref/3639705>

Manual abstract:

@@NO. @@NO. 870 871 989 PART NO. 14 1058 OPERATOR'S MANUAL DESCRIPTION REF. NO. 308 PART NO. DESCRIPTION DESCRIPTION 13A 14 15 306 307 395663 Cylinder Assembly 691712 Head-Cylinder 691261 Washer (Cylinder Head) 692231 Gasket-Cylinder Head 495738 Breather Assembly 27803S Gasket-Breather 690294 Screw (Breather Assembly) 691512 Tube-Breather 691614 Screw (Cylinder Head) (1 3/4" Long) ----- Note ----- 691640 Screw (Cylinder Head) (2 1/16" Long) 691441 Screw (Cylinder Head) (2 7/16" Long) 691690 Stud (Cylinder Head) 692833 Plug-Oil Drain 299536 Shield-Cylinder 690294 Screw (Cylinder Shield) 322 337 342 362 383 406 415 552 626 635 645 722 724 724A 691731 Cover-Cylinder Head (Used After Code Date 75060800). ----- Note ----- 221953 Cover- Cylinder Head (Used Before Code Date 75060900). Used on Type No(s). 0291, 0648.

692198 Screw (Cylinder Head Cover) 802592S Plug-Spark 298125S Plunger-Breaker 691954 Shield-Spark Plug 89838 Wrench-Spark Plug 690533 Spring-Breather Tube 692882 Plug 393666 Bushing-Governor Crank 690512 Spacer-Governor Crank 66538S Boot-Spark Plug 692880 Bushing-Plunger 68768 Seal-Plunger 93516 Retainer-Seal 221873 Retainer-Seal 989A 1058 691583 Seat-Valve (Exhaust) 231218 Bushing-Valve Guide 690578 Stop Switch- Spark Plug ----- Note ----- 293739 Stop Switch- Spark Plug Used on Type No(s). 0200, 298926 Stop Switch- Spark Plug Used on Type No(s). 0028, 0062, 0138, 0187, 0195, 0220, 0232, 0237, 0238, 0243, 0266, 0295, 0320, 0327, 0658, 0663, 0675, 0680, 0681, 0687, 0691, 0729, 0730, 0735, 2528, 2562. 390785 Stop Switch- Spark Plug Used on Type No(s).

0640, 0734. 690633 Stop Switch- Spark Plug 270373 Operator's Manual Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-2 Assemblies include all parts shown in frames. 2 08/23/2007 326400 25 26 598 743 27 28 27 30 1143 31 32 219 219A 221 221 225 REF. NO. 25 PART NO.

DESCRIPTION REF. NO. 32 33 34 35 36 40 PART NO. DESCRIPTION 29 755 511 46 900 407 591 900A 33 553 36 40 42 552 626 REF. NO. 511 552 553 591 598 PART NO. 34 553 35 40 42 45 1144 746 742 45 DESCRIPTION 26 27 28 29 30 31 792365 Piston Assembly (Standard) ----- Note ----- 792367 Piston Assembly (.020" Oversize) 792366 Ring Set (Standard) ----- Note ----- 792368 Ring Set (.020" Oversize) 691792 Lock-Piston Pin 299691 Pin-Piston (Standard) ----- Note ----- 391286 Pin-Piston (.005" Oversize) 299632 Rod-Connecting (Standard) ----- Note ----- 390306 Rod- Connecting (.

020" Undersize) 691726 Dipper-Connecting Rod 690396 Lock-Rod Screw 42 45 46 219 219A 221 225 407 692345 Screw (Connecting Rod) 394436 Valve-Exhaust 394435 Valve-Intake 691597 Spring-Valve (Intake) 691597 Spring-Valve (Exhaust) 691939 Retainer-Valve ----- Note ----- 690274 Retainer- Valve Used on Type No(s). 0722. 494553 Keeper-Valve (Used After Code Date 80111200). ----- Note ----- 68283 Keeper-Valve (Used Before Code Date 80111300). 691594 Tappet-Valve 692855 Camshaft 291192 Gear-Governor (Used Before Code Date 78062000). 393720 Gear-Governor 841026 Cup-Governor 691357 Shaft-Governor Gear 690810 Screw (Camshaft Bearing) 626 742 743 746 755 900 900A 1143 1144 690402 Washer (Camshaft Bearing) 393666 Bushing-Governor Crank 690269 Retainer-Valve Spring 691746 Plug-Camshaft 270516 Shim-End Play (Camshaft Bearing) (.009" Thick) ----- Note ----- 270517 Shim- End Play (Camshaft Bearing) (.007" Thick) 270518 Shim- End Play (Camshaft Bearing) (.005" Thick) 690512 Spacer-Governor Crank 691080 Retainer-E Ring 691153 Gear-Drive 691803 Gear-Idler 299706 Bearing-Camshaft 691767 Shaft-Gear 691768 Shaft-Gear 691081 Screw (Drive Gear Cover) 690301 Washer (Drive Gear Cover) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-3 Assemblies include all parts shown in frames. 3 08/23/2007 326400 357 17 16 REF.

NO. PART NO. REF. NO. PART NO.

24 17 REF. NO. 16 PART NO. DESCRIPTION DESCRIPTION 0671, 0674, 0676, 0680, 0687, 0692, 0693, 0694, 0696, 0698, 0699, 0702, 0703, 0708, 0714, 0718, 0722, 0724, 0729, 0733, 0736, 0746, 0753, 0754, 0757, 0764, 0771, 0772, 0774, 0776, 0782, 0787, 2522, 2563, 2596. Crankshaft (NO LONGER AVAILABLE) Used on Type No(s).

0158, 0160, 0197, 0216, 0237. 690537 Crankshaft Used on Type No(s). 0210, 0262, 0630. 690540 Crankshaft Used on Type No(s). 0062, 0241, 0242, 0243, 0244, 0260, 0269, 0272, 0292, 0295, 0297, 0300, 0302, 0312, 0327, 0352, 0365, 0369, 0373, 0391, 0635, 0670, 0681, 0686, 0691, 0719, 0723, 0726, 0730, 0732, 0735, 0737, 0740, 0744, 0745, 0750, 0755, 0759, 0780, 0786, 2562. 690541 Crankshaft Used on Type No(s). 0061, 0124, 0246, 0253, 0305, 0308, 0335, 0341, 0342, 0646, 0710, 0711, 0713, 0728, 0781, 0785, 2529, 2561. DESCRIPTION 690543 Crankshaft Used on Type No(s). 0259, 0293, 0647, 0756. 691806 Crankshaft (Used After Code Date 77072410).

Used on Type No(s). 0021, 0112, 0128, 0181, 0189, 0203, 0209, 0254, 0256, 0258, 0314, 0321, 0357, 0362, 0368, 0395, 0656, 0668, 0675, 0709, 0717, 0739, 0743, 0752, 0765, 0778, 0779, 0784, 0789, 0790, 0792, 0793, 0794, 0801, 0802, 0804, 2521, 2526, 2530. Crankshaft (Used Before Code Date 77072510). (NO LONGER AVAILABLE) Used on Type No(s). 0021, 0112, 0128, 0181, 0189, 0203, 0209, 0254, 0256, 0258, 0314, 0321, 0357, 0362, 0368, 0395, 0656, 0668, 0675, 0709, 0717, 0739, 0743, 0752, 0765, 0778, 0779, 0784, 0789, 0790, 0792, 0793, 0794, 0801, 0802, 0804, 2521, 2526, 2530. 691797 Crankshaft ----- Note ----- 690534 Crankshaft Used on Type No(s). 0237, 0133, 0190, 0252, 0315, 0788, 2582. 261222 Crankshaft Used on Type No(s). 0139, 0204, 0228, 0328, 0678. 690535 Crankshaft Used on Type No(s).

0050, 0116, 0130, 0143, 0147, 0149, 0150, 0151, 0156, 0167, 0170, 0172, 0173, 0174, 0185, 0186, 0188, 0192, 0193, 0208, 0219, 0231, 0248, 0257, 0286, 0290, 0310, 0317, 0318, 0329, 0337, 0343, 0371, 0636, 0638, 0666, 0669, 0684, 0690, 0706, 0721, 0751, 2550. 690536 Crankshaft Used on Type No(s). 0022, 0063, 0114, 0129, 0153, 0175, 0176, 0183, 0198, 0205, 0217, 0224, 0233, 0235, 0236, 0238, 0247, 0255, 0261, 0265, 0266, 0273, 0277, 0278, 0279, 0285, 0287, 0291, 0296, 0303, 0320, 0334, 0338, 0340, 0344, 0345, 0346, 0347, 0348, 0353, 0359, 0361, 0363, 0366, 0367, 0374, 0375, 0383, 0385, 0394, 0396, 0633, 0634, 0648, 0650, 0654, 0661, 17 24 357 690546 Crankshaft Used on Type No(s). 0682, 2560. 261944 Crankshaft Used on Type No(s).

0720, 0758, 0788. 691938 Bearing-Ball 222698s Key-Flywheel 691483 Key-Drive Pulley Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-4 Assemblies include all parts shown in frames. 4 08/23/2007 326400 568 998A 568A 15A 569 21 15A 15B REF. NO. 568A PART NO.

REF. NO. 569 998 998A 567 998 PART NO. REF. NO. PART NO. DESCRIPTION DESCRIPTION DESCRIPTION 15A 690946 Plug-Oil Drain 15B 691680 Plug-Oil Drain 21 281658S Cap-Oil Fill 567 691104 Screw (Engine Base) 568 294751 Base-Engine Used on Type No(s).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 326400 TO 326499 user guide](http://yourpdfguides.com/dref/3639705)
<http://yourpdfguides.com/dref/3639705>

0020, 0023, 0050, 0139, 0145, 0150, 0151, 0152, 0155, 0159, 0175, 0191, 0199, 0203, 0206, 0208, 0212, 0218, 0219, 0226, 0356, 0804, 2527, 2583. -----

Note ----- 291404 Base- Engine Used on Type No(s). 0134, 0135.

391165 Base-Engine Used on Type No(s). 0062, 0120, 0121, 0123, 0126, 0127, 0133, 0135, 0136, 0140, 0144, 0149, 0157, 0158, 0162, 0163, 0164, 0165, 0169, 0170, 0172, 0173, 0174, 0178, 0180, 0182, 0183, 0184, 0185, 0186, 0190, 0192, 0198, 0201, 0204, 0205, 0210, 0215, 0222, 0223, 0227, 0228, 0230, 0234, 0235, 0240, 0246, 0248, 0252, 0253, 0254, 0255, 0259, 0262, 0283, 0284, 0291, 0293, 0306, 0308, 0310, 0311, 0312, 0315, 0316, 0326, 0328, 0331, 0333, 0341, 0351, 0354, 0360, 0384, 0392, 0630, 0638, 0647, 0648, 0649, 0659, 0660, 0669, 0673, 0678, 0679, 0686, 0705, 0712, 0723, 0724, 0725, 0726, 0732, 0735, 0737, 0740, 0744, 0750, 0755, 0756, 0759, 0780, 0781, 0786, 2562, 2581, 2582. 691569 Gasket-Engine Base 690307 Pipe-Oil 690502 Pipe-Oil Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-5 Assemblies include all parts shown in frames. 5 08/23/2007 326400 228A 593 571 571A 571B 593A 1141 228 REF. NO. 20 20A 228 228A 571 571A PART NO. DESCRIPTION 20 20A REF. NO. PART NO. DESCRIPTION 0359, 0361, 0368, 0373, 0374, 0383, 0385, 0395, 0396, 0634, 0636, 0648, 0650, 0656, 0661, 0666, 0670, 0671, 0674, 0675, 0684, 0686, 0690, 0692, 0693, 0696, 0698, 0699, 0702, 0703, 0706, 0708, 0709, 0714, 0717, 0721, 0724, 0726, 0732, 0733, 0735, 0737, 0739, 0740, 0743, 0744, 0745, 0746, 0750, 0751, 0752, 0753, 0754, 0755, 0757, 0759, 0771, 0776, 0780, 0783, 0784, 0789, 0794, 0801, 0802, 2522, 2550, 2562, 2563, 2596.

----- Note ----- 291710 Support- Bearing Used on Type No(s). 0647, 0668, 0682, 0713, 0717, 0755, 0772, 0782, 0788, 0790, 0792, 0793, 0801, 0804, 2521, 2530. REF. NO. 571B 593 593A PART NO.

DESCRIPTION 691948 Seal-Oil (PTO Side) 291675S Seal-Oil (PTO Side) 691681 Screw (Bearing Support) 691058 Screw (Bearing Support) 391062 Support-Bearing 291665 Support-Bearing Used on Type No(s). 0022, 0050, 0062, 0063, 0112, 0113, 0114, 0116, 0130, 0143, 0147, 0149, 0150, 0151, 0153, 0156, 0160, 0167, 0171, 0172, 0173, 0174, 0175, 0176, 0183, 0185, 0186, 0188, 0192, 0193, 0196, 0197, 0198, 0205, 0208, 0209, 0216, 0217, 0219, 0224, 0233, 0235, 0236, 0241, 0242, 0244, 0247, 0255, 0256, 0257, 0260, 0261, 0265, 0266, 0269, 0272, 0273, 0277, 0278, 0279, 0285, 0286, 0287, 0290, 0291, 0292, 0296, 0297, 0302, 0303, 0304, 0310, 0312, 0318, 0327, 0329, 0334, 0337, 0338, 0340, 0344, 0345, 0347, 0357, 1141 299705 Support-Bearing (Magneto Side) 691311 Gasket-Bearing Support 270513 Gasket-Bearing Support (.015" Thick) ----- Note ----- 270514 Gasket- Bearing Support (.010" Thick) 270515 Gasket- Bearing Support (.005" Thick) 690402 Washer (Bearing Support) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-6 Assemblies include all parts shown in frames.

6 08/23/2007 326400 523A 749A 758 3 399A 399 3 338 749 1054 665 665A 3 276 366 524 REF. NO. 525 PART NO. DESCRIPTION REF. NO. 587 665 665A 704 749 749A 758 1054 PART NO. 690389 298860 692939 691083 391061 391361 393164 280275 DESCRIPTION Clamp-Cable Minder-Oil Minder-Oil Screw (Counterweight Cover) Cover-Counterweight Cover-Counterweight (Used on Alternator Equipped Engines) Counterweight Tie-Cable 704 758 3 587 523 525 REF. NO. 3 276 338 366 399 399A 523 523A 524 PART NO. DESCRIPTION 691948 Seal-Oil (Magneto Side) 690258 Washer-Sealing 690270 Gasket-Dipstick 690304 Screw (Timing Hole Plug) 691310 Gasket-Counterweight Cover (Magneto Side) 692914 Gasket-Counterweight Cover (PTO Side) 691352 Dipstick 690620 Dipstick 281370S Seal-Dipstick Tube 690622 Tube-Dipstick ----- Note ----- 690623 Tube-Dipstick Used on Type No(s).

0121, 0144, 0157, 0158, 0164, 0165, 0169, 0170, 0182, 0184, 0192, 0198, 0210, 0222, 0234, 0235, 0240, 0248, 0262, 0266, 0309, 0312, 0316, 0331, 0338, 0341, 0351, 0358, 0630, 0638, 0679, 0705, 0707, 0724, 0744, 0750, 0755, 0770, 1160, 2581. Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-7 Assemblies include all parts shown in frames. 7 08/23/2007 326400 90 SEE PAGE 9 FOR

ADDITIONAL SERVICE PART INFORMATION 134 1227 109 REF. NO. 90 PART NO. REF. NO. PART NO. REF. NO.

134 PART NO. DESCRIPTION DESCRIPTION DESCRIPTION 391065 Carburetor ----- Note ----- 391068 Carburetor Used on Type No(s). 0121, 0144, 0157, 0158, 0164, 0165, 0169, 0170, 0184, 0192, 0240, 0331. 391070 Carburetor Used on Type No(s). 0127, 0133, 0134, 0135, 0136, 0139, 0140, 0149, 0162, 0163, 0166, 0172, 0173, 0180, 0185, 0186, 0201, 0204, 0206, 0211, 0212, 0213, 0226, 0227ed on Type No(s). 0248, 0308, 0358, 0638, 0707, 0770. 690607 Lever-Governor Control ----- Note ----- 690616 Lever- Governor Control Used on Type No(s). 0611, 0630, 0647, 0651, 0684, 0690, 0706, 0721, 0660, 0671, 0675, 0681, 0683, 0685, 0689, 0692, 0694, 0697, 0699, 0801, 2520, 2527, 2528, 2529, 2550, 2561, 2581, 2582. 690545 Spring-Governor Link ----- Note ----- 692207 Spring- Governor Link Used on Type No(s). 0248, 0308, 0358, 0638, 0707, 0770. 494554 Control-Throttle ----- Note ----- 299361 Control- Throttle (Dial Control) Used on Type No(s). 0640, 0652, 0653, 0665. 404 414 505 562 614 616 629 668 691025 Casing-Control Wire (Cut to Required Length) 691026 Wire-Control (Cut to Required Length) 691027 Nut (Control Wire Casing) 691028 Lever-Control ----- Note ----- 221987 Lever-Control Used on Type No(s). 0678, 0705. 690264 Washer (Governor Crank) 692810 Washer (Bell Crank) Used on Type No(s). 0136, 0139, 0204, 0228, 0234, 0248, 0328, 0678, 0705. 691251 Nut (Governor Control Lever) 92613 Bolt (Governor Control Lever) 691620 Pin-Cotter 291364 Crank-Governor 690538 Spring-Throttle Return Used on Type No(s). 0234, 0631, 0632, 0637, 0641, 0642, 0705, 0803, 2580. 690313 Spacer (Governor Control Rod) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-10 Assemblies include all parts shown in frames. 10 08/23/2007 326400 536 968 643 445 1158 967 467 171 171A 163 166 163A REF.

NO. 163 163A 166 PART NO. DESCRIPTION REF. NO. 171 171A 445 467 536 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 67247 Gasket-Air Cleaner Used on Type No(s). 0308.

270987 Gasket-Air Cleaner 691241 Stud-Air Cleaner (9 1/2" Long) 691331 Nut (Air Cleaner) 690284 Nut (Air Cleaner) 393957S Filter-Air Cleaner Cartridge 691668 Knob-Air Cleaner 391063 Cleaner-Air 643 691730 Retainer-Air Filter 967 271794S Filter-Pre Cleaner 968 691755 Cover-Air Cleaner 1158 690293 Screw (Carburetor) (Used to Plug Air Cleaner Stud Hole) Used on Type No(s). 0262, 0630. Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-11 Assemblies include all parts shown in frames.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 326400 TO 326499 user guide](http://yourpdfguides.com/dref/3639705)
<http://yourpdfguides.com/dref/3639705>

@@NO. 303 303A PART NO.

300B 613 REF. NO. @@@@NO. @@@@0391, 0686, 0726, 0732, 0737, 0744, 0750, 0759, 0781. @@@@@NO.

179 182 PART NO. DESCRIPTION REF. NO. 187 PART NO. @@NO. 387 450 601 670 674 707 788 861 PART NO. @@0205, 0291, 0648. @@0206, 0211, 0213, 0229, 0271. @@@@0630, 0705, 0707, 0724, 0744, 0750, 0755, 0759, 0770, 0774, 2581. @@0170, 0182, 0198, 0248, 0309, 0331, 0638, 0679, 0744, 0755, 0759.

@@13 08/23/2007 326400 180 181 REF. NO. 180 PART NO. DESCRIPTION REF. @@NO. @@@@14 08/23/2007 326400 23A 23 726 363 REF. NO. 23 PART NO. DESCRIPTION REF. NO.

23A PART NO. DESCRIPTION REF. @@@@0736. @@@0027, 0028, 0063, 0115, 0123, 0126, 0135, 0143, 0148, 0149, 0162, 0163, 0164, 0165, 0167, 0168, 0170, 0171, 0172, 0174, 0178, 0180, 0182, 0184, 0185, 0188, 0189, 0192, 0193, 0198, 0201, 0209, 0210, 0211, 0213, 0215, 0217, 0221, 0222, 0224, 0229, 0230, 0231, 0234, 0235, 0236, 0238, 0240, 0248, 0249, 0250, 0251, 0252, 0257, 0261, 0262, 0265, 0271, 0273, 0274, 0275, 0276, 0277, 0278, 0279, 0281, 0282, 0283, 0284, 0285, 0286, 0287, 0288, 0296, 0298, 0303, 0304, 0306, 0307, 0309, 0310, 0311, 0315, 0316, 0317, 0318, 0319, 0320, 0321, 0322, 0323, 0324, 0325, 0326, 0328, 0330, 0331, 0332, 0333, 0334, 0337, 0338, 0340, 0343, 0347, 0348, 0349, 0350, 0351, 0353, 0355, 0358, 0359, 0360, 0363, 0364, 0367, 0370, 0371, 0372, 0374, 0375, 0376, 0377, 0378, 0379, 0381, 0382, 0383, 0388, 0389, 0392, 0394, 0399. 19203 Puller-Flywheel 391362 Gear-Ring (Includes Mounting Hardware) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-15 Assemblies include all parts shown in frames.

15 08/23/2007 326400 773 321B 838 332 75 321A 321 73A 331 440 73 74 REF. NO. 73 PART NO. REF. NO.

74 75 321 321A 321B 331 332 PART NO. REF. NO. 440 773 838 PART NO. DESCRIPTION DESCRIPTION DESCRIPTION 73A 691171 Screen-Rotating ----- Note ----- 690404 Screen- Rotating Used on Type No(s). 0127, 0133, 0182, 0190, 0210, 0222, 0252, 0262, 0315, 0333, 0630, 0649, 2582, 2583. 690410 Screen-Rotating 691655 Screw (Rotating Screen) 691056 Washer (Flywheel) 691151 Fan-Booster 690377 Fan-Booster 212000 Fan-Booster 691075 Washer (Booster Fan) 691059 Nut (Flywheel) 691076 Screw (Booster Fan) 690265 Retainer 211983 Adapter-Blower Housing Ring Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-16 Assemblies include all parts shown in frames. 16 08/23/2007 326400 304 305 304A REF. NO. 304 PART NO.

DESCRIPTION REF. NO. PART NO. DESCRIPTION 0248, 0251, 0261, 0271, 0276, 0279, 0283, 0286, 0296, 0304, 0309, 0315, 0318, 0321, 0324, 0328, 0332, 0337, 0343, 0349, 0353, 0359, 0364, 0371, 0375, 0378, 0382, 0389, 0399, 0636, 0643, 0654, 0661, 0666, 0669, 0673, 0678, 0684, 0688, 0697, 0249, 0252, 0262, 0273, 0277, 0281, 0284, 0287, 0298, 0306, 0310, 0316, 0319, 0322, 0325, 0330, 0333, 0338, 0347, 0350, 0355, 0360, 0367, 0372, 0376, 0379, 0383, 0392, 0630, 0638, 0649, 0658, 0663, 0667, 0671, 0675, 0679, 0685, 0692, 0698, 0259, 0257, 0265, 0275, 0278, 0282, 0285, 0288, 0303, 0307, 0311, 0317, 0320, 0323, 0326, 0331, 0334, 0340, 0348, 0351, 0358, 0363, 0370, 0374, 0377, 0381, 0388, 0394, 0634, 0640, 0653, 0660, 0665, 0668, 0672, 0676, 0680, 0687, 0693, 0699, REF. NO. PART NO. DESCRIPTION 294698 Housing-Blower ----- Note ----- 297010 Housing- Blower Used on Type No(s). 0060, 0119, 0160, 0197, 0216, 0223, 0237. 297453 Housing- Blower Used on Type No(s). 0020, 0023, 0050, 0136, 0139, 0140, 0145, 0150, 0151, 0152, 0155, 0159, 0175, 0181, 0183, 0191, 0199, 0203, 0204, 0205, 0206, 0208, 0212, 0218, 0219, 0226, 0227, 0228, 0254, 0255, 0259.

391229 Housing- Blower Used on Type No(s). 0027, 0028, 0063, 0115, 0123, 0126, 0135, 0143, 0148, 0149, 0162, 0163, 0165, 0167, 0168, 0170, 0171, 0172, 0174, 0178, 0180, 0182, 0184, 0185, 0188, 0189, 0192, 0193, 0198, 0201, 0209, 0210, 0211, 0213, 0215, 0217, 0221, 0224, 0229, 0230, 0231, 0234, 0235, 0236, 0238, 304A 305 0701, 0702, 0703, 0704, 0705, 0707, 0708, 0712, 0714, 0715, 0716, 0718, 0720, 0721, 0724, 0725, 0729, 0731, 0733, 0736, 0738, 0741, 0742, 0746, 0748, 0749, 0751, 0752, 0753, 0754, 0760, 0761, 0764, 0765, 0770, 0771, 0772, 0774, 0776, 0779, 0782, 0783, 0784, 0787, 0789, 0797, 2527, 2528, 2563, 2596. 692359 Housing- Blower Used on Type No(s). 0682. 395513 Housing- Blower Used on Type No(s). 0711, 0719, 0732, 0740, 0781, 2529. 399177 Housing- Blower Used on Type No(s). 0758, 0788. 392343 Housing-Blower (Low Profile) Used on Type No(s). 0713, 0744, 0750, 0755, 0759, 0780, 0785, 0786, 2561, 2562.

692198 Screw (Blower Housing) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-17 Assemblies include all parts shown in frames. 17 08/23/2007 326400 573 452 197 488 488A 452B 316 384 405 215 895 736 588A 589 668A 727 732 729 367 587 344 729A 452C 685 452B 316 318 573A 197 452 REF. NO. 197 215 316 318 344 367 384 405 PART NO. DESCRIPTION REF. NO. 452 452B 452C 488 488A 573 PART NO. DESCRIPTION REF. NO. 668A 685 727 729 729A 732 736 895 PART NO.

DESCRIPTION 90072 Screw (Back Plate) 222445 Guide-Air 691612 Nut (Back Plate) 691666 Screw (Mounting Bracket) 690305 Screw (Cable Clamp) 690305 Screw (Wire Clip) 690371 Washer (Back Plate) 690290 Screw (Back Plate) 573A 587 588A 589 92864 Washer (Back Plate) 26404 Washer (Back Plate) 691077 Washer (Back Plate) 222211 Bracket-Fuse 222345 Bracket-Fuse 391220 Plate-Back (Used on Engines With Electric Start Only) 299450 Plate-Back 690389 Clamp-Cable 690375 Bracket-Armature (Used on Engines With Electric Starter) 690300 Screw (Armature Bracket) 231065 Spacer Used on Type No(s). 0164, 0240. 690661 Screw (Rectifier) 692338 Cover-Starter Drive 690432 Clip-Wire (Alternator) 690588 Clip-Wire 93410 Screw (Starter Drive Cover) 690302 Nut-Clip 692309 Switch-Rotary Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-18 Assemblies include all parts shown in frames. 18 08/23/2007 326400 608 58 56 57 64 60 655 55 655A 61 64A 56A 678 63 1140 592 458 289 65 65A REF. NO. 55 56 56A PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 66574 Rope-Starter (99" Long) (Cut to Required Length) (Use With Metal Pulley) Grip-Starter Rope Bumper-Starter Pulley (Wide Legs Starter Housing) Spring-Ratchet Adapter-Ratchet Spring (Low Profile) Adapter-Ratchet Spring (Wide Legs Starter Housing) Screw (Rewind Starter) (3/8" Long) Screw (Rewind Starter) (7/16" Long) REF.

NO. PART NO. DESCRIPTION 57 58 691355 Housing-Rewind Starter (Low Profile) 392630 Pulley-Starter (Low Profile) 295871 Pulley-Starter (Wide Legs Starter Housing, Includes 63" Rope) 490179 Spring-Rewind Starter 692188 Rope-Starter (63" Long) (Use With Plastic Pulley) ----- Note ----- 695002 Rope-Starter (99" Long) (Cut to Required Length) (Use With Plastic Pulley) 66564 Rope-Starter (63" Long) (Use With Metal Pulley) 60 61 63 64 64A 490652 68848S 690547 690511 691920 289 230228S Pin-Starter Grip 458 69932S Kit-Handle/Rope 592 690276 Nut (Rewind Starter) 608 691958 Starter-Rewind 655 691734 Anchor-Rewind Spring 655A 221014 Anchor-Rewind Spring (Wide Legs Starter Housing) 678 490817 Spacer-Rewind 1140 690286 Washer (Rewind Starter) 65 65A 691693 93254 Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-19 Assemblies include all parts shown in frames.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 326400 TO 326499 user guide](http://yourpdfguides.com/dref/3639705)
<http://yourpdfguides.com/dref/3639705>

19 08/23/2007 326400 66 68 70 67 69 66A 68 69 70 71 67A 69A 69B 257 REF. NO.

PART NO. DESCRIPTION REF. NO. 69 69A 69B 70 PART NO. DESCRIPTION REF.

NO. 71 257 PART NO. DESCRIPTION 66 393127S Clutch-Starter 66A 399671 Clutch-Starter (Sealed) 67 690542 Housing-Clutch 67A 394897 Housing-Clutch 68 691604 Ball-Clutch 690271 Washer (Starter Clutch) 690260 Washer (Starter Clutch) 690277 Washer (Starter Clutch) 691945 Ratchet-Clutch 691359 Cover-Ratchet 690309 Screw (Starter Clutch) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-20 Assemblies include all parts shown in frames. 20 08/23/2007 326400 606 361 501 652 323 526 575 641 636 1217 1225 890 REF. NO. 323 PART NO. DESCRIPTION REF. NO. 526 575 606 636 641 652 PART NO. DESCRIPTION REF.

NO. 890 1217 1225 PART NO. DESCRIPTION 361 501 68898 Belt-Vee (For Low Position Mounting) (35 3/4" Long) ----- Note ----- 68878 Belt-Vee (For High Position Mounting) (36 3/4" Long) 691681 Screw (Starting Switch) 297196 Regulator (Saddle Mount) (Delco Remy Number 1119577) 690297 Screw (Regulator) 692303 Switch-Starting 221442 Strap-Adjusting 696198 Nut (Starting Switch) (Terminal) 691075 Washer (Starting Switch) (Terminal) 693972 Screw (Support Bracket) 221472 Bracket-Support 690282 Washer (Starting Switch) 691029 Nut (Starting Switch) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-21 Assemblies include all parts shown in frames. 21 08/23/2007 326400 840 575 641 636 1217 1225 574 1151 1152 945 1215 1142A PARTS GHOSTED AVAILABLE IN KIT ONLY REF. NO. 356 361 493 574 PART NO. REF. NO. 795 840 945 1054 1142 1142A 1150 1151 1152 PART NO. 361 1054 493 1150 795 578A 356 1142 1216 REF.

NO. 1215 1216 1217 1225 PART NO. DESCRIPTION DESCRIPTION DESCRIPTION 575 578A 636 641 398808 Wire-Stop 93415 Screw (Starting Switch) 221933 Bracket-Mounting 295158 Ammeter (Stewart Warner Number 357-W) 692303 Switch-Starting 298582 Wire Assembly 696198 Nut (Starting Switch) (Terminal) 691075 Washer (Starting Switch) (Terminal) 298590 Switch-Toggle 298561 Kit-Panel (Generator Panel) 211785 Bracket-Starter Motor 280275 Tie-Cable 690303 Screw (Starter Motor Bracket) 691614 Screw (Starter Motor Bracket) (1 3/4" Long) 691058 Screw (Adjusting Strap) 690282 Washer (Adjusting Strap) 691105 Nut (Adjusting Strap) 691075 Washer (Starter Bracket) 691105 Nut (Starter Bracket) 690282 Washer (Starting Switch) 691029 Nut (Starting Switch) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-22 Assemblies include all parts shown in frames. 22 08/23/2007 326400 840A 575 641 636 1225 462 577 945A 310 578C REF. NO.

51 51B 215A 265 267A PART NO. 27381 692917 291871 692179 93107 361 795A 478A 775 892 500 526 501A 1113 664 990 267A 265 51 215A 51B 497 627 621 310A REF. NO. @0644, 0672. @NO.

@1118988) Used on Type No(s). 0199. @23 08/23/2007 326400 333B 375 636A 521 851 484 343 340 333A 351A 359 507A 359 520 373 351 507 470 373 359 373 24 356 356A 356B 334 639 851 415 334 345 744 888 897 24 989B USED BEFORE CODE DATE: 81080100 REF. NO. PART NO. DESCRIPTION REF. NO. 356 356A PART NO. DESCRIPTION 356 PART NO. DESCRIPTION REF.

NO. 507 507A 24 222698S Key-Flywheel 333A 398811 Armature-Magneto (Breaker Ignition) (Used After Code Date 81073100). 333B 298968 Armature-Magneto (Breaker Ignition) (Used Before Code Date 81080100). 334 691061 Screw (Magneto Armature) 340 26018 Spring-Breaker Arm 343 298060 Condenser 345 Cover-Breaker (NO LONGER AVAILABLE) 351 690292 Screw (Ground Terminal) 351A 690295 Screw (Ground Terminal) 356B 359 373 375 415 470 484 398808 Wire-Stop 690650 Wire-Stop (Used With Magneto Armature, Reference 333A) 396585 Wire-Stop Used on Type No(s). 0643, 0646, 0735. 691077 Washer (Ground Terminal) 691612 Nut (Ground Terminal) 298185 Breaker-Ignition 692882 Plug 692836 Screw (Breaker Cover) 690294 Screw (Condenser) 520 521 636A 639 744 851 888 897 989B 690584 Insulator 66895 Insulator ----- Note ----- 299598 Insulator Used on Type No(s). 0131. 691084 Terminal-Ground 291508 Shield-Cable 230783 Nut (Starting Switch) 692913 Gasket-Breaker Box 690277 Washer (Breaker Cover) 493880S Terminal-Spark Plug 690295 Screw (Insulator) 394970 Kit-MAGNETRON Ignition (Used After Code Date 81080100 and Before Code Date 85012200). Stop Switch- Spark Plug (NO LONGER AVAILABLE) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-24 Assemblies include all parts shown in frames. 24 08/23/2007 326400 SEE REPAIR INSTRUCTION MANUAL FOR PROPER AMPERAGE OF ALTERNATOR DUAL CIRCUIT REGULATED 10 AMP AC ONLY DC ONLY 474 877 474A 877B 474C 877C 1059 578A 474D 474E 877A 1059 1059 878C 1059 578 1059 578A 878 1119 481 844 475A 487 526 501B REF.

NO. 474 474A 474C 474D 474E 475A 481 487 PART NO. DESCRIPTION REF. NO. 501B 526 578 578A 844 877 877A 877B 877C PART NO. DESCRIPTION REF. NO. 878 878C 1059 1119 PART NO. DESCRIPTION 696459 Alternator (Dual Circuit) 696457 Alternator (Tri-Circuit) 696458 Alternator (10 Amp) (Key Switch) 391595 Alternator (AC Only) 696578 Alternator (DC Only) 391507 Rectifier 230976 Bushing-Alternator 390888 Cap-Wire/Fuse 691185 Regulator (10 Amp) 690297 Screw (Regulator) 390867 Wire Assembly 692306 Wire Assembly 261269 Spring-Diode 393456 Wire/Connector- Alternator (Dual Circuit) 393814 Wire/Connector- Alternator (DC Only) 393537 Wire/Connector- Alternator (Tri-Circuit) 399916 Wire/Connector- Alternator (10 AMP) 398661 Harness-Alternator 691955 Harness-Alternator (Tri-Circuit) 698516 Kit-Screw/Washer (Alternator) 691183 Screw (Alternator) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-25 Assemblies include all parts shown in frames. 25 08/23/2007 326400 309 510 783 513 310B 802 1051 1090 801 697 803 311 675 797 727 544 668B 732 REF. NO. 797 801 802 803 1051 1090 PART NO. REF. NO. 309 310B 311 510 513 544 PART NO. DESCRIPTION REF. NO. 668B 675 697 727 732 783 PART NO. DESCRIPTION DESCRIPTION 396306 Motor-Starter 691263 Screw (Starter Motor) (4 3/4" Long) 497608 Brush Set 696541 Drive-Starter 692024 Clutch-Drive Armature-Starter (Serviced By 396306 Starter Motor Only) 396515 Spacer 691261 Washer (Brush Retainer) 691058 Screw (Drive Cap) 692338 Cover-Starter Drive 93410 Screw (Starter Drive Cover) 695708 Gear-Pinion 691029 Nut (Brush Retainer) 394802 Cap-Drive 691286 Cap-End Housing-Starter (Serviced By 396306 Starter Motor Only) 691265 Ring-Retaining 691293 Retainer-Brush Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-26 Assemblies include all parts shown in frames.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 326400 TO 326499 user guide](http://yourpdfguides.com/dref/3639705)
<http://yourpdfguides.com/dref/3639705>

26 08/23/2007 326400 309A 510A 876 783 311A 896 803A 513 NOTE: For Replacement Starter Motor, See Reference 309, Previous Page 802A 801 544A 310A 697 510B 513 773A 503 783 442 896A REF.

NO. 309A PART NO. DESCRIPTION REF. NO. 503 510A 510B 513 544A 697 773A 783 PART NO. 690406 696540 696535 692024 490309 691058 DESCRIPTION REF. NO. 801 802A 803A 876 896 896A PART NO. 394802 395537 494205 696539 691641 DESCRIPTION 310A 311A 442 Motor-Starter (For Replacement Starter Motor, See Reference 309, Previous Page) 692329 Screw (Starter Motor) (5" Long) 395538 Brush Set 691693 Screw (Starter Strap) Strap-Starter Drive-Starter Drive-Starter Clutch-Drive Armature Starter Screw (Drive Cap) 391462 Retainer 693059 Gear-Pinion Cap-Drive Cap-End Housing-Starter Kit-Pinion Spring Pin-Drive Retainer (Copper) 94192 Pin-Drive Retainer (Black) Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-27 Assemblies include all parts shown in frames. 27 08/23/2007 326400 358 ENGINE GASKET SET 1095 VALVE GASKET SET 9 51 51B 51A 399 7 639 51 51B 338 593A 593 20A 7 3 399A 598 524 569 9 883 245 121 CARBURETOR OVERHAUL KIT 1227 104 127 51A 142 REF.

NO. 142 150 245 338 358 399 399A 524 569 593 593A PART NO. 102 150 REF. NO. 598 134 94 REF.

NO. 3 7 9 20A 51 51A 51B 94 102 104 121 PART NO. DESCRIPTION DESCRIPTION PART NO. DESCRIPTION 127 134 691948 Seal-Oil (Magneto Side) 272166 Gasket-Cylinder Head 27803S Gasket-Breather 291675S Seal-Oil (PTO Side) 27381 Gasket-Intake 692214 Gasket-Intake 692917 Gasket-Intake 292681 Kit-Idle Mixture 692215 Gasket-Carburetor Body 691775 Pin-Float Hinge 394989 Kit-Carburetor Overhaul (Used After Code Date 81090800).

----- Note ----- 391071 Kit-Carburetor Overhaul (Used Before Code Date 81090900).

690627 Plug-Welch 394681 Kit-Needle/Seat 691966 Nozzle-Carburetor (Labeled B) 691610 Gasket-Nozzle 692190 Gasket-Fuel Bowl 690270 Gasket-Dipstick 299719 Gasket Set-Engine 691310 Gasket-Counterweight Cover (Magneto Side) 692914 Gasket-Counterweight Cover (PTO Side) 281370S Seal-Dipstick Tube 691569 Gasket-Engine Base 691311 Gasket-Bearing Support 270513 Gasket-Bearing Support (.015" Thick) ----- Note ----- 270514 Gasket-Bearing Support (.010" Thick) 270515 Gasket- Bearing Support (.005" Thick) 639 883 1095 1227 270516 Shim-End Play (Camshaft Bearing) (.009" Thick) ----- Note ----- 270517 Shim- End Play (Camshaft Bearing) (.007" Thick) 270518 Shim- End Play (Camshaft Bearing) (.005" Thick) 692913 Gasket-Breaker Box 692236 Gasket-Exhaust 498540 Gasket Set-Valve 99525S Valve-High Speed Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121 Valve Gasket Set-Reference 1095 6179-28 Assemblies include all parts shown in frames. 28 08/23/2007 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 326400 TO 326499 user guide](http://yourpdfguides.com/dref/3639705)
<http://yourpdfguides.com/dref/3639705>