



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 404500 TO 404599. You'll find the answers to all your questions on the BRIGGS & STRATTON 404500 TO 404599 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 404500 TO 404599
User guide BRIGGS & STRATTON 404500 TO 404599
Operating instructions BRIGGS & STRATTON 404500 TO 404599
Instructions for use BRIGGS & STRATTON 404500 TO 404599
Instruction manual BRIGGS & STRATTON 404500 TO 404599



FORM MS-5769-06/22/2006
REPLACES FORM MS-5769-07/20/2005
FILE IN SECT. 2 OF SERVICE MANUAL
404500

Illustrated Parts List

Model Series

404500

TYPE NUMBER
0211 through 0312.

TABLE OF CONTENTS

Air Cleaner	6
Alternator	8
Blower Housing	6
Camshaft	3
Carburetor	5
Controls	7
Crankshaft	3
Cylinder	2
Cylinder Head	4
Electric Starter	7
Engine Sump	2
Flywheel	7
Fuel Supply	5
Gasket Set - Engine	5
Gasket Set - Valve	5
Governor Spring	7
Ignition	8
Intake Manifold	4
Kit - Carburetor Overhaul	5
Lubrication	3
Piston, Rings, Connecting Rod	3
Valves	4



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 404500 TO 404599 user guide](http://yourpdfguides.com/dref/3639675)
<http://yourpdfguides.com/dref/3639675>

Manual abstract:

.....
.....
.....
... 6 Alternator

.....
.....
.... 8 Blower Housing .
.....

.....
6 Camshaft

.....
..... 3 Carburetor ...
.....
.....

... 5 Controls

. 7 Crankshaft

.....
.....
.....
..... 2 Cylinder Head

.....
.....
. 4 Electric Starter

..... 7 Engine Sump ..
.....
.....

. 2 Flywheel

..... 7 Fuel Supply ..
.....
.....

... 5 Gasket Set - Engine

.....
5 Gasket Set - Valve

.....
..... 5 Governor Spring ..
.....

.....
.....
... 7 Ignition ..
.....

.....
.....
.. 8 Intake Manifold ...
.....

..... 4 Kit - Carburetor Overhaul ...

.....
.....
5 Lubrication

.....
.....
3 Piston, Rings, Connecting Rod
.. 3 Valves

.....
.....
.. 4 PRINTED IN U.S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 404500 1 2 3 718 10 8 11 252 250 9 4 4A 12 1027 12 710 1017 1017 1280 15 1013 415 15A 415 691 552 20 691 552 20 1035 1024 22 239 1036 EMISSIONS LABEL 965 943 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 750 Illustrations cover a range of engines. @@ 2 06/22/2006 404500 847 525 523 842 287 524 25 46 45 26 27 28 27 29 32 16A 29 32 16 24 146 741 146 741 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5769-3 Assemblies include all parts shown in frames. 3 06/22/2006 404500 5 33 1023 883 7 34 868 1022 42 35 36 1029 1100 798 192 914 51E 1023A 1022 1022 5A 13 383 635 337 33 883 34 7 45 1026 868 36 35 42 1026A 51E 1022 1029 654 192 1100 798 53 51 212 51E 122A 51E 51 50 54 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5769-4 Assemblies include all parts shown in frames. @@ @ @ @ @ @ @ 6 06/22/2006 404500 929 74 73 552 552A 742 404 668 332 75 1070 271 552A 691 216 616 213 265 267 219 209 211 227 278 562 505 265 267 615 212B 270 1005 269 268 220 188 222 363 309 801 23 510 1051 544 697 726 695 165 783 310 513 803 462 579 503 1090 311 797 802 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5769-7 Assemblies include all parts shown in frames. 7 06/22/2006 404500 10 - 16 AMP 474B 877B 1059 474C 877C DUAL CIRCUIT 1059 578A 878C NOTE: All stators use a No. 1119 mounting screw. @@ See repair instruction manual for additional information.

@@ @ @ @ 8 06/22/2006 404500 REF. NO. 1 2 3 4 4A PART NO. DESCRIPTION REF. NO.
24 25 PART NO. DESCRIPTION REF. NO. @ @ @ @ 0211, 0259, 0285, 0286, 0307, 0312. @ @ @ @ @ 0259, 0264, 0285.
----- Note ----- 691054 Flywheel Used on Type No(s). 0211, 0286, 0291, 0307, 0312. @ @ @ @ @ @ @ 494439 Screen-Rotating 698425 Screw (Rotating Screen) 691056 Washer (Flywheel) 690718 Screw (Throttle Valve) 699721 Kit-Idle Speed D694918 Pin-Float Hinge D698537 Valve-Float Needle 699808 Valve-Choke 791406 Jet-Main (Standard) 699820 Jet-Main (High Altitude) 699814 Kit-Carburetor Overhaul 699802 Spacer-Carburetor 699807 Carburetor 699810 Plug-Welch 699809 Valve-Throttle 699812 Kit-Throttle Shaft 694914 Float-Carburetor 792022 Tube-Fuel Transfer D698781 Gasket-Float Bowl 699811 Kit-Choke Shaft 690979 Key-Timing 693148 Nut (Ring Gear) 791872 Line-Fuel (Formed Hose) 791744 Line-Fuel (Formed)(Cut to Required Length) 691108 Screw (Control Bracket) 690083 Adjuster-Rocker Arm 692909 Spring-Governor (Yellow) ----- Note ----- 697674 Spring- Governor (Brown) Used on Type No(s). 0285, 0286. 693102 Spring- Governor Used on Type No(s). 0307. 5 5A 7 8 9 10 11 12 13 15 15A 16 16A 20 22 23 K Included in Engine Gasket Set-Ref. No. 358B. D Included in Carburetor Overhaul Kit-Ref.

No. 121C. z Included in Carburetor Gasket Set-Ref. No. 977C. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5769-9 Assemblies include all parts shown in frames.

9 06/22/2006 404500 REF. NO. 211 212 212B 213 216 219 220 222 PART NO. DESCRIPTION REF. NO.
305 305A PART NO. DESCRIPTION REF. NO. 467A 474B PART NO. @ @ 0285, 0286.
@ @ 0211, 0259, 0264. @ @ 0211, 0259, 0264. @ @ 0285, 0286, 0307. 699823 Gasket Set-Engine 19203 Puller-Flywheel 19374s Wrench-Spark Plug 691108 Screw (Fuel Pump) 808656 Pump-Fuel 690442 Washer (Governor Crank) 697820 Screw (Back Plate) 690283 Plug 699806 Elbow-Intake 499486s Filter-Air Cleaner Cartridge 691003 Screw (Air Guide Cover) 691108 Screw (Air Guide Cover) 691261 Washer (Starter Cable) 691008 Knob-Air Cleaner (1 1/2" Long) 696458 Alternator (10 Amp Circuit) Used on Type No(s). 0259, 0264, 0285. 696459 Alternator (Dual Circuit) 691185 Regulator (10-16 Amp Regulated) Used on Type No(s). 0259, 0264, 0285. 691532 Strap-Starter 691029 Nut (Governor Control Lever) 696541 Drive-Starter 692024 Clutch-Drive 691036 Dipstick K691032 Seal-Dipstick Tube 691037 Tube-Dipstick 691108 Screw (Regulator)(10-16 Amp Regulated) Armature-Starter (Service with 497595 Starter Motor) 690552 Bushing-Governor Crank 690553 Bushing-Governor Crank 690311 Bolt (Governor Control Lever) 790444 Plate-Back 691208 Wire Assembly 691029 Nut (Starter Cable) 791850 Clamp-Hose (Green) 691038 Clamp-Hose (Black) 698290 Retainer-Governor Shaft 691045 Crank-Governor 305B 474C 501B 309 310 311 332 333 334 337 503 505 510 513 523 524 525 526B 544 552 552A 562 573 578A 579 601 601A 615 616 227 231 239 240 250 252 265 267 268 269 270 271 276A 278 287 304 358B 363 383 385 387 404 405A 415 431 445 447 447A 462 K Included in Engine Gasket Set-Ref. No. 358B.

D Included in Carburetor Overhaul Kit-Ref. No. 121C. Included in Carburetor Gasket Set-Ref. No. 977C. Included in Valve Gasket Set-Ref. No 1095. z Illustrations cover a range of engines. @ @ 10 06/22/2006 404500 REF.

NO. 628 633A 635 654 668 691 695 697 703 710 PART NO. DESCRIPTION REF. NO. @ @ DESCRIPTION REF.
NO. PART NO. @ @ 0211, 0259, 0285, 0286, 0307, 0312. 690959 Pin-Locating 499612 Gear-Ring 694123 Clip-Wire 690980 Gear-Timing 690328 Retainer-E Ring 696999 Screw (Oil Pump Cover) 695708 Gear-Pinion 691039 Bracket-Fuel Pump 790544 Harness-Wiring 698330 Harness-Wiring (6 Pin Customer Conversion) 693167 Nut (Brush Retainer) 697890 Screw (Rocker Arm) 691283 Cap-Drive 691286 Cap-End Housing-Starter (Service with 497595 Starter Motor) K691031 Seal-O Ring (Dipstick Tube) 499602 Dipstick/Tube Assembly 493880s Terminal-Spark Plug 691012 Cover-Air Guide (Cylinder #1) 691014

Cover-Air Guide (Cylinder #2) 691015 Cover-Air Guide (Valley) K690968 Seal-Valve 399916 Wire/Connector- Alternator 393456 Wire/Connector- Alternator 398661 Harness-Alternator K690970 Gasket-Exhaust 691127 Screw (Rocker Cover) 694000 Hose-Vacuum 691003 Screw (Choke Control Bracket) K690589 Seal-O Ring (Oil Pump Cover) 699728 Solenoid-Fuel 499613 Cover-Oil Pump 273638s Filter-Pre Clean.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 404500 TO 404599 user guide](http://yourpdfguides.com/dref/3639675)

<http://yourpdfguides.com/dref/3639675>