



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 407700 TO 407799. You'll find the answers to all your questions on the BRIGGS & STRATTON 407700 TO 407799 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

- User manual BRIGGS & STRATTON 407700 TO 407799**
- User guide BRIGGS & STRATTON 407700 TO 407799**
- Operating instructions BRIGGS & STRATTON 407700 TO 407799**
- Instructions for use BRIGGS & STRATTON 407700 TO 407799**
- Instruction manual BRIGGS & STRATTON 407700 TO 407799**



FORM MS-2987-06/08/2008
REPLACES FORM MS-2087-03/06/2008
FILE IN SECT. 2 OF SERVICE MANUAL
407700

Illustrated Parts List Model Series 407700

TYPE NUMBERS
0027 through 0607.

TABLE OF CONTENTS

Air Cleaner	7
Alternator	9
Blower Housing	7
Camshaft	3
Carburetor	5, 6
Controls	8
Crankshaft	3
Cylinder	2
Cylinder Head	4
Electric Starter	8
Engine Sump	2
Exhaust System	6
Flywheel	8
Fuel Supply	6
Gasket Set - Engine	3
Gasket Set - Valve	6
Governor Spring	8
Ignition	9
Intake Manifold	4
Kit - Carburetor Overhaul	5, 6
Lubrication	3
Piston, Rings, Connecting Rod	3
Valves	4



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 407700 TO 407799 user guide](http://yourpdfguides.com/dref/3640129)
<http://yourpdfguides.com/dref/3640129>

Manual abstract:

.....
.....
.....
... 7 Alternator

.....
.....
.... 9 Blower Housing .
.....

.....
7 Camshaft

.....
.....
..... 3 Carburetor ...
.....
.....

... 5, 6 Controls

.....
.....
.....

. 8 Crankshaft

.....
.....
..... 3 Cylinder

.....
.....
.....

.... 2 Cylinder Head

.....
.....
.....

. 4 Electric Starter

.....

..... 8 Engine Sump ..

.....
.....
.....

. 2 Exhaust System

.....
.....

. 6 Flywheel

.....
.....
.....

... 8 Fuel Supply ..

.....

... 6 Gasket Set - Engine ..

.....
.....

3 Gasket Set - Valve

.....
... 6 Governor Spring ..
.....

..... 8 Ignition ..

.....

.....

.....

..... 9 Intake Manifold ...

.....

.....

..... 4 Kit - Carburetor Overhaul ..

.....

5, 6 Lubrication

.....

.....

..... 3 Piston, Rings, Connecting Rod

.. 3 Valves ...

.....

.....

.....

.. 4 PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. @@@@2987-5 5 06/28/2006 407700 125C 141A 231 98 127 131A 130A 987A 95 51 108A 633A 947 276A 133B 118E 117E 104 975B 137A 51 7 51D 1127A 276A 51E 1022 163 1095 VALVE GASKET SET 868 883 51 105 977C CARBURETOR GASKET SET 135B 104 137A 105 121C CARBURETOR OVERHAUL KIT 51E 276A 633A 987A 51D 137A 51D 51E 187A 628 7 788 601 387 187B 601 918 385 601A 51 1095A VALVE GASKET SET 883 51E 868 1022 51D 883 883 187D 240 601 187E 601 613A 613 300 Assemblies include all parts shown in frames. 2987-6 6 06/28/2006 407700 968A 467 968B 467A 467A 445 967 1036 EMISSIONS LABEL 729 305B 305 703 865 865A 304 305A 447 447A 573 865B 447A 431A 431B 431C 405A 51D 304B 968A 1005 304 467 467A Assemblies include all parts shown in frames. 2987-7 7 06/28/2006 407700 74 73 616 552 552A 742 404 188 213 265 216 267 227 278 615 270 269 268 220 212B 562 505 209 211 219 332 75 271 222 265 267 267A 668 552A 691 363 1070 1005 309 23 801 697 510 1051 544 726 695 165 783 310 513 803 1090 311 579 797 802 Assemblies include all parts shown in frames. 2987-8 8 06/28/2006 407700 DUAL CIRCUIT 474C 877C 1059 474A 877A 5 - 9 AMP 1059 10 - 16 AMP 474B 877B 1059 878C 578A 578A NOTE: All Stators Use a No.

1119 Mounting Screw. NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information. 526A 501A 526B 501B 789B 789D 789A 1119 1054 635 334 333 851 729 Assemblies include all parts shown in frames. 2987-9 9 06/28/2006 407700 REF. NO. 1 1A 2 3 4 PART NO. DESCRIPTION REF. NO. 15 15A 16 PART NO.

DESCRIPTION REF. NO. 24 25 PART NO. DESCRIPTION 699751 Cylinder Assembly (Used After Code Date 03082800). 699742 Cylinder Assembly (Used Before Code Date 03082900). 499585 Kit-Bushing/Seal (Magneto Side) K391086s Seal-Oil (Magneto Side) 699747 Sump-Engine (Used After Code Date 03082800). ----- Note ----- 690069 Sump-Engine (Used Before Code Date 03082900). 699752 Sump-Engine (Used After Code Date 03082800). Used on Type No(s). 0147, 0167, 0184, 0205, 0219.

----- Note ----- 697473 Sump-Engine (Used Before Code Date 03082900). Used on Type No(s). 0147, 0167, 0184, 0205, 0219. 792299 Head-Cylinder (Cylinder #1) 792300 Head-Cylinder (Cylinder #2) K693997 Gasket-Cylinder Head 792185 Breather Assembly K690937 Gasket-Breather 691108 Screw (Breather Assembly) 792184 Tube-Breather K697227 Gasket-Crankcase 791130 Screw (Cylinder Head) 691680 Plug-Oil Drain 690946 Plug-Oil Drain 699700 Crankshaft (Used After Code Date 04010800). ----- Note ----- 790132 Crankshaft (Used After Code Date 04010800). Used on Type No(s). 0120, 0122, 0171, 0218. 699701 Crankshaft (Includes Connecting Rod) (Used Before Code Date 04010900). ----- Note ----- 790133 Crankshaft (Includes Connecting Rod) (Used Before Code Date 04010900). Used on Type No(s).

0120, 0122, 0171, 0218. K690947 Seal-Oil (PTO Side) 694966 Screw (Crankcase Cover/Sump) 691053 Flywheel ----- Note ----- 691054 Flywheel Used on Type No(s). 0100, 0119, 0124, 0137, 0147, 0156, 0167, 0174, 0176, 0184, 0187, 0219, 0229, 0255, 0268, 0607. 222698s Key-Flywheel 499588 Piston Assembly (Standard) ----- Note ----- 499590 Piston Assembly (.020" Oversize) 499604 Ring Set (Standard) ----- Note ----- 499606 Ring Set (.020" Oversize) 690975 Lock-Piston Pin 690229 Pin-Piston (Standard) 699699 Rod-Connecting (Standard) (Used After Code Date 04010800). ----- Note ----- Rod-Connecting (For Replacement Connecting Rod, See Reference 16A) (Used Before Code Date 04010900). 690976 Screw (Connecting Rod) 499596 Valve-Exhaust 792200 Valve-Intake 694865 Spring-Valve (Intake) 694865 Spring-Valve (Exhaust) 499586 Keeper-Valve 690977 Tappet-Valve 790562 Camshaft 699801 Manifold-Intake Used on Type No(s). 0607. 695241 Manifold-Intake 26 16A 27 28 29 4A 20 22 32 33 34 35 36 42 45 46 50 5 5A 7 8 9 10 11 12 13 23

50A K Also included in one or more Gasket Sets or Overhaul Kits.

See Ref. Nos. @@@@2987-10 10 06/28/2006 407700 REF. NO. 51 51A 51D 51E 53 54 PART NO. DESCRIPTION REF. NO. 104 PART NO. DESCRIPTION REF. NO.

105 PART NO. DESCRIPTION K699803 Gasket-Intake K791677 Gasket-Intake K699800 Gasket-Intake Used on Type No(s). 0607. K690949 Gasket-Intake 690951 Stud (Carburetor) 699816 Screw (Intake Manifold) (Used After Code Date 04110400). ----- Note ----- 695240 Screw (Intake Manifold) (Used Before Code Date 04110500).

494439 Screen-Rotating 698425 Screw (Rotating Screen) 691056 Washer (Flywheel) 690718 Screw (Throttle Valve) 699721 Kit-Idle Speed K694918 Pin-Float Hinge Used on Type No(s). 0607. ----- Note ----- K694918 Pin-Float Hinge (Used After Code Date 04080300). Used on Type No(s). @@@@K694918 Pin-Float Hinge (Used After Code Date 04091400).

Used on Type No(s). @@@@K690984 Pin-Float Hinge (Used Before Code Date 04080400). Used on Type No(s). @@@@----- Note ----- K690984 Pin-Float Hinge (Used Before Code Date 04091500). Used on Type No(s). @@@@K698537 Pin-Float Hinge Used on Type No(s). 0607. ----- Note ----- K698537 Pin-Float Hinge (Used After Code Date 04080300). Used on Type No(s). @@@@K698537 Pin-Float Hinge (Used After Code Date 04091400).

Used on Type No(s). @@K690985 Valve-Float Needle (Used Before Code Date 04080400). Used on Type No(s). @@----- Note ----- K690985 Valve-Float Needle (Used Before Code Date 04091500). Used on Type No(s). 73 74 75 95 98 104A 105A K Also included in one or more Gasket Sets or Overhaul Kits.
See Ref. Nos. 121, 121B, 358A, 358B, 977, 977B or 1095. Assemblies include all parts shown in frames.
2987-11 11 06/28/2006 407700 REF. NO. 108 108A 117 PART NO. DESCRIPTION REF. NO.
117A PART NO. DESCRIPTION REF. NO. 118 PART NO. DESCRIPTION 699723 Valve-Choke 699808 Valve-Choke Used on Type No(s).
0607. 699732 Jet-Main (Standard)(Left) (Nikki) (Used After Code Date 04080300). Used on Type No(s). @@----- Note ----- 699732 Jet-Main (Standard)(Left) (Nikki) (Used After Code Date 04091400).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 407700 TO 407799 user guide](http://yourpdfguides.com/dref/3640129)
<http://yourpdfguides.com/dref/3640129>

Used on Type No(s). @@699733 Jet-Main (Standard)(Right) (Nikki) (Used After Code Date 04080300). Used on Type No(s). @@----- Note ----- 699733 Jet-Main (Standard)(Right) (Nikki) (Used After Code Date 04091400). Used on Type No(s). @@K690232 Jet-Main (Standard) (Used Before Code Date 04080400).

Used on Type No(s). @@----- Note ----- K690232 Jet-Main (Standard) (Used Before Code Date 04091500). Used on Type No(s). @@791406 Jet-Main (Standard) Used on Type No(s). 0607. 790890 Jet-Main (High Altitude)(Left) (Nikki) (Used After Code Date 04080300). Used on Type No(s). @@----- Note ----- 790890 Jet-Main (High Altitude)(Left) (Nikki) (Used After Code Date 04091400). Used on Type No(s). @@699458 Jet-Main (High Altitude)(Right) (Nikki) (Used After Code Date 04080300).

Used on Type No(s). @@----- Note ----- 699458 Jet-Main (High Altitude)(Right) (Nikki) (Used After Code Date 04091400). Used on Type No(s). 117D 118A 117E K Also included in one or more Gasket Sets or Overhaul Kits. See Ref.

Nos. @@2987-12 12 06/28/2006 407700 REF. Nte 04091400). Used on Type No(s). @@499803 Tube-Fuel Transfer (Used Before Code Date 04080400). Used on Type No(s). @@----- Note ----- 499803 Tube-Fuel Transfer (Used Before Code Date 04091500). Used on Type No(s). @@792022 Tube-Fuel Transfer Used on Type No(s). 0607. @@0607. 699722 Kit-Choke Shaft 699811 Kit-Choke Shaft Used on Type No(s). @@See Ref. Nos. @@2987-14 14 06/28/2006 407700 REF.

NO. 142 PART NO. DESCRIPTION REF. NO. 146 150 160 PART NO. DESCRIPTION REF. NO. 163 165 187A PART NO. @@Used on Type No(s).

@@@@Used on Type No(s).

@@@@Used on Type No(s). @@@@Used on Type No(s). @@@@Used on Type No(s). @@@@Used on Type No(s). @@690996 Retainer-Solenoid (Used Before Code Date 04080400).

Used on Type No(s). @@@@Used on Type No(s). @@@@0156, 0176, 0255, 0260. 691018 Spring- Governor Used on Type No(s). 0117, 0138. 692909 Spring- Governor Used on Type No(s). 0607. 698071 Spring- Governor Used on Type No(s). 0027, 0100, 0125, 0128, 0135, 0171. @@See Ref. Nos. 121, 121B, 358A, 358B, 977, 977B or 1095. @@NO. 222 227 231 239 PART NO. DESCRIPTION REF.

NO. 278 287 300 304 PART NO. DESCRIPTION REF. NO. 304B PART NO. @@0130, 0171. 691035 Filter-Fuel 690957 Retainer-Breather 690956 Collector-Oil 691024 Clamp-Casing 691044 Screw (Casing Clamp) 695134 Screw (Casing Clamp) Used on Type No(s). 0119, 0121, 0122, 0167, 0171, 0174, 0204, 0205, 0218, 0219, 0607. 691025 Casing-Control Wire (Cut to Required Length) 691026 Wire-Control (Cut to Required Length) 691027 Nut (Control Wire Casing) 691028 Lever-Control K690997 Washer-Sealing K695410 Washer-Sealing Used on Type No(s). 0607.

792651 Washer (Governor Control Lever) 691108 Screw (Dipstick Tube) 696226 Muffler Used on Type No(s). 0130, 0171. 790688 Housing-Blower (Black) Used on Type No(s). 0131, 0607. ----- Note ----- 790688 Housing- Blower (Black) (Used After Code Date 04080300).

Used on Type No(s). 0027, 0118, 0121E4, 0124E1, 0125, 0126, 0128, 0130, 0135, 0137, 0147, 0156, 0167, 0171, 0174, 0176, 0187, 0204, 0205, 0218, 0219. 790688 Housing- Blower (Black) (Used After Code Date 04100500). Used on Type No(s). 0100, 0117, 0119, 0120, 0121E1, 0121E5, 0122, 0229, 0230, 0255, 0260.

790692 Housing-Blower (Black) Used on Type No(s). 0121E2, 0121E3, 0124E5, 0138, 0184, 0268. ----- Note ----- 790692 Housing- Blower (Black) (Used Before Code Date 04080400). Used on Type No(s). 0027, 0118, 0121E4, 0124E1, 0125, 0126, 0128, 0130, 0135, 0137, 0147, 0156, 0167, 0171, 0174, 0176, 0187, 0204, 0205, 0218, 0219. 790692 Housing- Blower (Black) (Used Before Code Date 04100600). Used on Type No(s). 0100, 0117, 0119, 0120, 0121E1, 0121E5, 0122, 0229, 0230, 0255, 0260. 691005 Screw (Blower Housing) 698336 Screw (Blower Housing) 790690 Screw (Blower Housing)(Blower Housing To Intake Elbow) 240 250 252 265 267 267A 268 269 305 305A 305B 270 271 276 276A K Also included in one or more Gasket Sets or Overhaul Kits. See Ref.

Nos. @@2987-16 16 06/28/2006 407700 REF. NO. 309 PART NO. DESCRIPTION REF. NO. 358A 358B 363 383 385 387 404 405A 415 418 431A 431B PART NO. DESCRIPTION REF. NO. 431C PART NO.

DESCRIPTION 499521 Motor-Starter ----- Note ----- 497595 Motor-Starter Used on Type No(s). 0100, 0131, 0147, 0167, 0174, 0184, 0205, 0219, 0268, 0607. 691263 Screw (Starter Motor) ----- Note ----- 690323 Screw (Starter Motor) Used on Type No(s). 0100, 0131, 0147, 0167, 0174, 0184, 0205, 0219, 0268, 0607. 497608 Brush Set 691059 Nut (Flywheel) 691060 Armature-Magneto 691061 Screw (Magneto Armature) 491055s Plug-Spark Used on Type No(s).

0027, 0100, 0126, 0131, 0138, 0268, 0607. ----- Note ----- 691043 Plug-Spark Used on Type No(s). 0117, 0118, 0119, 0120, 0121, 0122, 0124, 0125, 0128, 0130, 0135, 0137, 0147, 0156, 0167, 0171, 0174, 0176, 0184, 0187, 0204, 0205, 0218, 0219, 0229, 0230, 0255, 0260. 694012 Gasket Set-Engine 699823 Gasket Set-Engine Used on Type No(s). 0607.

19203 Puller-Flywheel 19374s Wrench-Spark Plug 691108 Screw (Fuel Pump) 808656 Pump-Fuel 690442 Washer (Governor Crank) 697820 Screw (Back Plate) 690283 Plug 690999 Plate-Carburetor 790628 Elbow-Intake Used on Type No(s). 0607. 790816 Elbow-Intake (Used After Code Date 04080300). Used on Type No(s). @@----- Note ----- 790816 Elbow-Intake (Used After Code Date 04100500). Used on Type No(s). 0100, 0117, 0119, 0120, 0121, 0122, 0124E5, 0229, 0230, 0255, 0260. 691011 Adapter-Air Cleaner Used on Type No(s). 0184, 0268. ----- Note ----- 691011 Adapter-Air Cleaner (Used Before Code Date 04080400).

Used on Type No(s). @@691011 Adapter-Air Cleaner (Used Before Code Date 04100600), Used on Type No(s). 0100, 0117, 0119, 0120, 0121, 0122, 0124E5, 0229, 0230, 0255, 0260. 499486s Filter-Air Cleaner Cartridge (Paper Element) ----- Note ----- 698754 Filter-Air Cleaner Cartridge (Cloth Element) 691003 Screw (Air Guide Cover) 691108 Screw (Air Guide Cover) 790697 Knob-Air Cleaner (1" Long) 691008 Knob-Air Cleaner (1 1/2" Long) 310 311 332 333 334 337 445 447 447A 467 467A K Also included in one or more Gasket Sets or Overhaul Kits. See Ref. Nos. 121, 121B, 358A, 358B, 977, 977B or 1095. Assemblies include all parts shown in frames. 2987-17 17 06/28/2006 407700 REF. NO.

474A PART NO. DESCRIPTION REF. NO. 578A 579 601 601A 613 613A 615 616 617 628 633 633A PART NO. DESCRIPTION REF.

NO. 783 788 789A 789B 789D 797 798 801 802 803 PART NO. 695708 691039 790544 698330 691220 693167 697890 691283 691286 DESCRIPTION Gear-Pinion Bracket-Fuel Pump Harness-Wiring Harness-Wiring Nut (Brush Retainer) Screw (Rocker Arm) Cap-Drive Cap-End Housing-Starter (Service By 499521 Starter Motor Only) ----- Note ----- Housing-Starter (Service with 497595 Starter Motor) Used on Type No(s). 0100, 0131, 0147, 0167, 0174, 0184, 0205, 0219, 0268, 0607. Seal-O Ring (Dipstick Tube) Dipstick/Tube Assembly Terminal-Spark Plug Cover-Air Guide (Cylinder #1) Cover-Air Guide (Cylinder #2) Cover-Air Guide (Valley) Seal-Valve Wire/Connector- Alternator Wire/Connector- Alternator Wire/Connector- Alternator Harness-Alternator Gasket-Exhaust 696457 Alternator (5 To 9 Amp Regulated) 696458 Alternator (10-16 Amp Regulated) 696459 Alternator (Dual Circuit) 691188 Regulator 691185 Regulator 691029 Nut (Governor Control Lever) 696541 Drive-Starter 692024 Clutch-Drive 691036 Dipstick K691032 Seal-Dipstick Tube

691037 Tube-Dipstick 691129 Screw (Regulator) 691108 Screw (Regulator) Armature-Starter (Service By 499521 Starter Motor Only) ----- Note -----
Armature-Starter (Service with 497595 Starter Motor) Used on Type No(s).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 407700 TO 407799 user guide](http://yourpdfguides.com/dref/3640129)

<http://yourpdfguides.com/dref/3640129>

0100, 0131, 0147, 0167, 0174, 0184, 0205, 0219, 0268, 0607. 690552 Bushing-Governor Crank 690553 Bushing-Governor Crank 690311 Bolt (Governor Control Lever) 790444 Plate-Back 691208 Wire Assembly 691029 Nut (Starter Cable) 791850 Clamp-Hose (Green) 691038 Clamp-Hose (Black) 690341 Screw (Muffler) 690297 Screw (Muffler) 698290 Retainer-Governor Shaft 691045 Crank-Governor 697891 Seal-O Ring (Intake Manifold) 691108 Screw (Fuel Pump Bracket) K690998 Seal-Choke/Throttle Shaft K695414 Seal-Choke/Throttle Shaft Used on Type No(s). 0607. 66538s Boot-Spark Plug 690958 Nut (Carburetor) 691215 Spacer K690234 Gasket-Carburetor Plate K790574 Seal-Governor Shaft 693149 Screw (Ring Gear) 690372 Screw (Drive Cap) 691010 Clip 697474 Cover-Oil Filter 690959 Pin-Locating 499612 Gear-Ring 694123 Clip-Wire 690980 Gear-Timing 690328 Retainer-E Ring 696999 Screw (Oil Pump Cover) 474B 474C 501A 501B 505 510 513 523 524 525 526A 526B 544 635 654 668 672 691 695 697 703 710 718 726 729 741 742 750 842 847 851 865 865A 865B 868 877A 877B 877C 878C 883 K691031 499602 493880s 691012 691014 691015 K690968 393537 399916 393456 398661 K690970 552 552A 562 573 K Also included in one or more Gasket Sets or Overhaul Kits. See Ref. Nos. @2987-18 18 06/28/2006 407700 REF. NO. 914 918 929 929A 943 947 PART NO. DESCRIPTION REF.

NO. 947B PART NO. DESCRIPTION REF. NO. 977 PART NO. DESCRIPTION 691127 Screw (Rocker Cover) 694000 Hose-Vacuum 695239 Screw (Choke Control Bracket) 691009 Screw (Choke Control Bracket) K690589 Seal-O Ring (Oil Pump Cover) 699728 Solenoid-Fuel Used on Type No(s). 0607. ----- Note ----- 699728 Solenoid-Fuel (Used After Code Date 04080300). Used on Type No(s). @@----- Note ----- 699728 Solenoid-Fuel (Used After Code Date 04091400).

Used on Type No(s). @@499809 Solenoid-Fuel (Used Before Code Date 04080400). Used on Type No(s). @----- Note ----- 499809 Solenoid-Fuel (Used Before Code Date 04091500). Used on Type No(s).

@499613 Cover-Oil Pump 273638s Filter-Pre Cleaner 790689 Cover-Air Cleaner 790095 Cover-Air Cleaner 499810 Bowl-Float 699502 Bowl-Float Used on Type No(s). 0607. 792456 Gasket Set-Carburetor (Used After Code Date 04080300). Used on Type No(s). @@@@Used on Type No(s).

@499812 Gasket Set-Carburetor (Used Before Code Date 04080400). Used on Type No(s). @@@@Used on Type No(s). @699815 Gasket Set-Carburetor Used on Type No(s). 0607. 965 967 968A 968B 975 975B 977B 977C K Also included in one or more Gasket Sets or Overhaul Kits. See Ref. Nos. 121, 121B, 358A, 358B, 977, 977B or 1095. Assemblies include all parts shown in frames.

2987-19 19 06/28/2006 407700 REF. NO. 987 987A 1005 PART NO. DESCRIPTION REF. NO. 1100 1119 1123 PART NO. DESCRIPTION REF. NO. 1124 1126 1127 1127A PART NO. DESCRIPTION K691000 Seal-Throttle Shaft K699813 Seal-Throttle Shaft Used on Type No(s).

0607. 790698 Fan-Flywheel (Used After Code Date 04071900). ----- Note ----- 499603 Fan-Flywheel (Used Before Code Date 04072000). 499603 Fan-Flywheel (Used After Code Date 04071900). Used on Type No(s).

0184, 0268. 790698 Fan-Flywheel (Used Before Code Date 04072000). Used on Type No(s). 0184, 0268. 690954 Nipple-Oil Filter 690770 Screen-Oil Pump 690971 Gasket-Rocker Cover 499599 Cover-Rocker (Cylinder #1) 499600 Cover-Rocker (Cylinder #2) 499054 Pump-Oil 690981 Rod-Push (Steel) 690982 Rod-Push (Aluminum) 492932s Filter-Oil 690972 Arm-Rocker 691042 Shaft-Pump Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer) 691265 Ring-Retaining 280275 Tie-Cable 276245 Operator's Manual 698516 Kit-Screw/Washer 690372 Screw (Flywheel Fan) 691293 Retainer-Bush 694013 Gasket Set-Valve 699822 Gasket Set-Valve Used on Type No(s).

0607. 791959 Pivot-Rocker Arm 691183 Screw (Alternator) K699725 Seal-O Ring (Solenoid Retainer) (Used After Code Date 04080300). Used on Type No(s). @----- Note ----- K699725 Seal-O Ring (Solenoid Retainer) (Used After Code Date 04091400). Used on Type No(s). @K690987 Seal-O Ring (Solenoid Retainer) (Used Before Code Date 04080400). Used on Type No(s). @----- Note ----- K690987 Seal-O Ring (Solenoid Retainer) (Used Before Code Date 04091500). Used on Type No(s). @K690988 Seal-O Ring (Fuel Transfer Tube) 690991 Screw (Fuel Transfer Tube) 690992 Screw (Float Bowl) 695407 Screw (Float Bowl) Used on Type No(s).

0607. K690990 Screw (Carburetor Nozzle) 697475 Seal-O Ring (Oil Filter Cover) 273521 Repair Manual 699731 Extension-Fuel Transfer Tube (Used After Code Date 04080300). Used on Type No(s). @@----- Note ----- 699731 Extension Fuel Transfer Tube (Used After Code Date 04091400). Used on Type No(s). 1128 1280 1330 1342A 1013 1017 1022 1023 1023A 1024 1026 1026A 1027 1029 1035 1036 1123B 1051 1054 1058 1059 1070 1090 1095 1095A K Also included in one or more Gasket Sets or Overhaul Kits. See Ref. Nos. @2987-20 20 06/28/2006 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 407700 TO 407799 user guide](http://yourpdfguides.com/dref/3640129)
<http://yourpdfguides.com/dref/3640129>