



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 445500 TO 445599. You'll find the answers to all your questions on the BRIGGS & STRATTON 445500 TO 445599 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 445500 TO 445599**  
**User guide BRIGGS & STRATTON 445500 TO 445599**  
**Operating instructions BRIGGS & STRATTON 445500 TO 445599**  
**Instructions for use BRIGGS & STRATTON 445500 TO 445599**  
**Instruction manual BRIGGS & STRATTON 445500 TO 445599**



FORM MS-3345-05/21/2007  
REPLACES FORM MS-3345-03/00/2007  
FILE IN SECT. 2 OF SERVICE MANUAL  
**445500**

## Illustrated Parts List Model Series 445500

TYPE NUMBERS  
0110 through 0864.

### TABLE OF CONTENTS

Air Cleaner .....	5
Alternator .....	7
Blower Housing .....	5
Camshaft .....	2
Carburetor .....	4
Controls .....	6
Crankshaft .....	2
Cylinder .....	2
Cylinder Head .....	3
Electric Starter .....	6
Engine Sump .....	2
Flywheel .....	6
Fuel Supply .....	7
Gasket Set - Engine .....	4
Gasket Set - Valve .....	3
Governor Spring .....	6
Ignition .....	7
Intake Manifold .....	3
Kit - Carburetor Overhaul .....	4
Lubrication .....	2
Piston, Rings, Connecting Rod .....	2
Valves .....	3



PRINTED IN U.S.A.  
COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 445500 TO 445599 user guide](http://yourpdfguides.com/dref/3640069)  
<http://yourpdfguides.com/dref/3640069>

**Manual abstract:**

2 OF SERVICE MANUAL 445500 Illustrated Parts List Model Series 445500 TYPE NUMBERS 0110 through 0864. TABLE OF CONTENTS Air Cleaner . . . .

. . . . .  
. . . . .  
. . . . .  
. . . . . 5 Alternator . . . . .  
. . . . .  
. . . . .  
. . . . .  
. . . . . 7 Blower Housing . . . . .  
. . . . .  
. . . . . 5 Camshaft . . . . .  
. . . . .  
. . . . .  
. . . . . 2 Carburetor . . . . .  
. . . . .  
. . . . .  
. . . . . 4 Controls . . . . .  
. . . . .  
. . . . .  
. . . . . 6 Crankshaft . . . . .  
. . . . .  
. . . . .  
. . . . . 2 Cylinder . . . . .  
. . . . .  
. . . . .  
. . . . . 2 Cylinder Head . . . . .  
. . . . .  
. . . . .  
. . . . . 3 Electric Starter . . . . .  
. . . . .  
. . . . .  
. . . . . 6 Engine Sump . . . . .  
. . . . .  
. . . . .  
. . . . . 2 Flywheel . . . . .  
. . . . .  
. . . . .  
. . . . . 6 Fuel Supply . . . . .  
. . . . .  
. . . . .  
. . . . . 7 Gasket Set - Engine . . . . .  
. . . . .  
. . . . . 4 Gasket Set - Valve . . . . .  
. . . . .  
. . . . .  
. . . . . 3 Governor Spring . . . . .  
. . . . .  
. . . . .  
. . . . . 6 Ignition . . . . .

.....  
.....  
.....  
7 Intake Manifold .....

.....  
.....  
.....  
3 Kit - Carburetor Overhaul .....

.....  
.....  
.....  
4 Lubrication .....

.....  
.....  
.....  
2 Piston, Rings, Connecting Rod ..

..... 2 Valves .....

..... 3 PRINTED IN U.S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

445500 1 2 3 REQUIRED when replacing parts with warning labels affixed. @@@@3 05/21/2007 445500 125 163 141 108 633 1342A 1123 276 1123 160 947 276 418 672 51E 1127 276 117B 117C 135 1124 1126 105 133 104 975 137 231 131 987 51A 98 142 1128 150 95 130 104 105 137 672 121 CARBURETOR OVERHAUL KIT 150 276 633 987 1123 1123A 1124 118B 118C 358A ENGINE GASKET SET 125A 418 163 672 141 231 108 98 142 1128 150 3 51A 7 R -L L-R 9 131 987 133 104 975A 137 20 276 95 130 12 51E 163 633 51A 105 135 1124 276 524 691 842 868 1022 943 883 51E 947A 276A 1126 117B 117C 1127A 1123A Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3345-4 Assemblies include all parts shown in frames. 4 05/21/2007 445500 968A 467 467A 968C 467A 445 445A 967 865 865A 447 304 447A 729 865B 447A 703 573 305 305B 1040 405A 431B 1036 EMISSIONS LABEL 163 304A Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3345-5 Assemblies include all parts shown in frames. 5 05/21/2007 445500 74 73 616 552 552A 668 742 404 552A 691 332 75 1070 270 1005 269 268 220 188 615 271 216 219 227 278 562 505 213 265 209 211 929 188 222 265 267A 267B 267 363 309 23 801 697 510 1051 544 726 695 165 783 310 513 803 1090 311 579 797 802 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3345-6 Assemblies include all parts shown in frames.

6 05/21/2007 445500 DUAL CIRCUIT 474C 877C 1059 10 - 16 AMP 474B 877B 1059 474A 877A TRI CIRCUIT 1059 878C 578A 578A NOTE: All stators use a No. 1119 mounting screw. NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information. 789B 789C 526B 501B 526A 501A 789A 788A 387 628 788 1054 635 334 333 851 187A 729 918 385 883 240A 240 187D 601 187E 601 601 Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 3345-7 Assemblies include all parts shown in frames. 7 05/21/2007 445500 REF. NO. 1 2 3 4 5 5A 7 8 9 10 11 12 13 15 15A 16 PART NO.

DESCRIPTION REF. NO. 26 PART NO. DESCRIPTION REF. NO. 73 74 75 95 98 104 105 108 PART NO. DESCRIPTION 699753 Cylinder Assembly 499585 Kit-Bushing/Seal (Magneto Side) K391086s Seal-Oil (Magneto Side) 699747 Sump-Engine 792299 Head-Cylinder (Cylinder #1) 792300 Head-Cylinder (Cylinder #2) K693997 Gasket-Cylinder Head 792185 Breather Assembly K690937 Gasket-Breather 691108 Screw (Breather Assembly) 792184 Tube-Breather K697227 Gasket-Crankcase 791130 Screw (Cylinder Head) 691680 Plug-Oil Drain 690946 Plug-Oil Drain 699700 Crankshaft ----- Note ----- 790132 Crankshaft Used on Type No(s). 0595, 0864. K791892 Seal-Oil (PTO Side) 694966 Screw (Crankcase Cover/Sump) 691053 Flywheel ----- Note ----- 691054 Flywheel Used on Type No(s). 0485, 0504.

222698s Key-Flywheel 792023 Piston Assembly (Standard) ----- Note ----- 792072 Piston Assembly (.020" Oversize) 792026 Ring Set (Standard) (Used After Code Date 05071800). ----- Note ----- 694004 Ring Set (Standard) (Used Before Code Date 05071900). @@@@No. 358A. D Included in Carburetor Overhaul Kit-Ref. No. 121. Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. @8 05/21/2007 445500 REF. NO. 117B 117C 118B 118C 121 125 125A PART NO. DESCRIPTION REF. NO. 130 131 133 135 137 141 142 PART NO. @NO. 187A 187D 187E 188 192 PART NO. @0110, 0120, 0121, 0122, 0516. @No. 358A. D Included in Carburetor Overhaul Kit-Ref. No. 121. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. @9 05/21/2007 445500 REF. NO.

209 PART NO. DESCRIPTION REF. NO. 222 PART NO. DESCRIPTION REF. NO. 304 PART NO. @@@@793339 Spring-Governor (Light Green) (Used After Code Date 06081400). Used on Type No(s). 0485, 0499, 0595, 0626, 0755, 0801, 0820.

698071 Spring- Governor (White) (Used Before Code Date 06081500). Used on Type No(s). 0435. 793339 Spring-Governor (Light Green) Used on Type No(s). 0516. 793340 Spring-Governor (Orange) Used on Type No(s). 0789. @@@@0504, 0510, 0723, 0789, 0864. @0435, 0499, 0516. 240 691035 Filter-Fuel 240A 695666 Filter-Fuel Used on Type No(s).

0723, 0820, 0864. @0121. @0110, 0120, 0122. @0110, 0120, 0121, 0122, 0516. @0789, 0801. @Used on Type No(s). 0435, 0485, 0504, 0510, 0595, 0626. 791243 Housing-Blower Used on Type No(s). 0110, 0120, 0121, 0122, 0499, 0516, 0723, 0755, 0864. @Used on Type No(s).

0435, 0485, 0504, 0510, 0595, 0626. 791243 Housing-Blower (Used Before Code Date 07040400). Used on Type No(s). 0820. 691005 Screw (Blower Housing) 790690 Screw (Blower Housing to Intake Elbow) 499521 Motor-Starter ----- Note ----- 497595 Motor-Starter Used on Type No(s). 0110, 0121, 0435, 0499, 0516, 0723, 0755, 0789, 0801, 0820, 0864. 304A 305 305B 309 211 212 213 216 219 220 K Included in Engine Gasket Set-Ref. No. 358A. D

*Included in Carburetor Overhaul Kit-Ref.*

*No. 121. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines.*

*Parts shown without corresponding text may not be used on your specific engine. 3345-10 Assemblies include all parts shown in frames. 10 05/21/2007*

*445500 REF. NO. 310 PART NO.*

*DESCRIPTION REF. NO. 467 467A 474A 474B 474C 501A 501B 505 510 513 523 524 525 526A 526B 544 PART NO. DESCRIPTION REF. NO. 552 552A 562 573 578A 579 601 615 616 PART NO.*



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 445500 TO 445599 user guide](http://yourpdfguides.com/dref/3640069)

<http://yourpdfguides.com/dref/3640069>

DESCRIPTION 691263 Screw (Starter Motor) ----- Note ----- 690323 Screw (Starter Motor) Used on Type No(s). 0110, 0121, 0435, 0499, 0516, 0723, 0755, 0789, 0801, 0820, 0864. 497608 Brush Set 691059 Nut (Flywheel) 691060 Armature-Magneto 691061 Screw (Magneto Armature) 491055s Plug-Spark ----- Note ----- 691043 Plug-Spark Used on Type No(s). 0504, 0510.

793541 Plug-Spark Used on Type No(s). 0723, 0789, 0864. 694012 Gasket Set-Engine 19203 Puller-Flywheel 19374s Wrench-Spark Plug 691108 Screw (Fuel Pump) 808656 Pump-Fuel 690442 Washer (Governor Crank) 697820 Screw (Back Plate) 690283 Plug 690999 Plate-Carburetor 790816 Elbow-Intake 499486s Filter-Air Cleaner Cartridge (Paper Element) ----- Note ----- 698754 Filter-Air Cleaner Cartridge Used on Type No(s). 0789. 792101 Filter-Air Cleaner Cartridge Used on Type No(s). 0110, 0120, 0121, 0122, 0723, 0864. 691003 Screw (Air Guide Cover) 691108 Screw (Air Guide Cover) 790697 Knob-Air Cleaner (1" Long) 691008 Knob-Air Cleaner (1 1/2" Long) 696457 Alternator (Tri Circuit) 696458 Alternator (10-16 Amp 64. ----- Note ----- 791242 Cover-Air Cleaner (Used Before Code Date 06102900). Used on Type No(s). 0435, 0485, 0504, 0510, 0595, 0626.

791242 Cover-Air Cleaner (Used Before Code Date 07040400). Used on Type No(s). 0820. 499810 Bowl-Float 791232 Bowl-Float Used on Type No(s). 0110, 0120, 0121, 0122, 0516.

D691000 Seal-Throttle Shaft 791236 Fan-Flywheel Used on Type No(s). 0110, 0120, 0121, 0122, 0499, 0723, 0755, 0864. ----- Note ----- 791236 Fan-Flywheel (Used After Code Date 06102900). Used on Type No(s). 0435, 0485, 0504, 0510, 0595, 0626. 790698 Fan-Flywheel (Used Before Code Date 0610300). Used on Type No(s). 0435, 0485, 0504, 0510, 0595, 0626. 790698 Fan-Flywheel (Used After Code Date 07040300). Used on Type No(s). 0820. 791236 Fan-Flywheel (Used Before Code Date 07040400). Used on Type No(s). 0820. 790698 Fan-Flywheel Used on Type No(s).

0789, 0801. 791236 Fan-Flywheel Used on Type No(s). 0516. 1013 690954 Nipple-Oil Filter 1017 690770 Screen-Oil Pump 1022 K690971 Gasket-Rocker Cover 499599 Cover-Rocker (Cylinder #1) ----- Note ----- 793127 Cover-Rocker (Cylinder #1) Used on Type No(s). 0120. 499600 Cover-Rocker (Cylinder #2) 499054 Pump-Oil (Used Before Code Date 07022600). 794416 Pump-Oil (Used After Code Date 07022500). 690981 Rod-Push (Steel) 690982 Rod-Push (Aluminum) 492932s Filter-Oil ----- Note ----- 696854 Filter-Oil Used on Type No(s). 0723, 0789, 0820, 0864. 690972 Arm-Rocker 691042 Shaft-Pump (Used Before Code Date 07022600).

1023A 1024 1024A 1026 1026A 1027 968C 1029 1035 975 975A K Included in Engine Gasket Set-Ref. No. 358A. D Included in Carburetor Overhaul Kit-Ref. No.

121. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. @@13 05/21/2007 445500 REF.

NO. 1036 PART NO. @@NO. 1090 1095 1100 1119 PART NO. @@NO. 1127 1127A PART NO. @@0110, 0120, 0121, 0122, 0516. 690990 Screw (Carburetor Nozzle) 794467 Label-Warning 273521 Repair Manual 699731 Extension-Fuel Transfer Tube 1040 1051 1054 1058 1059 1070 791237 691265 280275 277103 698516 690372 1123 Dz699725 1123A Dz841653 1124 1126 D690988 690991 1128 1319 1330 1342A K Included in Engine Gasket Set-Ref. No. 358A.

D Included in Carburetor Overhaul Kit-Ref. No. 121. Included in Valve Gasket Set-Ref. No 1095. Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3345-14 Assemblies include all parts shown in frames. 14 05/21/2007 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 445500 TO 445599 user guide](http://yourpdfguides.com/dref/3640069)  
<http://yourpdfguides.com/dref/3640069>