



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 60102. You'll find the answers to all your questions on the BRIGGS & STRATTON 60102 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 60102**  
**User guide BRIGGS & STRATTON 60102**  
**Operating instructions BRIGGS & STRATTON 60102**  
**Instructions for use BRIGGS & STRATTON 60102**  
**Instruction manual BRIGGS & STRATTON 60102**

FORM M5125-1292  
REPLACES FORM M5125-402  
FILE IN SECT 2 OF SERVICE MANUAL  
**60100 to 60199**

## **Illustrated Parts List Model Series 60100 to 60199**

TYPE NUMBERS  
1015, 1016, 1111,  
1130 through 1222  
1300 through 1310  
4001 through 4010  
4015, 4016.

**TO FIND  
THE CORRECT NUMBER OF THE PART YOU NEED:  
FOLLOW THE INSTRUCTIONS BELOW**

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT©



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 60102 user guide](http://yourpdfguides.com/dref/3639918)  
<http://yourpdfguides.com/dref/3639918>

**Manual abstract:**

2 OF SERVICE MANUAL 60100 to 60199 Illustrated Parts List Model Series 60100 to 60199 TYPE NUMBERS 1015, 1016, 1111, 1130 through 1222 1300 through 1310 4001 through 4010 4015, 4016. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. @@@@The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types.

If your Type number is listed under "Note," order the part referred to at the "Note." If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply. B. C.

D. E. F. PRINTED IN U.S.

A. COPYRIGHT 60100 to 60199 635 28 347A 6 308 5 27 29 621 854 40 40 870 869 7 676A 346 346 994 299A 298 347 337 27 25 26 13 383 346 31 30 357 32 18 20 8 17 21 523 45 15 524 20 19 22 358 GASKET SET 1019 LABEL KIT REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. 8135-2 307 306 871 676 36 35 9 12 16 741 1 259 10 370 258 353 506 354 507 299 11 525 46 298 53 46A 864 883 Assemblies include all parts shown in frames. 2 122 60100 to 60199 97 96 95 634 154 52 156 541 53 153 899 187 257 90 147 681 190 271 191 270 114 117 898 539 538 116 148 149 118 536 370 535 534 99 203 209 217 256 152 348 216 156 218 269 268 643 163A 852 180 642 467 181 467A 165 549 643A 446 166 163 446 535A 163B 852A 642A 166 445 445A 535A 8135-3 Assemblies include all parts shown in frames. 3 122 60100 to 60199 201A 201 65 200 949 304 330 3 200A 37 2 331 325 305 1 3 319 333A 332 59A 608 60 59 575 305 897 334 363 74 58 1016 71 . 851 75 23 24 66 76 58 70 67 333 334 851 57 305 8135-4 56 73 356 122 Assemblies include all parts shown in frames 4 60100 to 60199 REF. NO. 1 2 3 5 6 7 8 9 10 11 12 PART NO. 395879 293708 K299819 210812 22963 K272167 294178 K27549 94688 66638 K270833 K270895 K270896 13 94547 Note: DESCRIPTION Cylinder Assembly BushingCylinder SealOil Head-Cylinder WasherFlat GasketCylinder Hd.

BreatherValve Chamber GasketValve Cover ScrewBreather Mtg. TubeBreather GasketCrankcase (.015" Thick, Standard) GasketCrankcase (.005" Thick) GasketCrankcase (.009" Thick) ScrewCylinder Hd. 93583 StudCyl. Hd. 22963 Washer Used on Type Nos. @@@@260103 Crankshaft Used on Type Nos. 1139, 1151, 1156, 1201, 4005.

260664 Crankshaft Used on Type Nos. 1138, 1174, 1184, 1193, 1219, 4006. 261410 Crankshaft Used on Type Nos. 1146, 1195, 1221, 1306, 1308. REF. NO. PART NO. DESCRIPTION 492100 Crankshaft Used on Type Nos. @@@@394879 Cover Assy. Crankcase Used on Model 60192 Series Engines. 395259 Cover Assy. Crankcase Used on Model 60132 Series Engines. @294499 Bushing Crankcase Cover Assy. Includes: 220538 Bushing Used on Model 60112 Series Engines. SealOil 393812 SealOil Used on Model 60132 Series Engines. 391484 SealOil Used on the Auxiliary P.T.O. Shaft on Model 60192 Series Engines. REF.

NO. PART NO. @392986 Oil Seal and Spacer Used on Type Nos. 1180, 1196, 1207, 4008. @Cover Mtg. @93656 Stud 90832 WasherLock Used on Type Nos. @FlywheelMagneto 395653 Flywheel Magneto Used on Type No. 1156. KeyFlywheel Piston Assy. (Standard) Piston Assy. (.010" O.S.) Piston Assy. (.

020" O.S.) Piston Assy. @297201. K Included in Gasket SetPart No.

397144. 5 60100 to 60199 REF. NO. 26 PART NO. DESCRIPTION REF. NO. 73 74 75 PART NO. DESCRIPTION REF. NO. PART NO.

DESCRIPTION 295683 Carburetor Assy. (Used Before Code Date 92101200). (Choke-A-Matic ) (Uses 221147 Ref. 203 Bell Crank) Used on Type Nos. 1308, 1310. @1308, 1310. ScrewMachine, Rd. Hd. @231176 Stud Air Cleaner (Used Before Code Date 83112700). @@@@280399 and Cut to Required Length.

@393974 Carburetor Assy. (Used Before Code Date 92101200). (Uses 222955 Ref. @295492 Carburetor Assy. (Used Before Code Date 92101200). (Choke-A-Matic ) (Uses 220952 Ref. 256 Lever) Used on Type Nos. 1016, 1130, 1132, 1133, 1135, 1141, 1142, 1145, 1155, 1159, 1160, 1162, 1166, 1167, 1168, 1175, 1179, 1183, 1185, 1192, 1194, 1195, 1200, 1203, 1204, 1209, 1211, 1216, 1217, 1219, 1220, 1221, 1300, 1303, 1304, 1305, 1306, 4003, 4016. 495834 Carburetor Assembly (Used After Code Date 92101100). 76 27 28 95 96 97 99 114 116 117 118 147 148 149 152 153 93499 211286 392819 393586 65787 65978 23431 23433 23432 22235 26336 260575 298031 Note: 90 29 30 31 32 33 34 35 37 40 45 46 46A 52 53 53A 56 57 58 154 156 163 163A 163B 165 166 93527 222955 271755 27660 270488 93856 231398 59 59A 60 65 66 67 68 70 71 Note: K Included in Gasket SetPart No.

397144. 6 60100 to 60199 REF. NO. 180 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 261658 Spring Governor Used on Type Nos. 1132, 1155, 1200, 1203, 1209, 1216. LinkChoke (Choke-A-Matic ) SpringChoke Link (Choke-A-Matic ) WasherChoke Link (Choke-A-Matic ) LeverSpeed Adjuster ScrewMachine, Fil.

Hd. ScrewSem BracketControl Wire Casing CasingControl Wire (48" Long) If Longer Casing is Needed, Specify Length in Inches; if a Shorter Casing is Needed, Order No. 66986 and Cut to Required Length. Wire Control (54" Long) If Longer Wire is Needed, Specify Length in Inches; if Shorter Wire is Needed, Order No. 26099 and Cut to Required Length. LocknutControl Wire Casing Lever Assembly Control LocknutMuffler MufflerExhaust MufflerExhaust 398701 Guard Muffler Uses: 94186 Screw Hex. Head (Guard to Muffler) 93873 Screw Hex. Head (Guard to Bracket) 222361 Bracket Used on Type No. 1181. REF.

NO. 304 305 306 PART NO. DESCRIPTION 399390 Tank AssemblyFuel Note: 399391 Tank Assy. Fuel Used on Type Nos. 1181, 1228. 298425 CapFuel Tank Note: 394818 CapFuel Tank Used on Type Nos. 1143, 1171. 396855 CapFuel Tank Used on Type Nos. 1181, 1202. 296476 PipeFuel 93440 ScrewFuel Tank Mtg.

K27404 GasketFuel Tank Mtg. 490529 BladeGovernor 490529 BladeGovernor 262042 LinkGovernor Links Listed Under Ref. 201 are Used With Ref. 200 Governor Blade. 261662 LinkGovernor Links Listed Under Ref.



**You're reading an excerpt. Click here to read official BRIGGS & STRATTON 60102 user guide**  
<http://yourpdfguides.com/dref/3639918>

201A are Used With Ref. 200A Governor Blade. 221147 CrankBell 260041 SpringGovernor Note: 260623 Spring Governor Used on Type Nos. 1219, 1300, 1310. 260662 Spring Governor Used on Type Nos.

@@260687 Spring Governor Used on Type Nos. 1130, 1133, 1141, 1142, 1144, 1145, 1179, 1183, 1194, 1204, 1211. @@Note: 220478 ShieldCylinder (Used Before Code Date 89102300). @@(Less Trigger Coil) 298731 PulleyRope Starter 395022 RopeStarter 223047 Washer 92284 NutHex. 398593 ArmatureMagneto 398593 ArmatureGroup 93381 ScrewArmature Mounting Sem 298809 PlugSpark (11/2" High, 38 mm) Note: 29693 PlugSpark (With Gasket) (2" High, 51 mm) 293918 PlugSpark 11/2" High, 38 mm (Resistor Type) 492167 Plug Spark (17/8" High, 48 mm) 802592 Plug Spark 17/8" High, 48 mm (Resistor Type) 93705 ScrewSem 220884 SwitchStop (For 11/2" High, 38 mm Spark Plug) Note: 221808 SwitchStop (For 17/8" High, 48 mm Spark Plug) 298926 SwitchStop (For 11/2" High, 38 mm Spark Plug) Note: 293739 SwitchStop (For 17/8" High, 48 mm Spark Plug) 296110 Plate AssemblyStop Switch Insulator 92791 WasherLock 181 216 217 218 256 257 258 259 268 260188 260189 220968 220952 93543 93062 294502 66986 Note: 307 308 319 325 330 331 332 333 333A 334 337 187 190 191 200 200A 201 201A 269 26099 Note: 203 209 270 271 298 299 299A 63426 290568 220859 493288 392811 Note: 346 347 347A 348 353 K Included in Gasket SetPart No. 397144. 7 60100 to 60199 REF. NO. 354 356 PART NO. DESCRIPTION REF. NO. 608 PART NO. DESCRIPTION REF. NO. 676 676A 681 PART NO. DESCRIPTION 90576 NutHex. 398808 WireGround Note: 396585 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 60102 user guide](http://yourpdfguides.com/dref/3639918)  
<http://yourpdfguides.com/dref/3639918>