



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 83412. You'll find the answers to all your questions on the BRIGGS & STRATTON 83412 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 83412
User guide BRIGGS & STRATTON 83412
Operating instructions BRIGGS & STRATTON 83412
Instructions for use BRIGGS & STRATTON 83412
Instruction manual BRIGGS & STRATTON 83412

FORM MS-5308-597
REPLACES FORM MS-5308-195
FILE IN SECT. FOR SERVICE MANUAL
83400 to 83499

Illustrated Parts List **Model Series** **83400 to 83499**

TYPE NUMBERS
0101, 0105, 0108.

TO FIND **THE CORRECT NUMBER OF THE PART YOU NEED:** **FOLLOW THE INSTRUCTIONS BELOW**

- Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- Refer to the illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- After the Reference Number has been identified, refer to the Numerical List, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."**
- If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted
in any form or by any means, electronic or mechanical, including photocopying,
recording or by information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 83412 user guide](http://yourpdfguides.com/dref/3639773)
<http://yourpdfguides.com/dref/3639773>

Manual abstract:

2 OF SERVICE MANUAL 83400 to 83499 Illustrated Parts List Model Series 83400 to 83499 TYPE NUMBERS 0101, 0105, 0106. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. @@@@The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."

"If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply. PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. B. C. D.

E. F. 83400 to 83499 308 1 870 869 306 307 2 3 8 227 10 9 552 337 15 1058 OWNER' MANUAL REF. NO. 1 2 3 5 6 7 8 9 10 11 13 13A PART NO. 395879 293708 K299819 213953 22963 K272167 495774 K27549 94621 281010 93111 DESCRIPTION 13 13A 5 13B 6 871 883 7 11 383 562 615 REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. DESCRIPTION REF. NO. 562 592 614 615 616 869 870 871 883 1019 1058 PART NO.

94907 231978 93306 93307 231077 211172 211291 231348 K272252 491675 272317 592 614 230 616 DESCRIPTION 1019 LABEL KIT REF. NO. 13B 15 227 230 306 307 308 337 PART NO. 94733 94387 493402 222450 224377 94515 223390 298809 Cylinder Assembly Bushing Seal Oil Head Cylinder Washer Gasket Cylinder Head Breather Assy. Gasket Breather Screw Hex. Tube Breather Screw Hex. (2" Long) 94547 Screw Hex. (25/16" Long) 383 552 Stud Hex. Drive Plug Oil Drain Lever Governor Washer Gov. Lever Shield Cylinder Screw Hex.

Cover Cylinder Head Plug Spark (11/2" High, 38 mm) Note 492167 Plug Spark (17/8" High, 48 mm) 89838 Wrench Spark Plug 231079 Bushing Governor Crank Bolt Governor Lever Nut Hex. Pin Cotter Retainer Lock Crank Governor Seat Valve (Intake) Seat Valve (Exhaust) Bushing Guide Gasket Exhaust Label Kit Owner's Manual K Included in Gasket Set Part No. 397144. D Included in Carburetor Kit Part No. 493762.

z Included in Carburetor Gasket Set Part No. 490937. 53082 Assemblies include all parts shown in frames. @ @ NO. 16 25 PART NO. 40 35 45 REF. NO. 27 28 29 PART NO. DESCRIPTION DESCRIPTION REF. NO. 33 34 35 40 45 718 741 PART NO. @ @ (.010" O.S.) 295589 Piston Assy.

(.020" O.S.) 295590 Piston Assy. @ @ (.020 Undersize) 220670 Dipper Conn. Rod 94699 Screw Conn. Rod K Included in Gasket Set Part No. 397144. D Included in Carburetor Kit Part No.

493762. z Included in Carburetor Gasket Set Part No. @ @ @ @ SEE REPAIR INSTRUCTION MANUAL. REF. NO. 12 PART NO. DESCRIPTION REF. NO. 19 20 21 22 PART NO. @ @ @ @ @ @.

@ @ (Used Before Code Date 91061000). 221551 Washer Thrust K Included in Gasket Set Part No. 397144. D Included in Carburetor Kit Part No. 493762. z Included in Carburetor Gasket Set Part No. @ @ @ @ SEE REPAIR INSTRUCTION MANUAL. REF. NO. 51 51A 94 95 98 104 106 PART NO.

K272585 K272295 D493765 94098 398185 D231371 D DESCRIPTION REF. NO. 124 125 127 130 131 133 134 137 PART NO. DESCRIPTION REF. NO. @ @ Hd. @ @ @ @ 397144. D Included in Carburetor Kit Part No. 493762. z Included in Carburetor Gasket Set Part No.

@ @ @ @ NO. 209 PART NO. DESCRIPTION REF. NO. 269 PART NO.

DESCRIPTION REF. NO. 356B 506 507 506 507 851 PART NO. @ @ Hd. Insulator Screw Fill.

Hd. @ @ 0105, 0106. 262695 Link Governor 262696 Spring Link 66986 Casing Wire (48" Long) (Cut to Required Length) 270 271 333 334 353 354 356 356A 26099 Wire Control (54" Long) (Cut to Required Length) 63426 Locknut Casing 290568 Lever Control 496914 Armature Magneto 94731 Screw Hex. 92791 Washer Lock 90576 Nut Hex. 493400 Wire Stop 493401 Wire Stop K Included in Gasket Set Part No. 397144. D Included in Carburetor Kit Part No. 493762. z Included in Carburetor Gasket Set Part No. 490937.

53086 Assemblies include all parts shown in frames. 6 57 83400 to 83499 161 163 967 968 971 REF. NO. 161 163 PART NO. REF. NO. 967 968 PART NO. REF. NO. 971 PART NO.

DESCRIPTION DESCRIPTION DESCRIPTION 493394 Base Air Cleaner K272296 Gasket Air Cleaner 491588 Filter Air 281009 Cover Air Cleaner 94121 Screw Air Cleaner K Included in Gasket Set Part No. 397144. D Included in Carburetor Kit Part No. 493762. z Included in Carburetor Gasket Set Part No.

490937. 53087 Assemblies include all parts shown in frames. 7 57 83400 to 83499 608 66 68 70 59 56 57 74 71 76 67 75 24 23 363 58 37 60 305 222 305 99 98A 526A 59A REF. NO. 23 24 37 56 57 58 PART NO.

296884 222698 220971 280439 490179 66734 DESCRIPTION REF. NO. 60 59 66 67 68 70 71 73 74 75 76 98A 99 PART NO. 73 DESCRIPTION Grip Starter Rope Pin Starter Grip Clutch Starter Housing Clutch Ball Clutch Ratchet Clutch Washer Retainer Screen Rotating Screw Hex. Washer Spring Washer Screw Phillips Spring Idle Valve REF. NO. 222 305 363 526 526A 608 526 PART NO. 493397 94786 19069 93062 94523 493414 DESCRIPTION Bracket Control Screw Hex. Flywheel Puller Screw Hex. Screw Hex.

Starter Rewind (12 o'clock) Note 398034 Starter Rewind Used on Type No(s). @ @ 397144. D Included in Carburetor Kit Part No. 493762. z Included in Carburetor Gasket Set Part No. @ @ @ @ SEE REPAIR INSTRUCTION MANUAL. 634A 634 116 REF. NO. 3 7 9 12 PART NO. K299819 K272167 K27549 K270833 DESCRIPTION REF.

NO. 51 51A 94 104 106 PART NO. K272585 K272295 D493765 D231371 D DESCRIPTION REF. NO. @ @ 134 only)) 116 Dz Gasket Sealing (Sold in Kit Only) 121 493762 Carburetor Kit 127 D Plug Welch (Sold in Kit Only) D398188 Valve Needle (Includes Seat) Dz Gasket Float Bowl (Sold in Kit Only) 397144 Gasket Set Dz Washer Throttle Shaft Dz Seal Choke K272252 Gasket Exhaust 490937 Gasket Set Carburetor K Included in Gasket Set Part No.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 83412 user guide](#)

