



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 90202. You'll find the answers to all your questions on the BRIGGS & STRATTON 90202 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 90202
User guide BRIGGS & STRATTON 90202
Operating instructions BRIGGS & STRATTON 90202
Instructions for use BRIGGS & STRATTON 90202
Instruction manual BRIGGS & STRATTON 90202

FORM MS-2845-1/08
REPLACES FORM MS-2845-1/07
FILE IN SECT. POP SERVICE MANUAL
90200 to 90299

Illustrated Parts List **Model Series** **90200 to 90299**

TYPE NUMBERS
0100, 0101, 0104,
0107, 0108, 0216.

TO FIND **THE CORRECT NUMBER OF THE PART YOU NEED:** **FOLLOW THE INSTRUCTIONS BELOW**

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical List, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted
in any form or by any means, electronic or mechanical, including photocopying,
recording or by information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 90202 user guide](http://yourpdfguides.com/dref/3640202)
<http://yourpdfguides.com/dref/3640202>

Manual abstract:

2 OF SERVICE MANUAL 90200 to 90299 Illustrated Parts List Model Series 90200 to 90299 TYPE NUMBERS 0100, 0101, 0104, 0107, 0108, 0216. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. @@@@The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. @@After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE

PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note." If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.

For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply. PRINTED IN U.S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved.

No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. B. C. D. E.

F. 90200 to 90299 527 529 529A 11 5 10 8 337 7 9 2 306 3 3 1019 LABEL KIT REF. NO. 10 11 13 15 37 78 306 307 308 337 PART NO. 308 869 1 635 871 870 13 383 307 15 REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. DESCRIPTION REF. NO. 529 529A 635 869 870 871 PART NO. @@NO.

1 2 3 5 PART NO. @@@@358. Included in Valve Overhaul Gasket SetPart 498524. 23682 Assemblies include all parts shown in frames. 2 18 90200 to 90299 33 34 29 28 27 25 26 40 35 45 40 35 45 32 30 27 REF. NO. 25 PART NO. DESCRIPTION REF. NO. 26 PART NO.

DESCRIPTION REF. NO. 28 PART NO. DESCRIPTION 498668 Piston Assembly (Standard) Note 298904 Piston Assy. (Standard) (Used Before Code Date 96012900) 498669 Piston Assy.

(.010" O.S.) 298905 Piston Assy. (.

010" O.S.) (Used Before Code Date 96012900). 498670 Piston Assy. (.020" O.S.) 298906 Piston Assy. (.020" O.

S.) (Used Before Code Date 96012900). 498671 Piston Assy. (.030" O.S.) 298907 Piston Assy. (.030" O.S.

) (Used Before Code Date 96012900). 498680 Ring Set (Standard) Note 298982 Ring Set (Standard) (Used Before Code Date 96012900).

@@@@@3 18 90200 to 90299 17 16 357 146 741 24 46 REF. NO. 16 PART NO.

DESCRIPTION REF. NO. 17 24 46 PART NO. DESCRIPTION REF. NO.

@@0101, 0104. 493599 Crankshaft Used on Type No(s). 0108. 495211 Crankshaft (Used After Code Date 93071900). Used on Type No(s). 0107. 493633 Crankshaft (Used Before Code Date 93072000). Used on Type No(s). @@@@4 18 90200 to 90299 REQUIRES SPECIAL TOOLS TO INSTALL. @@NO.

12 PART NO. DESCRIPTION REF. NO. 18 PART NO. DESCRIPTION REF. NO. @@0101, 0104. 497502 Cover Crankcase Used on Type No(s). 0107.

@@@@0100, 0107, 0216.

@@Used in positions 1 and 6. Used on Type No(s). 0180. 94970 ScrewHex. Used in positions 1 and 6 Used on Type No(s).

0216. K Included in Gasket SetSee Ref. 358. Included in Valve Overhaul Gasket SetPart 498524. 23685 Assemblies include all parts shown in frames.

5 18 90200 to 90299 90 97 718 124 To replace carburetor assembly, determine fuel tank capacity as shown 130 95 435 434 859 432 392 689 261 987 987A

51 541A Carburetor Mounting Surface Large Fuel Pipe Fuel Tank Capacity (Quarts) D (Inches) D 127 541 127A 611 149 173 153 224 141 680 680A 1 25/16

2 41/4 612 D=Fuel Pipe Length (Approx.) REF. NO. PART NO. DESCRIPTION REF. NO. 149 153 173 224 261 392 432 434 435 541 541A 611 PART NO.

26336 490501 231533 93955 93527 262328 221377 213963 93141 93397 92507 231067 DESCRIPTION SpringNeedle Valve Collar/Screw Kit ValveIdle

Adjust Screw (Collar) Screw (Idle Speed Adjust) SpringPump Diaphragm CapSpring CoverDiaphragm Screw (Diaphragm Cover) Washer (Speed Adjust

Lever) Washer (Speed Adjust Lever) PipeFuel REF. NO. 612 PART NO.

DESCRIPTION 51 K273113 GasketIntake 90 495459 Carburetor (2 Quart Tank) Note 495461 Carburetor (1 Quart Tank) 95 93499 Screw (Throttle Valve)

97 495313 ShaftThrottle 124 94913 Screw (Carburetor Mounting) 127 220352 PlugWelch 127A 223789 PlugWelch 130 223793 ValveThrottle 141 497230

KitChoke Shaft Note 491177 KitChoke Shaft (Used Before Code Date 94090100). 680 680A 689 718 859 987 987A 391813 TubePick Up Note 297219 Tube-

Pick Up Used on Type No(s). 0101, 0216. @@@@NO. 153 156 156A 200 201 209 PART NO. REF. NO. 231 266 274 284 356 410 485 541 PART

NO. REF. NO.

@@Used on Type No(s). 0216. 262359 LinkChoke 93955 Screw (Collar) 94924 Screw (Control Bracket) 497195 ControlThrottle 66432 Washer (Cable

Casing) 93543 Screw (Cable Casing) 398808 WireStop 262470 LinkControl 280715 KnobControl 22398 Washer (Speed Adjust Lever) (Used In Place Of

Stop Switch, Ref. 621) 1012 94897 Screw (Link Bracket) 490649 PanelSpeed Control 396847 SwitchStop 296110 SwitchStop 262570 LinkBell Crank 225057

BracketLink Note 223887 BracketLink (Used Before Code Date 94090100). Used on Type No(s).

0101. 490507 RetainerLink K Included in Gasket SetSee Ref. 358. Included in Valve Overhaul Gasket SetPart 498524. 23687 Assemblies include all parts

shown in frames.

7 18 90200 to 90299 180 123A 123 191 957 229 190 REF. NO. 123 123A PART NO. DESCRIPTION REF. NO. 180 PART NO. DESCRIPTION REF. NO. 191

PART NO. DESCRIPTION 94924 Screw (Carburetor To Tank) 94919 Screw (Carburetor To Tank) (Used After Code Date 92090600).

190 495377 TankFuel (2 Quart) Note 495370 TankFuel (1 Quart) 94914 Screw (Tank Mounting) 229 957 K272489 GasketFuel Tank Note K272996 Gasket-

Fuel Tank (Used Before Code Date 92060800). 66432 Washer (Fuel Tank) 494559 CapFuel Tank K Included in Gasket SetSee Ref. @@@@NO. PART NO.

DESCRIPTION REF. NO. 534 536 600 643 676 676A 676B 677 PART NO.



You're reading an excerpt. Click here to read official BRIGGS & STRATTON 90202 user guide
<http://yourpdfguides.com/dref/3640202>

DESCRIPTION REF. NO. @@@@NO.

@@K67838 Grommet K66578 Grommet K272203 GasketExhaust 498524 Gasket SetValve Overhaul K Included in Gasket SetSee Ref. 358. Included in Valve Overhaul Gasket SetPart 498524. 236813 Assemblies include all parts shown in frames. 13 18 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 90202 user guide](http://yourpdfguides.com/dref/3640202)
<http://yourpdfguides.com/dref/3640202>