



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 93212. You'll find the answers to all your questions on the BRIGGS & STRATTON 93212 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 93212
User guide BRIGGS & STRATTON 93212
Operating instructions BRIGGS & STRATTON 93212
Instructions for use BRIGGS & STRATTON 93212
Instruction manual BRIGGS & STRATTON 93212

FORM MS-105-699
REPLACES FORM MS-105-1296
FIELD SERVICE MANUAL

93200 to 93299

Illustrated Parts List

Model Series

93200 to 93299

TYPE NUMBERS
0030, 0040, 0042,
0050, 0104, 0109,
0540.

TO FIND

**THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW**

- Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- Refer to the illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- After the Reference Number has been identified, refer to the Numerical List, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."**
- If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 93212 user guide](#)

<http://yourpdfguides.com/dref/3639927>

Manual abstract:

The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types.

If your Type number is listed under "Note," order the part referred to at the "Note." If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply. PRINTED IN U.S.

A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. B. C.

D. E. F. 93200 to 93299 614 404 616 383 635 337 306 2 527 3 529 11 529A 15 REF. NO. @@SEE REPAIR INSTRUCTION MANUAL. REF. NO. 529 529A 552 562 PART NO. DESCRIPTION 1058 OWNER'S MANUAL REF.

NO. 1 2 PART NO. @@0030. @@0040, 0042, 0540. @@No. 358. D Included in Carburetor Overhaul KitRef. No. 121. Included in Valve Overhaul Gasket SetRef.

No. 1095. 10052 Assemblies include all parts shown in frames. @@NO. PART NO. REF. NO. PART NO. 27 30 40 36 45 40 35 45 REF. NO.

@@298985 Ring Set (.030" O.S.) (Used Before Code Date 96012900). @@0050. 692145 Crankshaft Used on Type No(s). 0540. 690824 Ball Bearing Used on Type No(s). 0040, 0042, 0540. @@@(Standard) (Used Before Code Date 96012900).

498669 Piston Assy. (.010" O.S.) (Used After Code Date 96012800). 298905 Piston Assy. (.010" O.S.) (Used Before Code Date 96012900).

498670 Piston Assy. (.020" O.S.) (Used After Code Date 96012800).

298906 Piston Assy. @(.030" O.S.) (Used After Code Date 96012800).

298907 Piston Assy. (.030" O.S.) (Used Before Code Date 96012900). 498680 Ring Set (Standard) (Used After Code Date 96012800). @@498681 Ring Set (.010" O.S.) (Used After Code Date 96012800).

298983 Ring Set (.010" O.S.) (Used Before Code Date 96012900). 498682 Ring Set (.020" O.S.) (Used After Code Date 96012800). @@No. 358.

D Included in Carburetor Overhaul KitRef. No. 121. Included in Valve Overhaul Gasket SetRef. No.

1095. 10053 Assemblies include all parts shown in frames. @@SEE REPAIR INSTRUCTION MANUAL. 20B 21 20A REF. NO.

12 PART NO. DESCRIPTION REF. NO. 19 20 20A 20B 21 PART NO. DESCRIPTION REF. NO. @@@@0030, 0050, 0104, 0109. @@No. 358. D Included in Carburetor Overhaul KitRef.

No. 121. Included in Valve Overhaul Gasket SetRef. No. 1095. 10054 Assemblies include all parts shown in frames. 4 69 93200 to 93299 125 97 987 130 95 1149 689 212 232 987A 110 859 141 110A 203 127 127A 149 173 205 51 191 392 611 432 434 612 435 718 153 365 224 REF. NO. PART NO. 203A 414 REF.

NO. PART NO. 1012 779 995 542 DESCRIPTION DESCRIPTION REF. NO. 435 542 611 612 689 718 779 859 987 987A 995 1012 1149 PART NO.

DESCRIPTION 51KD273113 Intake Gasket 95 691437 Screw (Throttle Valve) 97 692325 Throttle Shaft 110 691869 Washer (Choke Shaft) 110A 690401 Washer (Choke Shaft) 125 498202 Carburetor 127 691718 Welch Plug 127A 691742 Welch Plug 130 691743 Throttle Valve 141 497230 Choke Shaft Kit 149 D691592 Needle Valve Spring 153 490589 Collar/Screw Kit 173 D691777 Idle Mixture Valve 191 KD692241 Fuel Tank Gasket 203 691906 Bell Crank 203A 691744 Bell Crank 205 691776 Screw (Bell Crank) 212 692897 Throttle Link 224 690320 Screw (Collar/Screw Kit) 232 692898 Governor Link Spring 365 690953 Screw (Carburetor) 392 691823 Pump Diaphragm Spring 414 691721 Washer (Bell Crank) 432 690766 Cap Spring 434 691713 Diaphragm Cover 691619 Screw (Diaphragm Cover) 691683 Screw (Link Bracket) 691770 Fuel Pipe 391813 Pick-Up Tube 691783 Friction Spring 690296 Locating Pin 691828 Bell Crank Link D272538 Pump Diaphragm 692279 Throttle Shaft Seal 692001 Throttle Shaft Seal 691756 Link Bracket 490507 Link Retainer 691624 Screw (Idle Speed Adjusting) K Included in Engine Gasket SetRef. No. 358. D Included in Carburetor Overhaul KitRef. No.

121. Included in Valve Overhaul Gasket SetRef. No. 1095. 10055 Assemblies include all parts shown in frames. 5 69 93200 to 93299 202 232A 156 333 1012 222 216 209 851 485 334 271 621 356 265 356A REF. NO. 156 202 209 PART NO. REF. NO.

232A 265 267 268 268 269 270 267 PART NO. REF. NO. 271 333 334 356 356A PART NO. DESCRIPTION DESCRIPTION DESCRIPTION 216 222 492905 Speed Adjuster Lever 692892 Mechanical Governor Link 263127 Governor Spring Note 692899 Governor Spring Used on Type No(s). 0040, 0042, 0109, 0540. 691824 Choke Link 490649 Control Bracket 269 270 691819 Governor Link Spring 691024 Casing Clamp 690804 Screw (Casing Clamp) 691025 Control Wire Casing (Cut to Required Length) 691026 Control Wire (Cut to Required Length) 691027 Nut (Control Wire Casing) 485 621 851 1012 691028 Control Lever 496914 Magneto Armature 691061 Screw (Magneto Armature) 692390 Stop Wire 691418 Stop Wire Used on Type No(s). 0030, 0050. 692295 Control Knob 692310 Stop Switch 493880 Spark Plug Terminal 490507 Link Retainer K Included in Engine Gasket SetRef. No. 358. D Included in Carburetor Overhaul KitRef. No. 121. Included in Valve Overhaul Gasket SetRef.

No. 1095. 10056 Assemblies include all parts shown in frames. 6 69 93200 to 93299 180 365A 191 365B 957 190 916 REF. NO.

180 PART NO. DESCRIPTION REF. NO. 365A PART NO. DESCRIPTION REF. NO. 916 957 PART NO. DESCRIPTION 495388 Fuel Tank (Metal) 190 691685 Screw (Fuel Tank) 191 KD692241 Fuel Tank Gasket 365B 692200 Screw (Carburetor) (3/4" Long) 691687 Screw (Carburetor) (1 3/4" Long) 691900 Governor Gear Rack 494559 Fuel Tank Cap (Plastic) K Included in Engine Gasket SetRef. No. 358.

D Included in Carburetor Overhaul KitRef. No. 121. Included in Valve Overhaul Gasket SetRef. No. 1095. 10057 Assemblies include all parts shown in frames. @@NO. 161 PART NO. DESCRIPTION REF.

NO. 669 676 676A 676B 677 686 PART NO. 691194 397931 393760 393756 690661 DESCRIPTION 677 REF.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 93212 user guide](http://yourpdfguides.com/dref/3639927)
<http://yourpdfguides.com/dref/3639927>

NO. @@No.

358. D Included in Carburetor Overhaul KitRef. No. 121. Included in Valve Overhaul Gasket SetRef.

No. 1095. 10058 Assemblies include all parts shown in frames. @@NO. 55 58 60 65 73 PART NO. DESCRIPTION REF. NO. 144 304 305 332 455 456
PART NO. DESCRIPTION REF. NO.

459 592 597 608 689A 1046 PART NO. DESCRIPTION 692144 Rewind Starter Housing 280399 Starter Rope 691915 Starter Rope Grip 690837 Screw
(Rewind Starter) 691235 Rotating Screen 499901 Pulley/Spring Assembly 692622 Blower Housing 692198 Screw (Blower Housing) 690662 Nut (Flywheel)
691236 Flywheel Cup 692299 Pawl Frictio.



[You're reading an excerpt. Click here to read official BRIGGS &
STRATTON 93212 user guide
http://yourpdfguides.com/dref/3639927](http://yourpdfguides.com/dref/3639927)