



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 93400 TO 93499. You'll find the answers to all your questions on the BRIGGS & STRATTON 93400 TO 93499 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 93400 TO 93499
User guide BRIGGS & STRATTON 93400 TO 93499
Operating instructions BRIGGS & STRATTON 93400 TO 93499
Instructions for use BRIGGS & STRATTON 93400 TO 93499
Instruction manual BRIGGS & STRATTON 93400 TO 93499



FORM MS-0023-08/07/2008
REPLACES FORM MS-0023-06/06/2008
FILE IN SECT. 2 OF SERVICE MANUAL
93400

Illustrated Parts List Model Series 93400

TYPE NUMBERS
0010 through 1286.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	2
Cylinder	2
Cylinder Head	2
Exhaust System	6
Flywheel	7
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	2
Gear Reduction	9
Governor Spring	5
Ignition	5
Lubrication	3
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	7
Rewind Starter/Blower Housing	8
Warning Label	2



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 93400 TO 93499 user guide](http://yourpdfguides.com/dref/3639860)
<http://yourpdfguides.com/dref/3639860>

Manual abstract:

2 OF SERVICE MANUAL 93400 Illustrated Parts List Model Series 93400 TYPE NUMBERS 0010 through 1286. TABLE OF CONTENTS Air Cleaner

.
.
.
. 6 Blower Housing/Shrouds
. 7 Camshaft
.
.
. 2 Carburetor
.
.
. 4 Controls
.
. 5 Crankcase Cover/Sump
.
. 3 Crankshaft
.
.
. 2 Cylinder
.
.
. 2 Cylinder Head
.
. 2 Exhaust System
.
.
. 6 Flywheel
.
.
. 7 Fuel Supply
.
.
. 4 Gasket Set - Engine
.
. 2 Gasket Set - Valve
.
.
. 2 Gear Reduction
.
. 9 Governor Spring
.
. 5 Ignition
.
.
. 5 Lubrication

.....
.....
.....
3 Operator's Manual

..... 2 Piston/Rings/Connecting Rod ..

.....
. 2 Rewind Starter

..... 7 Rewind Starter/Blower Housing ..

..... 8 Warning Label .
.....
.....

..... 2 PRINTED IN U.S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved.

No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 93400 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 1319 WARNING LABEL 358 ENGINE GASKET SET 3 12 REQUIRED when replacing parts with warning labels affixed. 51 33 34 7 51A 20 9A 20A 163 40 36 45 40 35 45 1095 VALVE GASKET SET 308 7 51 5 9A 163 13 14 8 10 9 1 868 7 870 871 869 306 307 529 11 635 383 337 552 718 3 15 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0323-2 Assemblies include all parts shown in frames.

2 08/07/2008 93400 847 523A 842 525 287 29 524 847A 523 525A 842 287 441 32 741 2 3 441 28 27 27 26 46 25 30 Timing Mark is an Oval 741A 16 741 598 718A 524 16A 18 20 21 24 357 17 Timing Mark is a Circle 718A 741A 20 21 219 12 415 1194 22 220 18A 20 21 18B 415 21 1194 21 21 12 415 1194 12 20B 20A Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0323-3 Assemblies include all parts shown in frames. 3 08/07/2008 93400 121 CARBURETOR OVERHAUL KIT 94 134 125 104 127 127A 137 276 109 633 54 692 633A 108 51 98 127A 977 CARBURETOR GASKET SET 633 276 633A 958 601A 674 240 182 360 190 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

0323-4 A A A A 137 127 134 130 94 133 104 50 975 137 276 117 276 118 276 972 957 187 601 Assemblies include all parts shown in frames. 4 A A A A A A A A A A 633A 633 97 186 51A 95 365 187A 601 08/07/2008 93400 211 202 209 232 227 222 427 562 98A 505 614 404 616 188 268 269 271 270 265 267 333 24 356 356A 1054 851 635 334 356B 356C 356D 356E Illustrations cover a range of engines. @ @ @ @ @ @ @ @ Parts shown without corresponding text may not be used on your specific engine. 0323-7 Assemblies include all parts shown in frames. 7 08/07/2008 93400 770 304 73 455 1046 332 930 770B 608A 456 689 592 65 1210 459 597 678 56 1211 58A 55 57 60 58A 770A 73 304A 455 332 FOR REPLACEMENT REWIND STARTER, ORDER REFERENCE 770A 597 456 689 592 65 1210 459 608A 1211 58A 55 60 305 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0323-8 Assemblies include all parts shown in frames. 8 08/07/2008 93400 79A 127B 82A 3 80A BEFORE DATE CODE: 06032300 84A 86A 85A 87A 88A 83A 15A 80 79 AFTER DATE CODE: 06032200 17A 86 84 88 3 83 415A 415A 87 15B 85 82 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0323-9 Assemblies include all parts shown in frames.

9 08/07/2008 93400 REF. NO. 1 PART NO. DESCRIPTION REF. NO. 13 14 15 15A 15B PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION
793151 Crankshaft Used On Type No(s).

1254. 793155 Crankshaft Used on Type No(s). 1039, 1236, 1253, 1274. 792226 Crankshaft Used on Type No(s). 1037.

792229 Crankshaft Used on Type No(s). 0160, 0192. 792229 Crankshaft (Used After Code Date 05110800). Used on Type No(s). 1036, 1201, 1240, 1281, 1286.

792228 Crankshaft (Used After Code Date 05110800). Used on Type No(s). 1035, 1280. 792227 Crankshaft (Used After Code Date 05110800). Used on Type No(s). 1038, 1282. 792884 Crankshaft (Used After Code Date 06032300). Used on Type No(s). 1049, 1241, 1283 791360 Cylinder Assembly (Used After Code Date 99103100). ----- Note ----- 496864 Cylinder Assembly (Used Before Code Date 99110100).

399269 Kit-Bushing/Seal (Magneto Side) K299819S Seal-Oil (Magneto Side) 690384 Head-Cylinder ----- Note ----- 790169 Head-Cylinder Used On Type No(s). 0136, 0636, 1236. K698717 Gasket-Cylinder Head 791779 Breather Assembly (Used After Code Date 05102400). ----- Note ----- 699448 Breather Assembly (Used Before Code Date 05102500). 695890 Gasket-Breather (Used After Code Date 03031900). K27549S Gasket-Breather (Used Before Code Date 03032000). 691666 Screw (Breather Assembly) 691246 Tube-Breather K692218 Gasket-Crankcase (.015" Thick) (Standard) ----- Note ----- K270895 Gasket- Crankcase (.005" Thick) K270896 Gasket- Crankcase (.009" Thick) 691640 Screw (Cylinder Head) 690361 Stud (Cylinder Head) 691686 Plug-Oil Drain 691682 Plug-Oil Drain (Gear Cover) 792750 Plug-Oil Drain (Gear Cover) (Used After Code Date 06032200).

492086 Crankshaft Used On Type No(s). 0060, 0360, 1060. ----- Note ----- 492880 Crankshaft Used on Type No(s). 0015, 0315. 793152 Crankshaft Used on Type No(s).

1015. 493599 Crankshaft Used on Type No(s). 0024, 0049, 0141, 0168, 0349. 791422 Crankshaft (Used Before Code Date 06032400). Used on Type No(s). 1049, 1241, 1242, 1277, 1283. 493632 Crankshaft Used on Type No(s). 0011, 0150, 0169, 0172, 0669. 793154 Crankshaft Used on Type No(s). 1269, 1278. 690821 Crankshaft Used On Type No(s). 0036, 0137, 0140, 0145, 0336. 2 3 5 16 7 8 9 9A 10 11 12 K Engine Gasket Set-Reference 358. @ @ @ @ Parts shown without corresponding text may not be used on your specific engine. 0323-10 Assemblies include all parts shown in frames.

10 08/07/2008 93400 REF. NO. 16A PART NO. DESCRIPTION REF. NO. 18 PART NO. DESCRIPTION REF. NO. 22 PART NO. DESCRIPTION 399006 Crankshaft (Ball Bearing) ----- Note ----- 492095 Crankshaft (Ball Bearing) Used on Type No(s).

[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 93400 TO 93499 user guide](#)



<http://yourpdfguides.com/dref/3639860>

0035, 0149, 0335. 791418 Crankshaft (Ball Bearing) (Used Before Code Date 05110900). Used on Type No(s). 1035, 1280. 791421 Crankshaft (Ball Bearing) Used on Type No(s).

0160, 0192, 1036, 1201, 1240, 1281, 1286. 690836 Crankshaft (Ball Bearing) Used On Type No(s). 0041, 0158, 1258. 497232 Crankshaft (Ball Bearing) Used on Type No(s). 0037, 0144, 0154, 0337, 0654.

791417 Crankshaft (Ball Bearing) (Used Before Code Date 05110900). Used on Type No(s). 1037. 791456 Crankshaft (Ball Bearing) (Used Before Code Date 05110900). Used On Type No(s). 1038, 1257, 1282. 690824 Bearing-Ball 99158 Bearing-Ball (Gear Reduction Case) (Used After Code Date 06032200). 792232 Cover-Crankcase (Used After Code Date 05110800). ----- Note ----- 497502 Cover- Crankcase (Used Before Code Date 05110900). 496679 Cover-Crankcase Used on Type No(s).

0024, 0040, 0049, 0141, 0150, 0168, 0169, 0172, 0349, 0669, 1049, 1241, 1242, 1269, 1277. ----- Note ----- 496788 Cover- Crankcase Used On Type No(s). 0011, 0015, 0039, 0060, 0154, 0315, 0339, 0360, 0654, 1015, 1039, 1060, 1254, 1278. 496903 Cover-Crankcase Used on Type No(s). 0136, 0139, 0153, 0174, 0636, 1236, 1253, 1274. @@@@ 795695 Flywheel (Used After Code Date 08012900). ----- Note ----- 690843 Flywheel (Used Before Code Date 08013000). 795549 Flywheel Used On Type No(s). 0136, 0636, 1236. 699573 Flywheel Used On Type No(s). @@@@ 11 08/07/2008 93400 REF. NO. PART NO. DESCRIPTION REF. NO. PART NO.

@@@@ 496869 Piston Assembly (Standard) (Used Before Code Date 96012900). @@@@ 795690 Ring Set (Standard) (Used After Code Date 08021200). ----- Note ----- 795132 Ring Set (Standard) (Used After Code Date 07072900 and Before Code Date 08021300). 790909 Ring Set (Standard) (Used After Code Date 05051800 and Before Code Date 07073000).n (High Altitude) (Used Before Code Date 96032500). 498260 Kit-Carburetor Overhaul 496863 Carburetor 88A 94 83 95 97 98 98A 104 108 83A 84 84A 85 109 117 85A 86 118 86A 87 87A 121 125 K Engine Gasket Set-Reference 358. @@@@ Parts shown without corresponding text may not be used on your specific engine. 0323-13 Assemblies include all parts shown in frames. 13 08/07/2008 93400 REF. NO.

127 PART NO. DESCRIPTION REF. NO. 211 219 220 222 PART NO. DESCRIPTION REF. NO. 300 301 304 304A 305 306 307 308 332 333 334 PART NO. 692365 690526 692622 694144 692198 690461 691660 690462 690662 793281 691061 DESCRIPTION Muffler Pipe-Exhaust Housing-Blower Housing-Blower Screw (Blower Housing) Shield-Cylinder Screw (Cylinder Shield) Cover-Cylinder Nut (Flywheel) Armature-Magneto Screw (Magneto Armature) Plug-Spark ----- Note ----- 802592S Plug-Spark Used On Type No(s). 0136, 0636, 1236. Switch-Rocker Wire-Stop Wire-Stop Wire-Stop Wire-Stop Wire-Stop Wire-Stop Key-Drive Pulley Used on Type No(s).

0140, 1240. Gasket Set-Engine Nut (Fuel Tank Bracket) Puller-Flywheel Screw (Carburetor) Wrench-Spark Plug Washer (Governor Crank) Plug (For High Oil Fill Hole) Plug (Gear Cover) (Used After Code Date 06032200). Screw (Air Cleaner Cover) Nut (Control Bracket) Bracket-Oil Fill Filter-Air Cleaner Cartridge Cup-Flywheel Plate-Pawl Friction Pawl-Ratchet D691739 Plug-Welch (5/16" Diameter) 127A D694468 Plug-Welch (3/8" Diameter) 127B 691585 Plug-Welch (Gear Reduction Case) 130 691181 Valve-Throttle 133 398187 Float-Carburetor 134 D398188 Kit-Needle/Seat 137 Dz693981 Gasket-Float Bowl 161 691393 Base-Air Cleaner 163KDz272948SGasket-Air Cleaner 182 690485 Bracket-Fuel Tank 186 692317 Connector-Hose 187 791745 Line-Fuel (Cut to Required Length) 187A 791857 Line-Fuel (Molded) 188 691637 Screw (Control Bracket) 190 692199 Screw (Fuel Tank) 202 692351 Link-Mechanical Governor 209 691857 Spring-Governor (No Color) Used on Type No(s). 0011, 0015, 0024, 0035, 0036, 0037, 0041, 0049, 0060, 0140, 0141, 0145, 0149, 0154, 0158, 0160, 0168, 0192, 0315, 0335, 0336, 0337, 0349, 0360, 1015, 1035, 1036, 1037, 1049, 1060, 1240, 1241, 1242, 1254, 1258, 1277, 1278, 1280, 1281, 1283, 1286. ----- Note ----- 691858 Spring- Governor (Yellow) Used On Type No(s).

0010, 0038, 0039, 0040, 0136, 0139, 0150, 0152, 0153, 0155, 0157, 0169, 0172, 0174, 0338, 0339, 0636, 0669, 1038, 1039, 1236, 1253, 1257, 1269, 1274, 1282. K Engine Gasket Set-Reference 358. D Carburetor Overhaul Kit-Reference 121. 691849 Spring-Governed Idle 496786 Gear-Governor 691724 Washer (Governor Gear) 691411 Bracket-Control (Used After Code Date 94111300). ----- Note ----- 495762 Bracket- Control (Used Before Code Date 94111400). 691412 Lever-Governor Control (Used After Code Date 94111400). ----- Note ----- 496000 Lever- Governor Control (Used Before Code Date 94111500). 691846 Spring-Governor Link 298090S Fuel Filter 691024 Clamp-Casing 692577 Screw (Casing Clamp) (Used After Code Date 03092600). ----- Note ----- 690804 Screw (Casing Clamp) (Used Before Code Date 03092700). 691025 Casing-Control Wire (Cut to Required Length) 691026 Wire-Control (Cut to Required Length) 691027 Nut (Control Wire Casing) 691028 Lever-Control Dz271716 Washer-Sealing 695733 Screw (Dipstick Tube) (7/16" Long) (Used After Code Date 03092600). @@@@ 14 08/07/2008 93400 REF. NO. 505 523 523A 524 525 525A 529 529A 552 562 592 597 598 PART NO. DESCRIPTION REF. NO.

635 643 674 676 678 689 692 718 718A 741 741A 770 770A PART NO. DESCRIPTION REF. NO. PART NO. @ 791850 Clamp-Hose 691038 Clamp-Hose (Black) 499706 Starter-Rewind (88 5/8" Rope) 690101 Starter-Rewind (70" Rope) 690810 Screw (Muffler) 691620 Pin-Cotter 692016 Crank-Governor Dz691321 Seal-Choke/Throttle Shaft (Throttle) Dz693867 Seal-Choke/Throttle Shaft (Choke) 66538S Boot-Spark Plug 691908 Retainer-Air Filter 691108 Screw (Fuel Tank Bracket) 692010 Deflector-Muffler 490817 Spacer-Rewind 691855 Spring-Friction 690572 Spring-Detent 690959 Pin-Locating (Cylinder) 499047 Pin-Locating (Crankshaft) 791124 Gear-Timing (Timing Mark is an Oval{0}) 691805 Gear-Timing (Timing Mark is a Circle {O}) 690098 Kit-Rewind/Blower Housing 690102 Kit-Rewind/Blower Housing Used On Type No(s). 0136, 0139, 0153, 0636. Kit-Rewind/Blower Housing (For Replacement Rewind Starter, Order Reference 770A) 692368 Guard-Muffler 691693 Screw (Muffler Guard) (3/8" Long) 691685 Screw (Muffler Guard) (2/3" Long) K691870 Seal-O Ring (Dipstick Tube) 690848 Dipstick/Tube Assembly 694532 Dipstick/Tube Assembly 851 493880S Terminal-Spark Plug 868 697338 Seal-Valve 869 691701 Seat-Valve (Intake) 870 691702 Seat-Valve (Exhaust) 871 262001 Bushing-Valve Guide 883 K691880 Gasket-Exhaust 930 691348 Guard-Rewind 930A 691330 Guard-Rewind 930B 690601 Guard-Rewind 957 493988S Cap-Fuel Tank 958 698181 Valve-Fuel Shut Off 967 492889 Filter-Pre Cleaner 968 691327 Cover-Air Cleaner 971 690370 Screw (Air Cleaner Base to Carburetor) 972 690852 Tank-Fuel 975 493640 Bowl-Float 977 498261 Gasket Set-Carburetor 994 690813 Arrestor-Spark 1036 Label-Emissions (Available From A Briggs & Stratton Authorized Dealer) 1046 691337 Plug-Blower Housing 1054 280275 Tie-Cable 1058 277098 Operator's Manual 1095 498525 Gasket Set-Valve 1194 K691876 Seal-O Ring (Plug) 1210 499901 Pulley/Spring Assembly (Pulley) 1211 499901 Pulley/Spring Assembly (Spring) 1319 794467 Label-Warning 1330 270962 Repair Manual 601 601A 608 608A 613 614 616 633 633A 770B 832 836 836A 842 847 847A K Engine Gasket Set-Reference 358.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 93400 TO 93499 user guide](http://yourpdfguides.com/dref/3639860)
<http://yourpdfguides.com/dref/3639860>