



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 93902. You'll find the answers to all your questions on the BRIGGS & STRATTON 93902 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 93902
User guide BRIGGS & STRATTON 93902
Operating instructions BRIGGS & STRATTON 93902
Instructions for use BRIGGS & STRATTON 93902
Instruction manual BRIGGS & STRATTON 93902

FORM MS2287-1/93
REPLACES FORM MS2287-4/92
FILE IN SECT. 7 OF SERVICE MANUAL
93900 to 93999

Illustrated Parts List
Model Series
93900 to 93999

Non-Compliance	Compliance
-----------------------	-------------------

TYPE NUMBERS
0801, 0811, 0812.

TYPE NUMBERS
3801, 3810, 3811,
3812, 3813, 3815.

TO FIND
THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW

- Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHTS



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 93902 user guide](http://yourpdfguides.com/dref/3639733)
<http://yourpdfguides.com/dref/3639733>

Manual abstract:

2 OF SERVICE MANUAL 93900 to 93999 Illustrated Parts List Model Series 93900 to 93999 NonCompliance TYPE NUMBERS 0601, 0611, 0612. Compliance TYPE NUMBERS 3601, 3610, 3611, 3612, 3613, 3615. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. @@@@The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."

"If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note." If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply. B.

C. D. E. F. PRINTED IN U.

S.A. COPYRIGHT 93900 to 93999 305 335 37 200 940 729 625 52 13 21 8 635 337 5 358 GASKET SET 1019 LABEL KIT REF. NO. 1 2 3 5 PART NO. 399164 293708 K299819 211479 Note: DESCRIPTION Cylinder Assembly BushingCylinder SealOil HeadCylinder 213942 HeadCylinder Used on Engines With Muffler Guard. GasketCylinder Head BreatherValve Chamber GasketValve Cover ScrewSem TubeBreather ScrewCylinder Head (115/16" Long) Plug-Oil Filler REF. NO. 37 52 54 200 305 PART NO. 11 54 2 3 3 1 383 869 7 870 871 DESCRIPTION 9 10 524 REQUIRES SPECIAL TOOLS TO INSTALL.

SEE REPAIR INSTRUCTION MANUAL. REF. NO. 383 524 625 635 729 869 870 871 PART NO. 89838 K271485 298775 66538 280470 211172 211291 231348 Note: DESCRIPTION 7 8 9 10 11 13 21 K272170 298383 K270239 93394 231774 93111 280485 335 337 358 223150 GuardFlywheel K270345 GasketIntake Elbow 93485 ScrewIntake Elbow Mounting 281024 BladeGovernor 94153 ScrewBlower Housing Mounting Sem 93435 ScrewArmature and Governor Blade Mounting Sem 492167 PlugSpark (17/8" High, 48 mm.) Note: 802592 PlugSpark (Resistor Type) (17/8" High, 48 mm.) 298989 Gasket Set 940 1019 WrenchSpark Plug SealFiller Tube TubeFuel Intake ElbowSpark Plug ClipWire SeatIntake Valve SeatExhaust Valve GuideExhaust Valve 63709 GuideIntake Valve 222403 GuardFlywheel 491082 Label Kit K Included in Gasket SetPart No. 298989. 23872 Assemblies include all parts shown in frames. 2 122 93900 to 93999 25 26 27 24 851 16 45 741 27 28 35 40 34 35 40 33 67 23 76 71 70 68 66 363 75 356 334 29 32 333 REF.

NO. 16 23 PART NO. DESCRIPTION Crankshaft See Last Pages. FlywheelMagneto 394066 Flywheel Magneto Used on Type No. 0612.

KeyFlywheel Piston Assy. (Standard) Piston Assy. (.010" O.S.

) Piston Assy. (.020" O.S.) Piston Assy. @@@NO. PART NO. DESCRIPTION REF. NO. @@@296079.

@@@@@NO. 20 22 46 47 PART NO. K391483 93032 491675 491688 REF. NO. 12 PART NO. DESCRIPTION REF. NO. @@@@@@@@@@NO. 96 105 125 131 163 180 181 187 188 PART NO. DESCRIPTION REF.

NO. 190 191 201 209 PART NO. 93440 272372 262753 262757 Note: DESCRIPTION REF. NO. 390 393 394 529 617 634 670 PART NO.

@@@@@Used on Type Nos. 0601, 0611, 0612, 3601, 3611, 3612, 3613, 3615. 262760 SpringGov. Used on Type No. 3610.

@@@@@NO. 81 300 300A 346 PART NO. DESCRIPTION REF. NO. 346A 534 535 536 613 PART NO. 93705 93865 272235 493492 93935 DESCRIPTION ScrewHex. Hd. @REF. NO. 643 832 832A 988 PART NO.

280972 494896 493967 223600 DESCRIPTION CupAir Cleaner GuardMuffler GuardMuffler BracketMuffler 223256 LockMuffler Screw 394644 Muffler-Exhaust 394569 MufflerExhaust (Lo-Tone) 94602 ScrewHex. Washer Head 23876 Assemblies include all parts shown in frames. 6 122 93900 to 93999 482 620 941 621 934 923 933 305 228 271 269 268 270 620A 305 942 258 621 922 REF. NO. 228 258 268 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION Needed, Order No. 26099 and Cut to Required Length.

LocknutControl Wire Casing Lever Assembly Control ScrewBlower Housing Mounting Sem ScrewSem PlateCarburetor Control 494630 PlateCarb. Control Used on Type Nos. 3601, 3610, 3612. REF. NO.

620A PART NO. DESCRIPTION 269 93758 ScrewHex. Head 94018 ScrewSem (Bracket to Cylinder) 66986 CasingControl Wire (48" Long) Note: If Longer Casing is Needed, Specify Length in Inches; if a Shorter Casing is Needed Order No. 66986 and Cut to Required Length. 26099 Wire Control (54" Long) Note: If Longer Wire is Needed, Specify Length in Inches; if a Shorter Wire is 270 271 305 63426 290568 94153 482 620 93621 494629 Note: 621 922 923 933 934 941 942 494631 PlateCarb.

Control (Used After Code Date 91051200). Note: 494261 PlateCarb. Control (Used Before Code Date 91051300). 396847 SwitchStop 261647 SpringBand Brake 394867 Brake AssemblyBand 223448 PivotBand Brake 94037 ScrewBand Brake Pivot 280395 CoverLinkage 493248 Bracket Assy. and Lever 23877 Assemblies include all parts shown in frames. 7 122 93900 to 93999 60 58 608 949 265A 74 267 267 265 305 57 73 56 REF. NO. 56 57 58 PART NO. DESCRIPTION REF. NO.

265A 267 305 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION 60 73 74 265 280439 PulleyRewind Starter 490179 SpringRewind Starter 280406 RopeRewind Starter (81" Long) (For Intermediate Lengths, Cut to Required Size). Note: If Longer Rope is Needed, Order No. 280399 and Cut to Required Length. 393152 GripStarter Rope 221661 ScreenRewind Starter 93758 ScrewSem 22372 ClampCasing 608 213146 ClampCasing 93469 Screw-Clamp Mtg. @@@0612. 494236 Starter Assy.

Rewind (6 o'clock) Used on Type Nos. @@@3612, 3615. 494456 Starter Assy. Rewind (8 o'clock) Used on Type No. 3610.

281192 GuardRewind Starter (Used After Code Date 91080400). @@@8 122 93900 to 93999 REF. NO. 16 PART NO. DESCRIPTION REF.

NO. PART NO. DESCRIPTION 3612, 3613. 492748 Crankshaft Used on Type Nos. 0601, 0611, 3601. 494564 Crankshaft (Used After Code Date 91063000). REF. NO. PART NO. DESCRIPTION 493846 Crankshaft (Used Before Code Date 91070100).

Used on Type No. 3615. 397218 Crankshaft Note: To Replace Crankshaft Gear Pin, Order Part No. 230978. 492086 Crankshaft Used on Type Nos.



You're reading an excerpt. Click here to read official BRIGGS & STRATTON 93902 user guide
<http://yourpdfguides.com/dref/3639733>