




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 95900. You'll find the answers to all your questions on the BRIGGS & STRATTON 95900 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 95900
User guide BRIGGS & STRATTON 95900
Operating instructions BRIGGS & STRATTON 95900
Instructions for use BRIGGS & STRATTON 95900
Instruction manual BRIGGS & STRATTON 95900

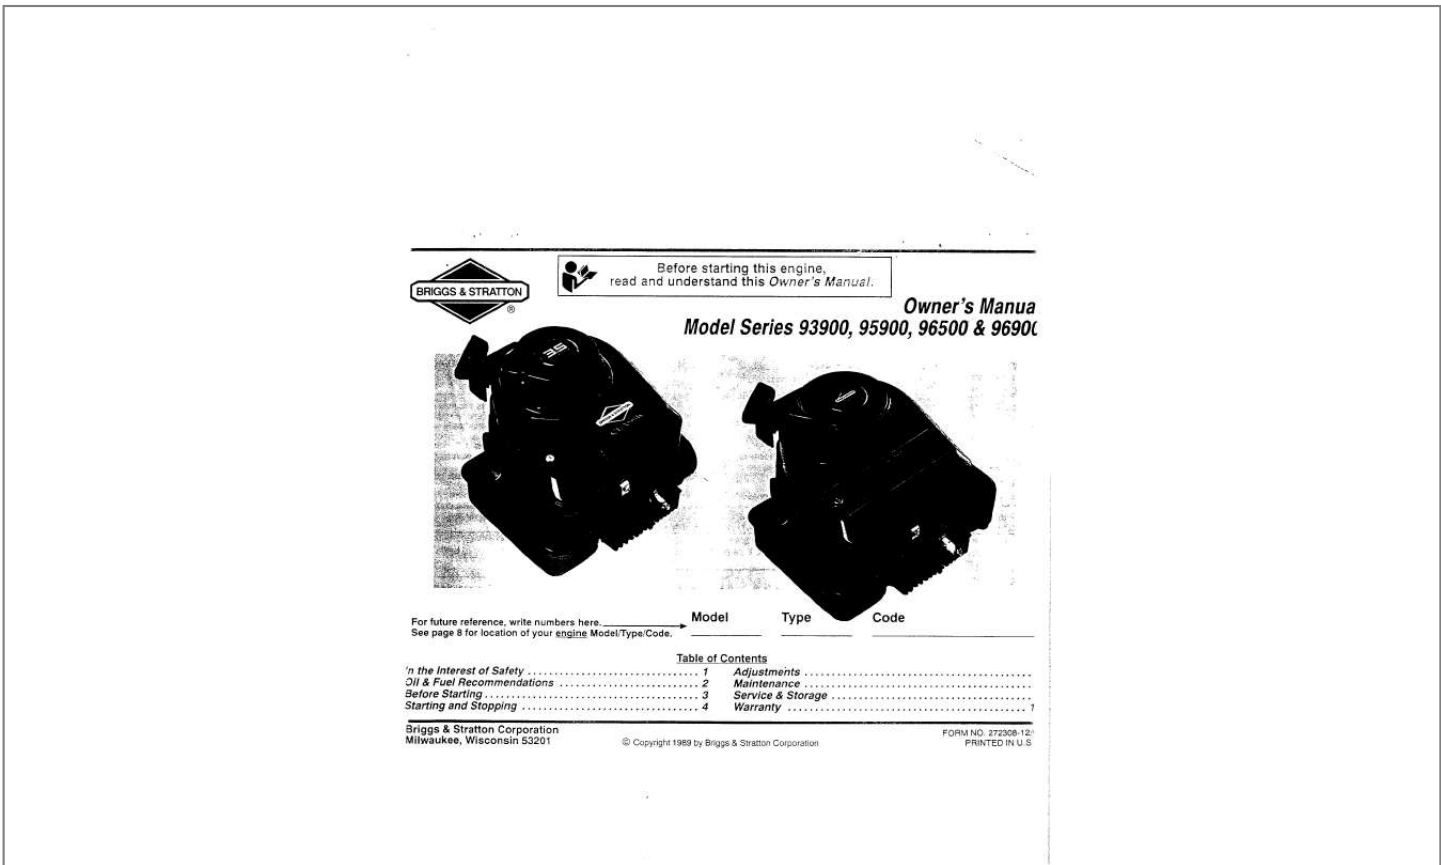

[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 95900 user guide](http://yourpdfguides.com/dref/3961852)
<http://yourpdfguides.com/dref/3961852>

Manual abstract:

@@A signal word (DANGER, WARNING, or CAUTION) is used with the alert symbol to indicate the likelihood and the potential severity of injury.

@@@@@For electric start, remove negative wire from battery. Do not check for spark with spark plug removed. Use Briggs & Stratton spark tester #19368. Failure to select the correct engine could result in fire or explosion. · Some engines are unique and designed for specific applications or types of equipment. If this engine will be used to build new equipment, contact Briggs & Stratton to ensure that the engine is appropriate for the intended use.

@@@@@@@Use only Briggs & Stratton parts. Contact your Authorized Service Dealer for assistance. @@Any such modification is at the owner's sole risk.

@@All components must be in good condition. ENGINE OPERATION WARNING When adding fuel: Turn engine off and let engine cool at least 2 minutes before removing gas cap. Fill fuel tank outdoors or in well-ventilated area. Fill tank to about 1 inch below lowest portion of neck to allow for fuel expansion.

@@@Replacement parts must be the same model as the original.

@@Wait until spilled fuel is evaporated. Start engine outdoors. Pull cord slowly until resistance is felt, then pull rapidly. @@Run engine outdoors. Do not run in enclosed area, even if doors or windows are open.

Do not choke carburetor to stop engine. FORM MS -6445 -01/03 [7] Set engine speed to equipment manufacturer's specification. Refer to equipment manufacturer's manual. .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 95900 user guide](http://yourpdfguides.com/dref/3961852)
<http://yourpdfguides.com/dref/3961852>