



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 95902. You'll find the answers to all your questions on the BRIGGS & STRATTON 95902 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 95902
User guide BRIGGS & STRATTON 95902
Operating instructions BRIGGS & STRATTON 95902
Instructions for use BRIGGS & STRATTON 95902
Instruction manual BRIGGS & STRATTON 95902

FORM MS-243-897
REPLACES FORM MS-243-387
FIELD SERVICE MANUAL
95900 to 95999

Illustrated Parts List Model Series 95900 to 95999

TYPE NUMBERS
0100, 0101, 0102,
0105 through 0115,
0117 through 0126,
0128 through 0139,
0206, 0207, 0210,
0215 through 0229,

TYPE NUMBERS
3101 through 3126,
3128 through 3133,
3135 through 3177,
3180 through 3185,
3187, 3210, 3211,
3233, 5500, 5510,
5512 through 5516,
5530, 5531, 5532.

TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- Refer to the illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.



PRINTED IN U.S.A.
COPYRIGHT BY BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 95902 user guide](http://yourpdfguides.com/dref/3640248)
<http://yourpdfguides.com/dref/3640248>

Manual abstract:

2 OF SERVICE MANUAL 95900 to 95999 Illustrated Parts List Model Series 95900 to 95999 TYPE NUMBERS 0100, 0101, 0102, 0106 through 0115, 0117 through 0126, 0128 through 0139, 0206, 0207, 0210, 0215 through 0229, TYPE NUMBERS 3101 through 3126, 3128 through 3133, 3135 through 3177, 3180 through 3185, 3187, 3210, 3211, 3233, 5500, 5510, 5512 through 5518, 5530, 5531, 5532. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. @@@@COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved.

@@@SEE REPAIR INSTRUCTION MANUAL. REF. NO. 1 2 3 5 PART NO. @@@NO.

11 13 51 54 116 116A 200 284 335 337 PART NO. 231774 93111 K270345 93485 270920 K271485 281024 94073 94732 802592 DESCRIPTION Tube-Breather ScrewHex. GasketIntake ScrewHex. SealO Ring SealO Ring BladeGovernor ScrewShoulder ScrewHex. @@@NO. 625 635 847 869 870 871 PART NO. @@@GasketCylinder Head Note K272536 Gasket Cylinder Head (Used Before Code Date 96080100). Breather Assembly GasketBreather ScrewHex. 383 523 523A 525 89838 281081 497968 280578 1019 1058 298775 ManifoldIntake 66538 BootSpark Plug 497969 Dipstick/Tube Assembly 211172 Seat-Valve (Intake) 211291 SeatValve (Exhaust) 231348 BushingGuide (Exhaust) Note 63709 BushingGuide (Intake) 496757 Label Kit 272308 Owner's Manual K Included in Gasket SetPart No. 298989.

Included in Valve Overhaul Gasket SetPart No. 498528. 24132 Assemblies include all parts shown in frames. 2 87 95900 to 95999 29 28 34 35 40 45 32 27 25 26 33 35 40 27 REF. NO. 25 PART NO. DESCRIPTION REF. NO. 26 PART NO. DESCRIPTION REF.

NO. 27 28 PART NO. DESCRIPTION 498668 Piston Assembly (Standard) 298904 Piston Assy. (Standard) (Used Before Code Date 96020600). Note 498669 Piston Assy.

(.010" O.S.) 298905 Piston Assy. (.

010" O.S.) (Used Before Code Date 96020600). 498670 Piston Assy. (.020" O.S.) 298906 Piston Assy. (.020" O.

S.) (Used Before Code Date 96020600). 498671 Piston Assy. (.030" O.S.) 298907 Piston Assy. (.030" O.S.

)(Used Before Code Date 96020600). 498680 Ring Set (Standard) 298982 Ring Set (Standard) (Used Before Code Date 96020600).

@@@@@@@@@298989. Included in Valve Overhaul Gasket SetPart No. @@@3 87 95900 to 95999 24 16 741 718 377 REF.

NO. 16 PART NO. DESCRIPTION REF. NO. PART NO.

DESCRIPTION 493618 Crankshaft Used on Type No(s). 3128, 3130. 494564 Crankshaft Used on Type No(s). @@@496069 Crankshaft Used on Type No(s). 3148, 3152, 3153, 3154. REF. NO. @@@0102, 0106, 0109, 0118, 0135, 0136, 0206, 0210, 0215, 0216, 0217, 0218, 0219, 0220, 0221, 0222, 0225, 0226, 0228, 3102, 3117, 3119, 3123, 3132, 3133, 3137, 3139, 3151, 3168, 3177, 3182, 3183, 3185, 3187, 3233, 5512, 5517, 5518, 5532. 718 741 222698 KeyFlywheel 93065 KeyWoodruff Used on Type No(s). 0112, 0113.

499047 PinLocating 261533 GearTiming K Included in Gasket SetPart No. 298989. Included in Valve Overhaul Gasket SetPart No. 498528. 24134 Assemblies include all parts shown in frames. 4 87 95900 to 95999 REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. 220 46 46A 47 19 19 220 4 12 4A 12 721 720 743 20 15 22 REF. NO. 4 4A 10 PART NO.

REF. NO. 22 22A 20A 88 22A 784 DESCRIPTION PART NO. DESCRIPTION 22 83 20A 10 REF. NO.

88 220 720 721 743 PART NO. K270328 68938 93474 221779 231278 DESCRIPTION 12 15 19 20 20A 395384 SumpEngine 395390 SumpEngine 94658 ScrewHex. Note 94621 ScrewHex. (Used Before Code Date 96112000). K270833 GasketCrankcase (.

015" Thick, Standard) K270895 Gasket Crankcase (.005" Thick) K270896 Gasket Crankcase (.009" Thick) 94720 PlugOil Drain 293709 Bushing K391483 SealOil 391484 SealOil Used on Type No(s). 0216, 3110, 3118, 3138, 3150, 3180, 3210, 5516. 46 46A 47 83 94682 ScrewHex. 93415 ScrewHex. One Used in Auxiliary Drive Gear Sump Used on Model Series 95980 to 95989. 491675 GearCam Note 493747 GearCam Used on Type No(s). 3152, 3153, 3154. 396197 GearCam (Clockwise) Note 395317 GearCam (Counterclockwise) Used on Type No(s).

0216, 3110, 3150, 3180, 3210, 5516. 491688 SlingerOil 230831 ShaftAux. Drive 784 GasketCover WasherThrust PinShaft StopShaft GearDrive (Clockwise) Note 231279 GearDrive (Counterclockwise) Used on Type No(s). 0216, 3110, 3150, 3180, 3210, 5516. 221780 CoverGear K Included in Gasket SetPart No. 298989. Included in Valve Overhaul Gasket SetPart No. @@@@NO. 96 125 PART NO. DESCRIPTION REF.

NO. 393 394 529 612 PART NO. @@@NO. 617 634 913 973 976 PART NO. @@@@298989.

Included in Valve Overhaul Gasket SetPart No. @@@@NO. 201 216 265 265A 267 268 PART NO. 262753 262461 22372 213146 94694 66986 268 REF. NO.

356A 620 PART NO. REF. NO. @@@@Used on Type No(s). @@@@494629 Bracket Control (Used Before Code Date 92062900). 494632 Bracket Control (Used Before Code Date 92062900). Used on Type No(s). @@@@494630 Bracket Control (Used Before Code Date 92062200). 494631 Bracket Control (Used Before Code Date 92062200). Used on Type No(s).

3119, 3126, 3131, 3132, 3135. 396847 SwitchStop K Included in Gasket SetPart No. 298989. Included in Valve Overhaul Gasket SetPart No. @@@7 87 95900 to 95999 209 REF. NO. 209 PART NO. DESCRIPTION REF.



You're reading an excerpt. Click here to read official BRIGGS & STRATTON 95902 user guide
<http://yourpdfguides.com/dref/3640248>

@@262759 SpringGov. (Used After Code Date 92080900).

Used on Type No(s). 3152. 262759 SpringGov. (Used After Code Date 93013100). Used on Type No(s).

3110. 262756 SpringGov. (Used Before Code Date 92081000). Used on Type No(s). 3152.

262756 SpringGov. (Used Before Code Date 93020100). Used on Type No(s). 3110. REF. NO. PART NO. DESCRIPTION 262762 SpringGov. (Used After Code Date 93013100). Used on Type No(s).

3148. 262760 SpringGov. (Used Before Code Date 93020100). Used on Type No(s). 3148. 262942 SpringGov. (Used After Code Date 93013100). Used on Type No(s). 0107, 0109, 0115, 0117, 0126, 0129, 0131. 262762 SpringGov.

(Used Before Code Date 93020100). Used on Type No(s). 0107, 0109, 0115, 0117, 0126, 0129, 0131. 262943 SpringGov. (Used After Code Date 93013100). Used on Type No(s). 0119, 3126, 3128. 262761 SpringGov. (Used Before Code Date 93020100). @@@@298989.

Included in Valve Overhaul Gasket SetPart No. @@@@NO. 37A 56 PART NO. REF. NO. @@@@Used on Type No(s). @@@@5500, 5510, 5517, 5518, 5530, 5531, 5532. @@@@497804 Starter Rewind 8 O' Clock Compliance Engines REF. NO. PART NO.

@@5500, 5510, 5512, 5515, 5516, 5517, 5518, 5530, 5532. @@@@494738 Starter Rewind 3 O'Clock Compliance Engines (Used Before Code Date 95072400). 497805 Starter Rewind 5 O'Clock Compliance Engines (Used After Code Date 95072300). Used on Type No(s). 0133, 0137, 0139, 0206, 0207, 0219, 0222, 3101, 3105, 3107, 3112, 3117, 1016 (Used After Code Date 95072300). 494456 Starter Rewind 8 O Clock Compliance Engines (Used Before Code Date 95072400). 497807 Starter Rewind 11 O' Clock Compliance Engines 494913 Starter Rewind 11 O' Clock Compliance Engines (Used Before Code Date 95072400). 497803 Starter Rewind 12 O' Clock Compliance Engines 494402 Starter Rewind (Used Before Code Date 95072400). @@Used on Type No(s). 5512, 5515.

@@Used on Type No(s). 5512, 5515. 490817 SpacerRewind K Included in Gasket SetPart No. 298989. Included in Valve Overhaul Gasket SetPart No. 498528. 241312 Assemblies include all parts shown in frames. 12 87 95900 to 95999 608A 60 37A 59 58 305 PART NO. DESCRIPTION 3 O' Clock Non Compliance Engines (Used After Code Date 95072300). Used on Type No(s).

0215, 0221. 497414 Starter Rewind 3 O' Clock Non Compliance Engines (Used Before Code Date 95072400). Used on Type No(s). 0215, 0221. 497791 Starter Rewind 4 O' Clock Non Compliance Engines Used on Type No(s). 0114. 497794 Starter Rewind 5 O' Clock Non Compliance Engines (Used After Code Date 95072300). Used on Type No(s). 0135, 0136, 0228. 495825 Starter Rewind 5 O' Clock Non Compliance Engines (Used Before Code Date 95072400).

Used on Type No(s). 0135, 0216, 0220. 497790 Starter Rewind 6 O' Clock Non Compliance Engines (Used After Code Date 95072300). REF. NO. PART NO. DESCRIPTION 56 57 1016 FOR NONCOMPLIANCE ENGINES REF. NO. 37A 56 PART NO. REF. NO. DESCRIPTION .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 95902 user guide](http://yourpdfguides.com/dref/3640248)
<http://yourpdfguides.com/dref/3640248>