



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 96902. You'll find the answers to all your questions on the BRIGGS & STRATTON 96902 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 96902**  
**User guide BRIGGS & STRATTON 96902**  
**Operating instructions BRIGGS & STRATTON 96902**  
**Instructions for use BRIGGS & STRATTON 96902**  
**Instruction manual BRIGGS & STRATTON 96902**

FORM MS-2414-1096  
REPLACES FORM MS-2414-856  
FILE IN SECT. FOR SERVICE MANUAL  
**96900 to 96999**

## Illustrated Parts List

### Model Series

### 96900 to 96999

TYPE NUMBER  
0101 through 0180,  
0213,  
3101 through 3180,  
4002, 4004, 4005,  
7000 through 7051.

#### TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- Refer to the illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT BY BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 96902 user guide](#)

<http://yourpdfguides.com/dref/3640249>

**Manual abstract:**

2 OF SERVICE MANUAL 96900 to 96999 Illustrated Parts List Model Series 96900 to 96999 TYPE NUMBER 0101 through 0160, 0213, 3101 through 3180, 4002, 4004, 4005, 7000 through 7051. TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number. @ @The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. @ @ @ @THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. @ @ @ @ @SEE REPAIR INSTRUCTION MANUAL. 635 523B 116 200 13 9 1019 LABEL KIT 337 REF. NO. 116 200 284 305 305A 335 337 1058 OWNER'S MANUAL PART NO. 270920 281024 94073 93485 94153 94732 802592 DESCRIPTION REF. NO. 523B 525 625 635 729 842 847 PART NO. 281081 280578 298775 66538 280470 K271485 10 DESCRIPTION Dipstick TubeOil Fill ManifoldIntake BootSpark Plug ClipWire SealO-Ring Dipstick/Tube Assembly See Last Pages. SeatValve (Intake) SeatValve (Exhaust) BushingGuide (Exhaust) Note 63709 BushingGuide (Intake) Label Kit Owner's Manual REF. NO. PART NO. DESCRIPTION 1 399164 2 293708 3 K299819 5 213942 7 K272536 8 495785 9 K272602 10 94621 11 231774 13 94960 37 37A 51 Cylinder Assembly Bushing SealOil HeadCylinder GasketCylinder Head BreatherAssembly GasketBreather ScrewHex. TubeBreather ScrewHex. (115/16" Long) 223150 GuardFlywheel 224819 GuardFlywheel (Used After Code Date 92110100). Note 222403 Guard Flywheel (Used Before Code Date 92110200). K270345 GasketIntake 383 523 523A SealORing BladeGovernor ScrewShoulder ScrewHex. ScrewHex. ScrewShoulder PlugSpark (Resistor Type) Note 492167 PlugSpark 89838 WrenchSpark Plug 497968 Dipstick (Used After Code Date 95101500). Note 497306 Dipstick (Used Before Code Date 95101600).

@ @298989. Included in Gasket SetValve OverhaulPart No. @ @ @ @NO. 16 23 PART NO. DESCRIPTION Crankshaft See Last Pages. @ @0110, 0111, 0114, 0123, 0129, 0155, 0156, 0157, 4002, 4004, 4005. KeyFlywheel Piston Assy. @ @NO. 29 PART NO. DESCRIPTION REF. NO. 76 333 334 356 PART NO. @ @ @ @494934 WireStop (Used Before Code Date 93080200). Used on Type No(s). 3135, 3154. FlywheelPuller KeyWoodruff ClipWire GearTiming TerminalCable 495046 24 25 26 27 28 222698 26026 298909 32 33 34 35 40 45 66 67 68 70 71 75 294201 RodConnecting Note 296079 RodConn. (.020" Undersize) 94699 ScrewHex. 296676 ValveExhaust 296677 ValveIntake 260552 SpringValve 93312 RetainerValve 230173 TappetValve 399671 ClutchStarter 394897 HousingClutch 63770 BallClutch 298799 RatchetClutch 394506 CoverRatchet 223047 Washer 363 377 729 741 851 19069 93065 280470 261533 493880 K Included in Gasket SetPart No. 298989. Included in Gasket SetValve OverhaulPart No. 498526. 24143 Assemblies include all parts shown in frames. 3 106 96900 to 96999 46 REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. 220 46A 47 20 19 20 19 220 8 12 4A 12 721 720 743 20 20 15 22A 10 22 88 784 22 83 20A REF. NO. 4 4A PART NO. DESCRIPTION REF. NO.

46 46A PART NO. DESCRIPTION REF. NO. 88 220 720 721 743 PART NO. K270328 68938 93474 221779 231278 DESCRIPTION 10 12 15 19 20 20A 22 22A 395384 SumpEngine 395390 SumpEngine Used on Model Series 96980 to 96989. 94621 ScrewHex. K270833 GasketCrankcase (.015" Thick, Standard) K270895 Gasket Crankcase (.005" Thick) K270896 Gasket Crankcase (.009" Thick) 94720 PlugOil Drain 293709 Bushing K391483 SealOil 391484 SealOil 94682 ScrewHex. 93415 ScrewHex. Used on Model Series 96980 to 96989. 47 83 493747 GearCam 396197 GearCam (Clockwise) Note 395317 GearCam (Counterclockwise) Used on Type No(s). @ @ @ @ @ @ @221780 CoverGear K Included in Gasket SetPart No. 298989. Included in Gasket SetValve OverhaulPart No. @ @ @ @NO. 13 96 125 PART NO. REF. NO. 181A 190 201 209 390 393 394 529 612 617 634 PART NO. REF. NO. @ @ @ @ @ @ @ @ @298989. Included in Gasket SetValve OverhaulPart No. @ @ @ @NO. 81 298 300 300A 346 346A PART NO. 346 REF. NO. 436 496 534 535 536 613 643 PART NO.

92989 223600 93865 272235 493492 93935 280972 346 REF. NO. 676 676A 676B 832 832A 994 PART NO. @ @94602 ScrewHex. K Included in Gasket SetPart No. 298989. Included in Gasket SetValve OverhaulPart No. @ @ @ @NO. 228 236 268 PART NO. 268 621 270 REF. NO. PART NO. @ @ @ @494630 Bracket Control (Used Before Code Date 92060800). Used on Type No(s). @ @REF. NO. 922 PART NO. DESCRIPTION DESCRIPTION 495486 Bracket Control (Used After Code Date 92060700). 494631 Bracket Control (Used Before Code Date 92060800). Used on Type No(s). 3126, 3135, 3144, 3148. 495485 Bracket Control (Used After Code Date 92070600). 494632 Bracket Control (Used Before Code Date 92070700). Used on Type No(s). 0111, 0113, 0114, 0213, 7015, 7016, 7018, 7050, 7051. SwitchStop SpringBrake Brake PivotBand Brake ScrewPhillips CoverLinkage Bracket-Brake 269 270 271 305 307 482 620 94018 ScrewHex. 262461 LinkLock-Out 66986 CasingWire (48" Long) Note If Longer Casing is Required, Specify Length in Inches; if Shorter Casing is Needed, Cut to Required Length. 26099 WireControl (54" Long) Note If Longer Wire is Needed, Specify Length in Inches; if Shorter Wire is Needed, Cut to Required Length. 63426 LocknutCasing 290568 LeverControl 94153 ScrewHex. 94515 ScrewHex. 93621 ScrewHex. @ @298989. Included in Gasket SetValve OverhaulPart No. @ @ @ @NO. 56 57 58 PART NO. 305 REF. NO. 60 73 74 265 265A 267 305 608 PART NO. 393152 221661 93758 22372 213146 94694 94153 REF. NO. @ @ClampCasing ClampCasing ScrewHex.



**[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 96902 user guide](http://yourpdfguides.com/dref/3640249)**  
<http://yourpdfguides.com/dref/3640249>

ScrewHex. @@(Used Before Code Date 96020600). 262760 SpringGovernor (Used After Code Date 93013100). 262759 SpringGov. (Used Before Code Date 93020100). @@(Used After Code Date 93013100). 262757 SpringGov. (Used Before Code Date 93020100). Used on Type No(s). @@298989. 241410 Assemblies include all parts shown in frames. 10 106 96900 to 96999 REF. NO. PART NO. DESCRIPTION Rewind Starters for Band Brake Engines (12 o'Clock) 497803 StarterRewind (Used After Code Date 95071300). 494402 Starter Rewind (Used Before Code Date 95071400). (3 o'Clock) 497806 Starter Rewind (Used After Code Date 95071300). 494738 Starter Rewind (Used Before Code Date 95071400). (5 o'Clock) 497805 Starter Rewind (Used After Code Date 95071300).

494495 Starter Rewind (Used Before Code Date 95071400). Note 497788 Starter Rewind (Used After Code Date 95071300). 493748 Starter Rewind (Used Before Code Date 95071400). Used on Type No(s). 0155. (6 o'Clock) 497802 Starter Rewind (Used After Code Date 95071300). 494291 Starter Rewind (Used Before Code Date 95071400). REF. NO. PART NO.

DESCRIPTION (8 o'Clock) 494456 Starter Rewind (Used Before Code Date 95071400). Used on Type No(s). 3118. @@494913 Starter Rewind (Used Before Code Date 95071400). @@493469 Starter Rewind (Used Before Code Date 95071400).

@@494571 Starter Rewind (Used Before Code Date 95071400). @@494143 Starter Rewind (Used Before Code Date 95071400). 847 REF. NO. PART NO. @@495825 Starter Rewind (Used Before Code Date 94072000). Used on Type No(s). 0109. @@494123 Starter Rewind (Used Before Code Date 95071400). (8 o'Clock) 497786 Starter Rewind (Used After Code Date 95071300). 493594 Starter Rewind (Used Before Code Date 95071400). (9 o'Clock) 497785 Starter Rewind (Used After Code Date 95071300). 493565 Starter Rewind (Used Before Code Date 95071400). 497969 Dipstick/Tube Assembly (Used After Code Date 95101500). Note 497306 Dipstick (Used After Code Date 95030500 and Before Code Date 95101600).

399030 Dipstick/Tube Assembly (Used Before Code Date 95030600). 608 K Included in Gasket SetPart No. 298989. 241411 Assemblies include all parts shown in frames. 11 106 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 96902 user guide](http://yourpdfguides.com/dref/3640249)  
<http://yourpdfguides.com/dref/3640249>