



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 97772. You'll find the answers to all your questions on the BRIGGS & STRATTON 97772 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BRIGGS & STRATTON 97772**  
**User guide BRIGGS & STRATTON 97772**  
**Operating instructions BRIGGS & STRATTON 97772**  
**Instructions for use BRIGGS & STRATTON 97772**  
**Instruction manual BRIGGS & STRATTON 97772**

FORM MS-2124-499  
REPLACES FORM MS-2124-397  
FILE IN SECTION SERVICE MANUAL  
**97700 to 97799**

**Illustrated Parts List**  
**Model Series**  
**97700 to 97799**

TYPE NUMBERS  
0101, 0102, 0110,  
0111, 0112, 0113,  
0114, 0115, 0116,  
0118, 0119, 0120,  
0121, 0122,  
0310, 0311, 0313,  
0318, 0319, 0320,  
0321, 0322, 0323,  
0324, 3101, 3110.

**TO FIND  
THE CORRECT NUMBER OF THE PART YOU NEED:  
FOLLOW THE INSTRUCTIONS BELOW**

A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.

B. Refer to the illustrations and compare the original part with illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.


C. After the Reference Number has been identified, refer to the Numerical List, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."

D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."

E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.

F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



© COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted  
in any form or by any means, electronic or mechanical, including photocopying,  
recording or by any information storage and retrieval system, without permission  
in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 97772 user guide](http://yourpdfguides.com/dref/3639907)  
<http://yourpdfguides.com/dref/3639907>

**Manual abstract:**

The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE." If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types.

If your Type number is listed under "Note," order the part referred to at the "Note." If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply. PRINTED IN U.S.

A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. @SEE REPAIR INSTRUCTION MANUAL. REF. NO. 1 3 5 7 8 9 10 11 13 33 34 35 36 PART NO. DESCRIPTION REF. NO. 40 45 122 192 238 337 584 585 635 PART NO. 262552 690977 D493669 691986 262499 491055 692342 DESCRIPTION REF. NO. 684 718 830 868 871 883 914 1022 1023 1026 1029 1034 PART NO. @@0113. K Included in Engine Gasket Set Ref. No.

358. D Included in Carburetor Overhaul Kit Ref No. 121. z Included in Carburetor Gasket Set Ref. No. 977. 21242 Assemblies include all parts shown in frames. @@NO. 4 12 15 20 22 43 46 177 227 PART NO. @@NO.

287 287A 404 505 523 525 PART NO. 692198 94582 690272 691251 692953 494194 15 750 REF. NO. @No. 358.

D Included in Carburetor Overhaul Kit Ref No. 121. z Included in Carburetor Gasket Set Ref. No. 977.

21243 Assemblies include all parts shown in frames. @@NO. 16 PART NO. DESCRIPTION REF. NO. 25 PART NO. DESCRIPTION REF. NO. @@@@@@@No. 358.

D Included in Carburetor Overhaul Kit Ref No. 121. z Included in Carburetor Gasket Set Ref. No. 977. 21244 Assemblies include all parts shown in frames. @@NO. 94 94A 95 97 98 104 108 109 PART NO. REF. NO.

117 PART NO. REF. NO. @No. 358.

D Included in Carburetor Overhaul Kit Ref No. 121. z Included in Carburetor Gasket Set Ref. No. 977.

21245 Assemblies include all parts shown in frames. @@NO. 11A 98A 161 163 188 209 PART NO. @@NO. 212 217 222 423 445 PART NO. @@NO. @No. 358. D Included in Carburetor Overhaul Kit Ref No. 121.

z Included in Carburetor Gasket Set Ref. No. 977. 21246 Assemblies include all parts shown in frames. 6 49 97700 to 97799 493A 24 332 318 474 1119 356 304 529 910 265 267 305 304A 23 318 493 78 23A 37 923 333 334 851 REF. NO. 23 23A 24 37 37A 78 265 267 304 PART NO. 692315 691987 222698 224685 224402 94786 691024 691044 494051 REF. NO. 78 37A 621 922 772 935 1160 PART NO.

REF. NO. 305 318 332 333 334 356 474 493 493A 529 621 772 851 910 922 923 925 935 1119 1160 PART NO. 925 DESCRIPTION Flywheel Flywheel Flywheel Key Flywheel Guard (Less Fuel Tank) Flywheel Guard Screw Casing Clamp Screw Blower Housing (NonCompliance) (Rewind Starter) Note 493326 Blower Housing (Compliance) (Rewind Starter) DESCRIPTION DESCRIPTION Screw Screw Nut Magneto Armature Screw Stop Wire Alternator Mounting Bracket Mounting Bracket Grommet Stop Switch Spark Plug Terminal Stud Brake Spring Brake Linkage Cover Interlock Switch Screw Screw 304A 493327 Blower Housing (NonCompliance) (Electric Starter) 497028 Blower Housing (Compliance) (Electric Starter) 497216 Blower Housing (Compliance) (Less Fuel Tank) Note 494941 Blower Housing (NonCompliance) (Rewind Starter Less Fuel Tank) 94582 94786 690662 802574 691061 398808 691991 224686 224395 281050 692310 691648 493880 691094 691831 691994 281046 398758 691648 691627 K Included in Engine Gasket Set Ref. No.

358. D Included in Carburetor Overhaul Kit Ref No. 121. z Included in Carburetor Gasket Set Ref. No.

977. 21247 Assemblies include all parts shown in frames. 7 49 97700 to 97799 180 1041 670 300 613 883 613 832 190 182 674 994 187 346 601 958 836 836A REF. NO. 180 182 187 190 300 346 601 PART NO. 494022 224394 296004 94585 493691 690661 95162 DESCRIPTION Fuel Tank Fuel Tank Bracket Fuel Line Screw Exhaust Muffler Screw Hose Clamp REF. NO. 613 670 674 832 836 836A PART NO. 690810 494307 692198 495909 690664 692198 DESCRIPTION Screw Fuel Tank Spacer Screw Muffler Guard Screw Screw REF. NO.

883 958 994 1041 PART NO. K272313 494768 493662 K DESCRIPTION Exhaust Gasket Fuel Shut-Off Valve Spark Arrester Foam Seal (Fuel Tank) (Sold in Kit Only) K Included in Engine Gasket Set Ref. No. 358. D Included in Carburetor Overhaul Kit Ref No. 121. z Included in Carburetor Gasket Set Ref. No. 977. 21248 Assemblies include all parts shown in frames.

8 49 97700 to 97799 455 608 55 65 718 946 58 56 456 60 59 57 597 459 689 REF. NO. 55 PART NO. DESCRIPTION REF. NO. 58 PART NO. DESCRIPTION REF. NO. @No. 358.

D Included in Carburetor Overhaul Kit Ref No. 121. z Included in Carburetor Gasket Set Ref. No. 977. 21249 Assemblies include all parts shown in frames. @@NO. 55 PART NO. DESCRIPTION REF. NO.

59 60 65 144 175 455A 456A 459A 597 PART NO. @@NO. 608A PART NO. DESCRIPTION 57 58 497960 Rewind Starter Housing (6 O'Clock) Note 498062 Rewind Starter Housing (9 O'Clock) 491889 Rewind Starter Spring 280399 Starter Rope (Cut To Required Length) 678 689A 718 946 498146 Rewind Starter (6 O'Clock) Note 498147 Rewind Starter (9 O'Clock) 224278 Rewind Spacer 262555 Friction Spring 493925 Locating Pin 691738 Rope Stop K Included in Engine Gasket Set Ref.



**[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 97772 user guide](http://yourpdfguides.com/dref/3639907)**  
<http://yourpdfguides.com/dref/3639907>