



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 98900 TO 98999. You'll find the answers to all your questions on the BRIGGS & STRATTON 98900 TO 98999 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 98900 TO 98999  
User guide BRIGGS & STRATTON 98900 TO 98999  
Operating instructions BRIGGS & STRATTON 98900 TO 98999  
Instructions for use BRIGGS & STRATTON 98900 TO 98999  
Instruction manual BRIGGS & STRATTON 98900 TO 98999



FORM MS-0235-03/02/2009  
REPLACES FORM MS-0235-04/08/2008  
FILE IN SECT. 2 OF SERVICE MANUAL  
**098900**

## Illustrated Parts List

Model Series

**098900**

TYPE NUMBERS  
0101 through 2254.

### TABLE OF CONTENTS

|                                   |   |
|-----------------------------------|---|
| Air Cleaner .....                 | 5 |
| Blower Housing/Shrouds .....      | 7 |
| Brake .....                       | 6 |
| Camshaft .....                    | 3 |
| Carburetor .....                  | 4 |
| Controls .....                    | 5 |
| Crankcase Cover/Sump .....        | 3 |
| Crankshaft .....                  | 3 |
| Cylinder .....                    | 2 |
| Cylinder Head .....               | 2 |
| Exhaust System .....              | 6 |
| Flywheel .....                    | 7 |
| Fuel Supply .....                 | 4 |
| Gasket Set - Engine .....         | 2 |
| Gasket Set - Valve .....          | 2 |
| Governor Spring .....             | 5 |
| Ignition .....                    | 5 |
| Lubrication .....                 | 2 |
| Operator's Manual .....           | 2 |
| Piston/Rings/Connecting Rod ..... | 3 |
| Rewind Starter .....              | 7 |
| Warning Label .....               | 2 |



PRINTED IN U.S.A.  
COPYRIGHT BY BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 98900 TO 98999 user guide](http://yourpdfguides.com/dref/3639660)  
<http://yourpdfguides.com/dref/3639660>

**Manual abstract:**

2 OF SERVICE MANUAL 098900 Illustrated Parts List Model Series 098900 TYPE NUMBERS 0101 through 2254. TABLE OF CONTENTS Air Cleaner . . . .

. . . . .

. . . . .

. . . . .

. . . . . 5 Blower Housing/Shrouds . . . .

. . . . . 7 Brake . .

. . . . .

. . . . .

. . . . . 6 Camshaft . .

. . . . .

. . . . .

. . . . . 3 Carburetor . . . . .

. . . . .

. . . . .

. . . . . 4 Controls . . . . .

. . . . .

. . . . .

. . . . . 5 Crankcase Cover/Sump .

. . . . .

. . . . . 3 Crankshaft . .

. . . . .

. . . . .

. . . . . 3 Cylinder .

. . . . .

. . . . .

. . . . . 2 Cylinder Head . . .

. . . . .

. . . . .

. . . . . 2 Exhaust System . . . . .

. . . . .

. . . . .

. . . . . 6 Flywheel . . . . .

. . . . .

. . . . .

. . . . . 7 Fuel Supply .

. . . . .

. . . . .

. . . . . 4 Gasket Set - Engine .

. . . . .

. . . . .

. . . . . 2 Gasket Set - Valve . . . . .

. . . . .

. . . . . 2 Governor Spring .

. . . . .

. . . . . 5 Ignition .

. . . . .

. . . . .

. . . . .

..... 5 Lubrication ..

.....

.....

... 2 Operator's Manual .....

.....

.....

. 2 Piston/Rings/Connecting Rod ..... 3 Rewind Starter .

.....

.....

.....

. 7 Warning Label .....

.....

... 2 PRINTED IN U.S.

A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 098900 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 1319 WARNING LABEL 358 ENGINE GASKET SET 3 12 7 20 51 9 51A 883 200 163 444 524 426 REQUIRED when replacing parts with warning labels affixed. 11 529 1095 VALVE GASKET SET 1 7 9 883 2 3 523A 523 287 287 524 718 50 7 5 870 869 871 51 54 668 847 842 525 524 13 50A 8 54 9 337 635 51A 10 383 0235-2 Illustrations cover a range of engines. @ 03/02/2009 098900 25 26 45 35 34 40 36 33 40 45 27 28 27 29 32 16 16A 24 16B 46A 741 741A 718A 377 357 741 718A 43 46 374 4 12 4A 12 20 15 22 22A 20 20A 444 178 1143 101 83 743 721 0235-3 Illustrations cover a range of engines. @ 03/02/2009 098900 90 976 163 97 130 1218 633 529 913 365 106 617 393 612 394 390 724 181 180 957 957A 957B 190 670 190A 0235-4 Illustrations cover a range of engines. @ 03/02/2009 098900 201 209 211 222A 222 621 188 265 265A 265B 426 268 269 271 270 334 356A 333 851 578 24 356 267 536 643 534 535A 535 163 0235-5 Illustrations cover a range of engines. @ @ @ @ @ @ @ @ @ @ 7 03/02/2009 098900 REF. NO. 1 2 3 4 PART NO. DESCRIPTION REF. NO. PART NO. DESCRIPTION REF.

NO. PART NO. DESCRIPTION 793062 Crankshaft Used on Type No(s). 0115, 0120, 0123, 0128, 0129, 0131, 0132, 0144, 0145, 0151, 0197, 0198, 0306, 0308, 0312, 0313, 0320, 0321, 0323, 0326, 0337, 0338, 0344, 0347, 0350, 0353, 0354, 0358, 0366, 0371, 0373, 0374, 0378, 0380, 0381, 0383, 0386, 0388, 0389, 0395, 0401, 0837, 1144, 1316, 1516, 1644, 2023, 2044, 2045, 2047, 2064, 2098, 2137, 2144, 2147, 2181, 2186, 2213, 2216, 2227, 2232, 2235, 2236, 2238, 2240. 793062 Crankshaft (Used Before Code Date 08071400). Used on Type No(s). 1616, 2013, 2032, 2065, 2078, 2086, 2087, 2100, 2101, 2166, 2178, 2180, 2250, 2251, 2253, 2254. 692991 Crankshaft Used on Type No(s). 1603, 1607, 1612, 2010, 2024, 2025, 2050, 2202, 2211, 2212, 2214, 2217, 2222, 2224, 2225, 2228, 2234, 2237, 2247, 2248. 692991 Crankshaft (Used Before Code Date 08071400).

Used on Type No(s). 1618. 791342 Crankshaft Used on Type No(s). 2103. 699653 Cylinder Assembly 399269 Kit--Bushing/Seal (Magneto Side) 299819S Seal--Oil (Magneto Side) 698691 Sump--Engine (Used After Code Date 02111200).

----- Note -----395384 Sump--Engine (Used Before Code Date 02111300). Sump--Engine (NO LONGER AVAILABLE) 790169 Head--Cylinder 698717 Gasket--Cylinder Head 791781 Breather Assembly 695890 Gasket--Breather 691666 Screw (Breather Assembly) 691245 Tube--Breather 692218 Gasket--Crankcase (Standard) (.015" Thick) ----- Note -----270895 Gasket-Crankcase (.005" Thick) 270896 Gasket-Crankcase (.009" Thick) 691640 Screw (Cylinder Head) 691680 Plug--Oil Drain 796212 Crankshaft (Used After Code Date 08071300).

Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252. ----- Note -----796211 Crankshaft (Used After Code Date 08071300). Used on Type No(s). 1616, 2013, 2032, 2065, 2078, 2086, 2087, 2100, 2101, 2166, 2178, 2180, 2250, 2251, 2253, 2254. 796213 Crankshaft (Used After Code Date 08071300). Used on Type No(s). 1618. 692990 Crankshaft Used on Type No(s). 0899, 1110, 2026, 2027, 2028, 2029, 2066, 2077, 2085, 2093, 2097, 2099, 2109, 2125, 2163, 2179, 2192, 2194, 2198, 2203, 2207, 2209, 2215, 2229, 2231, 2242, 2243, 2244, 2246.

----- Note -----692990 Crankshaft (Used Before Code Date 08071400). Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252. 4A 5 7 8 9 10 11 12 16A 13 15 16 0235-8 Illustrations cover a range of engines. @ 03/02/2009 098900 REF. NO. 16B PART NO. DESCRIPTION REF. NO. 23 PART NO.

DESCRIPTION REF. NO. PART NO. DESCRIPTION 492748 Crankshaft ----- Note -----496069 Crankshaft Used on Type No(s). 0130, 2030. 690805 Crankshaft Used on Type No(s). 0125, 0139, 0140, 0143, 0148, 0167, 0322, 0328, 0364, 0402, 0866, 0891, 1303, 1304, 1305, 1318, 1518, 2043. 493618 Crankshaft Used on Type No(s). 0119, 0137, 0141, 0341, 0359, 0382. 391483S Seal--Oil (PTO Side) 691952 Seal--Oil (PTO Side) (Auxiliary PTO) 692551 Screw (Crankcase Cover/Sump) (1 3/16" Long) 691108 Screw (Crankcase Cover/Sump) (3/4" Long) 795549 Flywheel ----- Note ----- -----795695 Flywheel (Used After Code Date 08012900).

Used on Type No(s). 1602, 1603, 2069, 2250, 2251. 690843 Flywheel (Used Before Code Date 08013000). Used on Type No(s). 1602, 1603, 2069, 2250, 2251. 690843 Flywheel Used on Type No(s). 0115, 0132, 0137, 0138, 0139, 0141, 0143, 0145, 0328, 0345, 0346, 0347, 0358, 0364, 0369, 0382, 0386, 0395, 0890, 1302, 1303, 1304, 1305, 1446, 2043, 2044, 2045, 2047, 2050, 2146, 2147, 2186, 2222, 2224, 2228. 24 222698S Key--Flywheel 25 790908 Piston Assembly (Standard) (Used After Code Date 04111400). ----- Note -----699657 Piston Assembly (Standard) (Used After Code Date 030803000 and Before Code Date 04111500). 790908 Piston Assembly (Standard) (Used After Code Date 92092800 and Before Code Date 03080400).

793214 Piston Assembly (Standard) (Used Before Code Date 92092900). @ @ @ @ 795132 Ring Set (Standard) (Used After Code Date 04111400). @ @ @ @ 298982 Ring Set (Standard) (Used Before Code Date 92092900). @ @ @ @ @ @ @ @ @ @ @ 9 03/02/2009 098900 REF. NO. 29 32 33 34 35 36 37 37A 40 43 PART NO. DESCRIPTION REF. NO. @ @ DESCRIPTION REF. NO. 78 81 83 PART NO. @ @ @ @ @ @ @ @ @ @ @ 699644 Manifold--Intake (Used After Code Date 03080300). 693446 Manifold--Intake (Used Before Code Date 03080400).



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 98900 TO 98999 user guide](http://yourpdfguides.com/dref/3639660)  
<http://yourpdfguides.com/dref/3639660>

699649 Gasket--Intake (Used After Code Date 03080300). 270345S Gasket--Intake (Used Before Code Date 03080400).  
@@@394897 Housing--Clutch (Used Before Code Date 97060600). 691604 Ball--Clutch (Used Before Code Date 97060600). @699850 Screen--Rotating  
(Used After Code Date 97060500). 691725 Screen--Rotating (Used Before Code Date 97060600). @0396, 1350, 1650, 2196.  
690514 Shaft--Auxiliary Drive Used on Type No(s). 0147, 0317, 0319, 0399, 0407, 2207. 691249 Shaft--Auxiliary Drive Used on Type No(s). 0117,  
0133, 0149, 0371, 0373, 0374, 0378, 0849, 2049, 2178, 2211. 498809 Carburetor (Used After Code Date 96051900). @@@@Parts shown without  
corresponding text may not be used on your specific engine. Assemblies i300). 691826 Link--Lockout (Used Before Code Date 97071400). 691660 Screw  
(Starter Clutch) 692179 Clamp--Casing 690798 Clamp--Casing 691024 Clamp--Casing 691044 Screw (Casing Clamp) 691025 Casing--Control Wire (Cut  
To Required Length) 691026 Wire--Control (Cut To Required Length) 691027 Nut (Control Wire Casing) 691028 Lever--Control 691002 Screw (Dipstick  
Tube) 691720 Locknut--Muffler/Elbow 692307 Muffler (Super Lo Tone) 394569S Muffler (Round Lo Tone) 690291 Elbow--Exhaust 691484 Housing--Blower  
(Compliance Engines) - - - - - Note - - - - - 692536 Housing-Blower (Non Compliance Engines) Used on Type No(s). 1602, 1603, 2011, 2012, 2028,  
2033, 2044, 2045, 2047, 2050, 2063, 2064, 2065, 2069, 2070, 2077, 2078, 2085, 2086, 2087, 2101, 2109, 2144, 2147, 2163, 2178, 2186, 2202, 2203, 2210,  
2214, 2215, 2216, 2222, 2224, 2225, 2227, 2228, 2232, 2239, 2242, 2243, 2246, 2249, 2250, 2251, 2252.

694051 Housing--Blower (Non Compliance Engines) Used on Type No(s). 2013. 692198 Screw (Blower Housing) 690662 Nut (Flywheel) 793281  
Armature--Magneto 691061 Screw (Magneto Armature) 802592S Plug--Spark - - - - - Note - - - - - 697451 Plug--Spark Used on Type No(s). 1615,  
1650, 1651, 2002, 2011, 2012, 2013, 2023, 2024, 2031, 2032, 2033, 2063, 2064, 2065, 2069, 2070, 2085, 2086, 2087, 2093, 2097, 2101, 2103, 2137, 2139,  
2163, 2166, 2178, 2180, 2181, 2186, 2192, 2194, 2210, 2216, 2225, 2232, 2246, 2248, 2249, 2251, 2253. 690661 Screw (Spark Arrestor) 692390 Wire--Stop  
398808 Wire--Stop 692191 Key--Drive Pulley 794209 Gasket Set--Engine 19069 Puller--Flywheel 790029 Screw (Carburetor) 691074 Washer (Camshaft)  
692193 Key--Woodruff 89838S Wrench--Spark Plug 691839 Spring--Choke Diaphragm 691837 Screen--Carburetor 795083 Diaphragm--Carburetor 691107  
Screw (Governor Blade) 305 332 333 334 337 346 356 356A 357 358 363 365 374 377 383 390 393 394 426 222A 0235-12 Illustrations cover a range of  
engines. @12 03/02/2009 098900 REF. NO. 444 455 456 459 523 523A 524 525 529 534 535 PART NO. DESCRIPTION REF. NO.

670 PART NO. DESCRIPTION REF. NO. 729 741 PART NO. DESCRIPTION 691868 Gasket--Drive Gear Cover 691236 Cup--Flywheel 692299 Plate--Pawl  
Friction 281505S Pawl--Ratchet 692040 Dipstick 691913 Dipstick 691876 Seal--Dipstick Tube 691320 Tube--Dipstick 692189 Grommet 691417 Screw (Air  
Cleaner) 698369 Filter--Air Cleaner Foam (Used After Code Date 02101000).

272235S Filter--Air Cleaner Foam (Used Before Code Date 02101100). 698472 Cleaner--Air 398153 Wire Assembly 690800 Nut (Rewind Starter) 691696  
Screw (Pawl Friction Plate) 690101 Starter--Rewind (70" Rope) - - - - - Note - - - - - 499706 Starter--Rope (88 5/8" Rope) 499925 Starter--Rewind  
(88 5/8" Rope) Used on Type No(s). 0890. 496046S Tube--Pick Up 691413 Screw (Muffler) 270344S Seal--O Ring (Intake Manifold) 692310 Switch--Stop  
691321 Seal--Choke/Throttle Shaft (Throttle) 66538S Boot--Spark Plug 691911 Retainer--Air Filter 692889 Spacer (Cylinder) 691633 Spacer--Fuel Tank  
(Non Compliance Engines) (13/16" Long) (Used After Code Date 97071300). - - - - - Note - - - - - 691631 Spacer--Fuel Tank (Compliance Engines)  
(11/16" Long) (Used Before Code Date 97071400).

396548 Deflector--Muffler Used on Type No(s). 0132, 0319, 0328, 0369, 2069. 393760 Deflector--Muffler Used on Type No(s). 0317, 0341, 0346, 0402, 0890,  
1446, 2027, 2146, 2202, 2225, 2231. 393756 Deflector--Muffler Used on Type No(s). 0147, 0322, 0341, 0345, 0359, 0381, 0382, 1315, 1316, 1318, 1350,  
1351, 1515, 1516, 1518, 1612, 1615, 1616, 1618, 1650, 1651, 2027, 2045, 2214. 397931 Deflector--Muffler Used on Type No(s). 0374, 0378, 2178, 2211.  
690661 Screw (Muffler Deflector) 691924 Spacer--Rewind 691855 Spring--Friction 690959 Pin--Locating (Cylinder) 499047 Pin--Locating (Crankshaft)  
(Used Before Code Date 08071400). 690397 Stop--Shaft 697478 Retainer--Seal 690586 Clip--Wire 796210 Gear--Timing (Used After Code Date 08071300).

691805 Gear--Timing (Used Before Code Date 08071400). 690516 Gear--Drive - - - - - Note - - - - - 691772 Gear--Drive (Counterclockwise) Used  
on Type No(s). @691146 Screw (Brake) (7/8" Long) 690859 Screw (Brake) (1/2" Long) 691183 Screw (Linkage Cover) (3/4" Long) (Top) 690345 Screw  
(Linkage Cover) (7/16" Long) (Front) 691111 Screw (Linkage Cover) (1 1/8" Long) (Front) 690324 Screw (Band Brake Pivot) 699299 Guard--Muffler  
699670 Guard--Muffler 790743 Guard--Muffler 690664 Screw (Muffler Guard) (13/32" Long) 741A 743 676 535A 676A 536 578 592 597 608 745 676B  
745A 772 676C 772A 612 613 617 621 633 635 643 668 677 678 689 718 718A 772B 815 832 832A 832B 836 721 724 0235-13 Illustrations cover a range of  
engines. @13 03/02/2009 098900 REF. NO. 836A 842 847 851 869 PART NO. DESCRIPTION REF. NO. 883 913 921 922 922A 923 923A 925 930 930A  
930B 933 957 957A PART NO. DESCRIPTION REF.

NO. 969 PART NO. DESCRIPTION 790745 Screw (Muffler Guard) (1/2" Long) 691870 Seal--O Ring (Dipstick Tube) 691440 Dipstick/Tube Assembly  
493880S Terminal--Spark Plug 699641 Seat--Valve (Intake) (Used After Code Date 03080300). - - - - - Note - - - - - 691701 Seat--Valve (Intake)  
(Used Before Code Date 03080400). 699642 Seat--Valve (Exhaust) (Used After Code Date 03080300).

@@@2013. 692135 Spring--Brake (Used After Code Date 97071300). 691809 Spring--Brake (Used Before Code Date 97071400). 691487 Brake  
394867 Brake 691349 Cover--Linkage (Used After Code Date 97071300). 691330 Guard--Rewind 690601 Guard--Rewind 691348 Guard--Rewind 690428  
Pivot--Band Brake 497929S Cap--Fuel Tank (Black) 692050 Cap--Fuel Tank (Red) Used on Type No(s).

0149, 0165, 0849, 1110, 2049, 2065. 791129 Cap--Fuel Tank (Black) Used on Type No(s). 2011, 2050, 2224, 2228. 694046 Screw (Blower Housing Cover) (2  
1/3" Long) Used on Type No(s). 2013. 694394 Primer--Carburetor 398067 Arrestor--Spark Label--Emissions (Available From A Briggs & Stratton  
Authorized Dealer) 277038 Operator's Manual 498526 Gasket Set--Valve 691141 Screw (Drive Gear Cover) 691146 Screw (Brake Bracket) 499901  
Pulley/Spring Assembly (Pulley) 499901 Pulley/Spring Assembly (Spring) 695866 Seal--O Ring (Carburetor) 794467 Label--Warning 270962 Repair Manual  
976 994 1036 1058 1095 1143 1208 1210 1211 1218 1319 1330 870 871 957B 0235-14 Illustrations cover a range of engines.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 98900 TO 98999 user guide](http://yourpdfguides.com/dref/3639660)  
<http://yourpdfguides.com/dref/3639660>