



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 9B900 TO 9B999. You'll find the answers to all your questions on the BRIGGS & STRATTON 9B900 TO 9B999 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 9B900 TO 9B999
User guide BRIGGS & STRATTON 9B900 TO 9B999
Operating instructions BRIGGS & STRATTON 9B900 TO 9B999
Instructions for use BRIGGS & STRATTON 9B900 TO 9B999
Instruction manual BRIGGS & STRATTON 9B900 TO 9B999



FORM MS-0651-03/02/2009
REPLACES FORM MS-0651-06/08/2008
FILE IN SECT. 2 OF SERVICE MANUAL
09B900

Illustrated Parts List Model Series 09B900

TYPE NUMBERS
0050, 0051, 1651, 1652.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	6
Flywheel	7
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	2
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	8
Warning Label	2



PRINTED IN U.S.A.
COPYRIGHT BY BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 9B900 TO 9B999 user guide](http://yourpdfguides.com/dref/3639726)
<http://yourpdfguides.com/dref/3639726>

Manual abstract:

2 OF SERVICE MANUAL 09B900 Illustrated Parts List Model Series 09B900 TYPE NUMBERS 0050, 0051, 1651, 1652. TABLE OF CONTENTS Air Cleaner

.....
.....
.....
..... 6 Blower Housing/Shrouds

..... 7 Camshaft
.....
.....
.....
..... 3 Carburetor
.....
.....
.....
..... 4 Controls
.....
.....
..... 5 Crankcase Cover/Sump

.....
..... 3 Crankshaft
.....
.....
..... 3 Cylinder
.....
.....
.....
..... 2 Cylinder Head
.....
.....
.....
2 Exhaust System
.....
.....
..... 6 Flywheel

.....
.....
..... 7 Fuel Supply
.....
.....
..... 4 Gasket Set - Engine
.....
.....
..... 2 Gasket Set - Valve
.....
..... 2 Governor Spring
.....
..... 5 Ignition
.....
.....
.....
..... 5 Lubrication
.....
.....
.....

... 2 Operator's Manual

.....

. 2 Piston/Rings/Connecting Rod 3 Rewind Starter .

.....

.....

.....

. 8 Warning Label

.....

... 2 PRINTED IN U.S.


A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation. 09B900 1058 OPERATOR'S MANUAL 1330 REPAIR MANUAL 1319 WARNING LABEL 358 ENGINE GASKET SET 3 12 7 20 51 9 51A 883 200 524 426 163 REQUIRED when replacing parts with warning labels affixed. 11 529 1095 VALVE GASKET SET 1 7 9 883 2 3 523A 523 287 287 524 718 50 7 5 870 869 871 51 54 668 847 842 525 524 13 50A 8 54 9 337 635 51A 10 383 0651-2 Illustrations cover a range of engines. @@2 03/02/2009 09B900 25 26 45 35 34 40 36 33 40 45 27 28 27 29 32 16 16A 16B 24 46 741 741A 718A 741A 718A 43 4 12 22 15 20 0651-3 Illustrations cover a range of engines. @@3 03/02/2009 09B900 90 976 163 529 130 1218 913 106 633 97 365 393 612 394 390 617 724 957A 180 957 181 190 190A 670 0651-4 Illustrations cover a range of engines. @@4 03/02/2009 09B900 201 209 211 222 621 188 265 267 268 269 270 271 426 334 356 333 24 851 635 356A 0651-5 Illustrations cover a range of engines. @@@@ 03/02/2009 09B900 608A 930A 58A 55 65 592 60A 1211 59 1210 58 459 689 456 597 332 455 60 257 66 71 70 67 68 57 73 55A 58 304 60 678 65A 57 305 56 0651-8 Illustrations cover a range of engines. @@8 03/02/2009 09B900 REF. NO. 1 2 3 4 PART NO. DESCRIPTION REF. NO. PART NO.

DESCRIPTION REF. NO. 26 PART NO. DESCRIPTION 699653 Cylinder Assembly 399269 Kit--Bushing/Seal (Magneto Side) 299819S Seal--Oil (Magneto Side) 698691 Sump--Engine (Used After Code Date 02111200). ----- Note -----395384 Sump--Engine (Used Before Code Date 02111300). 790169 Head--Cylinder 698717 Gasket--Cylinder Head 791781 Breather Assembly 695890 Gasket--Breather 691666 Screw (Breather Assembly) 691245 Tube--Breather 692218 Gasket--Crankcase (.015" Thick) (Standard) ----- Note -----270895 Gasket--Crankcase (.005" Thick) 270896 Gasket--Crankcase (.009" Thick) 691640 Screw (Cylinder Head) 691680 Plug--Oil Drain 796213 Crankshaft (Used After Code Date 08071300). Used on Type No(s). 1651. 692991 Crankshaft Used on Type No(s). 1652. ----- Note -----692991 Crankshaft (Used Before Code Date 08071400). Used on Type No(s). 1651. 690805 Crankshaft Used on Type No(s). 0050, 0051. 20 391483S Seal--Oil (PTO Side) 22 692551 Screw (Crankcase Cover/Sump) 23 690843 Flywheel ----- Note -----795695 Flywheel (Used After Code Date 08012900). Used on Type No(s). 1651. 690843 Flywheel (Used Before Code Date 08013000). Used on Type No(s). 1651. 24 222698S Key--Flywheel 25 790908 Piston Assembly (Standard) (Used After Code Date 04111400). ----- Note -----699657 Piston Assembly (Standard) (Used After Code Date 030803000 and Before Code Date 04111500). 790908 Piston Assembly (Standard) (Used After Code Date 92092800 and Before Code Date 03080400). 792532 Piston Assembly (.020" Oversize) (Used After Code Date 04111400). 795132 Ring Set (Standard) (Used After Code Date 04111400).

@@@@@ 03/02/2009 09B900 REF. NO. 40 43 PART NO. DESCRIPTION REF. NO. 81 PART NO. DESCRIPTION REF. NO. 211 222 PART NO. @@@@ 699649 Gasket--Intake (Used After Code Date 03080300). 270345S Gasket--Intake (Used Before Code Date 03080400). @0050, 0051, 1651. 498809 Carburetor (Used After Code Date 96051900). @@@@0050. @@1652.

@@Used on Type No(s). 0050. 692698 Spring-Governor Used on Type No(s). 1651. 691862 Spring-Governor Used on Type No(s). 0051. @@Used on Type No(s). 0050. 691859 Spring--Governed Idle 691445 Bracket--Control Used on Type No(s). 0050, 0051, 1651, 1652. 691660 Screw (Starter Clutch) 692179 Clamp--Casing 691044 Screw (Casing Clamp) 691025 Casing--Control Wire (Cut To Required Length) 691026 Wire--Control (Cut To Required Length) 691027 Nut (Control Wire Casing) 691028 Lever--Control 691002 Screw (Dipstick Tube) 692307 Muffler (Super Lo Tone) Used on Type No(s). 0050, 0051, 1651. 394569S Muffler (Round Lo Tone) Used on Type No(s). 1652. 692536 Housing--Blower 692198 Screw (Blower Housing) 690662 Nut (Flywheel) 793281 Armature--Magneto 691061 Screw (Magneto Armature) (1" Long) 802592S Plug--Spark Used on Type No(s).

0050, 0051, 1651E1, 1652. ----- Note -----697451 Plug--Spark Used on Type No(s). 1651B1. 690661 Screw (Spark Arrestor) 90 257 265 267 268 269 270 271 287 300 45 46 50 97 106 130 163 180 181 51 51A 54 55 55A 56 57 58 58A 59 60 60A 65 65A 66 67 68 70 71 73 73B 74 75 78 188 190 190A 300A 200 201 209 304 305 332 333 334 337 346 0651-10 Illustrations cover a range of engines. @10 03/02/2009 09B900 REF. NO. 356 356A 358 363 365 383 390 393 394 426 PART NO. 692390 398808 794209 190669 790029 89838S 691839 691837 795083 691107 DESCRIPTION Wire--Stop Wire--Stop Gasket Set--Engine Puller--Flywheel Screw (Carburetor) Wrench--Spark Plug Spring--Choke Diaphragm Screen--Carburetor Diaphragm--Carburetor Screw (Governor Blade) Cup--Flywheel Plate--Pawl Friction Pawl--Ratchet Dipstick Dipstick Seal--Dipstick Tube Tube--Dipstick Grommet Screw (Air Cleaner) Filter--Air Cleaner Foam (Used After Code Date 02101000). Filter--Air Cleaner Foam (Used Before Code Date 02101100). Cleaner--Air Nut (Rewind Starter) Screw (Pawl Friction Plate) Starter--Rewind (Used After Code Date 97092800). Starter--Rewind (For Use On Engines Without Brake) Tube--Pick Up Screw (Muffler) Seal--O Ring (Intake Manifold) Switch--Stop Seal--Choke/Throttle Shaft (Throttle) REF. NO. 635 643 668 670 PART NO. DESCRIPTION REF. NO. 870 PART NO. DESCRIPTION 66538S Boot--Spark Plug 691911 Retainer--Air Filter (Used Before Code Date 02110600). 692889 Spacer (Cylinder) 691633 Spacer--Fuel Tank (Used After Code Date 97071300).

 [You're reading an excerpt. Click here to read official BRIGGS & STRATTON 9B900 TO 9B999 user guide](http://yourpdfguides.com/dref/3639726)
<http://yourpdfguides.com/dref/3639726>

@@@691805 Gear--Timing (Used Before Code Date 08071400). 699299 Guard--Muffler (Super Lo Tone) Used on Type No(s).
1651. 699670 Guard--Muffler (Round Lo Tone) Used on Type No(s). 1652. 690664 Screw (Muffler Guard) 691870 Seal--O Ring (Dipstick Tube) 691440
Dipstick/Tube Assembly 493880S Terminal--Spark Plug 699641 Seat--Valve (Intake) (Used After Code Date 03080300). - - - - - Note - - - - - 691701
Seat--Valve (Intake) (Used Before Code Date 03080400). 699642 Seat--Valve (Exhaust) (Used After Code Date 03080300). - - - - - Note - - - - -
- - - - - 691702 Seat--Valve (Exhaust) (Used Before Code Date 03080400). 699643 Bushing--Valve Guide (Exhaust) (Used After Code Date 03080300). - - - - -
- - Note - - - - - 231348 Bushing--Valve Guide (Used Before Code Date 03080400). 63709 Bushing--Valve Guide (Intake) 691880 Gasket--Exhaust
494409 Seat--Check Valv.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 9B900 TO 9B999 user guide](http://yourpdfguides.com/dref/3639726)
<http://yourpdfguides.com/dref/3639726>