



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 9L900 TO 9L999. You'll find the answers to all your questions on the BRIGGS & STRATTON 9L900 TO 9L999 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 9L900 TO 9L999
User guide BRIGGS & STRATTON 9L900 TO 9L999
Operating instructions BRIGGS & STRATTON 9L900 TO 9L999
Instructions for use BRIGGS & STRATTON 9L900 TO 9L999
Instruction manual BRIGGS & STRATTON 9L900 TO 9L999



FORM MS-5739-08/12/2008
REPLACES FORM MS-5739-07/08/2008
FILE IN SECT. 2 OF SERVICE MANUAL
09L900

Illustrated Parts List

Model Series

09L900

TYPE NUMBERS
0131 through 0620.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing/Shrouds	6
Brake	6
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	5
Flywheel	6
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	2
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	6
Warning Label	2



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 9L900 TO 9L999 user guide](http://yourpdfguides.com/dref/3640218)
<http://yourpdfguides.com/dref/3640218>

Manual abstract:

2 OF SERVICE MANUAL 09L900 Illustrated Parts List Model Series 09L900 TYPE NUMBERS 0131 through 0620. TABLE OF CONTENTS Air Cleaner . . .

.

.

.

. 5 Blower Housing/Shrouds

. 6 Brake . .

.

.

. 6 Camshaft . .

.

.

. 3 Carburetor

.

. 4 Controls .

.

.

. 5 Crankcase Cover/Sump

. 3 Crankshaft .

.

.

. 3 Cylinder

.

.

. 2 Cylinder Head

.

. 2 Exhaust System

.

. 5 Flywheel . .

.

.

. 6 Fuel Supply

.

.

. 4 Gasket Set - Engine

.

. 2 Gasket Set - Valve

. 2 Governor Spring . .

.

. 5 Ignition . .

.

.

. 5 Lubrication

.....
.....
.....
. 2 Operator's Manual

..... 2 Piston/Rings/Connecting Rod .
.....
. 3 Rewind Starter
.....
..... 6 Warning Label . . .
.....
.....
..... 2 PRINTED IN U.

S.A. COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. @@@@3 08/12/2008 09L900 90 976 163 97 130 1218 913 365 106 617 393 612 394 390 724 633 529 957B 957A 180 957 190A 190 670 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5739-4 Assemblies include all parts shown in frames. 4 08/12/2008 09L900 201 211 209 222A 222 621 188 265 267 269 271 268 270 426 333 334 356 24 851 635 536 534 300 R 535 832 836 163 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5739-5 Assemblies include all parts shown in frames. 5 08/12/2008 09L900 1036 EMISSIONS LABEL 608 55 65 592 1211 58 1210 459 689 456 597 60 332 455 74 73 236 925 729 923 621 745 745A 922 78 363 23 772 37 304 305 78 37A Illustrations cover a range of engines.

@@6 08/12/2008 09L900 REF. NO. 1 2 3 4 5 7 8 9 10 11 12 PART NO. DESCRIPTION REF. NO.
16A PART NO. DESCRIPTION REF. NO. PART NO. @@Used on Type No(s).

0132. ----- Note ----- 796211 Crankshaft (Used After Code Date 08071300). Used on Type No(s). 0356, 0620. 796212 Crankshaft (Used After Code Date 08071300). Used on Type No(s). 0305. 692991 Crankshaft Used on Type No(s). 0131, 0213, 0221, 0245, 0284. @@Used on Type No(s).

0132. 793062 Crankshaft (Used Before Code Date 08071400). Used on Type No(s). 0356, 0620. 692990 Crankshaft Used on Type No(s). 0283, 0359. 692990 Crankshaft (Used Before Code Date 08071400). Used on Type No(s). 0305. @@0213, 0221, 0245, 0283, 0284, 0305, 0356, 0359, 0620.

----- Note ----- 795695 Flywheel (Used After Code Date 08012900). Used on Type No(s). 0132. 690843 Flywheel (Used Before Code Date 08013000). Used on Type No(s).

0132. 690843 Flywheel Used on Type No(s). 0131. @@----- Note ----- 699657 Piston Assembly (Standard) (Used After Code Date 030803000 and Before Code Date 04111500). 790908 Piston Assembly (Standard) (Used After Code Date 96020500 and Before Code Date 03080400). 792532 Piston Assembly (.020" Oversize) 26 790909 Ring Set (Standard) (Used After Code Date 04111400). ----- Note ----- 699658 Ring Set (Standard) (Used After Code Date 030803000 and Before Code Date 04111500). @@@@7 08/12/2008 09L900 REF. NO. 27 28 PART NO. DESCRIPTION REF. NO. @@DESCRIPTION REF. NO.

236 265 267 268 269 270 271 287 300 304 PART NO. @@@@693446 Manifold-Intake (Used Before Code Date 03080400). K699649 Gasket-Intake (Used After Code Date 03080300). 270345S Gasket-Intake (Used Before Code Date 03080400). @@0213, 0221, 0245, 0283, 0284, 0305, 0356, 0359, 0620. @@0131, 0132. @@0213, 0221, 0283, 0284. @@0245, 0305, 0356, 0359, 0620. 690252 Spring- Governor (Pink) Used on Type No(s). 0132. 692698 Spring- Governor (Metallic Gold) Used on Type No(s). 0131. @@0213, 0221, 0245, 0283, 0284, 0305, 0356, 0359, 0620. 691445 Bracket-Control

Used on Type No(s). 0131, 0132.

@@@0213, 0221, 0245, 0283, 0284, 0305, 0356, 0359, 0620. ----- Note ----- 692536 Housing- Blower (Non Compliance Engines) Used on Type No(s). 0131, 0132. 692198 Screw (Blower Housing) 690400 Shield-Heat 690345 Screw (Heat Shield) 690662 Nut (Flywheel) 793281 Armature-Magneto 691061 Screw (Magneto Armature) 802592S Plug-Spark 692390 Wire-Stop 794209 Gasket Set-Engine 19069 Puller-Flywheel 790029 Screw (Carburetor) 89838S Wrench-Spark Plug 691839 Spring-Choke Diaphragm 691837 Screen-Carburetor 29 32 33 34 35 36 37 37A 40 43 45 46 50 50A 51 51A 54 55 58 305 306 307 332 333 334 337 356 358 363 365 383 390 393 211 222 222A K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5739-8 Assemblies include all parts shown in frames. 8 08/12/2008 09L900 REF. NO. 394 PART NO. DESCRIPTION REF. NO. 670 689 718 718A PART NO. DESCRIPTION REF. NO. 871 PART NO.

DESCRIPTION 795083 Diaphragm-Carburetor (Used After Code Date 07080800). @@@@0213, 0221, 0245, 0283, 0284, 0305, 0356, 0359, 0620. @@0131, 0132. @@@@691805 Gear-Timing (Used Before Code Date 08071400). 691146 Screw (Brake) (7/8" Long) 690859 Screw (Brake) (1/2" Long) 691111 Screw (Linkage Cover) 699670 Guard-Muffler Used on Type No(s). 0131, 0132, 0245. 690664 Screw (Muffler Guard) Used on Type No(s). 0131, 0132, 0245. 493880S Terminal-Spark Plug 697338 Seal-Valve 699641 Seat-Valve (Intake) (Used After Code Date 03080300). ----- Note ----- 691701 Seat-Valve (Intake) (Used Before Code Date 03080400).

699642 Seat-Valve (Exhaust) (Used After Code Date 03080300). @@@@0213, 0221, 0245, 0283, 0284, 0305, 0356, 0359, 0620. 791129 Cap-Fuel Tank Used on Type No(s). 0131, 0132. 792878 Cap-Fuel Tank 694394 Primer-Carburetor Label-Emissions (Available From A Briggs & Stratton Authorized Dealer) 277038 Operator's Manual 498526 Gasket Set-Valve 499901 Pulley/Spring Assembly (Pulley) 499901 Pulley/Spring Assembly (Spring) 695866 Seal-O Ring (Carburetor) 794467 Label-Warning 270962 Repair Manual 426 455 456 459 523A 524 525 529 534 535 536 592 597 608 724 729 741 741A 745 745A 772 832 836 913 922 923 925 957 957A 957B 976 1036 851 868 869 1058 1095 1210 1211 1218 1319 1330 612 617 621 633 870 635 668 K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines.

Parts shown without corresponding text may not be used on your specific engine. 5739-9 Assemblies include all parts shown in frames. 9 08/12/2008 .

[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 9L900 TO 9L999 user guide](#)



<http://yourpdfguides.com/dref/3640218>