



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BRIGGS & STRATTON 9T500 TO 9T599. You'll find the answers to all your questions on the BRIGGS & STRATTON 9T500 TO 9T599 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BRIGGS & STRATTON 9T500 TO 9T599
User guide BRIGGS & STRATTON 9T500 TO 9T599
Operating instructions BRIGGS & STRATTON 9T500 TO 9T599
Instructions for use BRIGGS & STRATTON 9T500 TO 9T599
Instruction manual BRIGGS & STRATTON 9T500 TO 9T599



FORM MS-3916-08/12/2008
REPLACES FORM MS-3916-07/09/2008
FILE IN SECT. 2 OF SERVICE MANUAL
09T500

Illustrated Parts List **Model Series** **09T500**

TYPE NUMBERS
0111 through 3852.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing/Shrouds	6
Brake	5
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	4
Flywheel	6
Fuel Supply	4
Gasket Set - Engine	3
Gasket Set - Valve	3
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	6
Warning Label	2



PRINTED IN U.S.A.
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 9T500 TO 9T599 user guide](http://yourpdfguides.com/dref/3639994)
<http://yourpdfguides.com/dref/3639994>

Manual abstract:

2 OF SERVICE MANUAL 09T500 Illustrated Parts List Model Series 09T500 TYPE NUMBERS 0111 through 3852. TABLE OF CONTENTS Air Cleaner . . .

.

.

.

. 5 Blower Housing/Shrouds

. 6 Brake

.

.

. 5 Camshaft

.

.

. 3 Carburetor

.

. 4 Controls

.

.

. 5 Crankcase Cover/Sump

. 3 Crankshaft

.

.

. 3 Cylinder

.

.

. 2 Cylinder Head

.

. 2 Exhaust System

.

. 4 Flywheel

.

.

. 6 Fuel Supply

.

.

. 4 Gasket Set - Engine

.

. 3 Gasket Set - Valve

. 3 Governor Spring

.

. 5 Ignition

.

.

. 5 Lubrication



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 9T500 TO 9T599 user guide](http://yourpdfguides.com/dref/3639994)
<http://yourpdfguides.com/dref/3639994>

0115, 0144, 0509, 0930, 2000, 2006, 2009, 2018, 2019, 2027, 2032, 2033, 2034, 2035, 2036, 2040, 2045, 2046, 2051, 2052, 2061, 2089, 2090, 2091, 2092, 2093, 2094, 2095, 2096, 2137, 2207, 2228, 2229, 2230, 2231, 2233, 2234, 2235, 2236, 2237, 2239, 2240, 2242. 790744 Guard-Muffler Used on Type No(s). 2018, 2037, 2041, 2045, 2046, 2238. 741A 745 745A 772 832 668 670 676B 676C 677 832C 689 718 718A 832D 724 729 K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3916-11 Assemblies include all parts shown in frames. 11 08/12/2008 09T500 REF. NO. 836 PART NO. DESCRIPTION REF. NO. PART NO.

DESCRIPTION REF. NO. 969 PART NO. DESCRIPTION 690664 Screw (Muffler Guard) (13/32" Long) Used on Type No(s). 0995, 1050, 2000, 2009, 2036, 2090, 2092, 2093, 2222. 790745 Screw (Muffler Guard) (1/2" Long) Used on Type No(s). 0111, 0112, 0113, 0116, 0117, 0118, 0120, 0121, 0124, 0127, 0128, 0130, 0131, 0982, 2006, 2018, 2019, 2027, 2032, 2033, 2037, 2041, 2042, 2045, 2046, 2051, 2053, 2054, 2061, 2089, 2094, 2096, 2137, 2207, 2223, 2224, 2225, 2227, 2228, 2229, 2230, 2231, 2233, 2234, 2235, 2236, 2237, 2238, 2239, 2240, 2242. 691125 Screw (Muffler Guard) (2/3" Long) Used on Type No(s). 0111, 0112, 0113, 0116, 0117, 0118, 0120, 0121, 0124, 0127, 0128, 0130, 0131, 0982, 2006, 2019, 2027, 2032, 2033, 2042, 2051, 2053, 2054, 2061, 2089, 2094, 2096, 2137, 2207, 2223, 2224, 2225, 2227, 2228, 2229, 2230, 2231, 2233, 2234, 2235, 2236, 2237, 2239, 2240, 2242. 851 493880S Terminal-Spark Plug 851A 692424 Terminal-Spark Plug 868 697338 Seal-Valve 869 699641 Seat-Valve (Intake) 870 699642 Seat-Valve (Exhaust) 871 699643 Bushing-Valve Guide (Exhaust Valve) ----- Note ----- 63709 Bushing-Valve Guide (Intake Valve) 913 494409 Seat-Check Valve 921B 699796 Cover-Blower Housing Used on Type No(s).

@@@0116, 2053. @@@@694394 Primer-Carburetor Label-Emissions (Available From A Briggs & Stratton Authorized Dealer) 277038 Operator's Manual 498526 Gasket Set-Valve 499901 Pulley/Spring Assembly (Pulley) 499901 Pulley/Spring Assembly (Spring) 794467 Label-Warning 270962 Repair Manual 836A 976 1036 1058 1095 1210 1211 1319 1330 836B K Engine Gasket Set-Reference 358 Valve Gasket Set-Reference 1095 Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3916-12 Assemblies include all parts shown in frames. 12 08/12/2008 .



[You're reading an excerpt. Click here to read official BRIGGS & STRATTON 9T500 TO 9T599 user guide](http://yourpdfguides.com/dref/3639994)
<http://yourpdfguides.com/dref/3639994>