





Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BROTHER DCP-585CW. You'll find the answers to all your questions on the BROTHER DCP-585CW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BROTHER DCP-585CW
User guide BROTHER DCP-585CW
Operating instructions BROTHER DCP-585CW
Instructions for use BROTHER DCP-585CW
Instruction manual BROTHER DCP-585CW



USER'S GUIDE



DCP-385C
DCP-585CW

Version 0
USA/CAN



[You're reading an excerpt. Click here to read official BROTHER DCP-585CW user guide](http://yourpdfguides.com/dref/4255376)
<http://yourpdfguides.com/dref/4255376>

Manual abstract:

Register your product By registering your product with Brother International Corporation, you will be recorded as the original owner of the product. @@ Please complete and fax the Brother Warranty Registration And Test Sheet or, for your convenience and most efficient way to register your new product, register on-line at <http://www.brother.com/registration/FAQs> (frequently asked questions) The Brother Solutions Center is our one-stop resource for all your Digital Copier/Printer needs. You can download the latest software documents and utilities, read FAQs and troubleshooting tips, and learn how to get the most from your Brother product. <http://solutions.brother.com/> Note · You can check here for Brother driver updates. · To keep your machine performance up to date, check here for the latest firmware upgrade (for Windows® only). For Customer Service In USA: In Canada: 1-877-BROTHER (1-877-276-8437) 1-901-379-1215 (fax) 1-877-BROTHER (514) 685-4898 (fax) Service Center Locator (USA only) For the location of a Brother authorized service center, call 1-877-BROTHER (1-877-276-8437).

Service Center Locations (Canada only) For the location of a Brother authorized service center, call 1-877-BROTHER. i Ordering accessories and supplies For best quality results use only genuine Brother accessories, which are available at most Brother retailers. @@@@450 pages) 1 LC61C (Prints approx. 325 pages) 1 LC61M (Prints approx. 325 pages) 1 LC61Y (Prints approx.

@@@THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES IN THE USA AND SOME PROVINCES IN CANADA. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. IN NO EVENT WILL BROTHER'S LICENSOR(S) BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE EVEN IF BROTHER'S LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES IN THE USA AND SOME PROVINCES IN CANADA DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. IN ANY EVENT BROTHER'S LICENSOR'S LIABILITY TO YOU FOR ACTUAL DAMAGES FROM ANY CAUSE WHATSOEVER, AND REGARDLESS OF THE FORM OF THE ACTION (WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE), WILL BE LIMITED TO \$50. Compilation and Publication Notice Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications. The contents of this manual and the specifications of this product are subject to change without notice. Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication. iii Brother® One-Year Limited Warranty and Replacement Service (USA Only) Who is covered: This limited warranty ("warranty") is given only to the original end-use/retail purchaser (referred to in this warranty as "Original Purchaser") of the accompanying product, consumables and accessories (collectively referred to in this warranty as "this Product"). If you purchased a product from someone other than an authorized Brother reseller in the United States or if the product was used (including but not limited to floor models or refurbished product), prior to your purchase you are not the Original Purchaser and the product that you purchased is not covered by this warranty. What is covered: This Product includes a Machine and Consumable and Accessory Items. Consumable and Accessory Items include but are not limited to print heads, toner, drums, ink cartridges, print cartridges, cordless handset battery, refill ribbons, therma PLUS paper and thermal paper. Except as otherwise provided herein, Brother warrants that the Machine and the accompanying Consumable and Accessory Items will be free from defects in materials and workmanship, when used under normal conditions.

This warranty applies only to products purchased and used in the United States. For products purchased in, but used outside, the United States, this warranty covers only warranty service within the United States (and does not include shipping outside the United States). What is the length of the Warranty Periods: Machines: one year from the original purchase date. Accompanying Consumable and Accessory Items: 90 days from the original purchase date or the rated life of consumable, whichever comes first. What is NOT covered: This warranty does not cover: 1 Physical damage to this Product; 2 Damage caused by improper installation, improper or abnormal use, misuse, neglect or accident (including but not limited to transporting this Product without the proper preparation and/or packaging); 3 Damage caused by another device or software used with this Product (including but not limited to damage resulting from use of non Brother®-brand parts and Consumable and Accessory Items); 4 Consumable and Accessory Items that expired in accordance with a rated life; 5 Problems arising from other than defects in materials or workmanship; and, 6 Normal Periodic Maintenance Items, such as Paper Feeding Kit, Fuser and Laser Units. This limited warranty is VOID if this Product has been altered or modified in any way (including but not limited to attempted warranty repair without authorization from Brother and/or alteration/removal of the serial number). What to do if you think your Product is eligible for warranty service:

Report your issue to either our Customer Service Hotline at 1-877-BROTHER (1-877-276-8437) or to a Brother Authorized Service Center within the applicable warranty period. Supply Brother or the Brother Authorized Service Center with a copy of your dated bill of sale showing that this Product was purchased within the U.S. For the name of local Brother Authorized Service Center(s), call 1-877-BROTHER (1-877-276-8437) or visit www.brother-usa.com. What Brother will ask you to do: After contacting Brother or a Brother Authorized Service Center, you may be required to deliver (by hand if you prefer) or send the Product properly packaged, freight prepaid, to the Authorized Service Center together with a photocopy of your bill of sale. You are responsible for the cost of shipping, packing product, and insurance (if you desire). You are also responsible for loss or damage to this Product in shipping. What Brother will do: If the problem reported concerning your Machine and/or accompanying Consumable and Accessory Items is covered by this warranty and if you first reported the problem to Brother or an Authorized Service Center within the applicable warranty period, Brother or its Authorized Service Center will repair or replace the Machine and/or accompanying Consumable and Accessory Items at no charge to you for parts or labor.



[You're reading an excerpt. Click here to read official BROTHER DCP-585CW user guide](http://yourpdfguides.com/dref/4255376)
<http://yourpdfguides.com/dref/4255376>

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....23 *Setting the backlight brightness.*

.....
.....
.....
.....

.....
.....
.....
.....

..... 24 *Setting the Dim Timer for the backlight ..*

.....
.....
.....

.....
.....
.....
.....

....24 *Printing Reports*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 24 *How to print a report ..*

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....24 *vii Section II Copy 4 Making copies 26 How to copy .*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

....26 Making a single copy

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....26 Making multiple copies .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.26 Stop copying....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....26 Copy options.

.....

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

...26 Changing copy quality

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....27 Enlarging or reducing the image copied

.....
.....
.....
.....
.....
.....
.....
.....

..27 Making N in 1 copies or a poster (Page Layout)

.....
.....
.....
.....

....28 Adjusting Brightness and Contrast

.....
.....
.....
.....
.....
.....

.....29 Paper options ...

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
...30 Book Copy ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....30 Watermark Copy.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....31 Setting your changes as the new default....

.....
.....
.....

.....
.....
.....

.32 Restoring all settings to the factory settings

.....
.....
.....

.32 Section III Walk-up Photo Printing 5 PhotoCapture Center®: Printing photos from a memory card or USB Flash memory drive 34 PhotoCapture Center® Operations

.....
.....

.....
.....
.....

.....
.....
.....

.34 Printing from a memory card or USB Flash memory drive without a PC.....34 Scanning to a memory card or USB Flash memory drive without a PC ..

.....34 Using PhotoCapture Center® from your computer

.....
.....
.....
.....
.....
.....
.....
.....

..37 Print Index (Thumbnails)

.....
.....
.....
.....
.....
.....
.....
.....

.38 Printing Photos

.....
.....
.....
.....
.....
.....
.....
.....

.....38 Enhance Photos

.....
.....
.....
.....
.....
.....
.....
.....

.....39 Search by Date ...

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.42 Print All Photos

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....43 Slide Show....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.43 Trimming....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

44 DPOF printing

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....44 viii PhotoCapture Center® print settings

.....
.....
.....

.....
.....
.....
.....

.....
.....45 Print Quality ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....46 Paper options

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....46 Adjusting Brightness, Contrast and Color..

.....
.....
.....
.....

.....
.....
.....

.....47 Cropping

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....48 Borderless printing....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....48 Print Date.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...48 Setting your changes as the new default..

.....
.....
.....

.....
.....
.....

... 49 Restoring all settings to the factory settings ..

.....
.....

.....
.....
.....
.....

...49 Scan to a memory card or USB Flash memory drive

.....
.....
.....

.....
.....
.....

49 Entering Scan mode

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.49 How to scan to a memory card or USB Flash memory drive....

.....
.....

.....*50 How to set new default*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....*51 How to reset to the factory settings ..*

.....
.....
.....
.....

.....
.....
.....
.....

.51 Understanding the Error Messages

.....
.....
.....

.....
.....
.....
.....

51 6 Printing photos from a camera 52 Printing photos directly from a PictBridge camera.....

.....
.....

.....
.....
.....

.....*52 PictBridge requirements ...*

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
..52 Setting your digital camera ...
.....

.....
.....
.....
.....
.....
.....
.....
.....

...52 Printing Images.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....53 DPOF printing...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...53 Printing photos directly from a digital camera (without PictBridge)..

.....
.....

.....53 Printing Images.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....54 Understanding the Error Messages .

.....
.....

.....
.....
.....

.....
.....

... 54 Section IV Software 7 Software and Network features 56 Section V Appendixes A Safety and Legal 58 Choosing a location ..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.58 To use the machine safely.....

.....
.....
.....

.....
.....
.....

....59 Important safety instructions.

.....
.....

.....
.....
.....

.....
.....
.....

.....62 Federal Communications Commission (FCC) Declaration of Conformity (USA only) ..

.....
.....
.....

.....
.....
.....

.....
.....

.....
.... 67 ix B Troubleshooting and Routine Maintenance 68 Troubleshooting .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..68 If you are having difficulty with your machine

.....
.....
.....

68 Error and Maintenance messages.....

.....
.....

.....
.....
.....

.....
.....
.....

.73 Error animation

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....76 Printer jam or paper jam

.....
.....
.....

.....
.....
.....

.....

.....
76 Routine maintenance.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.78 Replacing the ink cartridges

.....

.....

.....

.....

.....

.....

.....

.....

.....

78 Cleaning the outside of the machine

.....

.....

.....

.....

.....

.....

.....

.81 Cleaning the scanner.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....81 Cleaning the machine printer platen

.....

.....

.....

.....

.....

.....

.....

.....82 Cleaning the paper pick-up roller..

.....

.....

.....

.....

.....

.....

.....

.....82 *Cleaning the print head*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....83 *Checking the print quality*

.....

.....

.....

.....

.....

.....

.....

.....

.....83 *Checking the print alignment*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....84 *Checking the ink volume*



[You're reading an excerpt. Click here to read official BROTHER DCP-585CW user guide](http://yourpdfguides.com/dref/4255376)

<http://yourpdfguides.com/dref/4255376>

..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.85 Machine Information

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...85 Checking the serial number ..

.....
.....
.....
.....

.....
.....
.....
.....

...85 Packing and shipping the machine

.....
.....
.....

.....
.....
.....
.....

...85 C Menu and Features 88 On-screen programming..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....88 Menu table .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

88 Mode and menu keys

.....
.....
.....

.....
.....
.....

.....
.....
.....

88 Menu table

.....
.....
.....

.....
.....
.....

.....
.....
.....

.89 D Specifications 102 General

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.....
.102 Print media.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....*104 Copy*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

105 PhotoCapture Center®

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....*106 PictBridge*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
...107 Scanner ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..108 Printer

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

....109 Interfaces

.....
.....
.....

.....
.....
.....

.....
.....
.....

.110 Computer requirements

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....111 Consumable items

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....112 Network (LAN) (DCP-585CW only) .

.....
.....
.....

.....
.....
.....

.....
.....

.113 Wireless one-push configuration

.....

.....
.....
.....
.....

.....
.....
.....

.114 E F Glossary Index 115 116 x Section I General General Information Loading documents and paper General setup 1 2 9 22 1 General Information
Accessing the Software User's Guide and Network User's Guide This User's Guide does not contain all the information about the machine such as how to use
the advanced features of Printer, Scanner and Network (DCP-585CW only). When you are ready to learn detailed information about these operations, read
the Software User's Guide and Network User's Guide. 1 Using the documentation Thank you for buying a Brother machine! Reading the documentation will
help you make the most of your machine. 1 1 Symbols and conventions used in the documentation The following symbols and conventions are used throughout
the documentation. **Bold** typeface identifies specific keys on the machine's control panel. *Italicized* typeface emphasizes an important point or refers you
to a related topic. Text in *Courier New* font identifies messages on the LCD of the machine. 1 Viewing Documentation Viewing Documentation (For
Windows®) To view the documentation, from the Start menu, point to Brother, DCP-XXXX (where XXXX is your model name) from the programs group, and
then choose User's Guides in HTML format. If you have not installed the software, you can find the documentation by following the instructions below: 1
Italics 1 *Courier New* Warnings tell you what to do to prevent possible personal injury.

Cautions specify procedures you must follow or avoid to prevent possible damage to the machine or other objects. Electrical Hazard icons alert you to
possible electrical shock. Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.
Improper Setup icons alert you to devices and operations that are not compatible with the machine. a b Turn on your PC. Insert the Brother CD-ROM into
your CD-ROM drive. If the model name screen appears, click your model name. 2 General Information c If the language screen appears, click your language.
The CD-ROM main menu will appear. How to find Scanning instructions There are several ways you can scan documents.

You can find the instructions as follows: Software User's Guide Scanning (For Windows® 2000 Professional/Windows® XP and Windows Vista®)
ControlCenter3 (For Windows® 2000 Professional/Windows® XP and Windows Vista®) Network Scanning (DCP-585CW only) ScanSoft™ PaperPort™
11SE with OCR How-to-Guides The complete ScanSoft™ PaperPort™ 11SE with OCR How-to-Guides can be viewed from the Help selection in the
ScanSoft™ PaperPort™ 11SE application. 1 1 Note If this window does not appear, use Windows® Explorer to run the start.exe program from the root
directory of the Brother CD-ROM. d e Click Documentation. Click the documentation you want to read.

HTML documents: Software User's Guide and Network User's Guide in HTML format. This format is recommended for viewing on your computer. PDF
documents: User's Guide for stand-alone operations, Software User's Guide and Network User's Guide in PDF format. This format is recommended for
printing the manuals. Click to go to the Brother Solutions Center, where you can view or download the PDF documents.
(Internet access and PDF Reader software are required.) How to find Network setup instructions (DCP-585CW only) Your machine can be connected to a

wireless or wired network. You can find basic setup instructions in the Quick Setup Guide. If your wireless access point supports SecureEasySetup™, Wi-Fi Protected Setup™ or AOSSTM, follow the steps in the Quick Setup Guide. For more information about network setup please see the Network User's Guide. 1 3 Chapter 1 Viewing Documentation (For Macintosh®) How to find Scanning instructions 1 1 a Turn on your Macintosh®. Insert the Brother CD-ROM into your CD-ROM drive. The following window will appear. There are several ways you can scan documents. You can find the instructions as follows: Software User's Guide Scanning (For Mac OS® X 10.

2.4 or greater) ControlCenter2 (For Mac OS® X 10.2.4 or greater) Network Scanning (For Mac OS® X 10.2.4 or greater) (DCP-585CW only) Presto!® PageManager® User's Guide The complete Presto!® PageManager® User's Guide can be viewed from the Help selection in the Presto!® PageManager® application. b c d Double-click the Documentation icon. Double-click your language folder. Double-click the top.html file to view the Software User's Guide and Network User's Guide in HTML format.

How to find Network setup instructions (DCP-585CW only) Your machine can be connected to a wireless or wired network. You can find basic setup instructions in the Quick Setup Guide. If your wireless access point supports SecureEasySetup™, Wi-Fi Protected Setup™ or AOSSTM, follow the steps in the Quick Setup Guide. For more information about network setup please see the Network User's Guide. 1 e Click the documentation you want to read. Software User's Guide Network User's Guide (DCP-585CW only) 4 General Information Accessing Brother Support (For Windows®) You can find all the contacts you will need, such as Web support (Brother Solutions Center), Customer Service and Brother Authorized Service Centers in Brother numbers on page i and on the Brother CDROM. Click Brother Support on the main menu. The following screen will appear: To visit our web site for original/genuine Brother Supplies (<http://www.brother.com/original/>), click Supplies Information.

1 1 To access the Brother CreativeCenter (<http://www.brother.com/creativecenter/>) for FREE photo projects and printable downloads, click Brother Creative Center. To return to the main page, click Back or If you have finished, click Exit. To access our web site (<http://www.brother.com>), click Brother Home Page.

To view all Brother Numbers, including Customer Service numbers for the USA and Canada, click Support Information. To access the USA Brother online shopping mall (<http://www.brothermall.com>).

com) for additional product and services information, click Brother Mall.com. To access Canada's Brother online shopping mall (<http://www.brother.ca>) for additional product and services information, click Shop Online (Canada). For the latest news and product support information (<http://solutions.brother.com>).



[You're reading an excerpt. Click here to read official BROTHER DCP-585CW user guide](http://yourpdfguides.com/dref/4255376)
<http://yourpdfguides.com/dref/4255376>

brother.com), click Brother Solutions Center. 5 Chapter 1 Control panel overview The DCP-385C and DCP-585CW have the same control panel keys. 1 9 8 7
6 5 01 Quality Enlarge/Reduce Ratio: Paper Type ype Normal 100% Plain Paper Mem.

1 1 LCD (liquid crystal display) Displays messages on the screen to help you set up and use your machine. Also, you can adjust the angle of the LCD screen by lifting it. Number of Copies Use this key to make multiple copies. Menu keys: d or c Press to scroll backward or forward to a menu selection. Also, press to choose options.

a or b Press to scroll through the menus and options. Clear/Back Press to go back to the previous menu level. Menu Lets you access the main menu to program the machine. OK Lets you choose a setting. 2 4 3 Start keys: Color Start 4 2 3 Lets you start making copies in full color.

Also lets you start a scanning operation (in color or black & white, depending on the scanning setting in the ControlCenter software). Black Start Lets you start making copies in black & white. Also lets you start a scanning operation (in color or black & white, depending on the scanning setting in the ControlCenter software). 5 6 Stop/Exit Stops an operation or exits from a menu. On/Off You can turn the machine on and off. If you turn the machine off, it will still periodically clean the print head to maintain print quality. Ink Lets you clean the print head, check the print quality, and check the available ink volume. 7 6 General Information 8 Mode keys: Scan Lets you access Scan mode. Photo Capture Lets you access PhotoCapture Center® mode. Basic Operations The following steps show how to change a setting in the machine.

In this example the Paper Type setting is changed from Plain Paper to Inkjet Paper. 1 1 a b Press Menu. Press a or b to choose General Setup. General Setup Network Print Reports Machine Info. Initial Setup 9 Warning LED Turns orange and blinks when the LCD displays an error or an important status message.

Note Most of the illustrations in this User's Guide show the DCP-385C. MENU Select & Press OK Press OK. LCD screen The LCD screen shows the mode the machine is in, the current settings, and the available ink volume. 1 c d Press a or b to choose Paper Type. Press d or c to choose Inkjet Paper.

Press OK. You can see the current setting on the LCD: Inkjet Paper Letter 10 Mins Select & Press OK 01 Quality Enlarge/Reduce Ratio: Paper Type ype Normal 100% Plain Paper Mem. 2 General Setup Paper Type Paper Size LCD Settings Sleep Mode MENU e Press Stop/Exit. 1 1 Wireless Status (DCP-585CW only) A four level indicator shows the current wireless signal strength if you are using a wireless connection. 0 2 Max Ink indicator Lets you see the available ink volume.

7 Chapter 1 Status LED indications The Status LED (light emitting diode) is a light that shows the status of the machine, as shown in the table. 1 01 Quality Enlarge/Reduce Ratio: Paper Type ype Normal 100% Plain Paper Mem. LED DCP status Ready Description The DCP is ready for use. Off Cover open Orange Cannot Print The cover is open. Close the cover.

(See Error and Maintenance messages on page 73.) Replace the Ink cartridge with a new one. (See Replacing the ink cartridges on page 78.) Put paper in the tray or clear the paper jam. Check the LCD message. (See Error and Maintenance messages on page 73.) Check the LCD message. (See Error and Maintenance messages on page 73.) Paper error Other messages 8 2 Note Loading documents and paper c 2 2 Loading paper and other print media To print on Photo (4"×6") or Photo L (3.5"×5") paper, you must use the photo bypass tray.

(See Loading photo paper on page 13.) With both hands, gently press and slide the paper side guides (1) and then the paper length guide (2) to fit the paper size. Make sure that the triangular marks (3) on the paper side guides (1) and paper length guide (2) line up with the mark for the paper size you are using. 2 1 a If the paper support flap is open, close it, and then close the paper support. Pull the paper tray completely out of the machine. 3 2 b 1 Lift the output paper tray cover (1). 3 Note When you use Legal size paper, press and hold the universal guide release button (1) as you slide out the front of the paper tray. 1 9 Chapter 2 d Fan the stack of paper well to avoid paper jams and misfeeds. f Gently adjust the paper side guides (1) to fit the paper with both hands. Make sure the paper side guides touch the sides of the paper.

1 Note Always make sure that the paper is not curled. e Gently put the paper into the paper tray print side down and top edge in first. Check that the paper is flat in the tray. Note Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems. g Close the output paper tray cover.

10 Loading documents and paper h Slowly push the paper tray completely into the machine. Loading envelopes and post cards About envelopes Use envelopes that weigh from 20 to 25 lb (80 to 95 g/m²). Some envelopes need margin settings to be set in the application. Make sure you do a test print first before printing many envelopes. CAUTION DO NOT use any of the following types of envelopes, as they will cause paper feed problems: · That are of a baggy construction.

· That are embossed (have raised writing on them). · That have clasps or staples. 2 2 2 i While holding the paper tray in place, pull out the paper support (1) until it clicks and unfold the paper support flap (2). 2 1 · That are pre-printed on the inside. Glue 2 Note Do not use the paper support flap for Legal paper. Double flap 2 Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using. 11 Chapter 2 How to load envelopes and post cards 2 b a Before loading, press the corners and sides of envelopes or post cards to make them as flat as possible. Note If envelopes or post cards are 'doublefeeding,' put one envelope or post card in the paper tray at a time. Put envelopes or post cards in the paper tray with the address side down and the leading edge in first as shown in the illustration. With both hands, gently press and slide the paper side guides (1) and paper length guide (2) to fit the size of the envelopes or post cards.

1 2 If you have problems when printing on envelopes, try the following suggestions: 2 a b c Open the envelope flap. Make sure the open flap is either to the side of the envelope or to the back edge of the envelope when printing. Adjust the size and margin in your application. 12 Loading documents and paper Loading photo paper Note In Canada, the photo bypass tray is called the photo paper tray.



[You're reading an excerpt. Click here to read official BROTHER](http://yourpdfguides.com/dref/4255376)

[DCP-585CW user guide](http://yourpdfguides.com/dref/4255376)

<http://yourpdfguides.com/dref/4255376>

(Up to 0.

25 mm) 20 to 25 lb (75 to 95 g/m²) Up to 20 mil. (Up to 0.52 mm) Up to 100 sheets of plain paper 20 lb (80 g/m²). For Photo 4"×6" paper and Photo L 3.5"×5" paper, use the photo bypass tray (in USA) or the photo paper tray (in Canada). (See Loading photo paper on page 13.) 19 Chapter 2 Loading documents You can make copies and scan from the scanner glass. How to load documents 2 2 a b 2 Lift the document cover. Using the document guidelines on the upper left and top, place the document in the upper left hand corner with the document face down on the scanner glass. Using the scanner glass You can use the scanner glass to copy or scan pages of a book or one page at a time.

Document Sizes Supported Length: Width: Weight: Up to 11.7 in. (297 mm) Up to 8.5 in. (215.

9 mm) Up to 4.4 lb (2 kg) 2 c Close the document cover. CAUTION If you are scanning a book or thick document, DO NOT slam the cover down or press on it. 20 Loading documents and paper Scannable area The scannable area depends on the settings in the application you are using. The figures below show the unscannable areas.

2 3 1 4 2 2 Usage Document Size Copy Scan All paper sizes All paper sizes Top (1) Bottom (2) 0.12 in. (3 mm) 0.12 in. (3 mm) Left (3) Right (4) 0.12 in. (3 mm) 0.12 in. (3 mm) 21 3 General setup Paper Size You can use five sizes of paper for printing copies: Letter, Legal, A4, A5, and 4 × 6 in. (10 × 15 cm).

When you load a different size of paper in the machine, you will need to change the paper size setting at the same time. 3 Paper settings Paper Type To get the best print quality, set the machine for the type of paper you are using. 3 3 3 a b c d Press Menu. Press a or b to choose General Setup. Press OK. Press a or b to choose Paper Type. Press d or c to choose Plain Paper, Inkjet Paper, Brother BP71, Other Glossy or Transparency. Press OK. Press Stop/Exit. a b c d e Press Menu.

Press a or b to choose General Setup. Press OK. Press a or b to choose Paper Size. Press d or c to choose Letter, Legal, A4, A5 or 4"×6". Press OK.

Press Stop/Exit. e Note The machine ejects paper with printed surfaces face up onto the paper tray in front of the machine. When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams. 22 General setup Sleep Mode You can choose how long the machine must be idle (from 1 to 60 minutes) before it goes into sleep mode. The timer will restart if any operation is carried out on the machine.

3 LCD screen Changing LCD language You can change the LCD language. 3 3 a b c d Press Menu. Press a or b to choose General Setup. Press OK. Press a or b to choose Sleep Mode. Press d or c to choose 1Min, 2Mins, 3Mins, 5Mins, 10Mins, 30Mins or 60Mins which is the length of time the machine is idle before entering sleep mode. Press OK. Press Stop/Exit. a b c d e Press Menu. Press a or b to choose Initial Setup.

Press OK. Press a or b to choose Local Language. Press OK. Press a or b to choose your language. Press OK. Press Stop/Exit. 3 e LCD Contrast You can adjust the LCD contrast for a sharper and more vivid display. If you are having difficulty reading the LCD, try changing the contrast setting. 3 a b c d e f Press Menu. Press a or b to choose General Setup.

Press OK. Press a or b to choose LCD Settings. Press OK. Press a or b to choose LCD Contrast. Press d or c to choose Light, Med or Dark.

Press OK. Press Stop/Exit. 23 Chapter 3 Setting the backlight brightness You can adjust the brightness of the LCD backlight. If you are having difficulty reading the LCD, try changing the brightness setting. Printing Reports 3 3 The following reports are available: Help List A help list showing how to program your machine.

User Settings Lists your settings. Network Config (DCP-585CW only) Lists your Network settings. a b c d e f Press Menu. Press a or b to choose General Setup. Press OK. Press a or b to choose LCD Settings. Press OK. Press a or b to choose Backlight. Press d or c to choose Light, Med or Dark. Press OK.

Press Stop/Exit. How to print a report 3 a b c 3 Press Menu. Press a or b to choose Print Reports. Press OK. Press a or b to choose the report you want. Press OK. Press Black Start. Setting the Dim Timer for the backlight You can set how long the LCD backlight stays on after the last key is pressed. d a b c d e f Press Menu. Press a or b to choose General Setup.

Press OK. Press a or b to choose LCD Settings. Press OK. Press a or b to choose Dim Timer. Press d or c to choose 10Secs, 20Secs, 30Secs or Off.

Press OK. Press Stop/Exit. 24 Section II Copy Making copies II 26 4 a b Making copies Copy options You can change the copy settings from the default display. The LCD shows: 4 How to copy Making a single copy Load your document. (See Loading documents on page 20.

) Press Black Start or Color Start. 4 4 4 1 01 Quality Enlarge/Reduce Ratio: Paper Type ype COPY Normal 100% Plain Paper Copy Press Start Making multiple copies You can make up to 99 copies. 4 1 No of Copies You can enter the number of copies you want by pressing + or - repeatedly. a b c Load your document. (See Loading documents on page 20.) Press + or - repeatedly until the number of copies you want appears (up to 99). Press Black Start or Color Start. Press a or b to scroll through the copy options menu. Quality (See page 27.) Enlarge/Reduce (See page 27.

) Paper Type (See page 30.) Paper Size (See page 30.) Brightness (See page 29.) Contrast (See page 29.) Page Layout (See page 28.) Book Copy (See page 30.) Watermark Copy (See page 31.) Set New Default (See page 32.) Factory Reset (See page 32.) When the option you want is highlighted, press OK.

Stop copying To stop copying, press Stop/Exit. 4 Note Book Copy and Watermark Copy features are supported by technology from Reallusion, Inc. 26 Making copies You can change the copy settings temporarily for the next copy. These settings are temporary, and the machine returns to its default settings 1 minute after copying. If you have finished choosing settings, press Black Start or Color Start.

If you want to choose more settings, press a or b. Enlarging or reducing the image copied You can choose an enlargement or reduction ratio. If you choose Fit to Page, your machine will adjust the size automatically to the paper size you set. 4 Note You can save some of the settings that you use most often by setting them as default. These settings will stay until you change them again.

(See Setting your changes as the new default on page 32.) a b c d Load your document. Enter the number of copies you want. Press a or b to choose Enlarge/Reduce. Press d or c to choose Enlarge, Reduce, Fit to Page, Custom(25-400%), or 100%. Press OK. Do one of the following. If you choose Enlarge or Reduce press OK and press d or c to choose the enlargement or reduction ratio you want.



[You're reading an excerpt. Click here to read official BROTHER DCP-585CW user guide](http://yourpdfguides.com/dref/4255376)
<http://yourpdfguides.com/dref/4255376>

Press OK and go to step f. If you choose Custom(25-400%), press OK.

Press + or - to enter an enlargement or reduction ratio from 25% to 400%. Press OK and go to step f. If you choose 100% or Fit to Page, press OK. Go to step f. 4 Changing copy quality You can choose the copy quality. The factory setting is Normal. Fast Fast copy speed and lowest amount of ink used. Use this setting to save time (documents to be proof read, large documents or many copies). Recommended setting for ordinary printouts. Good copy quality with adequate copy speed.

Use this setting to copy precise images such as photographs. The highest resolution and slowest speed. 4 e Normal Best a b c d e 100% Load your document. Enter the number of copies you want. Press a or b to choose Quality.

Press d or c to choose Fast, Normal or Best. Press OK. If you do not want to change additional settings, press Black Start or Color Start. 198% 4"x6"iA4 186% 4"x6"iLTR 104% EXEiLTR 97% LTRiA4 93% A4iLTR 83% 78% 46% LTRi4"x6" Fit to Page Custom(25-400%) 27 Chapter 4 f If you do not want to change additional settings, press Black Start or Color Start. Note Watermark Copy, Book Copy and Enlarge/Reduce are not available with Page Layout.

Note · Page Layout is not available with Enlarge/Reduce. · Fit to Page options is not available with Book Copy and Watermark Copy. · Fit to Page does not work properly if the document on the scanner glass is skewed by more than 3 degrees. Using the document guidelines on the left and top, place your document in the upper left hand corner, with the document face down on the scanner glass. · Fit to Page is not available for a Legal size document. a b c d Load your document. Enter the number of copies you want. Press a or b to choose Page Layout. Press d or c to choose Off(1 in 1), 2 in 1 (P), 2 in 1 (L), 4 in 1 (P), 4 in 1 (L) or Poster(3 x 3). Press OK.

If you do not want to change additional settings, press Black Start or Color Start to scan the page. If you are making a poster the machine scans the pages and starts printing. Go to f. After the machine scans the page, press + (Yes) to scan the next page. Place the next page on the scanner glass. Press OK. Repeat f and g for each page of the layout. After all the pages have been scanned, press - (No) to finish. e Making N in 1 copies or a poster (Page Layout) The N in 1 copy feature can help you save paper by letting you copy two or four pages onto one printed page. You can also make a poster.

When you use the poster feature your machine divides your document into sections, then enlarges the sections so you can assemble them into a poster. 4 f g Important Make sure paper size is set to Letter or A4. h 4 You cannot use the Enlarge/Reduce setting with the N in 1 and Poster features. If you are producing multiple color copies, N in 1 copy is not available. (P) means Portrait and (L) means Landscape.

You can only make one poster copy at a time. 28 Making copies Place your document face down in the direction shown below. 2 in 1 (P) Adjusting Brightness and Contrast Brightness 4 4 2 in 1 (L) You can adjust the copy brightness to make copies darker or lighter. 4 in 1 (P) 4 in 1 (L) a b c d e Load your document. Enter the number of copies you want.

Press a or b to choose Brightness. Press d to make a darker copy or press c to make a lighter copy. Press OK. If you do not want to change additional settings, press Black Start or Color Start. 4 4 Poster (3 x 3) You can make a poster size copy of a photograph. Contrast You can adjust the copy contrast to help an image look sharper and more vivid. Note If photo paper has been chosen in the Paper Type setting for N in 1 copies, the machine will print the images as if Plain paper had been chosen. a b c d e Load your document. Enter the number of copies you want. Press a or b to choose Contrast.

Press d to increase the contrast or press c to decrease the contrast. Press OK. If you do not want to change additional settings, press Black Start or Color Start. 29 Chapter 4 Paper options Paper Type If you are copying on special paper, set the machine for the type of paper you are using to get the best print quality. 4 Book Copy Book copy corrects dark borders and skew. Your machine can correct the data automatically or you can make specific corrections. 4 4 a b c d Load your document. Enter the number of copies you want. Press a or b to choose Paper Type. Press d or c to choose Plain Paper, Inkjet Paper, Brother BP71, Other Glossy or Transparency.

Press OK. If you do not want to change additional settings, press Black Start or Color Start. 4 a b c d Load your document. Enter the number of copies you want. Press a or b to choose Book Copy.

Do one of the following: If you want to correct the data yourself, press d or c to choose On(Preview). Press OK. Press Black Start or Color Start and go to step e. If you want the machine to correct the data automatically, press d or c to choose On and go to step f. e Paper Size If copying on paper other than Letter size, you will need to change the paper size setting.

You can copy only on Letter, Legal, A4, A5 or Photo 4 in. x 6 in. (10 cm x 15 cm) paper. e f Adjust the skewed data by using d or c. Remove the shadows by using a or b. If you have finished making corrections, press Black Start or Color Start. a b c d e Load your document. Enter the number of copies you want. Press a or b to choose Paper Size. Press d or c to choose Letter, Legal, A4, A5 or 4"x6".

Press OK. If you do not want to change additional settings, press Black Start or Color Start. Note Book Copy is not available with Page Layout, Fit to Page and Watermark Copy. 30 Making copies Watermark Copy You can place a logo or text into your document as a Watermark. You can select one of the template watermarks (CONFIDENTIAL, DRAFT or COPY), data from your media cards or USB Flash memory drive, or scanned data. 4 Using data from a media card or USB Flash memory drive 4 a b c d e 4 Load your document. Enter the number of copies you want. Press a or b to choose Watermark Copy.

Press OK. Press d or c to choose On.

Press a or b to choose Current Setting. Press OK. Press a or b to choose Media. Insert a media card or USB Flash memory drive. Press OK.

Press d or c to choose the data you want to use for the watermark. Press OK. If you want to change any of the displayed settings, press a or b to choose the setting, and then press d or c to choose the option you want. When you are finished changing settings, press a or b to choose Apply. Press OK.

Press Black Start or Color Start. CAUTION Note Watermark Copy is not available with Fit to Page, Page Layout and Book Copy. 4 Using template a b c d e f g Load your document. Enter the number of copies you want. Press a or b to choose Watermark Copy Press OK. Press d or c to choose On.



[You're reading an excerpt. Click here to read official BROTHER DCP-585CW user guide](http://yourpdfguides.com/dref/4255376)
<http://yourpdfguides.com/dref/4255376>

Press a or b to choose Current Setting. Press OK. Press a or b to choose Template. Press OK.

If you want to change any of the displayed settings, press a or b to choose the setting, and then press d or c to choose the option you want. When you are finished changing settings, press a or b to choose Apply. Press OK. Press Black Start or Color Start. f g h i j h i DO NOT take out the memory card or USB Flash memory drive while Photo Capture is blinking to avoid damaging the card, USB Flash memory drive or data stored on the card. 31 Chapter 4 Using a scanned paper document as your watermark 4 Setting your changes as the new default You can save the copy settings for Quality, Enlarge/Reduce, Brightness, Contrast and Page Layout that you use most often by setting them as the default settings. These settings will stay until you change them again. 4 a b c d e Enter the number of copies you want. Press a or b to choose Watermark Copy. Press OK.

Press d or c to choose On. Press a or b to choose Current Setting. Press OK. Press a or b to choose Scan. Press OK.

Then set the page that you want to use as a the watermark on the scanner glass. Press Black Start or Color Start. Take out the watermark document you scanned and load the document you want to copy. Press d or c to change the Transparency of the watermark. Press OK.

Press Black Start or Color Start. a Press a or b to choose your new setting. Press OK. Repeat this step for each setting you want to change. After changing the last setting, press a or b to choose Set New Default. Press OK. Press + to choose Yes. Press Stop/Exit. b c d f g h i Restoring all settings to the factory settings 4 You can restore all the settings you have changed back to the factory settings. These settings will stay until you change them again.

Note You cannot enlarge or reduce the scanned watermark. a b c Press a or b to choose Factory Reset. Press OK. Press + to choose Yes. Press Stop/Exit. 32

Section III Walk-up Photo PrintingI PhotoCapture Center®: Printing photos from a memory card or USB Flash memory drive 34 Printing photos from a camera II 52 5 PhotoCapture Center®: Printing photos from a memory card or USB Flash memory drive Using a memory card or USB Flash memory drive 5 5 PhotoCapture Center® Operations Printing from a memory card or USB Flash memory drive without a PC Even if your machine is not connected to your computer, you can print photos directly from digital camera media or a USB Flash memory drive. (See Print Images on page 37.) 5 5 Your Brother machine has media drives (slots) for use with the following popular digital camera media: CompactFlash®, Memory Stick®, Memory Stick Pro™, SD, SDHC, xD-Picture Card™ and USB Flash memory drives. CompactFlash® Memory Stick® Memory Stick Pro™ Scanning to a memory card or USB Flash memory drive without a PC You can scan documents and save them directly to a memory card or USB Flash memory drive. (See Scan to a memory card or USB Flash memory drive on page 49.

) 5 SD, SDHC 0.87 in. (22 mm) or less xD-Picture Card™ Using PhotoCapture from your computer Center® 5 0.43 in. (11 mm) or less USB Flash memory drive You can access a memory card or USB Flash memory drive that is inserted in the front of the machine from your computer.

(See PhotoCapture Center® for Windows® or Remote Setup & PhotoCapture Center® for Macintosh® in the Software User's Guide on the CD-ROM.) miniSD™ can be used with a miniSD™ adapter. microSD can be used with a microSD adapter. Memory Stick Duo™ can be used with a Memory Stick Duo™ adapter. Memory Stick Pro Duo™ can be used with a Memory Stick Pro Duo™ adapter.

Memory Stick Micro(M2) can be used with a Memory Stick Micro(M2) adapter. Adapters are not included with the machine. Contact a third party supplier for adapters. The PhotoCapture Center® feature lets you print digital photos from your digital camera at high resolution to get photo quality printing. 34

PhotoCapture Center®: Printing photos from a memory card or USB Flash memory drive Memory cards or a USB Flash memory drive folder structure5 Your machine is designed to be compatible with modern digital camera image files, memory cards and USB Flash memory drive; however, please read the points below to avoid errors: The image file extension must be .JPG (Other image file extensions like .JPEG, .TIF, .GIF and so on will not be recognized).

Walk-up PhotoCapture Center® printing must be performed separately from PhotoCapture Center® operations using the PC.

(Simultaneous operation is not available.) IBM Microdrive™ is not compatible with the machine. The machine can read up to 999 files (including the folder inside media) on a memory card or USB Flash memory drive. CompactFlash® Type II is not supported. This product supports xD-Picture Card™ Type M / Type M+ / Type H (Large Capacity). The DPOF file on the memory cards must be in a valid DPOF format. (See DPOF printing on page 44.) Please be aware of the following: When printing Print Index or Print Images, the PhotoCapture Center® will print all valid images, even if one or more images have been corrupted. Corrupted images will not be printed. (memory card users) Your machine is designed to read memory cards that have been formatted by a digital camera.

When a digital camera formats a memory card it creates a special folder into which it copies image data. If you need to modify the image data stored on a memory card with your PC, we recommend that you do not modify the folder structure created by the digital camera. When saving new or modified image files to the memory card we also recommend you use the same folder your digital camera uses. If the data is not saved to the same folder, the machine may not be able to read the file or print the image. (USB Flash memory drive users) This machine supports USB Flash memory drives that have been formatted by Windows®.

5 35 Chapter 5 Getting started Firmly put a memory card or USB Flash memory drive into the proper slot. Photo Capture key lights: 5 Photo Capture light is on, the memory card or USB Flash memory drive is properly inserted. 1 1 2 3 4 5 USB Flash memory drive CompactFlash® SD, SDHC 2 3 4 5 Photo Capture light is off, the memory card or USB Flash memory drive is not properly inserted. Photo Capture light is blinking, the memory card or USB Flash memory drive is being read or written to. CAUTION DO NOT unplug the power cord or remove the memory card or USB Flash memory drive from the media drive (slot) while the machine is reading or writing to the memory card or USB Flash memory drive (the Photo Capture key is blinking).

You will lose your data or damage the card. Memory Stick®, Memory Stick Pro™ xD-Picture Card™ CAUTION The USB direct interface supports only a USB Flash memory drive, a PictBridge compatible camera, or a digital camera that uses the USB mass storage standard.



[You're reading an excerpt. Click here to read official BROTHER](http://yourpdfguides.com/dref/4255376)

[DCP-585CW user guide](http://yourpdfguides.com/dref/4255376)

<http://yourpdfguides.com/dref/4255376>

Any other USB devices are not supported. The machine can only read one memory card or USB Flash memory drive at a time so do not put more than one device in the machine at a time. 36 PhotoCapture Center®: Printing photos from a memory card or USB Flash memory drive Entering PhotoCapture mode After you insert the memory card or USB Flash memory drive, press the (Photo Capture) key to illuminate it in blue and display the PhotoCapture options on the LCD. The LCD shows: View Photo(s) Print Index Print Photos Enhance Photos Search by Date Print All Photos PHOTO 5 Print Images View Photo(s) You can preview your photos on the LCD before you print them. If your photos are large files there may be a delay before each photo is displayed on the LCD. 5 5 View photos on the LCD and select the images you want to print. a Make sure you have put a memory card or USB Flash memory drive in the proper slot. Press (Photo Capture).

Press a or b to choose View Photo(s). Press OK. Press d or c to choose your photo. Press + or - repeatedly to enter the number of copies you want. Repeat step c and step d until you have chosen all the photos. Select & Press OK 5 Press a or b to scroll through the Photo Capture key options. View Photo(s) (See page 37.) Print Index (See page 38.) Print Photos (See page 38.) Enhance Photos (See page 39.)

) Search by Date (See page 42.) Print All Photos (See page 43.) Slide Show (See page 43.) Trimming (See page 44.) b c d e Note Press Clear/Back to go back to the previous level.

Note If your digital camera supports DPOF printing, see DPOF printing on page 44. When the option you want is highlighted, press OK. f After you have chosen all the photos, do one of the following: Press OK and change the print settings. (See page 45.) If you do not want to change any settings, press Color Start to print.

37 Chapter 5 Print Index (Thumbnails) The PhotoCapture Center® assigns numbers for images (such as No.1, No.2, No.3, and so on). 5 d Press a or b to choose the paper settings, Paper Type and Paper Size. Do one of the following. If you chose Paper Type, press d or c to choose the type of paper you are using, Plain Paper, Inkjet Paper, Brother BP71 or Other Glossy. Press OK. If you chose Paper Size, press d or c to choose the paper size you are using, Letter or A4. Press OK.

If you do not want to change the paper settings, go to e. The PhotoCapture Center® does not recognize any other numbers or file names that your digital camera or computer has used to identify the pictures. You can print a thumbnail page. This will show all the pictures on the memory card or USB Flash memory drive. e Press Color Start to print. Note Only file names that are 8 characters or less will be printed correctly on the index sheet. Printing Photos Before you can print an individual image, you have to know the image number. 5 a Make sure you have put the memory card or USB Flash memory drive in the proper slot. Press (Photo Capture). Press a or b to choose Print Index.

Press OK. Press a or b to choose Layout Format. Press d or c to choose 6 Images/Line or 5 Images/Line. Press OK. a Make sure you have put a memory card or USB Flash memory drive in the proper slot.

Press (Photo Capture). Print the Index. (See Print Index (Thumbnails) on page 38.) Press a or b to choose Print Photos. Press OK.

Press a repeatedly to enter the image number that you want to print from the Index page (Thumbnails). If you want to choose a two digit number, press c to move the cursor to the next digit. (For example, enter 1, c, 6 to print image No.16.) Press OK. b c b c d 6 Images/Line 5 Images/Line Print time for 5 Images/Line will be slower than 6 Images/Line, but the quality is better. 38 Note Press b to decrease the image number. PhotoCapture Center®: Printing photos from a memory card or USB Flash memory drive e Repeat step d until you have entered all the image numbers that you want to print. (For example, enter 1, OK, 3, OK, 6, OK to print images No.1, No.

3 and No.6.) Auto Correct Auto Correct is available for most photos. The machine decides the suitable effect for your photo. 5 Note You can enter up to 12 characters (including commas) for the image numbers you want to print. a Make sure you have put a memory card or USB Flash memory drive in the proper slot. Press (Photo Capture). Press a or b to choose Enhance Photos. Press OK. Press d or c to choose your photo.

Press OK. Press a or b to choose Auto Correct. Press OK. Press OK. Then press + or - repeatedly to enter the number of copies you want.

Do one of the following. Press OK and change the print settings. (See page 45.) If you do not want to change any settings, press Color Start to print. f g h After you have chosen all the image numbers, press OK again.

Press + or - repeatedly to enter the number of copies you want. Do one of the following: Change the print settings. (See page 45.) If you do not want to change any settings, press Color Start to print. b c d e f 5 5 Enhance Photos You can edit and add effects to your photos and view them on the LCD before printing. Note After adding each effect, you can enlarge the view of the image by pressing Ink. To go back to the original size, press Ink again. The Enhance Photos feature is supported by technology from Reallusion, Inc. Note If Remove Red-Eye appears on the LCD, press a to attempt to remove red-eye from your photo. 39 Chapter 5 Enhance Skin-Tone Enhance Skin-Tone is best used for adjusting portrait photographs.

It detects human skin color in your photos and adjusts the image. 5 Enhance Scenery Enhance Scenery is best used for adjusting landscape photographs. It highlights green and blue area in your photo, so that the landscape looks more sharp and vivid. 5 a Make sure you have put a memory card or USB Flash memory drive in the proper slot. Press (Photo Capture). Press a or b to choose Enhance Photos. Press OK. Press d or c to choose your photo. Press OK.

Press a or b to choose Enhance Skin-Tone.

Press OK. a b c d Make sure you have put the memory card or USB Flash memory drive in the proper slot. Press (Photo Capture). Press a or b to choose Enhance Photos. Press OK.

Press d or c to choose your photo. Press OK. Press a or b to choose Enhance Scenery. Press OK. b c d Note You can also adjust the effect level manually, by pressing a or b.

Note You can also adjust the effect level manually, by pressing a or b. e f Press OK. Then press + or - repeatedly to enter the number of copies you want. Do one of the following. Press OK and change the print settings. (See page 45.) If you do not want to change any settings, press Color Start to print. e f Press OK. Then press + or - repeatedly to enter the number of copies you want. Do one of the following.

Press OK and change the print settings. (See page 45.) If you do not want to change any settings, press Color Start to print.



[You're reading an excerpt. Click here to read official BROTHER DCP-585CW user guide](http://yourpdfguides.com/dref/4255376)
<http://yourpdfguides.com/dref/4255376>