



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BROTHER DCP-8250DN. You'll find the answers to all your questions on the BROTHER DCP-8250DN in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BROTHER DCP-8250DN**  
**User guide BROTHER DCP-8250DN**  
**Operating instructions BROTHER DCP-8250DN**  
**Instructions for use BROTHER DCP-8250DN**  
**Instruction manual BROTHER DCP-8250DN**

**brother.**

## Advanced User's Guide

DCP-8250DN



[You're reading an excerpt. Click here to read official BROTHER DCP-8250DN user guide](http://yourpdfguides.com/dref/5516407)  
<http://yourpdfguides.com/dref/5516407>

**Manual abstract:**

Please read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations. @@@@See troubleshooting tips. @@Follow these instructions for Printing, Scanning, Network Scanning and using the Brother ControlCenter utility. This Guide provides useful information about wired network settings and security settings using the Brother machine. You can also find supported protocol information for your machine and detailed troubleshooting tips. This Guide provides details on how to configure your Brother machine to a Google account and use Google Cloud Print services for printing over the Internet from devices using Gmail™ for mobile, GOOGLE DOCS™ for mobile and applications for the Chrome OS. This Guide provides useful information about printing JPEG and PDF 1 files from your mobile device and scanning from your Brother machine to your mobile device when connected on a Wi-Fi network. This Guide provides details about how to configure and use your Brother machine to scan, load and view images and files on certain websites that provide these services. Where is it? Printed / In the box Quick Setup Guide Printed / In the box Basic User's Guide PDF file / Installer CD-ROM / In the box PDF file / Installer CD-ROM / In the box PDF file / Installer CD-ROM / In the box PDF file / Installer CD-ROM / In the box Advanced User's Guide Software User's Guide Network User's Guide Google Cloud Print Guide PDF file / Brother Solutions Center 2 Mobile Print/Scan Guide for Brother iPrint&Scan PDF file / Brother Solutions Center 2 Web Connect Guide PDF file / Brother Solutions Center 2 1 2 PDF printing is not supported on Windows® Phone.

Visit us at <http://solutions.brother.com/>. i Table of Contents 1 General Setup 1 Memory storage..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 1 Automatic Daylight Saving Time.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

1 Ecology features.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

2 Toner Save .....

.....

.....

.....

.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 2 Sleep Time .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.... 2 Deep Sleep mode .*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*. 3 Power Down mode ....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*. 3 Quiet mode feature ....*

.....  
.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
*.. 4 Quiet mode .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.... 4 LCD screen.....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 4 Setting the backlight brightness.....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*... 4 Setting the Dim Timer for the backlight .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 4 2 Security features 5 Secure Function Lock 2.0 .....*

.....  
.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 5 Setting and changing the Administrator Password .

.....

.....

.....

.....

.....

. 6 Setting up and changing the Public user mode ....

.....

.....

.....

.....

.....

..... 7 Setting up and changing restricted users ..

.....

.....

.....

.....

.....

.....

.....

.... 7 Turning Secure Function Lock on/off.....

.....

.....

.....

.....

.....

.....

.....

..... 9 Switching Users...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

10 Setting Lock.....

.....

.....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*11 Setting up the password .....*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....11 Changing your Setting Lock password .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*...12 Turning Setting Lock on/off.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*.... 12 3 Using Address Book 13 Additional ways to store numbers.*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*. 13 Setting up Groups for Broadcasting .....*

.....  
.....  
.....

.....  
.....

.....  
.....

*... 13 Options for Setting Up Groups .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*...15 Changing Group E-mail addresses ..*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*.16 Deleting Group numbers ....*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 17 4 Printing reports 18 Reports .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 18 How to print a report ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
... 18 ii 5 Making copies 19 Copy settings .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....19 Stop copying ....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....19 Improving copy quality .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....19 Enlarging or reducing the image copied ...

.....  
.....  
.....  
.....  
.....  
.....  
.....

...20 Duplex (2-sided) Copying .....

.....  
.....  
.....  
.....



.....  
.....  
.....

*.21 Tray selection .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....22 Adjusting Brightness and Contrast ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.22 Sorting copies .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....23 Making N in 1 copies (page layout) ...*

.....  
.....  
.....

.....  
.....  
.....  
.....

*23 2 in 1 ID Copy .....*

.....  
.....

.....  
.....  
.....

.....

.....

.....

.....

.....

.....

.....

*.25 Setting your changes as the new default....*

.....

.....

.....

.....

.....

.....

*.26 Restoring all copy settings to the factory settings ....*

.....

.....

.....

.....

.....

*..26 Setting your favourites .....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*26 A Routine maintenance 28 Cleaning and checking the machine....*

.....

.....

.....

.....

.....

.....

.....

.....

*...28 Checking the Page Counters.....*

.....

.....

.....

.....

.....

.....

.....

.....

*.....29 Checking the remaining life of parts ....*

.....

.....

.....

.....  
.....  
.....  
.....

.....29 Replacing periodic maintenance parts..

.....  
.....  
.....

.....  
.....  
.....  
.....

...30 Packing and shipping the machine ..

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

...31 B Options 34 Optional paper tray (LT-5400) .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

34 Memory board.....

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..34 SO-DIMM Types .....

.....  
.....  
.....  
.....

.....  
.....



Press **Quiet Mode**. Press **On** or **Off**. Press **Stop/Exit**. a b c d e f Press **Menu**. Press a or b to display **General Setup**. Press **General Setup**. Press a or b to display **LCD Settings**. Press **LCD Settings**. Press **Backlight**. Press **Light**, **Med** or **Dark**.

Press **Stop/Exit**. Setting the **Dim Timer** for the backlight You can set how long the LCD backlight stays on after you go back to the **Ready** screen. 1 a b c d e f Press **Menu**. Press a or b to display **General Setup**. Press **General Setup**. Press a or b to display **LCD Settings**. Press **LCD Settings**. Press **Dim Timer**. Press 10 Secs, 20 Secs, 30 Secs or **Off**. Press **Stop/Exit**.

4 2 □ **Copy** □ **Scan 1** □ **Direct Print** □ **Print 2** Security features **Note** • **Secure Function Lock** can be set manually at the control panel, or by using **Web Based Management** or **BRAdmin Professional 3** (Windows® only). We recommend using **Web Based Management** or **BRAdmin Professional 3** (Windows® only) to configure this feature. (uu **Network User's Guide**) • Only administrators can set limitations and make changes for each user. 2 **Secure Function Lock 2.0** **Secure Function Lock** lets you restrict **Public** access to the following machine functions: 2 2 □ **Page Limit 3** □ **Web Connect 1** **Scan** includes scan jobs sent via **Brother iPrint&Scan**.

**Print** includes print jobs via **Google Cloud Print** and **Brother iPrint 7** Chapter 2 j To set up a restricted user, press **Enable** or **Disable** for each operation, as follows: Press **Copy**. Then press **Enable** or **Disable**. After you have set **Copy**, repeat these steps for **Scan**, **Direct Print**, **Print** and **Web Connect**. Press and repeat steps g to j to enter each additional user and password. Press **Stop/Exit**.

i To change the password, enter a new four-digit user password by pressing the buttons on the **Touchscreen**. Press **OK**. To change a restricted user's settings, press a or b to display the setting you want to change. Press the setting and then press **Enable** or **Disable**. Repeat this step until you are finished making changes. Press **Stop/Exit**. j k l **Note** You cannot use the same name as another user's name. **Note** You cannot use the same name as another user's name. Changing user name, password or settings for restricted users **Reset** existing restricted users 2 2 a b c d e f Press **Menu**. Press a or b to display **General Setup**.

Press **General Setup**. Press a or b to display **Security**. Press **Security**. Press **Function Lock**. Press **Setup ID**. Enter the four-digit administrator password by pressing the buttons on the **Touchscreen**. Press **OK**. Press a or b to display the existing restricted user you want to change. Press the user name. Press **Change**.

To change the user name, enter a new user name by pressing the buttons on the **Touchscreen**. (uu **Basic User's Guide: Entering text**) Press **OK**. a b c d e f Press **Menu**. Press a or b to display **General Setup**. Press **General Setup**.

Press a or b to display **Security**. Press **Security**. Press **Function Lock**. Press **Setup ID**. Enter the four-digit administrator password by pressing the buttons on the **Touchscreen**.

Press **OK**. Press a or b to display the existing restricted user you want to reset. Press the user name. Press **Reset**. Press **Yes** to reset the existing restricted user. Press **Stop/Exit**. g h g h i j 8 Security features **Turning Secure Function Lock on/off** **Turning Secure Function Lock on** **Turning Secure Function Lock off** 2 a b c Press **Public** or xxxxx (where xxxxx is the user's name). Press **Lock On**□**Off**. Enter the registered four-digit administrator password by pressing the buttons on the **Touchscreen**. Press **OK**.

a b c d e f Press **Menu**. Press a or b to display **General Setup**. Press **General Setup**. Press a or b to display **Security**. Press **Security**. Press **Function Lock**. Press **Lock Off**□**On**. Enter the registered four-digit administrator password by pressing the buttons on the **Touchscreen**. Press **OK**. 2 **Note** If you enter the wrong password, the LCD will show **Wrong Password**.

Re-enter the correct password. 9 Chapter 2 **Switching Users** This setting allows you to switch between registered restricted users or **Public** mode when **Secure Function Lock** is turned on. Changing to the restricted user mode 2 Changing to the **Public** mode a b Press xxxxx. (where xxxxx is the user's name.) Press **Go to Public**.

a b c d Press **Public** or xxxxx (where xxxxx is the user's name). Press **Change User**. Press a or b to display your user name. Press your user name. Enter the registered four-digit user password by pressing the buttons on the **Touchscreen**.

Press **OK**. **Note** • After a restricted user has finished using the machine, it will return to the **Public** setting within one minute. • If the function you want to use is restricted for all users, **Access Denied** will appear on the LCD; The machine will go back to the ready mode and you cannot access the function you want to use. **Note** • If the current ID is restricted for the function you want to use, **Access Denied** will appear on the LCD. • If your ID has page limit restrictions set and has already reached the maximum number of pages, the LCD will show **Limit Exceeded** when you print data. Contact your administrator to check your **Secure Function Lock Settings**. 10 Security features **Setting Lock Setting Lock** lets you set a password to stop other people from accidentally changing your machine settings. Make a careful note of your password. If you forget it, you will have to reset the passwords stored in the machine. Please call your administrator or **Brother Customer Service**.

While **Setting Lock** is **On**, you cannot access the **Menu** button or edit the numbers you stored in the **Address Book**. You can still use the **Address Book** button to send E-mail messages to previously stored numbers. 2 Setting up the password 2 a b c d e Press **Menu**. Press a or b to display **General Setup**. Press **General Setup**. Press a or b to display **Security**. Press **Security**. Press **Setting Lock**. Enter a four-digit number for the password by pressing the buttons on the **Touchscreen**. Press **OK**.

Re-enter the password when the LCD shows **Verify**:. Press **OK**. Press **Stop/Exit**. 2 f g 11 Chapter 2 Changing your **Setting Lock** password **Turning Setting Lock on/off** 2 2 a b c d e f Press **Menu**. Press a or b to display **General Setup**.

Press **General Setup**. Press a or b to display **Security**. Press **Security**. Press **Setting Lock**. Press **Set Password**.

Enter the registered four-digit password by pressing the buttons on the **Touchscreen**. Press **OK**. Enter a four-digit number for the new password by pressing the buttons on the **Touchscreen**. Press **OK**. Re-enter the password when the LCD shows **Verify**:. Press **OK**. Press **Stop/Exit**. If you enter the wrong password when following the instructions below, the LCD will show **Wrong Password**. Re-enter the correct password. **Turning Setting Lock on a b c d e f** Press **Menu**.

Press a or b to display **General Setup**. Press **General Setup**. Press a or b to display **Security**. Press **Security**. Press **Setting Lock**. Press **Lock Off**□**On**. Enter the registered four-digit administrator password by pressing the buttons on the **Touchscreen**. Press **OK**. The LCD will show locks on the **Setting Lock** and **Menu** buttons. g h i 01 **COPY 01**.



[You're reading an excerpt. Click here to read official BROTHER DCP-8250DN user guide](#)



01.2012 11:00 Copy Scan Web Secure Print Direct Print Setting Lock Menu Turning Setting Lock off a b Press Setting Lock on the LCD. Enter the registered four-digit administrator password by pressing the buttons on the Touchscreen. Press OK. 12 3 Using Address Book e 3 3 Additional ways to store numbers

Setting up Groups for Broadcasting If you often want to send the same scan data to multiple E-mail addresses you can set up a Group.

Groups are stored on a Speed Dial number. Each Group uses up a Speed Dial location. You can then send the E-mail to all the numbers stored in a Group just by entering a Speed Dial number. Press Send a E-mail, and then press Start. Before you can add numbers to a Group, you need to store them as Speed Dial numbers.

You can have up to 20 small Groups, or you can assign up to 331 numbers to one large Group. For a list of the options available when you set up Group numbers, see the table on page 15. Enter the Group name (up to 15 characters) by pressing the buttons on the Touchscreen. Press to choose numbers, letters or special characters. @@ Enter a new Group number using the buttons on the Touchscreen. @@ Press the option you want. @@ If you want to list the numbers in alphabetical order, press . @@ Enter a new number using the buttons on the Touchscreen. @@@ Enter a new number using the buttons on the Touchscreen. @@@ If you chose E-Mail B&W PDF, go to step m. @@@ If you chose E-Mail Color PDF, go to step m.

@@ If you chose E-Mail Gray PDF, go to step m. @@@@ Choose Signed PDF from Administrator in Web Based Management. @@@@ Press a or b to display the Group you want to change. Press the Group. Press Add/Delete. Press a or b to display the number you want to add or delete. Press the check box of each number you want to add to check it. Press the check box of each number you want to delete to uncheck it. Press OK to confirm. Press OK.

@@ Press a or b to display the Group you want to change. Press the Group. @@ Press OK. @@@@ Press Stop/Exit. 16 Using Address Book Deleting Group numbers You can delete a Group number that has already been stored. 3 a b c d Press Press Edit. (Address Book). Press Delete. Press a or b to display the Group you want to delete. Press the check box of the Group you want to delete to check it.

Press OK. When the LCD shows Erase This Data?, do one of the following:  To Delete the Group, press Yes.  To exit without deleting the Group, press No. 3 e f Press Stop/Exit. 17 4 Printing reports How to print a report 4 Reports The following reports are available: 1 Journal Report Prints a list of information about your last 200 outgoing E-mails. (TX: transmit.) 2 User Settings Prints a list of your current settings. 3 Network Config Prints a list of your network settings. 4 Drum Dot Print Prints the drum dot check sheet to troubleshoot a dotted print problem. 4 4 a b c d e Press Menu.

Press a or b to display Print Reports. Press Print Reports. Press the report you want to print. Press Start. Press Stop/Exit. 18 5 Making copies Improving copy quality You can choose from a range of quality settings. The default setting is Auto.  Auto Auto is the recommended mode for ordinary printouts. Suitable for documents that contain both text and photographs.  Text Suitable for documents containing mainly text.

5 5 Copy settings You can change the copy settings temporarily for the next copy. Press Copy on the Touchscreen and then press d or c to scroll through the copy settings. When the setting you want is displayed, press the button. When you have finished changing settings, press Start. 5 5 5 Stop copying To stop copying, press Stop/Exit.

Photo Better copy quality for photographs.  Graph Suitable for copying receipts. a b c d e f Press Copy. Load your document. Enter the number of copies you want.

Press d or c to display Quality. Press Quality. Press Auto, Text, Photo or Graph. If you do not want to change additional settings, press Start. 19 Chapter 5 Enlarging or reducing the image copied To enlarge or reduce the next copy follow the instructions below: 100%\* 5 104% EXE  LTR 141% A5  A4 200% 50% 70% A4  A5 78% LGL  LTR 83% LGL  A4 85% LTR  EXE 91% Full Page 94% A4  LTR 97% LTR  A4 Auto 1 Custom (25-400%) a b c d e f Press Copy. Load your document. Enter the number of copies you want. Press d or c to display Enlarge/Reduce. Press Enlarge/Reduce. Press 100%, Enlarge, Reduce, Auto or Custom (25-400%).

Do one of the following:  If you chose Enlarge or Reduce, press the enlargement or reduction ratio button you want.  If you chose Custom (25-400%), enter an enlargement or reduction ratio from 25% to 400%. Press OK.  If you chose 100% or Auto 1, go to step g. \* The factory setting is shown in Bold with an asterisk. 1 Auto sets the machine to calculate the reduction ratio that best fits the size of paper. Auto is only available when using the ADF. g If you do not want to change additional settings, press Start. Note Page Layout Options 2in1(P), 2in1(L), 2in1(ID), 4in1(P) and 4in1(L) are not available with Enlarge/Reduce. 20 Making copies Duplex (2-sided) Copying If you want to use the automatic duplex copy feature, load your document in the ADF.

If you get an Out of Memory message while you are making duplex copies, try installing extra memory. (See Installing extra memory uu page 35.) You must choose a 2-sided copy layout from the following options before you can start duplex copying. The layout of your document determines which 2-sided copy layout you should choose. Portrait  2sidei2side 5  2sidei1side Short Edge Flip 1 1 2 Landscape  2sidei2side 1 2 1 2 1 2 1 2 2  1sidei2side Long Edge Flip 2  1sidei2side Long Edge Flip  2sidei1side Long Edge Flip 1 1  1sidei2side Short Edge Flip  2sidei1side Long Edge Flip 1 1 2 1 1 2 1 2 2  2sidei1side Short Edge Flip  1sidei2side Short Edge Flip 1 2 1 2 2 a b c Press Copy.

Load your document. Enter the number of copies you want. 2 2 1 1 1 2 5 2 2 2 2 1 Chapter 5 d e Press d or c to display Duplex Copy. Press Duplex Copy. Press d or c to display the following layout options: 2side $\square$ 2side, 1side $\square$ 2side LongEdgeFlip, 2side $\square$ 1side LongEdgeFlip, 1side $\square$ 2side ShortEdgeFlip, 2side $\square$ 1side ShortEdgeFlip, Off Press the option you want.

Adjusting Brightness and Contrast Brightness Adjust the copy brightness to make copies darker or lighter. 5 5 f If you do not want to change additional settings, press Start. a b c d 5 Press Copy. Load your document. Enter the number of copies you want. Press d or c to display Brightness. Press Brightness. Press d to make a darker copy or press c to make a lighter copy. Press OK. If you do not want to change additional settings, press Start.

5 Tray selection You can temporarily change the Tray Use option for the next copy. e f a b c d e Press Copy. Load your document. Enter the number of copies you want. Press d or c to display Tray Use. Press Tray Use. Press MP>T1, MP>T1>T2 1, T1>MP, T1>T2>MP 1, Tray#1 Only, Tray#2 Only 1 or MP Only.



[You're reading an excerpt. Click here to read official BROTHER DCP-8250DN user guide](http://yourpdfguides.com/dref/5516407)  
<http://yourpdfguides.com/dref/5516407>

1 Contrast Adjust the contrast to help an image look sharper and more vivid. T2 and Tray#2 Only appears only if Tray 2 is installed. a b c d e f Press Copy. Load your document. Enter the number of copies you want. Press d or c to display Contrast. Press Contrast. Press d to decrease the contrast or press c to increase the contrast.

Press OK. If you do not want to change additional settings, press Start. f If you do not want to change additional settings, press Start. Note To change the default setting for Tray Use uu Basic User's Guide: Tray Use in Copy mode 22 Making copies Sorting copies You can sort multiple copies. Pages will be stacked in the order 1 2 3, 1 2 3, 1 2 3, and so on.

5 Making N in 1 copies (page layout) You can reduce the amount of paper used when copying by using the N in 1 copy feature. This allows you to copy two or four pages onto one page. If you want to copy both sides of an ID card onto one page, see 2 in 1 ID Copy uu page 25. 5 a b c d e f Press Copy. Load your document. Enter the number of copies you want. Press d or c to display Stack/Sort. Press Stack/Sort. Press Sort. If you do not want to change additional settings, press Start to scan the page.

If you placed the document in the ADF, the machine scans the pages and starts printing. If you are using the scanner glass, go to step g. Important • Please make sure the paper size is set to A4, Letter, Legal or Folio. • You cannot use the Enlarge/Reduce setting with the N in 1 feature. • (P) means Portrait and (L) means Landscape. 5 g h After the machine scans the page, press Yes to scan the next page. Put the next page on the scanner glass. Press Start. Repeat steps g and h for each page of the document. After all the pages have been scanned, press No in step g to finish.

a b c d e Press Copy. Load your document. Enter the number of copies you want. Press d or c to display Page Layout. Press Page Layout.

Press d or c to display Off(1in1), 2in1(P), 2in1(L), 2in1(ID) 1, 4in1(P) or 4in1(L). Press the button you want. 1 i For details about 2in1(ID), see 2 in 1 ID Copy uu page 25. f If you do not want to change additional settings, press Start to scan the page. If you placed the document in the ADF, the machine scans the pages and starts printing.

If you are using the scanner glass, go to step g. 23 Chapter 5 g h After the machine scans the page, press Yes to scan the next page. Put the next page on the scanner glass. Press Start. Repeat steps g and h for each page of the document. After all the pages have been scanned, press No in step g to finish. 5 If you are copying from the scanner glass: Place your document face down in the direction shown below:  2in1(P) 5 i  2in1(L) If you are copying from the ADF: Insert your document face up in the direction shown below:  2in1(P)  4in1(P)  2in1(L)  4in1(L)  4in1(P)  4in1(L) 24 Making copies 2 in 1 ID Copy You can copy both sides of your identification card onto one page, keeping the original card size. 5 g h Turn over your identification card and place it on the left side of the scanner glass. Press Start. The machine scans the other side of the card and prints the page.

Note You can copy an identification card to the extent permitted under applicable laws. (uu Product Safety Guide: Unlawful use of copying equipment (MFC and DCP only)) Note When 2 in 1 ID Copy is chosen, the machine sets the quality to Photo and the contrast to +2. a b Press Copy. Place your identification card face down at the left corner of the scanner glass. 5 1 1 4 mm or greater (top, left)  Even if a document is placed in the ADF, the machine scans the data from the scanner glass when in this mode. c d e f Enter the number of copies you want. Press d or c to display Page Layout. Press Page Layout. Press d or c to display 2in1(ID). Press 2in1(ID).

Press Start. After the machine scans the first side of the card, the LCD will display Turn over the ID Card Then Press Start. 25 Chapter 5 Setting your changes as the new default Setting your favourites 5 5 You can save the copy settings for Quality, Brightness and Contrast you use most often by setting them as the default. These settings will stay until you change them again. You can store the copy settings that you use most often by setting them as a favourite. You can set up to three favourites. a b Press Copy. Press d or c to choose the setting you want to change, and then press the new option. Repeat this step for each setting you want to change. After changing the last setting, press d or c to display Set New Default.

Press Set New Default. Press Yes. Press Stop/Exit. a b c d e f Press Copy. Choose the copy option and settings you want to store. Press d or c to display Favorite Settings. Press Favorite Settings. Press Store. Press the location where you want to store your setting Favorite:1, Favorite:2 or Favorite:3. Do one of the following:  If you want to rename your setting, press to delete characters.

Then enter the new name (up to 12 characters). Press OK. c d e Restoring all copy settings to the factory settings 5 You can restore all the copy settings you have changed to the factory settings. These settings will stay until you change them again.  If you do not want to rename your setting, press OK. g Press Stop/Exit. 5 a b c d Press Copy. Press d or c to display Factory Reset. Press Factory Reset. Press Yes.

Press Stop/Exit. Retrieving your favourite setting When you are ready to use one of your favourite set of settings, you can recall it. a b c d Press Copy. Press Favorite. Press the favourite setting you want to retrieve.

Press Start. 26 Making copies Rename your favourite setting After you have stored your favourite setting, you can rename it. 5 a b c d e f g Press Copy. Press d or c to display Favorite Settings. Press Favorite Settings.

Press Rename. Press the favourite setting you want to rename. Enter the new name (up to 12 characters). Press OK. Press Stop/Exit. 5 27 A Routine maintenance Important A A Cleaning and checking the machine Clean the outside and inside of the machine regularly with a dry, lint-free cloth. When you replace the toner cartridge or the drum unit, make sure that you clean the inside of the machine. If printed pages are stained with toner, clean the inside of the machine with a dry, lint-free cloth. Use neutral detergents. Cleaning with volatile liquids such as thinner or benzine will damage the surface of the machine.

WARNING • DO NOT put a toner cartridge or a toner cartridge and drum unit assembly into a fire. It could explode, resulting in injuries. • DO NOT use flammable substances, any type of spray, or an organic solvent/liquid containing alcohol or ammonia to clean the inside or outside of the product. Doing so could cause a fire or electrical shock. Instead, use only a dry, lint-free cloth. (uu Product Safety Guide: General precautions) 28 Routine maintenance Checking the Page Counters You can see the machine's Page Counters for copies, printed pages, reports and lists or a summary total.



[You're reading an excerpt. Click here to read official BROTHER DCP-8250DN user guide](http://yourpdfguides.com/dref/5516407)  
<http://yourpdfguides.com/dref/5516407>



A Checking the remaining life of parts You can see the machine's parts life on the LCD. A a b c d Press Menu. Press a or b to display Machine Info.. Press Machine Info.. Press Page Counter. The LCD shows number of pages for Total, List, Copy or Print. Press Stop/Exit. a b c d Press Menu. Press a or b to display Machine Info.. Press Machine Info..

Press Parts Life. Press a or b to see the approximate remaining parts life of the Drum, Fuser, Laser, PF Kit MP, PF Kit 1 and PF Kit 2 1. 1 A When Tray 2 is installed. e Press Stop/Exit. 29 Replacing periodic maintenance parts The periodic maintenance parts will need to be replaced regularly to maintain the print quality. The parts listed below will have to be replaced after printing approximately 50,000 pages 1 for PF Kit MP and 100,000 pages 1 for PF Kit 1, PF Kit 2, Fuser and Laser. Please call Brother Customer Service when the following messages appear on the LCD. LCD message Replace Parts Fuser Unit Replace Parts Laser Unit Replace Parts PF Kit 1 Replace Parts PF Kit 2 2 Replace Parts PF Kit MP 1 2 A Description Replace the fuser unit. Replace the laser unit. Replace the paper feeding kit for the paper tray.

Replace the paper feeding kit for the lower tray (option). Replace the paper feeding kit for the multi-purpose tray. A4 or Letter size single-sided pages. When Tray 2 is installed. 30 Routine maintenance Packing and shipping the machine WARNING This machine is heavy and weighs more than 17.5 kg. To prevent possible injuries at least two people should lift the machine. Be careful not to pinch your fingers when you put the machine down. Note A If for any reason you must ship your machine, carefully repack the machine in the original packaging to avoid any damage during transit. The machine should be adequately insured with the carrier.

a b c d Leave the machine turned on for at least 10 minutes to cool down. After the machine has cooled down, turn off the machine. Disconnect all the cables, and then unplug the power cord from the electrical socket. Put the packing material (1) into the carton. FRONT A If you use a Lower Tray, DO NOT carry the machine with the Lower Tray as you may be injured or cause damage to the machine because it is not attached to the Lower Tray.

1 31 e Wrap the machine in a plastic bag, then put it on the bottom packing material (1). f Put the packing material piece (2) marked "RIGHT" on the right of the machine. Put the packing material piece (3) marked "LEFT" on the left of the machine. Put the AC power cord and printed materials in the original carton as shown in the illustration. LEFT RIGHT 3 2 FRONT 1 g Close the carton and tape it shut.

32 Routine maintenance h <If you have a Lower Tray> Repack the lower tray as shown in the illustration. A 33 B Options Memory board B B Optional paper tray (LT-5400) An optional lower tray can be installed, and it can hold up to 500 sheets of 80 g/m2 paper. When an optional tray is installed, the machine can hold up to 1050 sheets of plain paper. B DCP-8250DN has 128 MB of standard memory. The machine has one slot for optional memory expansion. You can increase the memory up to a maximum of 384 MB by installing one SO-DIMM (Small Outline Dual In-line Memory Module). SO-DIMM Types You can install the following SO-DIMMs: □ 256 MB Kingston KTH-LJ2015/256 □ 256 MB Transcend TS256MHP423A B Note • For more information, visit the Kingston Technology website at <http://www.kingston.com/>. • For more information, visit the Transcend website at <http://www.transcend.com.tw/>.

In general, the SO-DIMM must have the following specifications: Type CAS latency Clock frequency Capacity Height DRAM type 144-pin and 16-bit output 4 267 MHz (533 Mb/S/Pin) or more 256 MB 30.0 mm DDR2 SDRAM For setup, see the Instructions that we have supplied with the lower tray unit. WARNING If you use a Lower Tray, DO NOT carry the machine with the Lower Tray as you may be injured or cause damage to the machine because it is not attached to the Lower Tray. Note • There might be some SO-DIMMs that will not work with the machine. • For more information, call the dealer you bought the machine from or Brother Customer Service. 34 Options Installing extra memory B e a b Turn off the machine's power switch.

Disconnect the interface cable from the machine, and then unplug the power cord from the electrical socket.

Hold the SO-DIMM by the edges and align the notches in the SO-DIMM with the protrusions in the slot. @@@@@ Availability of these features depends on the model you purchased. @@Beeper Volume Volume setting for the beep when you press a key or make an error. Cancel Job Cancels a programmed print job and clears it from the machine's memory. Contrast Setting to compensate for dark or light documents, by making copies of dark documents lighter and light documents darker.

Fine resolution Resolution is 203 × 196 dpi. It is used for small print and graphs. Greyscale The shades of grey available for copying photographs. Group number A combination of Speed Dial numbers that are stored in a Speed Dial location for Broadcasting. LCD (liquid crystal display) The display screen on the machine that shows interactive messages during On-Screen Programming and shows the date and time when the machine is idle.

Menu mode Programming mode for changing your machine's settings. OCR (optical character recognition) Nuance™ PaperPort™ I2SE or Presto! PageManager software application converts an image of text to text you can edit. 37 Resolution The number of vertical and horizontal lines per inch. Scanning The process of sending an electronic image of a paper document into your computer. Search An electronic, alphabetical listing of stored Speed Dial, Group numbers and LDAP. Speed Dial A pre-programmed number for easy dialling. Temporary settings You can choose certain copy options without changing the default settings. User Settings List A printed report that shows the current settings of the machine. C D A B Index L LCD (liquid crystal display) backlight brightness ..

.....  
.....  
.....  
.....

4 Apple Macintosh See Software User's Guide. M Machine information checking remaining life of parts .....  
... 29 page counts ..

.....  
.....  
.....  
.....  
.....

..... 29 Macintosh See Software User's Guide. Maintenance, routine ....

.....  
.....  
.....

..... 28 checking the remaining life of parts ...

... 29 Memory adding DIMM (option) .....

.....  
.....  
.....

34 installing .....

.....  
.....  
.....

.....  
..... 35 storage .

.....  
.....  
.....  
.....  
.....

..... 1 Broadcasting setting up Groups for .....

.....  
.....  
.....

...13 C ControlCenter2 (for Macintosh) See Software User's Guide. ControlCenter4 (for Windows®) See Software User's Guide. Copy 2 in 1 ID Copy .....

.....  
.....  
.....

.....  
..... 25 brightness .

.....  
.....  
.....

..... 22 button .

.....  
.....  
.....  
.....

.....  
..... 19 contrast .....

.....  
.....  
.....  
.....

.....  
..... 22 Enlarge/Reduce .....

.....  
.....

.....  
..... 20 N in 1 (page layout) .....

.....  
.....

.....  
..23 quality ...

.....

.....

.....

.....

.....

.....19 sort .

.....

.....

.....

.....

.....

.....

.....

.....23 temporary settings .....

.....

.....

.....

.....19 using scanner glass ...

.....

.....

.....

.....23 NN in 1 (page layout) ...

.....

.....

.....

.....

23 Network printing See Network User's Guide. scanning See Software User's Guide. Nuance™ PaperPort™ 12SE See Software User's Guide. See also Help in the Nuance™ PaperPort™ 12SE application to access How-to-Guides.



**[You're reading an excerpt. Click here to read official BROTHER](#)**

**[DCP-8250DN user guide](#)**

**<http://yourpdfguides.com/dref/5516407>**

*D Daylight Saving Time .*

.....  
.....

*..1 Deep Sleep mode ...*

.....

*.....3 Drum unit checking (remaining life) .....*

.....  
.....

*...29 Duplex copy ..*

.....

.....  
.....  
.....

*...21 P Page layout (N in 1) .....*

.....  
.....

*..... 23 Power down mode ....*

.....  
.....

*... 3 Power failure ..*

.....

.....  
.....

*..... 1 Presto! PageManager See Software User's Guide. See also Help in the Presto! PageManager application.*

*Print reports .....*

.....  
.....

.....  
.....

*18 Printing See Software User's Guide. E Enlarge/Reduce .....*

.....  
.....  
.....

*20 G Group dial setting up Groups for broadcasting .....13 Groups for broadcasting ...*

.....  
.....

*...13 38 Q Quality copying .....*

.....  
.....

.....  
.....  
.....  
.....  
.....  
*..19 Quiet mode .....*

.....  
.....  
.....  
.....  
.....  
.....  
*4 R Reducing copies .....*

.....  
.....  
.....  
.....  
.....  
.....  
*.20 Reports .....*

.....  
.....  
.....  
.....  
.....  
.....  
*...18 how to print .....*

.....  
.....  
.....  
.....  
.....  
.....  
*.....18 Journal Report .....*

.....  
.....  
.....  
.....  
.....  
.....  
*....18 Network Configuration .....*

.....  
.....  
.....  
.....  
.....  
.....  
*18 User Settings .....*

.....  
.....  
.....  
.....  
.....  
.....  
*18 Restricted users .....*

.....  
.....  
.....  
.....  
*.7 S Scanning See Software User's Guide. Security Secure function lock administrator password .....*

.....  
.....  
.....  
.....  
*.....6 Public user mode .....*

.....  
.....  
.....  
..... 7 restricted users .

.....  
.....  
.....  
.....  
.....7 Setting lock .....

.....  
.....  
.....

.....  
.....  
.....11 Sleep mode ..

.....  
.....  
.....  
.....

.....2 Sort .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....23 D T Temporary copy settings .....

.....  
.....  
.....

19 Toner Save .....

.....  
.....  
.....

.....  
.....

...2 W Windows® See Software User's Guide. 39 Visit us on the World Wide Web <http://www.brother.com/> This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries. .



**[You're reading an excerpt. Click here to read official BROTHER DCP-8250DN user guide](http://yourpdfguides.com/dref/5516407)**  
<http://yourpdfguides.com/dref/5516407>