


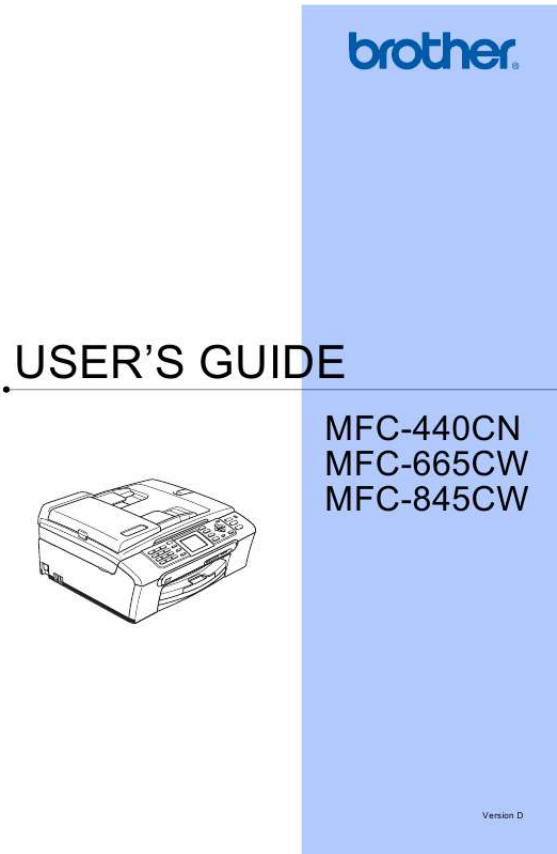

Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BROTHER MFC-440CN. You'll find the answers to all your questions on the BROTHER MFC-440CN in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BROTHER MFC-440CN
User guide BROTHER MFC-440CN
Operating instructions BROTHER MFC-440CN
Instructions for use BROTHER MFC-440CN
Instruction manual BROTHER MFC-440CN

The image shows the cover of the Brother User's Guide. It features the Brother logo in blue at the top right. The title 'USER'S GUIDE' is centered in black. Below the title is a line drawing of the Brother MFC-440CN multifunction printer. To the right of the printer, the model numbers 'MFC-440CN', 'MFC-665CW', and 'MFC-845CW' are listed. At the bottom right, it says 'Version D'.

brother.

USER'S GUIDE

MFC-440CN
MFC-665CW
MFC-845CW

Version D



[You're reading an excerpt. Click here to read official BROTHER MFC-440CN user guide](http://yourpdfguides.com/dref/1851560)
<http://yourpdfguides.com/dref/1851560>

Manual abstract:

Register your product By registering your product with Brother International Corporation, you will be recorded as the original owner of the product. @ Please complete and fax the Brother Warranty Registration And Test Sheet or, for your convenience and most efficient way to register your new product, register on-line at <http://www.brother.com/registration/FAQs> (frequently asked questions) The Brother Solutions Center is our one-stop resource for all your Fax Machine/Multi-Function Center needs. You can download the latest software documents and utilities, read FAQs and troubleshooting tips, and learn how to get the most from your Brother product. <http://solutions.brother.com> Note · You can check here for Brother driver updates. · To keep your machine performance up to date, check here for the latest firmware upgrade (for Windows® only). For Customer Service In USA: 1-800-284-4329 (voice) 1-901-379-1215 (fax) 1-800-284-3238 (TTY service for the hearing-impaired) In Canada: 1-877-BROTHER (voice) (514) 685-4898 (fax) i Service Center Locator (USA only) For the location of a Brother authorized service center, call 1-800-284-4357.

Service Center Locations (Canada only) For the location of a Brother authorized service center, call 1-877-BROTHER. Brother fax back system (USA only) Brother has installed an easy-to-use fax back system, so you can get instant answers to common technical questions and product information for all Brother products. This system is available 24 hours a day, 7 days a week. You can use the system to receive faxed instructions and an Index of fax back subjects. In USA only: 1-800-521-2846 ii Ordering accessories and supplies For best quality results use only genuine Brother accessories, which are available at most Brother retailers.

If you cannot find the accessory you need and you have a Visa, MasterCard, Discover, or American Express credit card, you can order accessories directly from Brother. (In the USA, you can visit us online for a complete selection of the Brother accessories and supplies that are available for purchase.) In USA: 1-888-879-3232 (voice) 1-800-947-1445 (fax) <http://www.brothermall.com> In Canada: Description Ink Cartridge Standard <black> Ink Cartridge <cyan> (blue) Ink Cartridge <magenta> (red) Ink Cartridge <yellow> Premium Glossy Photo Paper (Letter size / 20 sheets) (4"×6" size / 20 sheets) Matte Inkjet Paper (Letter size / 25 sheets) Inkjet Plain Paper (Letter size / 250 sheets) Telephone Line Cord Telephone Handset (MFC-665CW only) Handset Curled Cord (MFC-665CW only) Cordless Handset (MFC-845CW only) Battery (MFC-845CW only) User's Guide LP5196001 (English for USA and Canada) LP3290002 (French for Canada) 1 1-877-BROTHER (voice) Item LC51BK (Prints approx.

500 pages) LC51C (Prints approx. 400 pages) LC51M (Prints approx. 400 pages) LC51Y (Prints approx. 400 pages) BP61GLL 1 BP61GLP 1 BP60ML (USA only) BP60PL (USA only) LG3077001 (USA only) LE5803016 (USA only) UL8019005 (USA only) BCL-D10 BCL-BT10 Available in the USA and from November 2006 in Canada. iii Notice - Disclaimer of Warranties (USA and Canada) BROTHER'S LICENSOR(S), AND THEIR DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS (COLLECTIVELY BROTHER'S LICENSOR) MAKE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE SOFTWARE. BROTHER'S LICENSOR(S) DOES NOT WARRANT, GUARANTEE OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE SOFTWARE IN TERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES IN THE USA AND SOME PROVINCES IN CANADA. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. IN NO EVENT WILL BROTHER'S LICENSOR(S) BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE EVEN IF BROTHER'S LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

BECAUSE SOME STATES IN THE USA AND SOME PROVINCES IN CANADA DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. IN ANY EVENT BROTHER'S LICENSOR'S LIABILITY TO YOU FOR ACTUAL DAMAGES FROM ANY CAUSE WHATSOEVER, AND REGARDLESS OF THE FORM OF THE ACTION (WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE), WILL BE LIMITED TO \$50. Compilation and Publication

Notice Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications. The contents of this manual and the specifications of this product are subject to change without notice. Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication. iv Brother® One Year Limited

Warranty and Replacement Service (USA only) Who is covered: This limited warranty ("warranty") is given only to the original end-use/retail purchaser (referred to in this warranty as "Original Purchaser") of the accompanying product, consumables and accessories (collectively referred to in this warranty as "this Product"). If you purchased a product from someone other than an authorized Brother reseller in the United States or if the product was used (including but not limited to floor models or refurbished product), prior to your purchase you are not the Original Purchaser and the product that you purchased is not covered by this warranty. What is covered: This Product includes a Machine and Consumable and Accessory Items. Consumable and Accessory Items include but are not limited to print heads, toner, drums, ink cartridges, print cartridges, refill ribbons, therma PLUS paper, thermal paper, and the cordless handset battery.

Except as otherwise provided herein, Brother warrants that the Machine and the accompanying Consumable and Accessory Items will be free from defects in materials and workmanship, when used under normal conditions. This warranty applies only to products purchased and used in the United States. For products purchased in, but used outside, the United States, this warranty covers only warranty service within the United States (and does not include shipping outside the United States). What is the length of the Warranty Periods: Machines: one year from the original purchase date. Accompanying Consumable and Accessory Items: 90 days from the original purchase date or the rated life of consumable, whichever comes first.



[You're reading an excerpt. Click here to read official BROTHER MFC-440CN user guide](http://yourpdfguides.com/dref/1851560)
<http://yourpdfguides.com/dref/1851560>

What is NOT covered: This warranty does not cover: 1 Physical damage to this Product; 2 Damage caused by improper installation, improper or abnormal use, misuse, neglect or accident (including but not limited to transporting this Product without the proper preparation and/or packaging); 3 Damage caused by another device or software used with this Product (including but not limited to damage resulting from use of non Brother®-brand parts and Consumable and Accessory Items); 4 Consumable and Accessory Items that expired in accordance with a rated life; and, 5 Problems arising from other than defects in materials or workmanship. 6 Normal Periodic Maintenance Items, such as Paper Feeding Kit, Fuser and Laser Units. This limited warranty is VOID if this Product has been altered or modified in any way (including but not limited to attempted warranty repair without authorization from Brother and/or alteration/removal of the serial number). What to do if you think your Product is eligible for warranty service: Report your issue to either our Customer Service Hotline at 1-800-284-4329 for Fax, MFC and DCP and 1-800-276-7746 for Printers, or to a Brother Authorized Service Center within the applicable warranty period. Supply Brother or the Brother Authorized Service Center with a copy of your dated bill of sale showing that this Product was purchased within the U.

S. For the name of local Brother Authorized Service Center(s), call 1-800-521-2846. What Brother will ask you to do: After contacting Brother or a Brother Authorized Service Center, you may be required to deliver (by hand if you prefer) or send the Product properly packaged, freight prepaid, to the Authorized Service Center together with a photocopy of your bill of sale. You are responsible for the cost of shipping, packing product, and insurance (if you desire). You are also responsible for loss or damage to this Product in shipping. What Brother will do: If the problem reported concerning your Machine and/or accompanying Consumable and Accessory Items is covered by this warranty and if you first reported the problem to Brother or an Authorized Service Center within the applicable warranty period, Brother or its Authorized Service Center will repair or replace the Machine and/or accompanying Consumable and Accessory Items at no charge to you for parts or labor. The decision as to whether to repair or replace the Machine and/or accompanying Consumable and Accessory Items is made by Brother in its sole v Brother® One Year Limited Warranty and Replacement Service (USA only) discretion. Brother reserves the right to supply a refurbished or remanufactured replacement Machine and/or accompanying Consumable and Accessory Items and use refurbished parts provided such replacement products conform to the manufacturer's specifications for new product/parts. The repaired or replacement Machine and/or accompanying Consumable and Accessory Items will be returned to you freight prepaid or made available for you to pick up at a conveniently located Authorized Service Center. If the Machine and/or accompanying Consumable and Accessory Items are not covered by this warranty (either stage), you will be charged for shipping the Machine and/or accompanying Consumable and Accessory Items back to you and charged for any service and/or replacement parts/products at Brother's then current published rates.

The foregoing are your sole (i.e., only) and exclusive remedies under this warranty. What happens when Brother elects to replace your Machine: When a replacement Machine is authorized by Brother, and you have delivered the Machine to an Authorized Service Center, the Authorized Service Center will provide you with a replacement Machine after receiving one from Brother. If you are dealing directly with Brother, Brother will send to you a replacement Machine with the understanding that you will, after receipt of the replacement Machine, supply the required proof of purchase information, together with the Machine that Brother agreed to replace. You are then expected to pack the Machine that Brother agreed to replace in the package from the replacement Machine and return it to Brother using the pre-paid freight bill supplied by Brother in accordance with warranty service, the MFC/Facsimile machine must be delivered or shipped freight prepaid by the end user/purchaser to a "Brother" Authorized Service Center, together with your Proof of Purchase in the form of a Sales Receipt. For laser products: Failure to remove the Toner Cartridge (and Toner Drum Unit on applicable models) during shipping will cause severe damage to the MFC/Facsimile and will VOID the Warranty. (Refer to your User's Guide for proper packaging.) For ink-jet products: Do not remove the ink cartridges during shipping. Damage to your print head resulting from packing without the ink cartridges will VOID your warranty.

(Refer to your User's Guide for proper packaging.) **BROTHER DISCLAIMS ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, EXCEPT TO THE EXTENT THAT ANY WARRANTIES IMPLIED BY LAW CANNOT BE VALIDLY WAIVED.** No oral or written information, advice or representation provided by Brother, its Authorized Service Centers, Distributors, Dealers, Agents or employees, shall create another warranty or modify this warranty. This warranty states Brother's entire liability and your exclusive remedy against Brother for any failure of the MFC/Facsimile machine to operate properly. Neither Brother nor anyone else involved in the development, production, or delivery of this MFC/Facsimile machine shall be liable for any indirect, incidental, special, consequential, exemplary, or punitive damages, including lost profits, arising from the use of or inability to use the product, even if advised by the end user/purchaser of the possibility of such damages.

Since some Provinces do not allow the above limitation of liability, such limitation may not apply to you. This Limited Warranty gives you specific legal rights and you may also have other rights which vary from Province to Province. Warranty Service is available at Brother Authorized Service Centers throughout Canada. For Technical Support or for the name and location of your nearest Authorized Service Center call 1-877-BROTHER. Internet support: support@brother.

ca or browse Brother's Web Site: www.brother.com Brother International Corporation (Canada) Ltd. 1 Rue Hôtel de Ville Dollard-Des-Ormeaux, QC H9B 3H6 vii Table of Contents Section I 1 General General Information Using the documentation

.....

2 Symbols and conventions used in the documentation

.....

.....
.....2 Accessing the Software User's Guide and Network User's Guide

.....
.....
.....
2 Viewing Documentation

.....
.....
.....
.....
.....
.....
.....
.....

.....
...2 Accessing Brother Support (For Windows®) ..

.....
.....
.....
.....
.....

.....
5 Control panel overview

.....
.....
.....
.....
.....
.....
.....
.....

.....
6 LCD display screen

.....
.....
.....
.....
.....
.....
.....
.....

.....9 Basic Operations .

.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

10 2 Loading documents and paper Loading documents .



[You're reading an excerpt. Click here to read official BROTHER MFC-440CN user guide](http://yourpdfguides.com/dref/1851560)
<http://yourpdfguides.com/dref/1851560>

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
...11 Using the ADF ..

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

...11 Using the scanner glass ..

.....
.....
.....
.....

.....
.....
.....
.....

.....12 Scannable area ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.12 Acceptable paper and other media

.....
.....

.....
.....
.....

.....

.....

.....

.....

.13 Recommended media

.....

.....

.....

.....

.....

.....

.....

....13 Handling and using media .

.....

.....

.....

.....

.....

.....

.....

.....

.13 Choosing the right media.....

.....

.....

.....

.....

.....

.....

.....

.....

15 Loading paper and other media.....

.....

.....

.....

.....

.....

.....

....17 Loading envelopes and post cards

.....

.....

.....

.....

.....

.....

.....19 Loading photo paper.

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....21 Removing small printouts from the machine

.....
.....
.....
.....
.....
.....

.....22 Printable area

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

23 3 General setup On/Off key.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...24 Turning the machine off..

.....
.....
.....
.....
.....
.....
.....

.....
.....

.....24 *Turning the machine on .*

.....
.....
.....

.....
.....
.....

.....
.....
.....

24 On/Off setting

.....
.....
.....

.....
.....
.....

.....
.....
.....

..24 Mode Timer...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....26 *Paper settings ..*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
26 Paper Type

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

26 Paper Size

.....
.....
.....

.....
.....
.....

.....
.....
.....

.27 Volume Settings.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
27 Ring Volume

.....
.....

.....
.....
.....

.....
.....
.....

.....

.....
...27 Beeper Volume ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..27 Speaker Volume

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...28 Handset Volume (MFC-665CW only)

.....

.....

.....

.....

.....

.....

.....

....28 Choosing the Handset Volume (For Volume Amplify) (MFC-665CW only).....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...29 Setting Volume Amplify (MFC-665CW only) ..

.....

.....

.....

.....

.....

.....30 Automatic Daylight Savings Time ...

.....

.....

.....
.....
.....
.....

.....
.....
...30 viii LCD display.
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 31 LCD Contrast.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 31 Setting the backlight brightness...

.....
.....

.....
.....
.....

.....
.....
.....

31 Setting the Dim Timer for the backlight

.....
.....
.....

.....
.....
.....

.31 Setting the Off Timer

.....

.....
.....
.....
.....

.....
.....
.....
.....

. 31 Setting the Wallpaper

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....32 4 Security features TX Lock (MFC-440CN only)

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....33 Setting and changing the TX Lock password

.....
.....
.....
.....

... 33 Turning the TX Lock on/off..

.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 34 Memory Security (MFC-665CW and MFC-845CW only).

.....
.....
.....
.....

.....34 Setting and changing the memory security password

.....

.....
.....

.....
.....
.35 Turning the memory security on/off

.....
.....

.....
.....
.....
.....

.....
....36 Section II Fax 5 Sending a fax Entering Fax mode .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
...38 Faxing from the ADF ..

.....

.....
.....

.....
.....
.....
.....

.....
..38 Faxing from the scanner glass ...

.....
.....

.....
.....
.....
.....

.....
.....
.....

..39 Faxing A4 size documents from the scanner glass

.....
.....
.....
.....

. 39 Color fax transmission

.....
.....
.....

.....
.....
.....

.... 39 Canceling a fax in progress

.....
.....
.....

.....
.....
.....

.....39 Broadcasting (Black & White only) .

.....
.....
.....

.....
.....
.....

.....
.....

....40 Canceling a Broadcast in progress.

.....

.....
.....
.....

.....
.....
.....

... 40 Additional sending operations.....

.....
.....
.....

.....
.....
.....

. 41 Sending faxes using multiple settings

.....
.....

.....
.....
.....

.....

.....
.....
.....
.....

. 44 Out of Memory message

.....
.....
.....

.....
.....
.....

.....
.....
.....

45 ix 6 Receiving a Fax Receive modes

.....
.....
.....

.....
.....
.....

.....
.....
.....

46 Choosing the Receive Mode

.....
.....
.....

.....
.....
.....

...46 Using receive modes ..

.....
.....

.....
.....
.....

.....
.....
.....

....48 Fax only .

.....
.....

.....
.....

.....
.52 Tone or Pulse (Canada only).....

.....
.....
.....
.....
.....
.....
.....

.....
....53 Fax/Tel mode when the power key is on .

.....
.....
.....
.....
.....

.....
.....53 Fax/Tel mode when the power key is off .

.....
.....
.....
.....
.....
.....

.....
....53 Telephone services.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....54 Distinctive Ring ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
..54 Caller ID..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....56 Connecting an external TAD (telephone answering device)...

.....
.....
.....
.....

.....57 Connections.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....58 Recording outgoing message (OGM) on an external TAD ..

.....
.....
.....

.....59 Special line considerations

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..59 Multi-line connections (PBX)

.....
.....
.....
.....

.....
.....
.....
.....

....61 External and extension phones

.....

.....
.....

.....
.....
.....

.....
.....
.....

61 Connecting an external or extension telephone

.....
.....
.....

...61 Using external and extension telephones.....

.....
.....
.....

.....
.....
.....

.....61 Using a Non-Brother cordless external telephone (MFC-440CN and MFC-665CW only) ..

.....
.....
.....

.....
.....
.....

...62 Using remote codes.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

62 8 Dialing and storing numbers How to Dial

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....63 Manual dialing

.....
.....
.....

.....
.....
.....

.....
.....
.....

.63 Speed-Dialing

.....
.....

.....
.....
.....

.....
.....
.....

.63 Search ...

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

...63 Fax Redial

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....

.....
64 Outgoing Call

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..64 Caller ID history

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....65 x Storing numbers

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 66 Storing a pause

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 66 Storing Speed-Dial numbers

.....

.....

.....

.....

.....

.....

.....

.....

...66 Changing Speed-Dial names or numbers .

.....

.....

.....

.....

.....

.. 67 Setting up groups for broadcasting..

.....

.....

.....

.....

.....

.....

.....

. 68 Dialing Access codes and credit card numbers....

.....

.....

.....

.....

. 70 9 Message Center (MFC-665CW and MFC-845CW only) Message Center mode

.....

.....

.....

.....

.....

.....

.....

.....

..... 71 Setting up the Message Center .

.....

.....

.....

.....

.....

.....

..... 71 Outgoing message (OGM) ..

.....

.....

.....

.....
.....
.....
.....

... 71 Fax/Tel OGM (Announcement)

.....
.....
.....
.....
.....
.....
.....

... 72 Activating Message Center mode.....

.....
.....
.....
.....
.....
.....

.....72 Managing your messages.

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...73 Message indicator

.....
.....
.....
.....
.....
.....
.....
.....

..73 Playing voice messages

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
..73 Erasing incoming messages.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 73 Additional Message Center operations....

.....
.....
.....
.....
.....
.....
.....
.....
.....
74 Setting maximum time for incoming messages

.....
.....
.....
.....
.....
..... 74 Setting toll saver

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....74 ICM Recording Monitor...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
....75 Recording a conversation (MFC-665CW only).

.....
.....
.....
.....

..... 75 10 Advanced fax operations (Black & White only) Fax Forwarding.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

76 Paging

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....77 Fax Storage ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 78 Fax Preview (MFC-665CW and MFC-845CW only)

.....
.....
.....
.....

.....78 Setting Fax Preview...

.....80 Changing the destination PC

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....81 Turning off Advanced Fax Operations ..

.....
.....
.....
.....
.....
.....
.....

... 81 Changing Advanced Fax Operations..

.....
.....
.....
.....
.....
.....
.....

82 Remote Retrieval.....

.....
.....
.....
.....
.....
.....
.....

..... 82 Setting a Remote Access Code...

.....
.....
.....
.....
.....
.....
.....

..... 82 Using your Remote Access Code....

.....
.....
.....

.....
.....
.....
.....

..83 Remote Fax commands ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..84 Retrieving fax messages

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 86 Changing your Fax Forwarding number

.....
.....
.....
.....

.....
.....

..86 11 Printing Reports Fax reports...

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 87 Transmission Verification Report.....

.....
.....
.....

.....
.....

.....
.....

.....
.....
. 87 Fax Journal (activity report)

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....87 Reports

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

... 88 How to print a report ..

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.... 88 xi 12 Polling Polling overview .

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

...89 Polling receive

.....
.....
.....

.....
.....
.....

.....
.....
.....

....89 Setup to receive polling

.....
.....

.....
.....
.....

.....
.....

.....89 Sequential polling (Black & White only)

.....
.....
.....

.....
.....

..89 Polled transmit (Black & White only).....

.....
.....
.....

.....
.....
.....

90 Set up for polled transmit.....

.....
.....

.....
.....
.....

.....
.....

....90 Section III Copy 13 Making copies How to copy .

.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...92 Entering Copy mode

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

92 Making a single copy

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....92 Making multiple copies

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..93 Stop copying ...

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.....93 Copy settings

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....93 Changing copy quality ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.93 Enlarging or reducing the image copied

.....
.....
.....
.....
.....
.....
.....

.....94 Making N in 1 copies or a poster (page layout) ...

.....
.....
.....
.....

.94 Sorting copies using the ADF

.....
.....
.....
.....
.....
.....

...95 Adjusting Brightness, Contrast and Color.....

.....
.....
.....
.....

..96 Paper Options...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...97 Setting your changes as new default.....

.....
.....
.....
.....

.....
.....
.....

....97 Restoring all the settings to factory settings

.....
.....
.....
.....

.....

....97 'Out of Memory' message .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....98 Section IV Walk-up Photo Printing 14 PhotoCapture Center® PhotoCapture Center® Operations ..

.....
.....
.....

.....
.....
.....
.....

.....
.....

.101 Entering PhotoCapture mode

.....
.....
.....

.....
.....
.....
.....

.....102 Print Images....

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....102 View Photo(s)

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....102 Print Index (Thumbnails) ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

103 Print All Photos

.....

.....
.....
.....
.....

.....

.....
.....
.....

..103 Print Photos ...

.....
.....
.....
.....
.....
.....
.....
.....
.....

....104 DPOF printing

.....
.....
.....
.....
.....
.....
.....

.....104 PhotoCapture Center® print settings ..

.....
.....
.....
.....
.....
.....
.....

...105 Print Quality

.....
.....
.....
.....
.....
.....
.....
.....
.....

106 Paper options

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
....106 xii Adjusting Brightness, Contrast and Color.

.....

.....

.....

.....

.....

.....
.....106 Cropping

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
... 108 Borderless printing..

.....

.....

.....

.....

.....

.....

.....

.....

.....

108 Setting your changes as new default.....

.....

.....

.....

.....

.....
....108 Restoring all the settings to factory settings .

.....

.....

.....
.....
.....
.....

.. 108 Scan to Card

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...109 Entering Scan mode ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 109 How to scan to card ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..109 Understanding the Error Messages

.....
.....
.....

.....
.....
.....
.....

..... 110 15 PictBridge Before Using PictBridge.

.....
.....
.....

.....
.....

.....
.....
.....
.....
.....

....111 PictBridge requirements

.....
.....
.....
.....
.....

..111 Using PictBridge

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 111 Setting your digital camera ..

.....
.....
.....

.....
.....
.....

.. 111 Printing Images...

.....
.....

.....
.....
.....

.....
.....
.....

112 DPOF printing

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...112 Understanding the Error Messages

.....
.....
.....
.....

.....
.....
.....
.....

. 113 Section V Software 16 Software and Network features Section VI Appendixes A Safety and Legal Choosing a location

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 118 To use the machine safely.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 119 Important safety instructions.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 123 Standard telephone and FCC Notices (These notices are in effect on models sold and used in the United States only.)....

.....
.....
.....125 Federal Communications Commission (FCC) Declaration of Conformity (USA only) .



[You're reading an excerpt. Click here to read official BROTHER
MFC-440CN user guide](#)
<http://yourpdfguides.com/dref/1851560>

..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 126 Industry Canada Compliance Statement (Canada only)

.....
.....
.....

. 127 LAN connection

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 127 Legal limitations for copying

.....
.....
.....

.....
.....
.....
.....

.... 128 Trademarks .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.129 B Troubleshooting and Routine Maintenance Troubleshooting

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 130 If you are having difficulty with your machine ...

.....
.....
.....

.....
.....
.....
... 130 Error messages ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

136 Transferring your faxes or Fax Journal report

.....
.....
.....

.....139 Document jam

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....140 Printer jam or paper jam ...

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....141 Dial Tone

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 142 xiii Phone line interference.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....143 Routine maintenance

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

....143 Replacing the ink cartridges

.....
.....
.....
.....

.....
.....
.....
.....

.....143 Cleaning the outside of the machine

.....
.....
.....

.....
.....
.....
.....

.....145 Cleaning the scanner.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....146 Cleaning the machine printer platen ..

.....
.....
.....
.....

.....
.....
.....

.....147 Cleaning the paper pick-up roller..

.....
.....
.....
.....

.....
.....
.....
.....

...147 Cleaning the print head

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..148 Checking the print quality

.....
.....
.....
.....

.....
.....
.....
.....

.....148 Checking the printing alignment ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
...149 Checking the ink volume .

.....
.....

.....
.....
.....

.....
.....
.....
.....

.150 Uninstalling and installing the handset and handset cradle (MFC-665CW only).....

.....
.....
.....

.....
.....
.....

.....
.....
.....

...150 Uninstalling and installing the cradle and the bracket (MFC-845CW only).....

.....
.....
.....

.....
.....
.....

.....
.....
.....

152 Machine Information

.....

.....
.....
.....

.....
.....
.....

.....
.....

154 Checking the serial number

.....

.....

.....

.....

.....

.....

.....

.....

.....154 Packing and shipping the machine ..

.....

.....

.....

.....

.....

.....

.....

.....

.....154 C Menu and Features On-screen programming

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

158 Memory storage.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.158 Menu keys

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.158 Menu table
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....159 Entering Text

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

174 D Specifications General

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

175 Print media.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....177 Fax.....

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....

.....178 Message Center (MFC-665CW and MFC-845CW only)

.....
.....
.....

.....180 Digital Cordless Handset (MFC-845CW only) ...

.....
.....
.....

.....
.....
.....

.....181 Cordless handset..

.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....

.....181 Battery ...

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
..181 Battery cradle ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.182 AC adapter

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

...182 Copy

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

...183 PhotoCapture Center® ..

.....
.....
.....
.....

.....
.....
.....

.....

.....
184 PictBridge

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.184 Scanner

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

185 Printer

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
..186 Interfaces ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....187 Computer requirements .

...188 Consumable items

.....189 Network (LAN) ...

.....190 E F xiv Glossary Index Section I General General Information Loading documents and paper General setup Security features I 2 11 24 33 I General Information Accessing the Software User's Guide and Network User's Guide This User's Guide does not contain all the information about the machine such as how to use the advanced features of the Fax, Printer, Scanner, PC Fax and Network. When you are ready to learn detailed information about these operations, read the Software User's Guide and Network User's Guide that are on the CD-ROM. I Using the documentation Thank you for buying a Brother machine! Reading the documentation will help you make the most of your machine. I I Symbols and conventions used in the documentation The following symbols and conventions are used throughout the documentation.

Bold typeface identifies specific keys on the machine's control panel. *Italicized* typeface emphasizes an important point or refers you to a related topic. Text in the *Courier New* font identifies messages on the LCD of the machine. I Viewing Documentation Viewing Documentation (For Windows®) To view the documentation, from the Start menu, point to Brother, MFC-XXXX (where XXXX is your model name) from the programs group, and then choose User's Guide. If you have not installed the software, you can find the documentation by following the instructions below: I *Italics* I *Courier New* Warnings tell you what to do to prevent possible personal injury.

Electrical Hazard icons alert you to possible electrical shock. **Cautions** specify procedures you must follow or avoid to prevent possible damage to the machine or other objects. **Notes** tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.

Improper Setup icons alert you to devices and operations that are not compatible with the machine. a b Turn on your PC.

Insert the Brother CD-ROM into your CD-ROM drive. If the model name screen appears, click your model name. 2 General Information c If the language

screen appears, click your language. The CD-ROM main menu will appear. PaperPort® SE with OCR User's Guide The complete ScanSoft® PaperPort® SE with OCR User's Guide can be viewed from the Help selection in the ScanSoft® PaperPort® SE with OCR application. 1 How to find Network setup instructions (MFC-665CW and MFC-845CW only) Your machine can be connected to a wireless or wired network. You can find basic setup instructions in the Quick Setup Guide. For more information, or if your access point supports SecureEasySetup™, please see the Network User's Guide on the CD-ROM. 1 Note If this window does not appear, use Windows® Explorer to run the setup.exe program from the root directory of the Brother CD-ROM.

d Click User's Guide to view the Software User's Guide and Network User's Guide in HTML format. 1 How to find Scanning instructions There are several ways you can scan documents. You can find the instructions as follows: Software User's Guide Scanning (For Windows® 98/98SE/Me/2000 Professional and Windows® XP) ControlCenter3 (For Windows® 98/98SE/Me/2000 Professional and Windows® XP) Network Scanning 3 Chapter 1 Viewing Documentation (For Macintosh®) Presto!® PageManager® User's Guide 1 a Turn on your Macintosh®. Insert the Brother CD-ROM into your CD-ROM drive. The following window will appear. The complete Presto!® PageManager® User's Guide can be viewed from the Help selection in the Presto!® PageManager® application. How to find Network setup instructions (MFC-665CW and MFC-845CW only) Your machine can be connected to a wireless or wired network. You can find basic setup instructions in the Quick Setup Guide. For more information, or if your access point supports SecureEasySetup™, please see the Network User's Guide on the CD-ROM. 1 b c d e Double-click the Documentation icon.

Double-click your language folder. Double-click the top page file to view the Software User's Guide and Network User's Guide in HTML format. Click the documentation you want to read: Software User's Guide Network User's Guide 1 How to find Scanning instructions There are several ways you can scan documents. You can find the instructions as follows: Software User's Guide Scanning (For Mac OS® X 10.2.4 or greater) ControlCenter2 (For Mac OS® X 10.2.4 or greater) Network Scanning (For Mac OS® X 10.2.4 or greater) 4 General Information Accessing Brother Support (For Windows®) You can find all the contacts you will need, such as Web support (Brother Solutions Center), Customer Service and Brother Authorized Service Centers on page i and on the Brother CD-ROM.

Click Brother Support on the main menu. The following screen will appear: 1 1 To access our web site (www.brother.com), click Brother Home Page. To view all Brother Numbers, including Customer Service numbers for the USA and Canada, click Support Information. To access the USA Brother online shopping mall (www.brothermall.com) for additional product and services information, click Brother Mall.com. For the latest news and product support information (<http://solutions.brother.com>), click Brother Solutions Center. To return to the main page, click Back or If you have finished, click Exit.

<http://solutions.brother.com>), click Brother Solutions Center. To return to the main page, click Back or If you have finished, click Exit.



[You're reading an excerpt. Click here to read official BROTHER MFC-440CN user guide](http://yourpdfguides.com/dref/1851560)
<http://yourpdfguides.com/dref/1851560>

5 Chapter 1 Control panel overview MFC-440CN 1 1 9 8 1 MFC-665CW 2 1 11 10 9 8 13 MFC-845CW 12 11 1 2 1 10 9 8 13 12 1 2 6 General Information 1 8 7 6 3 8 4 5 7 6 3 8 4 5 7 6 3 4 5 7 Chapter 1 Note Most of the illustrations in this User's Guide show the MFC-440CN. 1 Dial Pad Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine. (Canada only) The # key lets you temporarily switch the dialing mode during a telephone call from Pulse to Tone. 2 Fax and telephone keys Search/Speed Dial (MFC-440CN) Lets you look up and dial numbers that are stored in the memory. Redial/Pause Redials the last 30 numbers called. It also inserts a pause when programming quick dial numbers. Hook (MFC-440CN) Press before dialing if you want to make sure a fax machine will answer, and then press Black Start or Color Start. Also, press this key after picking up the handset of an external telephone during the F/T double/pseudo-ring. Hold (MFC-665CW) Lets you place telephone calls on hold. Hold/Intercom (MFC-845CW) Lets you place telephone calls on hold. Also, press this key to speak on the intercom or to transfer an incoming call to the cordless handset. Mode keys: Fax Lets you access Fax mode. Scan Lets you access Scan mode. Copy Lets you access Copy mode. PhotoCapture Lets you access PhotoCapture Center® mode. 7 6 4 Menu keys: Volume keys dc In Fax mode, you can press these keys to adjust the ring volume. a Search/Speed Dial (MFC-665CW and MFC-845CW) Lets you look up and dial numbers that are stored in the memory.

d or c Press to scroll backward or forward to a menu selection. a or b Press to scroll through the menus and options. Menu Access the main menu. OK Selects a setting. Clear/Back Press to cancel the current setting. 5 Start keys: Color Start Lets you start sending faxes or making copies in full color. Also lets you start a scanning operation (in color or black & white, depending on the scanning setting in the ControlCenter software). Black Start Lets you start sending faxes or making copies in black & white. Also lets you start a scanning operation (in color or black & white depending on the scanning setting in the ControlCenter software). On/Off You can turn the machine on or off.

Stop/Exit Stops an operation or exits from a menu. 3 8 General Information 8 LCD (liquid crystal display) Displays messages on the screen to help you set up and use your machine. Also, you can adjust the angle of the LCD display by lifting it. Ink Lets you clean the print head, check the print quality, and check the available ink volume. LCD display screen The LCD shows the current machine status when the machine is idle. 1 1 9 10 Fax Preview (MFC-665CW and MFC-845CW) Lets you preview incoming faxes on the LCD. 11 Message Center keys (MFC-665CW and MFC-845CW only): MC On/Off Turns the Message Center on or off. Will also flash if you have new messages. Play/Record (MFC-665CW) Plays voice messages stored in the memory. Will also let you record telephone calls. Play (MFC-845CW) Plays voice messages stored in memory. Erase Deletes voice messages. 12 Speaker Phone (MFC-665CW and MFC-845CW) Turns the speaker phone on or off. 13 Microphone (MFC-665CW and MFC-845CW) Picks up your voice when you speak to another party using Speaker Phone. 1 1 23 456 Current Receive Mode Lets you see the current receive mode.

Fax (Fax only) F/T (Fax/Tel) TAD (External TAD) (MFC-440CN) MC (Msg Ctr) (MFC-665CW and MFC-845CW) Mnl (Manual) Fax in the machine's memory Shows how many received faxes are in the memory. Voice message in the machine's memory. (MFC-665CW and MFC-845CW) Shows how many received voice messages are in the memory. Memory Status Lets you see the available memory in the machine. Wireless Status (MFC-665CW and MFC-845CW) A four level indicator shows the current wireless signal strength if you are using a wireless connection.

2 3 4 5 0 6 Max Ink indicator Lets you see the available ink volume. 9 Chapter 1 Basic Operations The following steps show how to change a setting in the machine. In this example the Mode Timer setting is changed from 2 minutes to 30 seconds. 1 g Press OK. You can see the current setting on the LCD: MENU General Setup Mode Timer Paper Type Paper Size Volume Select & Press 30 Secs Plain Pap Letter a b Press Menu. Press a or b to choose General Setup. OK MENU General Setup Fax LAN Print Reports Machine Info. Select & Press h Press Stop/Exit. OK c d Press OK. Press a or b to choose Mode Timer.

MENU General Setup Mode Timer Paper Type Paper Size Volume Select & Press 2 Mins Plain Pap Letter OK e f Press OK. Press a or b to choose 30 Secs. MENU Mode Timer 30 Secs 1 Min 2 Mins 5 Mins Select & Press OK 10 2 Loading documents and paper How to load documents 2 2 Loading documents You can send a fax, make copies, and scan from the ADF (automatic document feeder) and from the scanner glass. 2 CAUTION DO NOT pull on the document while it is feeding. 2 2 Using the ADF The ADF can hold up to 10 pages and feeds each sheet individually. Use standard 20 lb (80 g/m²) paper and always fan the pages before putting them in the ADF. DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, pasted or taped. DO NOT use cardboard, newspaper or fabric. Recommended environment Temperature: Humidity: Paper: 68 to 86° F (20 to 30° C) 50% to 70% 20 lb LTR (80 g/m² A4) 2 Make sure documents written with ink are completely dry. a 2 Document Sizes Supported Length: Width: Weight: 5.8 to 14 in. (148 to 355.6 mm) 5.8 to 8.5 in. (148 to 215.9 mm) 17 to 24 lb (64 to 90 g/m²) Fan the pages well. Make sure you put the documents face down, top edge first in the ADF until you feel them touch the feed roller. Adjust the paper guides to fit the width of your documents. Unfold the ADF Document Output Support Flap (1).

b c 1 CAUTION DO NOT leave thick documents on the scanner glass. If you do this, the ADF may jam. 11 Chapter 2 Using the scanner glass You can use the scanner glass to fax, copy or scan pages of a book or one page at a time. 2 CAUTION If you are scanning a book or thick document, DO NOT slam the cover down or press on it. Document Sizes Supported Length: Width: Weight: Up to 11.7 in. (297 mm) Up to 8.5 in. (215.9 mm) Up to 4.4 lb (2 kg) 2 Scannable area The scannable area depends on the settings in the application you are using. The figures below show the areas you cannot scan on paper. 2 How to load documents Note To use the scanner glass, the ADF must be empty. 2 3 1 4 a b Lift the document cover. Using the document guidelines on the left, center the document face down on the scanner glass. 2 Usage Fax Document Top (1) Size Bottom (2) Letter A4 Copy Letter A4 Scan Letter A4 0.



[You're reading an excerpt. Click here to read official BROTHER MFC-440CN user guide](http://yourpdfguides.com/dref/1851560)
<http://yourpdfguides.com/dref/1851560>

2 2 2 h While holding the paper tray in place, pull out the paper support (1) until it clicks and unfold the paper support flap (2). CAUTION Do not use any of the following types of envelopes, as they will cause paper feed problems: · That are of a baggy construction. · That are embossed (have raised writing on them). · That have clasps or staples. · That are pre-printed on the inside. Glue Double flap Note Do not use the paper support flap for Legal paper. Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using.

19 Chapter 2 How to load envelopes and post cards 2 a If you have problems when printing on envelopes, try the following suggestions: 2 Before loading, press the corners and sides of the envelopes or post cards to make them as flat as possible. a b c Open the envelope flap. Make sure the open flap is either to the side of the envelope or to the back edge of the envelope when printing. Adjust the size and margin in your application. Note If the envelopes or post cards are 'doublefeeding', put one envelope in the paper tray at a time. b Put the envelopes or post cards into the paper tray with the address side down and the leading edge in first as shown in the illustration. Slide the paper side guides (1) and paper length guide (2) to fit the size of the envelopes or post cards. 1 2 20 Loading documents and paper Loading photo paper Note In Canada, the photo bypass tray is called the photo paper tray. Use the photo bypass tray, which has been assembled on the top of the output paper tray cover, to print on photo 4"×6" and photo L 3.5"×5" size paper.

When you use the photo bypass tray, you do not have to take out the paper that is in the tray beneath it. 2 c Put the photo paper into the photo bypass tray and gently adjust the paper side guides to the paper. Make sure the paper side guides touch the sides of the paper. 2 a Press the photo bypass tray (1) release button with your left thumb and push the photo bypass tray backward until it clicks into the photo printing position. Note · Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems.

· Always make sure that the paper is not curled. d 1 When you have finished printing photos return the photo bypass tray to the normal printing position. Press the photo bypass tray release button with your left thumb and pull the photo bypass tray forward until it clicks. 1 Photo Bypass Tray b Press and slide the paper side guides (1) and paper length guide (2) to fit the paper size. 1 2 21 Chapter 2 Removing small printouts from the machine When the machine ejects small paper onto the output paper tray you may not be able to reach it.

Make sure printing has finished, and then pull the tray completely out of the machine. 2 22 Loading documents and paper Printable area The printable area depends on the settings in the application you are using. The figures below show the unprintable areas on cut sheet paper and envelopes. The machine can only print in the shaded areas when the Borderless print feature is available and turned on. Cut Sheet Paper Envelopes 2 2 3 1 4 1 3 4 2 Top (1) Cut Sheet Envelopes 0.12 in. (3 mm) 0.47 in. (12 mm) Bottom (2) 0.12 in.

(3 mm) 0.95 in. (24 mm) Left (3) 0.12 in. (3 mm) 0.12 in. (3 mm) 2 Right (4) 0.12 in. (3 mm) 0.12 in.

(3 mm) Note The Borderless feature is not available for envelopes. 23 3 Note General setup On/Off setting 3 On/Off key When the machine is idle, you can turn it on and off by pressing the On/Off key. 3 3 If you have connected an external telephone or TAD, it is always available. Turning the machine off You can customize the machine's On/Off key. The factory setting is Fax Receive:Off.

Your machine will not work when it is switched off, but it will clean the print head periodically. If you turn this setting to Fax Receive:On, you can receive faxes or calls even when the machine is switched off. (See On/Off key on this page.) 3 a Press and hold down the On/Off key until the LCD shows Shutting Down. The LCD light goes off.

a b c Press Menu. Press a or b to choose General Setup. Press OK. Press a or b to choose On/Off Setting. Press OK. Press a or b to choose Fax Receive:On (or Fax Receive:Off). Press OK. Press Stop/Exit. Turning the machine on 3 a Press the On/Off key. d e 24 General setup MFC-440CN On/Off setting Receive mode Available operations No machine operations will be available.

MFC-665CW and MFC-845CW On/Off setting Receive mode Available operations No machine operations will be available. -- Fax Receive: Off (factory setting) Fax Fax Only Receive: External On 1 TAD -- Fax Receive: Off (factory setting) 3 Fax Receive Easy Receive Delayed Fax 6 Fax Forward 6 Paging 6 Fax Storage 6 Fax Preview 6 Fax Receive Easy Receive Delayed Fax 3 Fax Forward 3 Paging 3 Fax Storage 3 3 Fax Fax Only Receive: Fax/Tel 3 On 1 2 Manual 4 PC Fax Receive 3 Remote Retrieval Manual Fax/Tel 2 1 PC Fax Receive 6 Remote Retrieval 6 MC Fax Receive Recording Incoming Message Easy Receive, Delayed Fax 6 Fax Forward 6 Paging 6 Fax Storage 6 Fax Preview 6 PC Fax Receive 6 Remote Retrieval 6 Manual Fax/Tel 1 Easy Receive Delayed Fax 3 You cannot receive a fax with Black Start or Color Start. You cannot receive a fax automatically if you have set the receive mode to Fax/Tel. Set before you switch off the machine. 2 3 Easy Receive 5 Delayed Fax 6 You cannot receive a fax with Black Start or Color Start. You can receive telephone calls by lifting the handset (MFC-665CW) or using the cordless handset (MFC-845CW). MFC-665CW When an external TAD is connected and Easy Receive is turned on. You cannot receive a fax automatically if you have set the receive mode to Fax/Tel (MFC-845CW). Set before you switch off the machine. 2 3 4 5 6 25 Chapter 3 Mode Timer The machine has four temporary mode keys on the control panel: Fax, Scan, Copy and PhotoCapture.

You can change the amount of time the machine takes after the last Scan, Copy or PhotoCapture operation before it returns to Fax mode. If you choose Off, the machine stays in the mode you used last. 3 Paper settings Paper Type To get the best print quality, set the machine for the type of paper you are using. 3 3 a b c d Press Menu. Press a or b to choose General Setup.

Press OK. Press a or b to choose Paper Type. Press OK. Press a or b to choose Plain Paper, Inkjet Paper, Brother Photo, Other Photo or Transparency. Press OK.

Press Stop/Exit. e a b c d Press Menu. Press a or b to choose General Setup. Press OK. Press a or b to choose Mode Timer. Press OK. Press a or b to choose 0 Sec, 30 Secs, 1 Min, 2 Mins, 5 Mins or Off.



[You're reading an excerpt. Click here to read official BROTHER](#)

[MFC-440CN user guide](#)

<http://yourpdfguides.com/dref/1851560>

Press OK. Press Stop/Exit. Note The machine ejects paper with printed surfaces face up onto the paper tray in front of the machine.

When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams. e 26 General setup Paper Size You can use five sizes of paper for printing copies: Letter, Legal, A4, A5, and 4 × 6 in. (10 × 15 cm) and three sizes for printing faxes: Letter, Legal and A4. When you change the size of paper you load in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

3 Volume Settings Ring Volume You can choose a range of ring volume levels, from High to Off. While in Fax mode, press d or 3 3 3 a b c d e Press Menu.

Press a or b to choose General Setup. Press OK. Press a or b to choose Paper Size. Press OK.

Press a or b to choose Letter, Legal, A4, A5 or 4"×6". Press OK. Press Stop/Exit. c to adjust the volume level. The LCD shows the current setting, and each key press will change the volume to the next level.

The machine will keep the new setting until you change it. You can also change the volume through the menu, by following the instructions below: Setting the Ring Volume from the menu 3 a b c d e f Press Menu. Press a or b to choose General Setup. Press OK. Press a or b to choose Volume.

Press OK. Press a or b to choose Ring. Press OK. Press a or b to choose Low, Med, High or Off. Press OK. Press Stop/Exit. Beeper Volume When the beeper is on, the machine will beep when you press a key, make a mistake or after you send or receive a fax. You can choose a range of volume levels, from High to Off. 3 a Press Menu. 27 Chapter 3 b c d e f Press a or b to choose General Setup.

Press OK. Press a or b to choose Volume. Press OK. Press a or b to choose Beeper. Press OK. Press a or b to choose Low, Med, High or Off Press OK. Press Stop/Exit. Note (MFC-665CW and MFC-845CW only) You can adjust the speaker volume while you are listening to your outgoing message (OGM) and incoming messages (ICM's) by pressing d or c. Handset Volume (MFC-665CW only) 3 Speaker Volume You can choose a range of speaker volume levels, from High to Off. a b 3 Press Menu.

Press a or b to choose General Setup. Press OK. Press a or b to choose Volume. Press OK. Press a or b to choose Handset.

Press OK. Press a or b to choose Low or High. Press OK. Press Stop/Exit. c d e f a b c d e f a b c Press Menu.

Press a or b to choose General Setup. Press OK. Press a or b to choose Volume. Press OK. Press a or b to choose Speaker. Press OK. Press a or b to choose Low, Med, High or Off. Press OK. Press Stop/Exit. Note · You can adjust the handset volume any time you are talking on the telephone.

There are two handset volume levels, Low and High. The default setting is Low. · Press d or c to adjust the volume level. The LCD shows the setting you are choosing. The new setting will remain until you change it again. You can also adjust the speaker volume by pressing Hook or Speaker Phone. Press Hook or Speaker Phone. Press d or c. This setting will stay until you change it again. Press Hook or Speaker Phone.

28 General setup Choosing the Handset Volume (For Volume Amplify) (MFC-665CW only) Before you begin to use the machine, you must decide if you need to set the handset volume to Volume Amplify On for a user who is hearing-impaired. The AMPLIFY volume level complies with FCC standards. Volume Amplify Off This default setting is appropriate if none of the users are hearing-impaired. During a conversation, users can press d or c on the control panel to adjust the volume to Low or High. When the handset is replaced, the handset volume will remain until you change it again.

Volume Amplify On - Temporary This setting is appropriate if some of the users are hearing-impaired. During a conversation, users can press d or c on the control panel to adjust the volume to Low, High or Amplify. When the handset is replaced, the handset volume returns to the default setting of Low. Volume Amplify: On - Permanent Choose Volume Amplify On Permanent if all of the users are hearingimpaired. During a conversation, users can press d or c on the control panel to adjust the volume to Low, High or Amplify.

When the handset is replaced, the handset volume returns to the default setting of Amplify. Note 3 When you press d or c on the control panel to adjust the volume, the LCD shows the setting you are choosing. Each key press changes the volume to the next setting. WARNING It is important that you do NOT choose Permanent unless ALL the users are hearing-impaired. Otherwise, the default setting of Amplify may damage the hearing of some users. 3 29 Chapter 3 Setting Volume Amplify (MFC-665CW only) Please carefully read Choosing the Handset Volume (For Volume Amplify) (MFC-665CW only) on page 29. 3 Automatic Daylight Savings Time You can set the machine to change automatically for daylight savings time. It will reset itself forward one hour in the Spring and backward one hour in the Fall. Make sure you have set the correct date and time in the Date/Time setting. 3 a b c d e Press Menu.

Press a or b to choose General Setup. Press OK. Press a or b to choose Volume. Press OK. Press a or b to choose Volume Amplify. Press OK. Do one of the following. If none of the users are hearingimpaired, press a or b to choose Off, and then press OK and go to step g. If some or all of the users are hearing-impaired, press a or b to choose On, and then press OK. Do one of the following.

If all the users are hearing-impaired, press a or b to choose Permanent, and then press OK. If only some of the users are hearingimpaired, choose Temporary, and then press OK. Press Stop/Exit. a b c d e Press Menu. Press a or b to choose General Setup.

Press OK. Press a or b to choose Auto Daylight. Press OK. Press a or b to choose On (or Off). Press OK.

Press Stop/Exit. f g 30 General setup LCD display LCD Contrast You can adjust the LCD contrast for a sharper and more vivid display. If you are having difficulty reading the LCD, try changing the contrast setting. e 3 3 Press a or b to choose Light, Med or Dark. Press OK. Press Stop/Exit. f Setting the Dim Timer for the backlight You can set how long the LCD backlight stays on after the last key press. 3 3 a b c d e f Press Menu. Press a or b to choose General Setup. Press OK.

Press a or b to choose LCD Settings. Press OK. Press a or b to choose LCD Contrast. Press OK. Press a or b to choose Light, Med or Dark. Press OK. Press Stop/Exit. a b c d e f 3 Press Menu. Press a or b to choose General Setup. Press OK.

Press a or b to choose LCD Settings. Press OK. Press a or b to choose Dim Timer. Press OK. Press a or b to choose 10 Secs, 20 Secs, 30 Secs or Off. Press OK. Press Stop/Exit. Setting the backlight brightness Setting the Off Timer You can set how long the LCD stays on after the last key press.



[You're reading an excerpt. Click here to read official BROTHER](http://yourpdfguides.com/dref/1851560)

[MFC-440CN user guide](http://yourpdfguides.com/dref/1851560)

<http://yourpdfguides.com/dref/1851560>

This is a power saving feature. The machine can print, scan and receive faxes and voice calls when the LCD is off.

3 You can adjust the brightness of the LCD backlight. If you are having difficulty reading the LCD, try changing the brightness setting. a b c d Press Menu. Press a or b to choose General Setup. Press OK. Press a or b to choose LCD Settings. Press OK. Press a or b to choose Backlight. Press OK. a b c Press Menu.

Press a or b to choose General Setup. Press OK. Press a or b to choose LCD Settings. Press OK. 31 Chapter 3 d e Press a or b to choose Off Timer. Press OK. Press a or b to choose 1 Min, 2 Mins, 3 Mins, 5 Mins, 10 Mins, 30 Mins or Off. Press OK. Press Stop/Exit. f Note When the display is off you can press any key to turn it back on.

Setting the Wallpaper You can change the wallpaper. 3 a b c d e f Press Menu. Press a or b to choose General Setup. Press OK. Press a or b to choose LCD Settings.

Press OK. Press a or b to choose Wallpaper. Press OK. Press a or b to choose a wallpaper. Press OK.

Press Stop/Exit. 32 4 Security features Setting up the password 4 4 TX Lock (MFC-440CN only) TX Lock lets you prevent unauthorized access to the machine. You will not be able to continue to schedule Delayed Faxes or Polling jobs. However, any pre-scheduled Delayed Faxes will be sent even if you turn on TX Lock, so they will not be lost. While TX Lock is On, the following operations are available: Receiving faxes Fax Forwarding (If Fax Forwarding was already On) Remote retrieval (If Fax Storage was already On) PC Fax Receive (if PC Fax Receive was already On) While TX Lock is On, the following operations are NOT available: Sending faxes Copying PC printing Scanning PhotoCapture 4 a b c d e f g a b c d e Press Menu. Press a or b to choose Fax. Press OK. Press a or b to choose Miscellaneous. Press OK. Press a or b to choose TX Lock.

Press OK. Enter a 4-digit number for the password. Press OK. When the LCD shows Verify:, reenter the password. Press OK. Press Stop/Exit. 4 4 Changing the TX Lock password Press Menu. Press a or b to choose Fax. Press OK. Press a or b to choose Miscellaneous.

Press OK. Press a or b to choose TX Lock. Press OK. Press a or b to choose Set Password. Press OK.

Enter a 4-digit number for the current password. Press OK. Enter a 4-digit number for a new password. Press OK. Note If you forget the TX Lock password, please call Brother Customer Service.

Setting and changing the TX Lock password Note If you have already set the password, you will not need to set it again. 4 f g 33 Chapter 4 h i When the LCD shows Verify:, reenter the password. Press OK. Press Stop/Exit. Memory Security (MFC-665CW and MFC-845CW only) 4 4 Turning the TX Lock on/off Turning TX Lock on 4 a b c d e f Press Menu. Press a or b to choose Fax. Press OK. Press a or b to choose Miscellaneous. Press OK. Press a or b to choose TX Lock.

Press OK. Press a or b to choose Set TX Lock. Press OK. Enter the registered 4-digit password. Press OK. The machine goes offline and the LCD shows TX Lock Mode. 4 Memory Security lets you prevent unauthorized access to the machine. You will not be able to continue to schedule Delayed Faxes or Polling jobs. However, any prescheduled Delayed Faxes will be sent even if you turn on Memory Security, so they will not be lost. While Memory Security is On, the following operations are available: Receiving faxes into memory (limited by memory capacity) Fax Forwarding (If Fax Forwarding was already On) Remote retrieval (If Fax Storage was already On) Cordless handset (MFC-845CW only) · Making a call · Receiving a call · Viewing Caller ID (with subscriber service) While Memory Security is on, the following operations are NOT available: Printing received faxes Sending faxes Copying PC printing Scanning PhotoCapture PC Fax Receive Cordless handset (MFC-845CW only) · Intercom · Transfer a call · Register cordless handset Turning TX Lock off a b Press Menu.

Enter the registered 4-digit password. Press OK. TX lock is automatically turned off. Note If you enter the wrong password, the LCD shows Wrong Password and stays offline. The machine will stay in TX lock mode until the registered password is entered.

34 Security features Note · To print the faxes in memory, turn off Memory Security. · You must turn off PC Fax Receive before you can turn on Memory Security. (See Turning off Advanced Fax Operations on page 81.) · If you forget the Memory Security password, please call Brother Customer Service.

Changing your memory security password 4 a b c d 4 Press Menu.

Press a or b to choose Fax. Press OK. Press a or b to choose Miscellaneous. Press OK. Press a or b to choose Mem Security. Press OK. Press a or b to choose Set Password. Press OK. Enter the registered 4-digit number for the current password. Press OK.

Enter a 4-digit number for a new password. Press OK. When the LCD shows Verify:, reenter the new password. Press OK. Press Stop/Exit. 4 Setting and changing the memory security password Note If you have already set the password, you will not need to set it again. e f Setting a password for the first time 4 a b c d e f g g h i Press Menu. Press a or b to choose Fax. Press OK. Press a or b to choose Miscellaneous.

Press OK. Press a or b to choose Mem Security. Press OK. Enter a 4-digit number for the password. Press OK.

When the LCD shows Verify:, reenter the password. Press OK. Press Stop/Exit. 35 Chapter 4 Turning the memory security on/off Turning on the memory security lock 4 4 a b c d e f Press Menu. Press a or b to choose Fax.

Press OK. Press a or b to choose Miscellaneous. Press OK. Press a or b to choose Mem Security. Press OK. Press a or b to choose Set Security. Press OK. Enter the registered 4-digit password. Press OK. The machine goes offline and the LCD shows Secure Mode.

Note If there is a power failure the data will stay in memory for approximately 24 hours. Turning off the memory security 4 a b Press Menu. Enter the registered 4-digit password. Press OK. Memory Security is automatically turned off. Note If you enter the wrong password, the LCD shows Wrong Password and stays offline. The machine will stay in Secure mode until the registered password is entered. 36 Section II Fax Sending a fax Receiving a Fax Telephone Services and External devices Dialing and storing numbers Message Center (MFC-665CW and MFC-845CW only) II 38 46 52 63 71 Advanced fax operations (Black & White only) 76 Printing Reports 87 Polling 89 5 Sending a fax Scan Size (See page 39.) 5 5 Entering Fax mode When the machine is idle, the time appears on the LCD. When you want to send a fax, or change fax send or receive settings, press the Set New Default (See page 44.)) Factory Reset (See page 44.) When the option you want is highlighted, press OK. (Fax) key to illuminate it in green.



[You're reading an excerpt. Click here to read official BROTHER MFC-440CN user guide](http://yourpdfguides.com/dref/1851560)
<http://yourpdfguides.com/dref/1851560>