



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for CANON IMAGEPROGRAF IPF605. You'll find the answers to all your questions on the CANON IMAGEPROGRAF IPF605 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual CANON IMAGEPROGRAF IPF605
User guide CANON IMAGEPROGRAF IPF605
Operating instructions CANON IMAGEPROGRAF IPF605
Instructions for use CANON IMAGEPROGRAF IPF605
Instruction manual CANON IMAGEPROGRAF IPF605

Canon

Large Format Printer

 **imagePROGRAF**
iPF605

User Manual

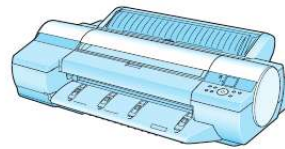

ENG



[You're reading an excerpt. Click here to read official CANON IMAGEPROGRAF IPF605 user guide](http://yourpdfguides.com/dref/5035071)
<http://yourpdfguides.com/dref/5035071>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....19 .

Vents.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....20 *Control Panel.* .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....21 . *Control Panel.*

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...24 Control Panel

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....24 . @@@@ @@@@.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..93 . Canceling print jobs..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..95 Canceling Print Jobs from the Control Panel...

.....
.....
.....
.....
.....
.....
.....
.....

....95 Canceling Print Jobs from Windows.

.....
.....
.....
.....
.....
.....
.....
.....
.....

....97 . Canceling Print Jobs from Mac OS X.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

....99 Handling Paper 101 Paper.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...101 Types of Paper.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....101 Paper Sizes.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

106 Handling rolls.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....109 Selecting the Paper Source. ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
...109 . *Selecting the Paper Type (Roll)*.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 110 . *Specifying the Paper Length (Roll)*.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 111 . *Loading Rolls on the Roll Holder*....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

112 *Loading Rolls in the Roll Feed Unit*.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

114 *Loading Rolls in the Printer*.....

.....

.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.. 115 Removing the Roll from the Printer...

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.. 117 Removing Rolls from the Roll Feed Unit...

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.... 118 Removing Rolls From the Roll Holder.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

119 Clearing Jammed Roll Paper.....

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....120 Clearing Jammed Paper (Paper Feed Slot).

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....123 Feeding Roll Paper Manually....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....124 Detection of the Remaining Roll Paper.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....125 Specifying the Ink Drying Time for Rolls.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.126 . Specifying the Cutting Method for Rolls.....

.....
.....

.....
.....

.....
.....
.....

.....
.....

128 Cutting the Leading Edge of Roll Paper Automatically.....

.....
.....
.....
.....

.....
.....

.133 Reducing Dust from Cutting Rolls...

.....
.....
.....
.....

.....
.....
.....

.....
.....

...134 Roll Holder Set..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

....135 Attaching Accessories to the Roll Holder.

.....
.....
.....
.....

.....
.....
.....
.....

.....
136 Feeding Paper from the Roll Feed Unit.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

....138 Removing the Roll Feed Unit.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...139 Installing the Roll Feed Unit..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

....140 Handling sheets.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....141 Selecting the Paper Source. ...

.....

.....
.....
.....
.....

.....150 Removing Heavyweight Paper from the Front Paper Feed Slot..

.....
.....

.....
.....

....151 ii Contents Contents Clearing Jammed Paper from the Tray.....

.....
.....
.....

.....
.....
.....

.....
.....

...152 Output Stacker..

.....

.....
.....
.....

.....
.....
.....

.....
.....

...155 Output Stacker Precautions.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

....155 Using the Output Stacker.....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....156 Working With Various Print Jobs 158 Printing Photos and Images.

.....

.....
.....
.....
.....

.....
.....
.....
.....

...158 . Printing Photos and Images (Windows).....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....158 Printing Photos and Images...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....160 Printing Photos and Images (Windows)..

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.162 Printing Photos and Images (Mac OS X).....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..164 Printing CAD Drawings.....

.....
.....
.....
.....

.....
.....
.....
.....

....167 Printing CAD Drawings.

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

..167 . Printing Line Drawings and Text (Windows).....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

168 Printing Line Drawings and Text.....

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....

...329 Printing With Watermarks.

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..329 . Printing with Watermarks-COPY, FILE COPY, and so on (Windows)..

.....
.....
.....
.....

.....330 Making the Original Orientation Match the Paper Orientation....

.....
.....
.....

.332 Making the Original Orientation Match the Paper Orientation (Windows)...

.....
.....

...333 Making the Original Orientation Match the Paper Orientation (Mac OS X)..

.....
.....

...335 Using Favorites..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
...338 Using Favorites (Windows)..
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

339 Using Favorites (Mac OS X).

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
341 . Cutting Roll Paper After Printing. ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
342 . Cutting Roll Paper After Printing (Windows). ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..343 . Cutting Roll Paper After Printing (Mac OS X).....

.....
...350 . *Checking the Layout in a Preview Before Printing (Windows)*.....

.....
.....

.....
.....
.....
...352 *Using Favorites (Windows)*.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....354 *Accessing the Printer Driver Dialog Box from Applications (Windows)*.....

.....
.....
.....

.....
.....356 *Accessing the Printer Driver Dialog Box from the Operating System Menu (Windows)*.....

.....

.....358 *Main Sheet (Windows)*.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
360 *Paper Information on Printer Dialog Box (Windows)*.....

.....
.....

.....
.....
.....

.....
.....363 *Media Detailed Settings Dialog Box (Windows)*.....

.....
.....

.....
.....
.....
.....

.....364 View Settings Dialog Box for the Printing Application (Windows).....

.....
.....
.....
.....

.....365 Color Adjustment Sheet: Color (Windows).

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....366 Matching Sheet (Windows)..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

368 Contents □ Contents Color Adjustment Sheet: Monochrome (Windows).

.....
.....

.....
.....
.....
.....

.....
.....

.370 . Page Setup Sheet (Windows)..

.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....
.....
.....372 Paper Size Options Dialog Box (Windows).....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....374 Layout Sheet (Windows)..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....375 Page Options Dialog Box (Windows).

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....377 Special Settings Dialog Box (Windows)....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....378 Favorites Sheet (Windows).

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..384 Status Monitor.

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....385 . imagePROGRAF Status Monitor (Windows). .

.....
.....
.....

.....
.....
.....

.....
.....
.....

...385 . Digital Photo Front-Access.

.....
.....
.....

.....
.....
.....

.....
.....
.....

386 Digital Photo Front-Access.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

390 . Installing imagePROGRAF Device Setup Utility...

.....
.....
.....
.....
.....

.390 Configuring the IP Address Using imagePROGRAF Device Setup Utility.

.....
.....
.....

..391 . Mac OS X Software 392 Printer Driver.

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

392 . Printer Driver Settings (Mac OS X).....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.392 Specifying Paper in the Printer Driver (Mac OS X).....

.....
.....
.....

.....
.....
.....

.....393 Confirming Print Settings (Mac OS X)...

.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

...395 *Checking the Layout Before Printing (Mac OS X)*.....

.....
.....
.....
.....
.....
.....

.397 *Using Favorites (Mac OS X), ...*

.....
.....
.....
.....
.....
.....
.....

.398 *. Accessing the Printer Driver Dialog Box from Applications (Mac OS X)*.....

.....
.....
.....

.....399 *Main Pane (Mac OS X)*...

.....
.....
.....
.....
.....
.....
.....
.....
.....

....400 *Paper Information on Printer Dialog Box (Mac OS X)*.

.....
.....

.....
.....
.....
.....

.....
.....
.403 Media Detailed Settings Dialog Box (Mac OS X)...

.....
.....
.....
.....

.....
.....
.....
.....404 View Settings Dialog Box for the Printing Application (Mac OS X)

.....
.....
.....
.....

.....405 . Color Settings Pane: Color (Mac OS X)..

.....
.....
.....
.....
.....

.....
.....
.....
.....

.406 Color Settings Pane: Monochrome (Mac OS X).

.....
.....
.....
.....
.....

.....
.408 . Page Setup Pane (Mac OS X)...

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
...409 Utility Pane (Mac OS X).

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 411 Additional Settings Pane (Mac OS X)...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..412 Support Pane (Mac OS X).

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

413 . Printmonitor...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....414 *imagePROGRAF Printmonitor (Macintosh)*.

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..414 . *vi Contents Contents Network Setting 415 Network Setting.*

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.415 *Network Environment*....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....415 *Configuring the IP Address on the Printer*...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....417 *Configuring the IP Address Using imagePROGRAF Device Setup Utility*. ..

.....
.....
.....

.....418 . *Configuring the IP Address Using the Printer Control Panel.*

.....
.....
.....
.....

.419 Configuring the IP Address Using ARP and PING Commands.....

.....
.....
.....
.....

.....420 Using RemoteUI.

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....421 Configuring the Printer's TCP/IP Network Settings..

.....
.....
.....

.....
.....
.....
.....

....422 Configuring the Printer's AppleTalk Network Settings.

.....
.....
.....

.....
.....
.....
.....

.424 Configuring the Printer's NetWare Network Settings. ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....425 .

Specifying Printer-Related Information.

.....
.....
.....

.....
.....
.....

.....
.....427 .

Configuring the Communication Mode Manually.

.....
.....
.....
.....

.....
.....
.....

....428 . *Email Notification When Printing is Finished or Errors Occur....*

.....
.....
.....

.....
.....

429 Initializing the Network Settings....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

430 Network Setting (Windows).....

.....
.....
.....

.....
.....
.....

.....431 *Configuring the Printer Driver Destination (Windows)....*

.....
.....
.....

.....
.....
.....
.....

.....431 *Sharing the Printer in Windows...*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....432 *Configuring the Printer's NetWare Network Settings. .*

.....
.....

.....
.....
.....
.....

.....
.....

.....434 *. Specifying the Printer's Frame Type...*

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....436 *. Specifying NetWare Print Services....*

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....438 *. Specifying NetWare Protocols. ..*

.....

.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

....441 . Configuring NetWare Network Settings.



[You're reading an excerpt. Click here to read official CANON
IMAGEPROGRAF IPF605 user guide
http://yourpdfguides.com/dref/5035071](http://yourpdfguides.com/dref/5035071)

....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...443 . Installing imagePROGRAF Device Setup Utility.

.....
.....
.....
.....
.....

.....444 Configuring the IP Address Using imagePROGRAF Device Setup Utility.

.....
.....
.....
.....

444 . Network Setting (Mac OS X).

.....
.....
.....
.....
.....
.....

.....445 .
Configuring the Printer Driver Destination (Macintosh)....

.....
.....
.....
.....
.....

445 Configuring the Printer's AppleTalk Network Settings....

.....
.....
.....
.....
.....

..446 Configuring the Destination for AppleTalk Network (Macintosh)...

.....

.....
.....
.....
.....

...447 Configuring the Destination for TCP/IP Network (Macintosh).....

.....
.....
.....

.....
.....
.....

...450 Configuring the Destination for Bonjour Network (Macintosh).....

.....
.....
.....
.....

..452 Adjustments for Better Print Quality 453 Adjusting the Printhead. ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...453 . Correcting Print Misalignment.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..453 Adjusting the Printhead Alignment Automatically...

.....
.....

.....
.....
.....
.....

.....
.....
.....

.453 Adjusting the Printhead Alignment Manually.....

.....
.....

.....
.....
.....
.....
.....

.....455 Adjusting the Printhead Height...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

....457 Adjusting the feed amount.

.....
.....
.....
.....
.....
.....
.....
.....

.458 Adjusting the Feed Amount Automatically.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

.458 Adjusting the Feed Amount Manually.....

.....
.....
.....
.....
.....
.....
.....
.....

...461 Adjusting the Measurement Scale for Better Accuracy..

.....

.....
.....
.....

.....
.....
.....
...464 Adjusting Color on the Trailing Edge of Sheets..

.....
.....
.....
.....
.....
.....
.....
.....

466 Adjusting the Vacuum Strength.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....468 Contents vii Contents Maintenance 469 Ink Tanks. ...

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
...469 .
Ink Tanks.....

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.499 Other Maintenance.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

....500 Preparing to Transfer the Printer.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...500 Updating the Firmware.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..504 Troubleshooting 505 Frequently Asked Questions...

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....505 Frequently Asked Questions....

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....505 Problems Regarding Paper....

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....

.507 Clearing Jammed Paper (Paper Feed Slot).....

.....
.....
.....
.....
.....
.....
.....
.....

.....507 Clearing Jammed Roll Paper..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....

..508 Clearing Jammed Paper from the Tray...

.....
.....
.....
.....
.....
.....
.....
.....

.....
. 511 Roll Paper Cannot be Inserted into the Paper Feed Slot...

.....
.....

.....
.....
.....
.....

.....*514 Cannot Load Sheets. .*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

514 . Paper is not cut straight.

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...514 . Paper cannot be cut.

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..514 Depression on the leading edge is left..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....514 Roller marks are left across the trailing edge of paper...

.....
.....
.....
.....
.....
.....
.....

.....514 Printing does not start..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..515 The Data lamp on the Control Panel does not light up.....

.....
.....
.....
.....
.....
.....
.....

..515 . The Printer Does Not Respond Even if Print Jobs are Sent.

.....
.....
.....
.....
.....
.....

.....515 . The Display Screen indicates the system is filling with ink. ...

.....
.....
.....
.....
.....
.....

515 . viii Contents Contents The printer stops during a print job.....

.....
.....
.....
.....

.....516 An error message is shown on the Display Screen.

.....
.....
.....
.....

.....
.....
.....
.....

516 . The printer ejects blank, unprinted paper.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..516 The printer stops when printing a HP-GL/2 job (the carriage stops moving).....

.....
.....
.....

.....516 .

Problems with the printing quality.....

.....
.....
.....
.....

.....
.....
.....

.....517 Printing is faint....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....517 Paper rubs against the Printhead..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.518 The edges of the paper are dirty.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....519 The surface of the paper is dirty.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....520 The back side of the paper is dirty.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....520 Roller marks are left across the trailing edge of paper....

.....

.....
.....
.....
.....

.....
.....
..520 Printed colors are inaccurate. ..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.521 . Banding in different colors occurs.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

....522 Colors in printed images are uneven.

.....
.....
.....

.....
.....
.....

.....
.....
.....

.523 . Image Edges are Blurred or White Banding Occurs.....

.....
.....
.....

.....
.....
.....

.....524 The contrast becomes uneven during printing....

.....
.....
.....
.....

.....
.....
.....
.....

.....524 *The length of printed images is inaccurate.*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....524 . *Documents are printed crooked..*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...524 *Documents are printed in monochrome.....*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....524 *Line thickness is not uniform (Windows)...*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....

.....526 . *Cannot print over a NetWare network.*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....527 *Cannot print over AppleTalk or Bonjour networks.....*

.....
.....
.....

.....
.....
.....
.....

.....527 *Installation problems..*

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....528 *The IEEE 1394 Driver Cannot Be Installed Correctly.*

.....
.....
.....

.....
.....
.....
.....

.....528 *Removing Installed Printer Drivers...*

.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

.....
...529 HP-GL/2 problems..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..530 With HP-GL/2, printing is misaligned..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....530 .
Lines or images are missing in the HP-GL/2 data that was printed.....

.....
.....

.....
.....
.....

.530 Lines Are Printed Too Thick or Thin During HP-GL/2 Printing.....

.....
.....
.....
.....

.....
.530 HP-GL/2 jobs are printed in monochrome (or color)....

.....
.....

.....
.....
.....
.....

.....
530 Printed Colors in Line Drawings are Inaccurate During HP-GL/2 Printing.....

.....

.....
.....

.530 HP-GL/2 printing takes a long time....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.531 Replotting with HP-GL/2 jobs is not possible...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.531 The printer stops when printing a HP-GL/2 job (the carriage stops moving).....

.....

.....

.....531 . Other problems.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...532 The printer does not go on.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.532 If the Printer Makes a Strange Sound...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..532 Messages advising to check the maintenance cartridge are not cleared..
.....

.....
.....

532 The printer consumes a lot of ink.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

...532 Ink Level Detection..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
...533 Contents ix Contents Error Message 535 Responding to Messages..
.....

.....
.....
.....
.....

.....
.....
.....
.....

.535 Responding to Messages.....

.....

.538 Papr Type Mismatch.

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

...538 . Papr Size Mismatch.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..539 Paper size not detected.. .

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

....539 . Insufficient paper for job.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....
..540 This paper cannot be used.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....540 Roll printing is selected.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...540 Roll printing is selected, but sheets are loaded.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....541 The roll is empty.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....

...541 Roll feed unit err.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...541 No Roll Feed Unit.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

541 Sheet printing is selected.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

542 Manual printing is selected, but a roll is loaded.. ...

.....

.....
.....
.....
.....

.....542 . Wrong paper feed slot for this paper type...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..542 Cannot feed paper...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...542 Paper jam..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..543 Paper loaded askew.....

.....
.....

.....
.....
.....
.....

....544 End of paper feed.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.544 Borderless printng not possible.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....545 Messages regarding ink ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....546 . Ink insufficient..

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....549 Cannot adjust printhead.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....549 Cannot adjust band...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....549 PHead needs cleaning.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....549 Problem with Printhead.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
...549 Printhead error..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
....550 □ Contents Contents Messages regarding the maintenance cartridge.

.....
.....

.....
.....
.....

.....551 . No maintenance cartridge..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
..551 Prepare for maint cart replacement...

.....
.....

.....
.....
.....

.....
.....
.....

.....

..551 No Maintenance Cartridge capacity...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.551 Maintenance cartridge full...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....551 Maintenance cartridge problem.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.551 Messages regarding HP-GL/2.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..552 This type of paper is not compatible with HP-GL/2...

.....
.....
.....
.....
.....

.....
.....
.....
...552 There is no data..
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
..552 GL2: Wxxx The memory is full. (xxx is 0501, 0903, or 0904)..
.....

.....
.....
.....

.....552 GL2: W0502 The parameter is out of range.....
.....
.....

.....
.....
.....

.....
.....
..552 GL2: W0504 This command is not supported.....

.....
.....
.....

.....
.....
.....

.....552 Other Messages....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....553 GARO Wxxx (x represents a number),.

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..553 ERROR Exxx-xxxx (x represents a letter or number),

.....
.....
.....

.....
.....
.....
.....

....553 . Hardware error. xxxxxxx-xxx (x represents a letter or number)....

.....
.....
.....

.....
.....
.....

553 Top cover is open.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..554 Prepare for parts replacement.. .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....
.....554 . Parts replacement time has passed.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....554 Unknown file.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....554 Multi-sensor error.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....554 Roll feed unit err....

.....
.....
.....
.....

Indicates caution items for which operating error poses a risk of injury or damage to equipment or property. To ensure safe use, always follow these precautions. Indicates helpful reference information and supplemental information on particular topics. Caution Note • Button names and user interface elements Key and button names on the control panel and user interface elements in software (such as menus and buttons) are indicated as follows in this User Manual. Control panel buttons Control panel messages Software interface items (Menus and Buttons) Keyboard keys Example: Press the OK button.

Example: Head Cleaning is displayed. Example: Click OK. Example: Press the Tab key. • Part names Names of printer parts are indicated as follows in this User Manual. Printer part names Example: Open the Top Cover. • Cross-reference Other pages or manuals that provide related information are indicated as follows in this User Manual. Cross-reference in the same User Manual Example: see "Turning the Printer On and Off". (→P.27) Example: See the Paper Reference Guide. Example: See the printer driver help.

Cross-reference in related manuals Other cross-reference Introduction 1 How to use this manual • Figures and software screens • Figures in this User Manual may be different from the actual appearance of the printer in some cases. • Screens depicted in this User Manual for the printer driver or other software may be different from the actual screens because of subsequent updates. • Windows XP screens are used in explanations of Windows operations in this User Manual. • Trademarks • Canon, the Canon logo, and imagePROGRAF are trademarks or registered trademarks of Canon Inc. • Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and other countries.

• Macintosh is a registered trademark of Apple Inc. in the United States and other countries. • Other company and product names are trademarks or registered trademarks of their respective owners. • Copyright © 2008 Canon Inc. • Unauthorized reproduction of this User Manual in whole or part is prohibited.

• May we request Thank you for understanding the following points. • The information in this User Manual is subject to change without notice. • We strive to ensure accuracy of information in this User Manual, but if you notice errors or omissions, please contact us. 2 Introduction How to use this manual Searching Topics You can find information in topics of this User Manual by searching for relevant terms. 1. Enter a term and click the Search button. Note • To search for multiple terms at once, enter a space between each term. Search results are listed at left. Introduction 3 How to use this manual 2. Click a topic you want to read.

The terms you searched for will be highlighted in the topic. To review multiple topics at once, select the check box of desired topics and click the Apply button. 4 Introduction How to use this manual HTML Version of the Manual for Printing You can select a group of topics in the table of contents or individual topics in this manual for printing. The following procedure describes how to do this, using the information in Basic Printing Workflow as an example. Printing a group of topics in the manual When you access printable HTML versions of the content from section titles in the table of contents, you can specify a group of topics to print. 1. Click a section title in the table of contents. Here, Basic Printing Workflow is used as an example. Introduction 5 How to use this manual 2. Click Access to the HTML for printing in the title area.

The topics in Basic Printing Workflow are displayed together in HTML format, ready for printing. 6 Introduction How to use this manual 3. Clear the sections you will not print and click the Apply button. Printing a group of individual topics in the manual When you access printable HTML versions from subtitles in the table of contents, you can specify a group of topics to print. 1.

Click a section title in the table of contents. Here, Basic Printing Workflow is used as an example. Introduction 7 How to use this manual 2. Under Basic Printing Workflow, click Printing Procedure. 3.

Click Access to the HTML for printing in the title area. 8 Introduction How to use this manual The topics in Printing Procedure are displayed together in HTML format, ready for printing. 4. Clear the topics you will not print and click the Apply button. Introduction 9 How to use this manual Printing selected topics Print selected topics as follows. 1. Access the printing dialog box as follows, depending on your computer's operating system. • Windows In Windows, right-click anywhere in the explanation area except on a figure or a link. In the shortcut menu, click Print to display the Print dialog box. 10 Introduction How to use this manual • Macintosh On a Macintosh computer, click anywhere in the explanation area except on a figure or a link while holding the Ctrl key.

In the shortcut menu, click Print Frame to display the Print dialog box. 2. Specify conditions as needed, and then click Print (Windows) or Print (Macintosh).

• Windows Introduction 11 How to use this manual • Macintosh Note • To print only individual topics that are displayed, use this method. 12 Introduction Printer parts Printer Parts Printer parts Front Standard When the Ejection Guide is removed a. Top Cover Open this cover to install the Printhead and remove any jammed paper from inside the printer, as needed. (→P.16) b. Paper Tray Cover Open this cover to load sheets in the Top Paper Feed Slot. (→P.17) c. Roll Feed Unit Load rolls in this unit. You can also load sheets in this unit manually. d. Roll Feed Unit Cover Open this cover to load rolls. (→P.18) e. Control Panel Use this panel to operate the printer and check the printer status. (→P.21) f.

Ejection Guide Supports paper as it is ejected to prevent it from rising. g. Output Tray (Front Paper Feed Slot) All printed documents are ejected to the output tray. Also, use this slot when loading heavyweight paper. (→P.17) h. Cutter Unit A round-bladed cutter for automatic cutting of roll paper. The cutter is retracted inside when not cutting. i. Maintenance Cartridge Absorbs excess ink.

Printer Parts 13 Printer parts j. Ink Tank Cover Open this cover to replace Ink Tank. (→P.19) k. Stand A stand on which the printer is installed. Equipped with casters so that the printer can be easily moved. l. Output Stacker Printed documents are ejected into the output tray. The Output Stacker can hold one sheet. (→P.

155) 14 Printer Parts Printer parts Back a. Expansion Board Slots For installing an IEEE 1394 (FireWire) expansion board, as desired. b. USB Port Connect a USB cable to this port. This port is compatible with High Speed USB 2.0. c. Ethernet Port Connect an Ethernet cable to this port.



[You're reading an excerpt. Click here to read official CANON
IMAGEPROGRAF IPF605 user guide
http://yourpdfguides.com/dref/5035071](http://yourpdfguides.com/dref/5035071)

d. Power Supply Connector Connect the power cord to this connector.

e. Carrying Handles (at four positions) When carrying the printer, hold it by these handles under both sides. Printer Parts 15 Printer parts Top Cover (Inside)
a. Carriage Moves the Printhead. The carriage serves a key role in printing. (→P.18) b. Carriage Shaft The Carriage slides along this shaft. c. Paper Retainer Important in supplying the paper.

This retainer holds paper as it is fed. d. Platen The Printhead moves across the platen during printing. The Vacuum holes on the platen holds paper in place.
e. Borderless Printing Ink Grooves For catching ink outside the edges of paper during borderless printing. f. Cleaning Brush When cleaning inside the printer under the Top Cover, use this brush to sweep away paper dust on the Platen. g. Linear Scale The linear scale serves a key role in detecting the Carriage position.

Be careful not to touch this part when cleaning inside the Top Cover or clearing paper jams. 16 Printer Parts Printer parts Tray Feed Area a. Tray Extension When loading sheets on the tray, open the Paper Tray Cover before opening the tray. b. Width Guide When loading the sheets, move the guide to match the paper size.

c. Top Paper Feed Slot When loading sheets, insert them here. d. Front Paper Feed Slot (Output Tray) When loading heavyweight paper, insert it here. Also, all printed documents are ejected from this slot.

e. Front Tray Guides Lift all of the guides before printing on heavyweight paper. When feeding heavyweight paper, rest the sheet on these guides, align it to the right, and insert the leading edge up to the Paper Alignment Line. f. Paper Alignment Line When loading heavyweight paper, ensure the paper edge is parallel to this line. Printer Parts 17 Printer parts Roll Feed Unit Cover (Inside) a. Roll Holder Load rolls on this holder. b. Holder Stopper Secure rolls on the Roll Holder with this part. c.

Roll Holder Slot Slide the Roll Holder into this guide slot. Carriage a. Printhead Fixer Cover Holds the Printhead in place. Do not open this part except during Printhead replacement. b. Printhead The printhead is equipped with ink nozzles. It serves a key role in printing. c. Printhead Fixer Lever Locks the Printhead Fixer Cover. Do not open this part except during Printhead replacement.

18 Printer Parts Printer parts Ink Tank Cover (Inside) a. Ink Tank Cartridges of ink in various colors. b. Ink Tank Lock Lever A lever that locks the Ink Tank in place and protects it. Open or close the lever when replacing an Ink Tank.

c. Ink Lamp (Red) Indicates the state of the Ink Tank as follows when the Ink Tank Cover is opened. • On On: The Ink Tank is installed correctly. • Off Off: No Ink Tank is installed, or the ink level detection function is disabled. • Flashing Slowly Not much ink is left.

• Flashing Rapidly There is no more ink. a. Ink Color Label Load an Ink Tank corresponding to the color and name on these labels. b. Ink Set An Ink Tank that can be used in the printer is labeled with a white letter "A" in a black circle on the side. When purchasing an Ink Tank, make sure an "A" is printed on the label. (→P.469) Printer Parts 19 Printer parts Vents The vents are on top (1), on the right (2), and on the bottom on the right (3 and 4). Caution • Do not block these vents when the printer is on. • Avoid setting paper or other light objects near the vents.

20 Printer Parts Printer parts Control Panel a. Data lamp (Green) • Flashing During printing, the Data lamp flashes when the printer is receiving or processing print jobs. Otherwise, this lamp flashes when the printer is paused or updating the firmware. • Off There are no active print jobs when the Data lamp is off. b. Message lamp (Orange) • On A warning message is displayed. • Flashing An error message is displayed. • Off The printer is off or is operating normally. c. Paper Source Section After you press the Feeder Selection button, the lamp for your chosen paper source is lit.

1. Roll Media lamp (Green) (Rolls) • On Indicates that a roll is selected as the paper source. • Off Shows whether the Tray or Front Paper Feed Slot is selected as the paper source. 2. Cut Sheet lamp (Green) • On Shows whether the Tray or Front Paper Feed Slot is selected as the paper source. • Off Indicates that a roll is selected as the paper source. d. Display Screen Shows the printer menu, as well as the printer status and messages. e. Color Label These labels indicate the Ink Tank colors and names.

The labels correspond to the ink levels on the Display Screen. Printer Parts 21 Printer parts f. Online Button Switches the printer online and offline. (→P.34)

• On (Green) The printer is online. • Flashing The printer is recovering from Sleep mode. • Off The printer is offline. g. Feeder Selection Button Switches the paper source. Each time you press this button, the paper source switches between roll feed (when the paper source is a roll) and sheet feed (when the paper source is the Tray or Front Paper Feed Slot).

The corresponding lamp in the paper source section is lit. h. Menu Button Displays the main menu of the printer. (→P.55) i. Information Button Displays printer submenus. Press this key to display information about ink, paper, and so on. (→P.66) You can also hold down this button for three seconds to clean the Printhead (Head Cleaning A). j.

□ Button Menu mode: Press this button to display the menu one level higher. When you are entering numbers, the button moves the cursor to the next digit. The instructions can be paused when [← Pause] is displayed. When [← Back] is displayed, you can access the previous instruction screen. k.

□ Button Ofline mode: Press this button to rewind rolls manually. (→P.124) Menu mode: Press this button to display the previous menu item or setting value. l. □ Button Menu mode: Press this button to display the menu one level lower.

When [Fwd →] is displayed, you can access the next instruction screen. m. □ Button Ofline mode: Press this button to feed roll paper manually. (→P.124)

Menu mode: Press this button to display the next menu item or setting value. n. OK Button In menu mode, press this button to confirm or execute the selected item or setting. At other times, pressing this button enables you to access the next screen after following the instructions on the Display Screen. o. Power Button Turns the printer on and off.

(→P.27) p. Load/Eject Button You can check instructions on loading, replacing, and removing paper. Instructions for loading or replacing paper are shown on the Display Screen if pressed when no paper is loaded, and instructions for removing paper are shown if paper is loaded. 22 Printer Parts Printer parts q. Stop Button Hold down for at least a second to cancel print jobs in progress or end the ink drying period. During display of instructions on loading sheets, for example, you can hold down this button for one second to pause the current screen.



[You're reading an excerpt. Click here to read official CANON IMAGEPROGRAF IPF605 user guide](http://yourpdfguides.com/dref/5035071)
<http://yourpdfguides.com/dref/5035071>

Note • When the printer is in Sleep mode, you can press any button to wake the printer and bring it online or offline again. Printer Parts 23 Control Panel Control Panel Control Panel a. Data lamp (Green) • Flashing During printing, the Data lamp flashes when the printer is receiving or processing print jobs. Otherwise, this lamp flashes when the printer is paused or updating the firmware. • Off There are no active print jobs when the Data lamp is off. b. Message lamp (Orange) • On A warning message is displayed. • Flashing An error message is displayed.

• Off The printer is off or is operating normally. c. Paper Source Section After you press the Feeder Selection button, the lamp for your chosen paper source is lit. 1. Roll Media lamp (Green) (Rolls) • On Indicates that a roll is selected as the paper source. • Off Shows whether the Tray or Front Paper Feed Slot is selected as the paper source. 2. Cut Sheet lamp (Green) • On Shows whether the Tray or Front Paper Feed Slot is selected as the paper source. • Off Indicates that a roll is selected as the paper source. d. Display Screen Shows the printer menu, as well as the printer status and messages. e. Color Label These labels indicate the Ink Tank colors and names. The labels correspond to the ink levels on the Display Screen. 24 Printer Parts Control Panel f.

Online Button Switches the printer online and offline. (→P.34) • On (Green) The printer is online. • Flashing The printer is recovering from Sleep mode. • Off The printer is offline. g. Feeder Selection Button Switches the paper source. Each time you press this button, the paper source switches between roll feed (when the paper source is a roll) and sheet feed (when the paper source is the Tray or Front Paper Feed Slot). The corresponding lamp in the paper source section is lit. h.

Menu Button Displays the main menu of the printer. (→P.55) i. Information Button Displays printer submenus. Press this key to display information about ink, paper, and so on. (→P.66) You can also hold down this button for three seconds to clean the Printhead (Head Cleaning A). j. Button Menu mode: Press this button to display the menu one level higher. When you are entering numbers, the button moves the cursor to the next digit. The instructions can be paused when [Pause] is displayed. When [Back] is displayed, you can access the previous instruction screen. k. Button Offline mode: Press this button to rewind rolls manually. (→P.124) Menu mode: Press this button to display the previous menu item or setting value. l. Button Menu mode: Press this button to display the menu one level lower. When [Fwd] is displayed, you can access the next instruction screen. m.

Button Offline mode: Press this button to feed roll paper manually. (→P.124) Menu mode: Press this button to display the next menu item or setting value. n. OK Button In menu mode, press this button to confirm or execute the selected item or setting. At other times, pressing this button enables you to access the next screen after following the instructions on the Display Screen. o. Power Button Turns the printer on and off. (→P.27) p.

Load/Eject Button You can check instructions on loading, replacing, and removing paper. Instructions for loading or replacing paper are shown on the Display Screen if pressed when no paper is loaded, and instructions for removing paper are shown if paper is loaded. Printer Parts 25 Control Panel q. Stop Button Hold down for at least a second to cancel print jobs in progress or end the ink drying period. During display of instructions on loading sheets, for example, you can hold down this button for one second to pause the current screen.

Note • When the printer is in Sleep mode, you can press any button to wake the printer and bring it online or offline again. 26 Printer Parts Control Panel Turning the Printer On and Off Turning the printer on 1. Press the Power button to turn on the printer. The printer will now start up. After the Display Screen shows the Canon logo, Starting up. Please wait. is displayed. 2. The printer goes online in preparation for printing after startup, and the Online lamp and paper source section lamp remain lit. The printer will not go online in the following situations. Take action as needed. • The Top Cover is open Close the Top Cover. • The Ink Tank Cover is open Close the Ink Tank Cover.

• The Printhead is not installed Install the Printhead. For the instruction, see “Replacing the Printhead”. (→P.481) • Ink Tank is not installed Install the Ink Tanks. For the instruction, see “Replacing Ink Tanks”. (→P.470) • If “ERROR” is shown on the Display Screen Turn off the printer and contact your Canon dealer. • The Online lamp and Message lamp are not lit (even once), and nothing appears on the Display Screen Make sure the printer is plugged in correctly. Check the connection at the plug and electrical outlet. • No paper is loaded Load paper. (→P.85) (→P.90) Printer Parts 27 Control Panel Important • Starting the printer when it is connected via the USB cable to a Macintosh computer that is off may cause the computer to start up at the same time. To prevent this, disconnect the USB cable before starting the printer. Connecting the printer to the computer via a USB hub may solve this issue.

Turning the printer off Important • Never turn the printer off or unplug it during a print job. This could damage the printer. 1. Make sure no print jobs are in progress. If the Message lamp is flashing, check the message on the Display Screen and take action as necessary. (→P.536) If the Data lamp is flashing, the printer is receiving a print job. Turn off the printer only after printing is finished. 2. Hold down the Power button for more than a second. After Shut Down. Please Wait. is shown on the Display Screen, the printer shuts off.

28 Printer Parts Control Panel Printer Modes Printer modes are classified as follows and described in this topic. ••••• Modes (→P.29) Mode transition (→P.30) Online, and state of the Control Panel (→P.31) Offline, and state of the Control Panel (→P.32) Menu mode, and state of the Control Panel (→P.33) Submenu mode, and state of the Control Panel (→P.33) Modes The printer has five modes as follows: • Online The printer is ready to receive jobs sent from the computer. Jobs sent from the computer are processed immediately. If jobs are received in other modes, they are printed the next time the printer goes online. • Offline Any jobs sent from the computer are held without being processed. While the printer is offline, you can feed or cut roll paper manually. The printer goes offline automatically if jobs cannot be processed, such as if errors occur. • Menu mode Menus are displayed on the printer, and you can select, set, or execute menu items.



[You're reading an excerpt. Click here to read official CANON IMAGEPROGRAF IPF605 user guide](http://yourpdfguides.com/dref/5035071)
<http://yourpdfguides.com/dref/5035071>

Any jobs sent from the computer are held without being printed.

• Submenu mode Submenus are displayed regarding ink and paper information. Jobs can be received and printing is possible while submenus are displayed and the printer is online. In other modes, any jobs sent from the computer are held without being printed while submenus are displayed. • Sleep mode The printer is in power-saving mode. The printer automatically enters Sleep mode to conserve power if it is idle for a specific period (by factory default, five minutes), that is, if no print jobs are received or buttons are pressed while all covers are closed.

You can specify the period before the printer enters Sleep mode in the Sleep Timer menu. (→P.55) If any print jobs are received when the printer is in Sleep mode (after it was originally online), the printer goes online and prints the jobs. Printer Parts 29 Control Panel Mode transition The printer mode transitions are as follows: *1: When submenus are displayed, you can press any button other than the Information button to return to the previous mode. *2: The printer automatically enters Sleep mode if it is idle for a specific period (by factory default, five minutes), that is, if no print jobs are received or buttons are pressed while all covers are closed. However, it does not enter Sleep mode while error messages are displayed. *3: In Sleep mode, the printer can be restored to the previous state by pressing any button. Sleep mode is also terminated if a print job is received or a command is issued from RemoteUI. 30 Printer Parts Control Panel Online, and state of the Control Panel Not printing Printing in progress (receiving or processing print jobs) Display Screen • Top Level of the Display Screen The printer status is displayed here. The selected paper source is indicated by an icon in the upper-right corner.

Any warning messages are displayed here on lines 2-4. Take action as needed. (→P.536) • Middle Level of the Display Screen The first and second lines display the paper type and size. • Bottom Level of the Display Screen Here, the remaining ink level is indicated. (→P.476) Control Panel • Online lamp Lit when the printer is online. • Data lamp Flashes when print jobs are being received or processed. • Message lamp Lit when warning messages are displayed. Printer Parts 31 Control Panel Offline, and state of the Control Panel Offline Not printing Printing is paused Display Screen • Display Screen The printer status is displayed here.

The selected paper source is indicated by an icon in the upper-right corner. Any warning messages are displayed here on lines 2-4. Take action as needed. (→P.536) • Middle Level of the Display Screen The first and second lines display the paper type and size.

• Bottom Level of the Display Screen Here, the remaining ink level is indicated. (→P.476) Control Panel • Message lamp Lit when warning messages are displayed. Error Messages If action can be taken If no action can be taken • Top and Middle Levels of the Display Screen Error messages are displayed. • Bottom Level of the Display Screen Here, the remaining ink level is indicated.

(→P.476) • Top and Middle Levels of the Display Screen Error messages are displayed. • Bottom Level of the Display Screen The corrective actions are displayed here. • Top and Middle Levels of the Display Screen The error message is displayed with the following instructions: Turn off printer, wait, then turn on again.. • Display Screen "ERROR" is displayed, followed by the error code and Call for service.. • Data lamp Flashes when print jobs are being received. • Data lamp Flashes when print jobs are being received. • Message lamp Flashes when error messages are displayed.

Take action as needed. (→P.536) • Message lamp Flashes when error messages are displayed. Turn off the printer and wait at least three seconds before restoring the power. If the message is still displayed after this, write down the error code and message, turn off the printer, and contact the Canon dealer for assistance. 32 Printer Parts Control Panel Menu mode, and state of the Control Panel Main menu Menu items and settings Main menu (during printing) • Display Screen Pressing the Menu button when printing is not in progress displays the main menu. The title of the selected menu is displayed on the first line, and menus immediately under the current menu are displayed on the second and subsequent lines. The lower level menus are available if "□" is displayed at right. (→P.37) • Display Screen The title of the selected menu is displayed on the first line, and menu items or settings are displayed on the second and subsequent lines.

(→P.37) The menu of options available during printing (top figure) can be displayed by pressing the □ button when the main menu is displayed (left figure). • Display Screen Menus available during printing are displayed if you press the Menu button during printing. If you select a menu, the title of the selected menu is displayed on the first line, and menus immediately under the current menu are displayed on the second and subsequent lines. The lower level menus are available if "□" is displayed at right.

(→P.37) Submenu mode, and state of the Control Panel Ink levels and the remaining Maintenance Cartridge capacity Information of the Printer information loaded paper GL2 Settings Press the Information button to display this information, one after another: the Maintenance Cartridge capacity and remaining ink levels, paper information, printer information, and GL2 settings information. (→P.66) Printer Parts 33 Control Panel Switching Modes Switching the Printer Online/Offline Press the Online button to switch the printer online or offline. The Online lamp is lit in Online mode.

Printing is possible in this mode. The Online lamp is off in Offline mode. Depending on the status, the printer switches online and offline as follows. Printer Status Online Online, printing Offline Offline, when an error message is displayed When the Online Button is Pressed The printer switches offline and the Online lamp goes off. Switches offline and printing is paused. When printing is paused, the Printing menu is available. Switches online and the Online lamp is lit. In the case of error messages other than those shown below or if paper is not loaded, the printer remains offline until you solve the problem. The Online lamp remains off. If the following error messages are displayed, the printer switches online and printing is resumed.

However, you may not be able to obtain the desired printing results. • Insufficient paper for job • PHead needs cleaning. • Paper Size Mismatch • Paper Type Mismatch 34 Printer Parts Control Panel Printer Status Menu mode Menu mode, printing When the Online Button is Pressed Switches online and the Online lamp is lit.



[You're reading an excerpt. Click here to read official CANON](http://yourpdfguides.com/dref/5035071)

[IMAGEPROGRAF IPF605 user guide](http://yourpdfguides.com/dref/5035071)

<http://yourpdfguides.com/dref/5035071>

Switches online and the Online lamp is lit. Printing is resumed. Switching to Menu Mode Press the Menu button to display the main menu. Depending on the status, the printer switches to Menu mode as follows. Printer Status Online Online, printing Of□ine Of□ine, printing Of□ine, when an error message is displayed When the Menu Button is Pressed Switches to Menu mode. The printer stays online. It does not switch to Menu mode.

Switches to Menu mode. Menus available during printing are displayed. Not switch to Menu mode until the problem is solved. Press the Information button to display the submenu. Press the Information button to display the Maintenance Cartridge capacity and remaining ink levels, as well as information on the loaded paper and the printer.

Press the Information button repeatedly to change the information displayed. (→P.66) Press any button other than the Information button to restore the previous mode. After you display a submenu, the printer will revert to the previous mode in about ten seconds if no print job is received or if you do not operate the printer. Note • You can start Head Cleaning A by holding down the Information button for three seconds or more.

(→P.480) Printer Parts 35 Control Panel Printer Menu Operations For instructions on selecting menu items, see “Main Menu Operations”. (→P.37) For details on menu levels and menu items, see “Menu Structure”. (→P.41) The printer menu structure is made up of a main menu and submenus. Access the main menu by pressing the Menu button on the Control Panel. The principal settings available in the main menu are as follows: • Paper Settings Specify the type and size of paper. • Print Settings Adjust or clean the Printhead, or adjust the paper feed amount. • Printer Settings Con□figure the network settings, set the sleep timer, and specify the unit of measurement on the display.

Note • By default, main menu settings apply to all print jobs. However, for settings that are also available in the printer driver, the values speci□ed in the printer driver take priority. Access the submenu by pressing the Information button on the Control Panel. You can check the following information in submenus. •••• Ink levels Maintenance Cartridge capacity Size and type of paper that is selected Amount of roll paper left 36 Printer Parts Control Panel Main Menu Operations Press the Menu button to display the main menu. For details, see “Main Menu Settings”. (→P.55) • Main menu when no print job is in progress • Main menu during printing Note • The main menu will not be displayed in the following cases even if you press the Menu button. • An error message is displayed You can access the Menu mode after you have solved the problem. • Pressing the Menu button when printing is paused (because you have pressed the Online button) displays main menu items that are available during printing.

To access each function menu from the main menu, and set or execute menu items, use buttons on the Control Panel. The following section describes menu operations and how they are presented in this User Manual. •••• Accessing Menus (→P.38) Specifying menu items (→P.39) Specifying numerical values (→P.

40) Executing menu commands (→P.40) Printer Parts 37 Control Panel Accessing Menus Printer menus are grouped by function. Menus are displayed with the upper line selected. Use the buttons on the Control Panel to access each menu. • Press □ to access a higher menu in the menu list, and press □ to access a lower one.

If items of the menu list are more than the lines of the screen, press □ and □ to scroll the menu. If you navigate to the lowest-level menu and press the □ button again, the display switches to the top-level menu screen. If you navigate to the top-level menu and press the □ button again, the display switches to the lowest-level menu screen. Items you select are highlighted. The scroll bar at right indicates the current position in the overall menu. • The lower level menus are available if “□” is displayed at right. To access these lower level menus, select a menu and press □. • The upper level menus are available if “□” is displayed at left. To access these upper level menus, select a menu and press □. 38 Printer Parts Control Panel Specifying menu items Follow the steps below to specify menu items.

1. 2. Press □ or □ to access menus, and then press the □ button. Repeat these steps until the desired menu options are displayed. Press □ or □ to move to the setting item, and then press the OK button. The check box at left is selected, and the setting is con□rmed. After two seconds, the display reverts to the upper level menu. 3. Press the Online button to bring the printer online. Note • If a con□rmation message is displayed regarding the setting you entered, press the OK button.

The setting is applied, and the printer goes online. Printer Parts 39 Control Panel Specifying numerical values Follow the steps below to enter numbers for items such as network settings. 1. 2. 3.

4. 5. Press □ or □ to select Interface Setup, and then press the □ button. Press □ or □ to select TCP/IP, and then press the □ button. Press □ or □ to select IP Setting, and then press the □ button.

Press □ or □ to select IP Address, and then press the □ button. Press □ or □ to move the cursor (□) to each □eld for entering numbers. 6. Press the □ or □ button to enter the value. Note • Hold down □ or □ to increase or decrease the value continuously. • Make sure the IP address you enter for the printer is not the same as any computer IP address in your network. 7. 8. Repeat steps 5-6 to enter the IP address assigned to the printer. Press the Online button to bring the printer online.

If any settings are changed, a con□rmation message is displayed. In this case, press the OK button. Executing menu commands Follow the steps below to execute menu commands. 1. 2. Press □ or □ to select a menu, and then press the □ button. Repeat these steps until the desired menu options are displayed. Press □ or □ to move to the command you want to execute, and then press the OK button. After two seconds, the menu command is executed. After commands are executed, the printer commonly reverts to the state before the menu operation, either online or of□ine.

40 Printer Parts Control Panel Menu Structure Main Menu The structure of the main menu is as follows. Values at right indicated by an asterisk “*” are the defaults. For instructions on menu operations, see “Main Menu Operations”. (→P.37) For details on menu items, see “Main Menu Settings”.

(→P.55) First Level Paper Cutting Second Level No * Yes Rep. Ink Tank No * Yes Head Cleaning Head Cleaning A Head Cleaning B Media Menu Manual PaperType Plain Paper (*5) Plain Paper HQ (*5) Plain Paper HG (*5) PlainP_ConsMBK (*5) Recycled Coated (*5) High Resolution (*5) Coated Paper (*5) HW Coated (*5) Ex HW Coated (*5) Premium MatteP (*5) Matte Photo (*5) Glossy Photo (*5) Semi-Gl Photo (*5) HW GlossyPhoto2 (*5) HW SemiGlPhoto2 (*5) SatinPhoto 190 (*5) Glossy Paper (*5) Photo Paper Pro (*5) Third Level Fourth Level Fifth Level Printer Parts 41 Control Panel First Level Second Level Third Level Photo PaperPlus (*5) PhotoPlusSemiGl (*5) Syn.



[You're reading an excerpt. Click here to read official CANON IMAGEPROGRAF IPF605 user guide](http://yourpdfguides.com/dref/5035071)
<http://yourpdfguides.com/dref/5035071>

Paper (*5) Adh. Syn.

Paper (*5) ProoEng Paper (*5) News Proof 1 (*5) News Proof 2 (*5) Colored Coated (*5) CAD Trace Paper (*5) CAD Matte Film (*5) POP Board (*5) Special # (Here, the number is 1-5) (*5) Manual PaperSize ISO A1 ISO A2 ISO A2+ ISO A3 ISO A3+ ISO A4 ISO B2 ISO B3 ISO B4 JIS B2 JIS B3 JIS B4 22"x34"(ANSI D) 17"x22"(ANSI C) 11"x17" (Ledger) 13"x19" (Super B) Letter (8.5"x11") Fourth Level Fifth Level 42 Printer Parts Control Panel First Level Second Level Third Level Legal (8.5"x14") 24"x36" (ARCH D) 18"x24" (ARCH C) 12"x18" (ARCH B) 9"x12" (ARCH A) DIN C2 DIN C3 DIN C4 20"x24" 18"x22" 14"x17" 12"x16" 10"x12" 10"x15" 16"x20" 20"x30" 13"x22" 300x900mm Roll Media Type (*1) Plain Paper (*5) Plain Paper HQ (*5) Plain Paper HG (*5) PlainP_ConsMBK (*5) Recycled Coated (*5) Coated Paper (*5) HW Coated (*5) Ex HW Coated (*5) Premium MatteP (*5) Glossy Photo (*5) Semi-Gl Photo (*5) HW GlossyPhoto2 (*5) Fourth Level Fifth Level Printer Parts 43 Control Panel First Level Second Level Third Level HW SemiGlPhoto2 (*5) SatinPhoto 190 (*5) Syn. Paper (*5) Adh. Syn. Paper (*5) ProoEng Paper (*5) News Proof 1 (*5) News Proof 2 (*5) Colored Coated (*5) CAD Trace Paper (*5) CAD Matte Film (*5) Special # (Here, the number is 1-5) (*5) Chk Remain.Roll Off * On Roll Length Set (*2) ### m ### feet (*9) Paper Details (The paper type is displayed here.) (*5) Roll DryingTime Off Fourth Level Fifth Level 30 sec. 1 min. 3 min.

5 min. 10 min. 30 min. 60 min. Scan Wait Time Off 1 sec. 3 sec. 5 sec. 44 Printer Parts Control Panel First Level Second Level Third Level Fourth Level 7 sec. 9 sec. Feed Priority Automatic * Band Joint Print Length Adjust Length Head Height From -0. 70% to 0.70% Automatic * Highest High Standard Low Lowest Skew Check Lv. High Accuracy Standard Loose Off VacuumStrngth Automatic * Strongest Strong Standard Weak Weakest NearEnd RollMrgn 3mm 20mm Cut Speed Fast Standard Slow Trim Edge First Automatic Off On Cutting Mode Automatic Eject Manual Bordless Margin Automatic Fifth Level Printer Parts 45 Control Panel First Level Second Level Third Level Fourth Level Fixed CutDustReduct. Off On NearEnd Sht Mrgn 3mm 20mm Manual Feed Front Top Return Defaults No Yes GL2 Settings GL2 Replot No Yes GL2 BufferClear No Yes Color Mode Color * Monochrome Print Quality Fast Standard * High Input Resolution 600dpi * 300dpi Media Source Automatic * Roll Paper Manual Conserve Paper Off * On Line Cap Software * Rounded Smoothing Software * Smooth Line Width 1 dot 2 dots 3 dots 4 dots * 5 dots 6 dots Fifth Level 46 Printer Parts Control Panel First Level Second Level Third Level 7 dots ThickenFineLines Off * On AdjustFaintLines Off On * Adjust Printer Auto Head Adj. Standard Adj. No Yes Advanced Adj. No Yes Auto Print Off On * Manual Head Adj No Yes Auto Band Adj. Standard Adj. No Yes Advanced Adj. No Yes Manual Band Adj No Yes Adj Far Ed Feed No Yes Adjust Length (*3) No Yes Return Defaults No Yes Interface Setup EOP Timer 10 sec. 30 sec. 1 min. 2 min. 5 min. 10 min. * 30 min. 60 min. TCP/IP IP Mode Automatic Manual * Fourth Level Fifth Level Printer Parts 47 Control Panel First Level Second Level Third Level Protocol (*4) Fourth Level DHCP On Off * BOOTP On Off * RARP On Off * IP Setting IP Address Subnet Mask Default G/W NetWare NetWare On Off * Frame Type (*6) Auto Detect Ethernet 2 Ethernet 802.2 * Ethernet 802.3 Ethernet SNAP Print Service (*6) BinderyPServer RPrinter NDSPServer * NPrinter AppleTalk On Off * Ethernet Driver Auto Detect On * Off Comm.

Mode (*7) Half Duplex * Full Duplex Ethernet Type (*7) 10 Base-T * 100 Base-TX Spanning Tree Not Use * Use MAC Address Ext. Interface No IEEE1394 0.0.0.0 255.255.255.255 0.0.0. 0 255.255.255.255 0.0.

0.0 255.255.255.255 Fifth Level 48 Printer Parts Control Panel First Level Second Level Return Defaults No Yes Maintenance Repl. maint cart No Yes Replace P.head No Yes Move Printer No Yes Clean Platen No Yes System Setup Warning Buzzer Off On * Detect Mismatch Pause Warning None * Keep Media Size Off * On Paper Size Basis Sht Selection ISO A3+ * 13"x19"(Super B) Roll Selection 1 ISO A3 (297mm) * 300mm Roll Roll Selection 2 10in. (254mm) JIS B4 (257mm) * TrimEdge Reload Automatic Off On Noz. Check Freq. Off 1 page 10 pages Automatic * Sleep Timer 5 min. * 10 min. 15 min. 20 min. 30 min. Third Level Fourth Level Fifth Level Printer Parts 49 Control Panel First Level Second Level Third Level 40 min.

50 min. 60 min. 240 min. Length Unit meter * feet/inch Time Zone 0:London (GMT) +1:Paris,Rome +2:Athens,Cairo +3:Moscow +4:Eerevan,Baku +5:Islamabad +6:Dacca +7:Bangkok +8:Hong Kong +9:Tokyo,Seoul * +10:Canberra +11NewCaledonia +12:Wellington -12:Eniwetok -11:Midway is. -10Hawaii(AHST) -9:Alaska(AKST) -8:Oregon (PST) -7:Arizona(MST) -6:Texas (CST) -5:NewYork(EST) -4:Santiago -3:Buenos Aires -2: -1:Cape Verde Date Format yyyy/mm/dd * dd/mm/yyyy mm/dd/yyyy Date & Time Date yyyy/mm/dd (*8) Fourth Level Fifth Level 50 Printer Parts Control Panel First Level Second Level Third Level Fourth Level Time Language * Fifth Level hh:mm Contrast Adj. -4, -3, -2, -1, 0*, +1, +2, +3, +4 Reset PaprSetngs No Yes Test Print Status Print No Yes Media Details No Yes Print Job Log No Yes Menu Map No Yes Nozzle Check No Yes Information System Info Error Log Job Log ##-#### (Choose from Document Name information about the latest three print jobs.) User Name Printer Parts 51 Control Panel First Level Second Level Third Level Fourth Level Page Count Job Status Print Start Time Print End Time Print Time Print Size Media Type Interface Ink Consumed *1: *2: *3: *4:

*5: Available only if a roll is loaded. Available only if Chk Remain.Roll is On. Available only if Feed Priority is Print Length. Available only if IP Mode is Automatic. For information on the types of paper the printer supports, refer to the Paper Reference Guide. (→P.101)The paper type setting in the printer driver and related software (as well as on the Control Panel) is updated when you install the printer driver from the User Software CD-ROM or if you change paper information by using the Media ConFiguration Tool. See the Media ConFiguration Tool Guide (Windows) or Media ConFiguration Tool Guide (Macintosh).

Available only if NetWare is On. Available only if Auto Detect is Off. Follows the setting in Date Format. Follows the setting in Length Unit. Fifth Level *6: *7: *8: *9: 52 Printer Parts Control Panel Submenus Each time you press the Information button on the Control Panel, printer information is displayed in the following order.

□The remaining Maintenance Cartridge capacity and ink levels □Information of the loaded paper □Printer information □HP-GL/2 settings information For details on submenu screens, see "Submenu Display". (→P.66) Printer Parts 53 Control Panel Main menu during printing The structure of the main menu during printing is as follows.



[You're reading an excerpt. Click here to read official CANON](#)

[IMAGEPROGRAF IPF605 user guide](#)

<http://yourpdfguides.com/dref/5035071>

For instructions on menu operations, see "Main Menu Operations". (→P.37) For details on menu items, see "Main Menu Settings (During Printing)". (→P.65) First Level Second Level Third Level Head Cleaning A Head Cleaning B Fine Band Adj. (*1) From -5 to 5 Information System Info Error Log Job Log ##-#### (Choose from Document Name information about the latest three print jobs.) User Name Page Count Job Status Print Start Time Print End Time Print Time Print Size Media Type Interface Ink Consumed *1: Available if Feed Priority is Automatic or Band Joint.

Fourth Level Fifth Level Menu Durng Prtng Head Cleaning 54 Printer Parts Control Panel Main Menu Settings Main menu items are described in the following tables. For instructions on selecting or setting menu items, see "Main Menu Operations". (→P.37) For details on menu levels and values, see "Menu Structure". (→P.41) Setting Item Paper Cutting Description, Instructions This command is available only if a roll is loaded. Choose Yes to cut the roll at the current position. However, if paper cannot be advanced to the cut position, it will not be cut. In this case, manually advance the roll before cutting it. (→P.

124) When replacing the Ink Tank, choose Yes and follow the instructions on the screen. (→P.470) Specify Printhead cleaning options. (→P.480) Choose Head Cleaning A if printing is faint, oddly colored, or contains foreign substances. Choose Head Cleaning B if no ink is printed at all, or if printing is not improved by Head Cleaning A. Specify the type and size of paper. (→P.56) Specify detailed paper-related settings, including the ink drying time and borderless printing options. (→P.57) Specify settings for HP-GL/2 printing. (→P.59) Adjust the Printhead alignment or amount of feed by printing a test pattern. (→P.60) Configure the EOP timer and network settings. (→P.61) Access maintenance settings when replacing the Printhead or preparing to move the printer. (→P.62) Specify the printer system settings, including the date format and display language. (→P.

62) Choose Status Print to print information about the printer. Choose Media Details to print the paper settings as specified in Paper Details. Choose Print Job Log to print a record of print jobs, including the paper type and size, amount of ink used, and so on. (Information on ink consumption is general, not specific in nature.) Choose Menu Map to print a list of the main menu options. Choose Nozzle Check to print a test pattern for checking the nozzles. Displays information about the printer and record of print jobs. (→P.64) Rep. Ink Tank Head Cleaning Media Menu Paper Details GL2 Settings Adjust Printer Interface Setup Maintenance System Setup Test Print Information Printer Parts 55 Control Panel Media Menu Setting Item Manual PaperType (*1) Manual PaperSize (*1) Roll Media Type (*1) Chk Remain.

Roll Description, Instructions Choose the type of paper in the tray. (→P.142) Select the size of paper to be loaded manually. (→P.143) Choose the type of roll. (→P.110) Choose On to print a barcode at the end of a roll before you remove it. The printed barcode can be used in managing the amount of roll paper left. Choose Off if you prefer not to print the barcode. Displayed if Chk Remain.

Roll is On. If a barcode is not printed on rolls, specify the roll length. The roll length is displayed in meters or feet, depending on the setting in Length Unit. Roll Length Set *1: For information on the types of paper the printer supports, refer to the Paper Reference Guide. (→P.101) The paper type setting in the printer driver and related software (as well as on the Control Panel) is updated when you install the printer driver from the User Software CD-ROM or if you change paper information by using the Media Configuration Tool. See the Media Configuration Tool Guide (Windows) or Media Configuration Tool Guide (Macintosh). 56 Printer Parts Control Panel Paper Details Setting Item (The paper type is Roll DryingTime displayed here.)(*1) Scan Wait Time Description, Instructions Specify the time to wait for the ink to dry for each sheet. Specify the time to wait for the ink to dry between each scan in bidirectional printing, in consideration of how quickly the ink dries.

Note that printing will take longer if you specify a wait time. Specify exact paper feeding, if desired. Normally, select Automatic. Choose Print Length if you prefer to feed the paper an exact amount. However, note that choosing Print Length may result in slight banding in the direction of Carriage scanning. Displayed if Feed Priority is Print Length. Adjustment relative to the amount of stretching or shrinkage of the current paper. Enter either the adjustment results from Print Pattern or the discrepancy that you measured (as a percentage). For paper that tends to stretch, increase the feed amount by choosing a higher adjustment value. For paper that tends to shrink, decrease the feed amount by choosing a lower adjustment value. Adjust the Printhead height. (→P.457) If you print on Japanese paper (washi) or other handmade paper that has an irregular width, choose Loose for a higher skew detection threshold, or choose Off to disable skew detection. However, if paper is loaded askew when detection is Off, note that paper jams or Platen soiling may occur. Specify the level of suction that holds paper against the Platen.

(→P.468) Specify the minimum margin at the leading edge of roll paper to ensure better printing quality at the leading edge. Note that if you choose 3mm, it may lower the printing quality at the leading edge and affect feeding accuracy. The printed surface may be scratched, and ink may adhere to the leading edge. It may also cause the Platen to become soiled.

Choose the cutting speed. If you use adhesive paper, choosing Slow helps prevent adhesive from sticking to the cutter and keeps the cutter sharp. If a roll is loaded, the end of the paper will be cut. Specify whether or not to cut with the standard round-bladed cutter. Choose Automatic to have the roll cut automatically after printing. If you choose Manual, the paper will not be cut after printing. Instead, a line will be printed at the cut position. Choose Eject if you prefer not to have documents dropped immediately after printing, as when waiting for ink to dry. Feed Priority Adjust Length Head Height Skew Check Lv. VacuumStrength NearEnd RollMrgn Cut Speed Trim Edge First Cutting Mode Printer Parts 57 Control Panel Setting Item (The paper type is Bordless Margin displayed here.

(*1) Description, Instructions Adjust the margin during borderless printing. Choose Automatic to have the printer automatically detect the paper width and configure the margin settings for borderless printing. If margins are mistakenly created when Automatic is selected, choose Fixed. In this case, the paper width is not detected automatically, and the document is printed without borders, using the margin settings required by the printer.



[You're reading an excerpt. Click here to read official CANON](http://yourpdfguides.com/dref/5035071)

[IMAGEPROGRAF IPF605 user guide](http://yourpdfguides.com/dref/5035071)

<http://yourpdfguides.com/dref/5035071>