



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for CANON PIXMA MX535. You'll find the answers to all your questions on the CANON PIXMA MX535 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual CANON PIXMA MX535
User guide CANON PIXMA MX535
Operating instructions CANON PIXMA MX535
Instructions for use CANON PIXMA MX535
Instruction manual CANON PIXMA MX535



[You're reading an excerpt. Click here to read official CANON PIXMA MX535 user guide](http://yourpdfguides.com/dref/5583133)
<http://yourpdfguides.com/dref/5583133>

Manual abstract:

309 Définition du type de support à l'aide du pilote d'imprimante. **IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS** When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following: 1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool. 2. Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning. 3. Do not use this product to report a gas leak in the vicinity of the leak. "CAUTION - To reduce the risk of fire, use only No. 14 AWG wire. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. To help prevent interference, you should follow the following guidelines: □ Increase the separation between the equipment and receiver. □ Consult the dealer or an experienced radio/TV technician for help. Use of a shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment. FCC ID:AZDK30357 Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. If requested, this number must be provided to the telephone company.

Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 0.83). A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

connection to party lines is subjected to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five. (EEE : Norvège, Islande et Liechtenstein) Environmental Information Reducing your environmental impact while saving money Power Consumption and Activation Time The amount of electricity a device consumes depends on the way the device is used. This product is designed and set in a way to allow you to reduce your electricity costs. After the last print it switches to Ready Mode. In this mode it can print again immediately if required. The devices consume less power (Watt) in these modes.

Type d'authentification : Affiche le type d'authentification utilisé pour l'authentification du client. Type d'authentification : Affiche le type d'authentification utilisé pour l'authentification du client. Type d'authentification Le type d'authentification utilisé pour l'authentification du client s'affiche. Type de support Permet de sélectionner un type de papier d'impression. Type de support Permet de sélectionner un type de papier d'impression. Type de cachet Permet de déterminer le type de cachet. Réglez le format de page, le type de support, etc. Spécifiez le type de support et le format de page. Si un type de support autre que Papier ordinaire est sélectionné, choisissez Papier ordinaire à l'aide du bouton. Contrôle 4 Assurez-vous que le paramètre de type de support est correct.

Assurez-vous que le paramètre de type de support correspond au format du papier chargé et que ce format convient à l'impression recto verso automatique. Les paramètres définissant le format de page et le type de support correspondent-ils au format et au type du papier chargé ?



[You're reading an excerpt. Click here to read official CANON](#)

[PIXMA MX535 user guide](#)

<http://yourpdfguides.com/dref/5583133>