



### Manual abstract:

· Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "Reference" section. General Guide · Press B to change from mode to mode. · In any mode, press L to illuminate the display. Data Bank Mode Timekeeping Mode Press B. Alarm Mode Stopwatch Mode Dual Time Mode Countdown Timer Mode Timekeeping Day of week Hour : Minutes can also view the Dual Time Mode screen or Data Bank Seconds L Use the Timekeeping Mode to set the time and date. You Mode screen from the Timekeeping Mode.

Daylight Saving Time (DST) Daylight Saving Time (summer time) advances the time setting by one hour from Standard Time. Remember that not all countries or even local areas use Daylight Saving Time. Note This watch is capable of displaying text for the day of the week in any one of 13 different languages (English, Portuguese, Spanish, French, Dutch, Danish, German, Italian, Swedish, Polish, Romanian, Turkish, and Russian).

PM indicator Year MonthDay Language indicator To set the time and date 1. In the Timekeeping Mode, hold down A until the seconds start to flash, which indicates the setting screen. 2. Use C and B to move the flashing in the sequence shown below to select other settings. Press C.

Press B. Month Day To toggle the Timekeeping Mode time between DST and Standard Time Holding down C for about two seconds in the Timekeeping Mode toggles between Daylight Saving Time (DST display) and Standard Time (DST not displayed). · Note that pressing C in the Timekeeping Mode also toggles between 12-hour timekeeping and 24-hour timekeeping. @@@@3. @@To change this setting Seconds Year, Month, Day, Hour, Minutes Language Perform this button operation Press E to reset to 00.

Use E (+) and D ( ) to change the setting. Use E and D to change the language setting. Data Bank The Data Bank Mode lets you store up to 30 records, each containing name and telephone number data. Records are automatically sorted based on the characters Name of the name. You can recall records by scrolling through them on the display. · The characters you can input for the name depend on the language you select in the Timekeeping Mode. See "To set the time and date" for more information. Changing the language setting does not affect names that are already stored. · See "Sort Table" for details on how the watch sorts records. · All of the operations in this section are performed in the Data Bank Mode, which you enter by pressing B.

Telephone number Remaining memory · While the language indicator is flashing on the display, use E and D to cycle through the language indicators as shown below, until the one for the language you want to select is displayed. Press E. Indicator ENx POR ESP FRA Press D. NED Language English Portuguese Spanish French Dutch Indicator DAN DEU ITA SVE POL Language Danish German Italian Swedish Polish Indicator RO T)R PUC Language Romanian Turkish Russian 4. Press A to exit the setting screen. · The day of the week is automatically displayed in accordance with the date (year, month, and day) settings. · See the "Day of the Week List" for information on abbreviations used. · In addition to the day of the week display, the language setting also affects the type of characters you can input for the name in the Data Bank Mode. · Holding down A in the Timekeeping Mode displays the indicator for the currently selected language. Keeping A depressed for one or two seconds changes to the Timekeeping Mode setting screen (indicated by the seconds flashing). If you accidentally display the setting screen, press A again to exit. To create a new Data Bank record 1. In the Data Bank Mode, press C to display the new Name area data screen. Number area · If the new data screen does not appear when you press C, it means that memory is full. To store another record, you will first have to delete some of the records stored in memory.

New Data Screen 2. Hold down A until the flashing cursor ( ) appears in the name area of the display. 3. In the name area, use E and D to cycle through characters at the cursor position. The characters cycle in the sequence shown below.

To toggle between 12-hour and 24-hour timekeeping In the Timekeeping Mode, press C to toggle between 12-hour timekeeping (indicated by A or P on the display), or 24-hour timekeeping. · With the 12-hour format, the P (PM) indicator appears on the display for times in the range of noon to 11:59 p.m. and the A (AM) indicator appears for times in the range of midnight to 11:59 a.m. · With the 24-hour format, times are displayed in the range of 0:00 to 23:59, without any indicator. · The 12-hour/24-hour timekeeping format you select in the Timekeeping Mode is applied in all modes. Press E. (space) (alphabet) A to Z @ to (symbol) Press D. · The above character sequence is for English input.

See "Character List" for the character sequences of other languages. 4. @@5. Repeat steps 3 and 4 until the name is complete. · You can input up to eight characters for the name. L L L L Data Bank Screen 0 to 9 (number) 1 Operation Guide 2515 6. After you input the name, press C as many times as necessary to move the cursor to the number area. · When the cursor is located at the eighth space of the name area, moving the cursor to the right causes it to jump to the first digit of the number. When the cursor is at the 15th digit of the number, moving it to the right (by pressing C) causes it to jump to the first character in the name. · Pressing C moves the cursor the right, while B moves it to the left.

7. In the number area, use E and D to cycle through numbers and symbols (hyphen, brackets, space) at the cursor position. The characters cycle in the sequence shown below. Press E. x 0 to 9 [ ] (space) 3.

@@@@9. Repeat steps 7 and 8 until you complete number input. · You can input up to 15 digits for the number. · The number initially contains all hyphens. @@10.

@@@@@@@The last character is indicated by the symbol after it. 4. While a setting is flashing, use E (+) and D ( ) to change it.

@@@@@@@ (A indicator) or p.m. (P indicator). 5. @@@@ · Pressing any button stops the alarm tone operation. @@@@To edit a Data Bank record 1. @@2.

Hold down A until the flashing cursor appears on the display. 3. @@4. Use E (forward) and D (back) to change the character. 5. @@To delete a Data Bank record 1. @@2. Hold down A until the flashing cursor appears on the display. 3. Press B and C at the same time to delete the record.

@@After the record is deleted, the cursor appears on the display, ready for input. 4. Input data or press A to return to the Data Bank record screen. To test the alarm In the Alarm Mode, hold down C to sound the alarm.



[You're reading an excerpt. Click here to read official CASIO 2515 user guide](http://yourpdfguides.com/dref/3003181)  
<http://yourpdfguides.com/dref/3003181>

To turn Alarms 2 through 5 and the hourly time signal on and off 1.

In the Alarm Mode, use E and D to select a one-time Alarm on indicators alarm (alarm number 2 through 5) or the Hourly Time Signal. 2. Press C to toggle it on and off. · The on/off status of Alarms 2 through 5 is shown by indicators along the bottom of the displays ( = on). The SIG indicator shows the on (displayed)/off (not displayed) status of the hourly time signal.

· The alarm on indicators and hourly time signal indicator are displayed in all modes. · While an alarm is sounding, the applicable alarm on Hourly time signal indicator flashes on the display. on indicator To select the operation of Alarm1 1. In the Alarm Mode, use E and D to select Alarm1. 2. Press C to cycle through the available settings in the sequence shown below. SNZ indicator and Alarm1 on indicator Press C. Alarms You can set up to five independent multi-function alarms Alarm time with hour, minutes, month, and day. When an alarm is (Hour : Minutes) turned on, the alarm tone sounds when the alarm time is reached. You can select either a one-time alarm or snooze alarm that repeats up to seven times, every five minutes.

You can also turn on an Hourly Time Signal that causes the watch to beep twice every hour on the hour. · There are five alarms numbered 1 through 5. You can configure Alarm1 as a snooze alarm or a one-time alarm. Alarms 2 through 5 can be used as one-time alarms only. Timekeeping Alarm date · Alarm settings (and Hourly Time Signal settings) are Mode time (MonthDay) available in the Alarm Mode, which you enter by pressing B. Alarm number One-time alarm on Snooze alarm on Alarm off · The SNZ indicator and Alarm1 on indicator are displayed in all modes. · The SNZ indicator flashes during the 5-minute intervals between alarms. · The alarm indicator (Alarm1 on and/or SNZ) flashes while the alarm is sounding. Stopwatch Hours Minutes Seconds Alarm Types

The alarm type is determined by the settings you make, as described below. · Daily alarm Set the hour and minutes for the alarm time.

This type of setting causes the alarm to sound everyday at the time you set. · Date alarm Set the month, day, hour and minutes for the alarm time. Te alarm sounds for 10 seconds or until you stop it by pressing any button. The countdown time is automatically reset to its starting value after the alarm stops. · Press C while a countdown operation is in progress to pause it.

Press C again to resume the countdown. · To completely stop a countdown operation, first pause it (by pressing C), and then press A. This returns the countdown time to its starting value. · The countdown timer measurement operation continues even if you exit the Countdown Timer Mode. Day of the Week List ENx POR ESP FRA NED DAN DEU ITA SVE POL ROo TgR RUS Sunday SUN DOo DOo DIo ZON SvN SON DOo SiN NIE DUo PAZ CS Monday Tuesday Wednesday Thursday oON TUE WED THU SEx TER QUA QUI LUN oAR oIb JUE LUN oAR oER JEU oAA DIN WOE DON oAN TIR ONS TOR oON DIE oIT DON LUN oAR oER xIO own TIS ONS TOR PON WTO qRO CZW LUN oAR oIE JOI PZT SAL mAR PER QO BT SR YT Friday FRI SEX VIE VEN VRI FRE FRE VEN FRE PII VIN CUo QT Saturday SAT SaB SaB SAo ZAT LvR SAo SAB LiR SOB Sjo CTS SB Dual Time Dual time (Hour : Minutes Seconds) The Dual Time Mode lets you keep track of time in a different time zone.

You can select Standard Time or Daylight Saving Time for the Dual Time Mode time, and a simple operation lets you view the Timekeeping Mode screen or Data Bank Mode screen. · The seconds count of the Dual Time is synchronized with the seconds count of the Timekeeping Mode. · All of the operations in this section are performed in the Dual Time Mode, which you enter by pressing B. Character List ENx: (space) A B C D E F x H I J n L o N O P Q R S T U V W X Y Z @ ] ?' : / + - 0 1 2 3 p 5 6 q 8 9 POR: (espacio) A ; ( , h B C ^ D E = [ F x H I > J n L o N O ? ] i P QRSTU@VWXYZ@]?' : / + - 0 1 2 3 p 5 6 q 8 9 ESP: (espacio) A ; B C D E = F x H I > J n L o N ` O ? P Q R S T U @ ] VWXYZ@]?' : / + - 0 1 2 3 p 5 6 q 8 9 FRA: (espacio) A ( , B C ^ D E = a [ c F x H I e d J n L o N O ] g P Q RSTUbf)VWXYZ@]?' : / + - 0 1 2 3 p 5 6 q 8 9 NED: (Spatie) A B C D E F x H I J n L o N O P Q R S T U V W X Y Z @ ]?' : / + - 0 1 2 3 p 5 6 q 8 9 DAN: (Mellemsrum) A B C D E F x H I J n L o N O P Q R S T U V W X Y Z uww@]?' : / + - 0 1 2 3 p 5 6 q 8 9 DEU: (Leerzeichen) A h B C D E F x H I J n L o N O i P Q R S T U ) V W X Y Z @ ]?' .

:/+ - 0 1 2 3 p 5 6 q 8 9 ITA: (spazio) A ( B C D E = a F x H I j e J n L o N O ? k P Q R S T UbVWXYZ@]?' : / + - 0 1 2 3 p 5 6 q 8 9 SVE: (Mellanslag) A B C D E F x H I J n L o N O P Q R S T U V W X Y Z whi@]?' : / + - 0 1 2 3 p 5 6 q 8 9 POL: (epacja) A l B C m D E n F x H I J n L o n p O ? P Q R S q T

UVWXYZrs@]?' : / + - 0 1 2 3 p 5 6 q 8 9 Timekeeping Mode time To set the Dual Time 1. In the Dual Time Mode, hold down A until the hour setting start to flash, which indicates the setting screen. 2. Press B or C to move the flashing between the hour and minute settings. 3. While a setting is flashing, use E (+) and D (-) to change it. 4.

Press A to exit the setting screen. To toggle Dual Time Mode time between DST and Standard Time Holding down C for about two seconds in the Dual Time Mode toggles between Daylight Saving Time (DST display) and Standard Time (DST not displayed). · The DST indicator on the display indicates that daylight saving time is turned on. To display the Timekeeping screen and Data Bank screen Holding down D in the Dual Time Mode displays the Timekeeping screen.

@ @ @ @ k l i + g P Q R @ ] ? ' .

@ @ This returns to the Timekeeping Mode. @ @ Note that Auto Display cannot be performed while a setting screen is on the display. Auto Return Features · After you perform any button operation (except for the backlight button) in any mode, pressing B returns directly to the Timekeeping Mode. · If you leave the watch in the Data Bank Mode for two or three minutes without performing any operation, it automatically changes to the Timekeeping Mode. · If you leave a screen with flashing digits or a cursor on the display for two or three minutes without performing any operation, the watch automatically saves any settings you have made up to that point and exits the setting screen.

Data and Setting Scrolling The B, C, D, and E buttons are used in various modes and setting screens to scroll through data on the display. In most cases, holding down these buttons during a scroll operation scrolls through the data at high speed. Initial Screens When you enter the Data Bank or Alarm Mode, the data you were viewing when you last exited the mode appears first. · Character 7 ( h ) is for German, character 69 ( h ) is for Swedish. · Character 43 ( i ) is for German and Turkish, character 70 ( i ) is for Swedish. · Characters 71 through 102 are for Russian. 3 .



[You're reading an excerpt. Click here to read official CASIO 2515](http://yourpdfguides.com/dref/3003181)

[user guide](http://yourpdfguides.com/dref/3003181)

<http://yourpdfguides.com/dref/3003181>