




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for CASIO 4732. You'll find the answers to all your questions on the CASIO 4732 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual CASIO 4732
User guide CASIO 4732
Operating instructions CASIO 4732
Instructions for use CASIO 4732
Instruction manual CASIO 4732

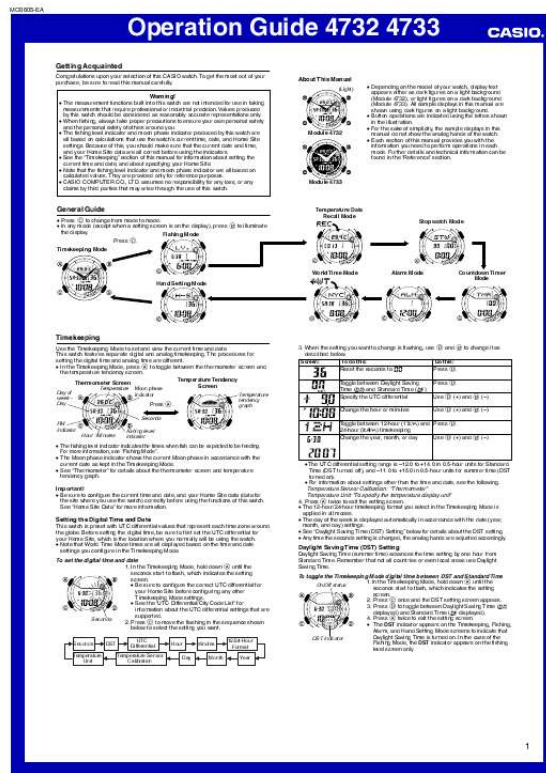

[You're reading an excerpt. Click here to read official CASIO 4732 user guide](http://yourpdfguides.com/dref/2471001)
<http://yourpdfguides.com/dref/2471001>

Manual abstract:

Because of this, you should make sure that the current date and time, and your Home Site data are all correct before using the indicators. · See the "Timekeeping" section of this manual for information about setting the current time and date, and about specifying your Home Site. · Note that the fishing level indicator and moon phase indicator are all based on calculated values. They are provided only for reference purposes. · CASIO COMPUTER CO., LTD. assumes no responsibility for any loss, or any claims by third parties that may arise through the use of this watch. Warning! Module 4732 · Depending on the model of your watch, display text appears either as dark figures on a light background (Module 4732), or light figures on a dark background (Module 4733).

All sample displays in this manual are shown using dark figures on a light background. · Button operations are indicated using the letters shown in the illustration.

· For the sake of simplicity, the sample displays in this manual do not show the analog hands of the watch. · Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "Reference" section. Module 4733 General Guide · Press C to change from mode to mode. · In any mode (except when a setting screen is on the display), press B to illuminate the display.

Fishing Mode Press C. Timekeeping Mode Temperature Data Recall Mode Stopwatch Mode L L World Time Mode Hand Setting Mode Alarm Mode Countdown Timer Mode L L Timekeeping Use the Timekeeping Mode to set and view the current time and date. This watch features separate digital and analog timekeeping. The procedures for setting the digital time and analog time are different. · In the Timekeeping Mode, press A to toggle between the thermometer screen and the temperature tendency screen.

Temperature Tendency Thermometer Screen Screen Temperature Moon phase Day of week Day indicator L 3. When the setting you want to change is flashing, use D and B to change it as described below. Screen: To do this: Do this: Reset the seconds to 00 Toggle between Daylight Saving Time (ON) and Standard Time (OF) Specify the UTC differential Change the hour or minutes Press A. Temperature tendency graph L Seconds PM indicator Hour : Minutes

Fishing level indicator Toggle between 12-hour (12H) and Press D. 24-hour (24H) timekeeping Use D (+) and B (-). Change the year, month, or day · The fishing level indicator indicates the times when fish can be expected to be feeding. For more information, see "Fishing Mode". · The Moon phase indicator shows the current Moon phase in accordance with the current date as kept in the Timekeeping Mode. · See "Thermometer" for details about the thermometer screen and temperature tendency graph. Important! · Be sure to configure the current time and date, and your Home Site data (data for the site where you use the watch) correctly before using the functions of this watch.

See "Home Site Data" for more information. Setting the Digital Time and Date This watch is preset with UTC differential values that represent each time zone around the globe. Before setting the digital time, be sure to first set the UTC differential for your Home Site, which is the location where you normally will be using the watch. · Note that World Time Mode times are all displayed based on the time and date settings you configure in the Timekeeping Mode. · The UTC differential setting range is 12.0 to +14.0 in 0.5-hour units for Standard Time (DST turned off), and 11.0 to +15.0 in 0.

5-hour units for summer time (DST turned on). · For information about settings other than the time and date, see the following. Temperature Sensor Calibration: "Thermometer" Temperature Unit: "To specify the temperature display unit" 4. Press A twice to exit the setting screen. · The 12-hour/24-hour timekeeping format you select in the Timekeeping Mode is applied in all modes.

· The day of the week is displayed automatically in accordance with the date (year, month, and day) settings. · See "Daylight Saving Time (DST) Setting" below for details about the DST setting. · Any time the seconds setting is changed, the analog hands are adjusted accordingly. Daylight Saving Time (DST) Setting Daylight Saving Time (summer time) advances the time setting by one hour from Standard Time. Remember that not all countries or even local areas use Daylight Saving Time.

Seconds Temperature Unit DST UTC Differential Temperature Sensor Calibration Hour Day Minutes Month 12/24-Hour Format Year llll To set the digital time and date 1. In the Timekeeping Mode, hold down A until the seconds start to flash, which indicates the setting screen. · Be sure to configure the correct UTC differential for llll your Home Site before configuring any other Timekeeping Mode settings. · See the "UTC Differential/City Code List" for information about the UTC differential settings that are supported. Seconds 2. Press C to move the flashing in the sequence shown below to select the setting you want. llll To toggle the Timekeeping Mode digital time between DST and Standard Time 1. In the Timekeeping Mode, hold down A until the On/Off status seconds start to flash, which indicates the setting screen. 2. Press C once and the DST setting screen appears.

l ll 3. Press D to toggle between Daylight Saving Time (ON displayed) and Standard Time (OF displayed). 4. Press A twice to exit the setting screen. · The DST indicator appears on the Timekeeping, Fishing, Alarm, and Hand Setting Mode screens to indicate that Daylight Saving Time is turned on. In the case of the DST indicator Fishing Mode, the DST indicator appears on the fishing level screen only. lll lll L Press D. Press D. Use D (+) and B (-). Use D (+) and B (-).

L L L lll lll 1 Operation Guide 4732 4733 Home Site Data Moon phase, the fishing level indicator, and Fishing Mode data will not be displayed properly unless Home Site data (UTC differential and longitude) is configured correctly. · The UTC differential is a value that indicates the time difference between a reference point in Greenwich, England and the time zone where a city is located. · The letters UTC is the abbreviation for Coordinated Universal Time, which is the world-wide scientific standard of timekeeping. It is based upon carefully maintained atomic (cesium) clocks that keep time accurately to within microseconds. Leap seconds are added or subtracted as necessary to keep UTC in sync with the Earth's rotation.

· The "Site Data List" provides UTC differential and longitude information around the world.



[You're reading an excerpt. Click here to read official CASIO 4732 user guide](http://yourpdfguides.com/dref/2471001)

<http://yourpdfguides.com/dref/2471001>

· The following is the initial factory default Home Site data (Tokyo, Japan) when you first purchase the watch and whenever you have the batteries replaced. Change these settings to match the area where you normally use the watch. UTC differential (+9.0); Longitude (East 140 degrees) · The fishing level indicator changes in accordance with the Moon data.

· In the Timekeeping Mode, the FISH indicator flashes whenever the fishing level of the current time is 4 or 5. To view the current fishing level and Moon data In the Fishing Mode, press A to toggle between the fishing level screen and the Moon Data screen. · The fishing level indicator shows the level for the displayed time. The initial fishing level screen shows the level for 6:00 a.m. The Moon data screen shows the Moon age and Moon phase for the current date. Fishing Level Screen Moon Data Screen Month Day Month Day Moon phase indicator Press A. L L To configure Home Site data 1. In the Timekeeping Mode, hold down A until the Longitude seconds start to flash, which indicates the setting (east/west) screen. 2.

Press C twice to display the UTC differential setting screen, and confirm that the setting is correct. · If the UTC differential setting is not correct, use D (+) and B () to change it. lll l lll 3. Press A to display the longitude value setting screen. 4. Press C to toggle the flashing between the longitude value and the longitude unit (east/west). 5. While the setting you want to change is flashing, use Longitude D and B to change it as described below. value Fishing level indicator Time Moon age · While the fishing level screen is displayed, press D to advance to the next hour. · While the Moon Data screen is displayed, press D to advance to the next day.

· You can also specify a particular date (year, month, day) to view its fishing level and Moon data. See "To specify a date" for more information. · When you enter the Fishing Mode, the screen (fishing level or Moon data) that was displayed the last time you exited the mode appears first. lll lll Setting Longitude Value Longitude Unit (East/West) 6. Press A to exit the setting screen.

Use D to switch between east longitude () and west longitude (). Setting the Analog Time Perform the procedure below when the time indicated by the analog hands does not match the time of the digital display. 3. While a setting is flashing, use D (+) or B () to change it. · You can specify a date in the range of January 1, 2000 to December 31, 2099.

4. Press A to exit the setting screen. 5. Use A to display either the fishing level screen or the Moon Data screen. Thermometer This watch uses a temperature sensor to measure temperature. A reading is taken during each even-numbered minute, and the result of the last reading is displayed on the thermometer screen. The watch also takes separate readings and stores them in memory for display in the temperature tendency graph, which can be viewed in the Timekeeping Mode. Measured temperature values are stored in memory for later recall when you need them. Temperature Thermometer Screen Tendency Screen Temperature Temperature To adjust the analog time 1. In the Timekeeping Mode, press C seven times to enter the Hand Setting Mode.

2. Hold down A until the current digital time starts to flash, which indicates the setting screen. 3. Use D to adjust the analog setting. · Press D once to advance the hands 20 seconds. · Hold down D to advance the hands at high speed. lll lll l lll lll Level 5 · To lock high speed hands movement, hold down D to start it and then press B to lock. The hands will continue to advance for one 12-hour cycle or until you press any button to stop it. It will also stop automatically after the time advances 12 hours or if an alarm (daily alarm, Hourly Time Signal, or countdown beeper) starts to sound. 4. Press A to exit the setting screen. · The minute hand will be adjusted slightly to match the seconds when you exit the setting screen. · To return to the Timekeeping Mode, press C. L Fishing Mode Month Day Moon phase indicator Time Fishing level indicator The Fishing Mode displays an indicator that shows, as one of five levels, the suitability of a specific date and time (minute 00 to minute 59 of a particular hour) for fishing. This mode also can be used to display Moon Data (Moon age and Moon phase) for a specific date.

· If you suspect that the fishing level indicator or current Moon data is wrong for some reason, check the current Timekeeping Mode settings (time, date, and Home Site), and correct them if required. · See "Moon Phase Indicator" for information about the Moon phase indicator. · All of the operations in this section are performed in the FISH Fishing Mode, which you enter by pressing C. indicator · You can select either Celsius (°C) or Fahrenheit (°F) units for the therm auto-repeat settings wn 1. While the countdown start time is on the display in the Auto-repeat on indicator Countdown Timer Mode, hold down A until the hour setting of the countdown start time starts to flash, which indicates the setting screen.

· If the countdown start time is not displayed, use the procedure under "To use the countdown timer" to ll l l display it. 2. Press C to move the flashing in the sequence shown below, and select the setting you want to change. llll lll llll On/Off status Start Time (Hours) Start Time (Minutes) Auto-Repeat On/Off

Recalling Temperature Data The measurements the watch takes at the top and the bottom of each hour are stored in memory automatically. Memory can hold up to 50 measurement records. You can use the Temperature Data Recall Mode to recall memory data when you need it. · Each temperature data record has a number. The newest data record is number 01, while the oldest data record is the one with the highest number. @@@@ @@@@ · Set 0:00 to specify 100 hours. @ @4.

Press A to exit the setting screen. @@@@ @@@@ @2. Use D (+) to scroll through the records. @@@@ @@@@ · This operation turns on the alarm automatically. ll l 2. Press C to move the flashing between the hour and minute settings. 3. While a setting is flashing, use D (+) and B () to change it. @@(A indicator) or p.m.

(P indicator). 4. @@@@ @@@@ @ · To stop the alarm tone after it starts to sound, press any button. To test the alarm In the Alarm Mode, hold down D to sound the alarm. To turn the Daily alarm and the Hourly Time Signal on and off In the Alarm Mode, press D to cycle through the settings shown below. Module 4732 To measure times with the stopwatch Elapsed Time D Start D Stop D Re-start D Stop A Clear Split Time D Start A Split (SPL displayed) Alarm Off Signal Off A Split release D Stop A Clear Module 4733 Two Finishes D Start A Split First runner finishes.



[You're reading an excerpt. Click here to read official CASIO 4732](http://yourpdfguides.com/dref/2471001)

[user guide](http://yourpdfguides.com/dref/2471001)

<http://yourpdfguides.com/dref/2471001>

Display time of first runner. D Stop Second runner finishes. A Split release Display time of second runner. A Clear Alarm Off Signal Off · The alarm on indicator and the Hourly Time Signal on indicator are shown on the display in all modes while these functions are turned on.

World Time The World Time Mode digitally displays the current time in 50 cities (30 time zones) around the world. · The times kept in the World Time Mode are synchronized with the time being kept in the Timekeeping Mode. If you feel that there is an error in any World Time Mode time, check the UTC differential of your Home Site Data (Home City) and the current setting of the Timekeeping Mode time. · Select a city code in the World Time Mode to display the current time in any particular time zone around the globe. See the "UTC Differential/City Code List" for Current time in selected city information about the UTC differential settings that are supported. Day of week and day in · All of the operations in this section are performed in the selected city World Time Mode, which you enter by pressing C. City code Countdown Timer Seconds You can set the countdown timer within a range of one minute to 100 hours. An alarm sounds when the countdown reaches zero. · You can also select auto-repeat, which automatically restarts the countdown from the original value you set whenever zero is reached. · All of the operations in this section are performed in the Countdown Timer Mode, which you enter by pressing C.

Hours Minutes To use the countdo timer wn Press D while in the Countdown Timer Mode to start the countdown timer. · When the end of the countdown is reached and auto-repeat is turned off, the alarm sounds for 10 seconds or until you stop it by pressing any button. The countdown time is automatically reset to its starting value after the alarm stops. · When auto-repeat is turned on, the countdown will restart automatically without pausing when it reaches zero. The alarm sounds to signal when the countdown reaches zero. · The countdown timer measurement operation continues even if you exit the Countdown Timer Mode. · To stop a countdown operation completely, first pause it (by pressing D), and then press A. This returns the countdown time to its starting value. To view the time in another city While in the World Time Mode, press D to scroll eastward through the city codes (time zones). III IIII Stopwatch Alarm On Signal Off Alarm Off Signal On Alarm On Signal On Alarm On Signal Off Alarm Off Signal On Alarm On Signal On 3 Operation Guide 4732 4733 To toggle a city code time between Standard Time and Daylight Saving Time 1.

In the World Time Mode, use D to display the city code (time zone) whose Standard Time/Daylight Saving Time setting you want to change. 2. Hold down A to toggle between Daylight Saving Time (DST indicator displayed) and Standard Time (DST indicator not displayed). · The DST indicator is shown on the World Time screen while Daylight Saving Time is turned on. DST indicator · Note that changing the Daylight Saving Time for any city code causes the setting to be applied to all city codes.

Moon Phases and Moon Age The Moon goes through a regular 29.53-day cycle. During each cycle, the Moon appears to wax and wane as the relative positioning of the Earth, Moon, and Sun changes. The greater the angular distance between the Moon and the Sun,* the more we see illuminated. * The angle to the Moon in relation to the direction at which the Sun is visible from the Earth.

This watch performs a rough calculation of the current Moon age starting from day 0 of the moon age cycle. Since this watch performs calculations using integer values only (no fractions), the margin for error of the displayed Moon age is ± 1 day. Thermometer Temperature Sensor Calibration The temperature sensor built into the watch is calibrated at the factory and normally requires no further adjustment. If you notice serious errors in the temperature readings produced by the watch, you can calibrate the sensor to correct the errors. Important! Incorrectly calibrating the temperature sensor can result in incorrect readings. Carefully read the following before doing anything. · Compare the readings produced by the watch with those of another reliable and accurate thermometer. · If adjustment is required, remove the watch from your wrist and wait for 20 or 30 minutes to give the temperature of the watch time to stabilize. Illumination This watch has an EL (electro-luminescent) panel that causes the entire display to glow for easy reading in the dark. The watch's auto light switch turns on illumination automatically when you angle the watch towards your face.

· The auto light switch must be turned on (indicated by the auto light switch on indicator) for it to operate. · See "Illumination Precautions" for other important information about using illumination. Auto light switch on indicator About the Auto Light Switch Turning on the auto light switch causes illumination to turn on, whenever you position your wrist as described below in any mode, except for the Hand Setting Mode setting screen. Moving the watch to a position that is parallel to the ground and then tilting it towards you more than 40 degrees causes illumination to turn on. · Wear the watch on the outside of your wrist. Parallel to ground More than 40° · To return the calibration value to its default (no calibration, indicated by ``-"), press D and B at the same time. · Temperature sensor calibration will not be possible if the current reading is outside the allowable display range (10.0°C/14.0°F to 60.0°C/140.0°F) and the calibration value shows ``-". · Setting a sensor calibration value does not affect temperature values that are already stored in memory. 4. After configuring the setting you want, press A twice to exit the setting screen. Warning! · Always make sure you are in a safe place whenever you are reading the display of the watch using the auto light switch.

Be especially careful when running or engaged in any other activity that can result in accident or injury. Also take care that sudden illumination by the auto light switch does not startle or distract others around you. · When you are wearing the watch, make sure that its auto light switch is turned off before riding on a bicycle or operating a motorcycle or any other motor vehicle. Sudden and unintended operation of the auto light switch can create a distraction, which can result in a traffic accident and serious personal injury. To specify the temperature display unit 1.

In the Timekeeping Mode, hold down A until the seconds start to flash, which indicates the setting screen. II 1 2. Press C 10 times to display the temperature unit setting screen.



[You're reading an excerpt. Click here to read official CASIO 4732 user guide](http://yourpdfguides.com/dref/2471001)
<http://yourpdfguides.com/dref/2471001>

3. Use D to switch between Celsius () and Fahrenheit (). · The initial factory default and the initial default after Temperature unit battery replacement is Celsius (). llll 4. After configuring the setting you want, press A twice to exit the setting screen. · The temperature display unit setting you select is also applied to temperature values that are already stored in memory. Button Operation Tone The button operation tone sounds any time you press one of the watch's buttons.

You can turn the button operation tone on or off as desired. · Even if you turn off the button operation tone, the alarm, Hourly Time Signal, and Countdown Timer Mode alarm all operate normally. Mute indicator To turn the auto light switch on and off In the Timekeeping Mode, hold down D for about three seconds to toggle the auto light switch on (auto light switch on indicator displayed) and off (auto light switch on indicator not displayed). · The auto light switch on indicator is on the display in all modes while the auto light switch is turned on. · In order to protect against running down the battery, the auto light switch will turn off automatically approximately six hours after you turn it on. Repeat the above procedure to turn the auto light switch back on if you want. Reference This section contains more detailed and technical information about watch operation. It also contains important precautions and notes about the various features and functions of this watch. Moon Phase Indicator The Moon phase indicator of this watch indicates the current phase of the Moon as shown below. Moon phase indicator · Since the C button is also the mode change button, holding it down to turn the button operation tone on or off also causes the watch's current mode to change.

· The mute indicator is displayed in all modes when the button operation tone is turned off. Auto Return Feature · If you leave a screen with flashing digits on the display without performing any operation for two or three minutes, the watch saves any settings you have made up to that point and exits the setting screen automatically. · The watch will change to the Timekeeping Mode automatically if you do not perform any operation in the Fishing Mode, Temperature Data Recall Mode, Alarm Mode, or Hand Setting Mode for two or three minutes. Scrolling Module 4732 (part you cannot see) Module 4733 Moon phase (part you can see) The B and D buttons are used in various modes and setting screens to scroll through data on the display. In most cases, holding down these buttons during a scroll operation scrolls through the data at high speed.

· Resetting the seconds to 00 while the current count is in the range of 30 to 59 causes the minutes to be increased by 1. In the range of 00 to 29, the seconds are reset to 00 without changing the minutes. · With the 12-hour format, the P (PM) indicator appears on the display for times in the range of noon to 11:59 p.m. and the A (AM) indicator appears for times in the range of midnight to 11:59 a.

m. · With the 24-hour format, times are displayed in the range of 0:00 to 23:59, without any indicator. · The year can be set in the range of 2000 to 2099. · The watch's built-in full automatic calendar makes allowances for different month lengths and leap years. @@@@ @@@@ · The above operation turns on illumination regardless of the current auto light switch setting. To calibrate the temperature sensor 1. In the Timekeeping Mode, hold down A until the seconds start to flash, which indicates the setting screen. 2. Press C nine times to display the temperature sensor ll l calibration screen. 3.

Use D (+) and B () to change the calibration value. · You can change the value in 0.1°C (0.2°F) steps, in a range of ±10°C (±18°F). The calibration value shows Calibration value ``-.-" when the setting is outside the allowable range. llll To turn the button operation tone on and off In any mode (except when a setting screen is on the display), hold down C to toggle the button operation tone on (mute indicator not displayed) and off (mute indicator displayed). 4 Operation Guide 4732 4733 Site Data List Illumination Precautions · The electro-luminescent panel that provides illumination loses power after very long use. · Illumination may be hard to see when viewed under direct sunlight. · The watch may emit an audible sound whenever the display is illuminated.

This is due to vibration of the EL panel used for illumination, and does not indicate malfunction. · Illumination turns off automatically whenever an alarm sounds. · Frequent use of illumination runs down the batteries. Auto light switch precautions · Avoid wearing the watch on the inside of your wrist. Doing so causes the auto light switch to operate when it is not needed, which shortens battery life.

If you want to wear the watch on the inside of your wrist, turn off the auto light switch feature. More than 15 degrees too high Site Anchorage Bahamas Baja, California Bangkok Boston Buenos Aires Casablanca Christmas Island Dakar Gold Coast Great Barrier Reef, Cairns Guam Hamburg Hong Kong Honolulu Jakarta Jeddah Karachi Kona, Hawaii Lima Lisbon London Los Angeles Maldives Manila Mauritius Melbourne Miami Noumea Pago Pago Palau Panama City Papeete Rio De Janeiro Seattle Shanghai Singapore Sydney Tokyo Vancouver Wellington UTC Differential Standard DST/ Time Summer Time 9.0 8.0 - 5.0 4.

0 7.0 6.0 +7.0 +8.0 5.0 4.0 3.0 2.0 +0.0 +1.

0 +14.0 +15.0 +0.0 +1.0 +10.0 +11.0 +10.0 +11.0 +10.0 +11.

0 +1.0 +2.0 +8.0 +9.0 10.

0 9.0 +7.0 +8.0 +3.0 +4.

0 +5.0 +6.0 10.0 9.0 5.0 4.0 +0.0 +1.0 +0.0 +1.

0 8.0 7.0 +5.0 +6.0 +8.0 +9.0 +4.0 +5.0 +10.0 +11.

0 5.0 4.0 +11.0 +12.0 11.

0 10.0 +9.0 +10.0 5.0 4.

0 10.0 9.0 3.0 2.0 8.0 7.0 +8.0 +9.0 +8.0 +9.

0 +10.0 +11.0 +9.0 +10.0 8.0 7.0 +12.0 +13.0 Longitude 149°W 77°W 110°W 101°E 71°W 58°W 8°W 158°W 17°W 154°E 146°E 145°E 10°E 114°E 158°W 107°E 39°E 67°E 156°W 77°W 9°W 0°E 118°W 74°E 121°E 57°E 145°E 80°W 166°E 171°W 135°E 80°W 150°W 43°W 122°W 121°E 104°E 151°E 140°E 123°W 175°E · Illumination may not turn on if the face of the watch is more than 15 degrees above or below parallel. Make sure that the back of your hand is parallel to the ground.

· Illumination turns off in about one second, even if you keep the watch pointed towards your face. · Static electricity or magnetic force can interfere with proper operation of the auto light switch. If illumination does not turn on, try moving the watch back to the starting position (parallel with the ground) and then tilt it back toward you again.



[You're reading an excerpt. Click here to read official CASIO 4732 user guide](http://yourpdfguides.com/dref/2471001)
<http://yourpdfguides.com/dref/2471001>

If this does not work, drop your arm all the way down so it hangs at your side, and then bring it back up again. · Under certain conditions, illumination may not turn on until about one second after you turn the face of the watch towards you.

This does not necessarily indicate malfunction of the auto light switch. · You may notice a very faint clicking sound coming from the watch when it is shaken back and forth. This sound is caused by mechanical operation of the auto light switch, and does not indicate a problem with the watch. UTC Differential/City Code List City Code PPG HNL ANC YVR SFO LAX DEN MEX CHI MIA NYC CCS YYT RIO RAI LIS LON BCN PAR MIL ROM BER ATH JNB IST CAI JRS MOW JED THR DXB KBL KHI MLE DEL DAC RGN BKK JKT* SIN* HKG BJS SEL TYO ADL GUM SYD NOU WLG TBU City Pago Pago Honolulu Anchorage Vancouver San Francisco Los Angeles Denver Mexico City Chicago Miami New York Caracas St. Johns Rio De Janeiro Praia Lisbon London Barcelona Paris Milan Rome Berlin Athens Johannesburg Istanbul Cairo Jerusalem Moscow Jeddah Tehran Dubai Kabul Karachi Male Delhi Dhaka Yangon Bangkok Jakarta Singapore Hong Kong Beijing Seoul Tokyo Adelaide Guam Sydney Noumea Wellington Nuku'Alofa UTC Differential 11. 0 10.0 09.0 08.0 07.0 06.0 05.0 04.0 03.5 03.0 01.

0 +00.0 Other major cities in same time zone Papeete Nome Las Vegas, Seattle/Tacoma, Dawson City Edmonton, El Paso Houston, Dallas/Fort Worth, New Orleans, Winnipeg Montreal, Detroit, Boston, Panama City, Havana, Lima, Bogota La Paz, Santiago, Port Of Spain Sao Paulo, Buenos Aires, Brasilia, Montevideo Dublin, Casablanca, Dakar, Abidjan Amsterdam, Algiers, Hamburg, Frankfurt, Vienna, Madrid, Stockholm ·Based on data as of 2003. +01.0 +02.0 Helsinki, Beirut, Damascus, Cape Town +03.0 +03.5 +04.0 +04.5 +05.0 +05.

5 +06.0 +06.5 +07.0 +08.0 +09.

0 +09.5 +10.0 +11.0 +12.0 +13.

0 Kuwait, Riyadh, Aden, Addis Ababa, Nairobi Shiraz Abu Dhabi, Muscat Mumbai, Kolkata Colombo Phnom Penh, Hanoi, Vientiane Kuala Lumpur, Taipei, Manila, Perth, Ulaanbaatar Pyongyang Darwin Melbourne, Rabaul Port Vila Christchurch, Nadi, Nauru Island · Based on data as of December 2005. * The sequence of these city codes is SIN JKT. 5 .



[You're reading an excerpt. Click here to read official CASIO 4732 user guide](http://yourpdfguides.com/dref/2471001)

<http://yourpdfguides.com/dref/2471001>