



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for CASIO SL 300VER. You'll find the answers to all your questions on the CASIO SL 300VER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual CASIO SL 300VER
User guide CASIO SL 300VER
Operating instructions CASIO SL 300VER
Instructions for use CASIO SL 300VER
Instruction manual CASIO SL 300VER



[You're reading an excerpt. Click here to read official CASIO SL 300VER user guide](http://yourpdfguides.com/dref/5321295)

<http://yourpdfguides.com/dref/5321295>

Manual abstract:

12, 1:00 PM 1 / General Guide k About the Display □ : Negative value indicator M : Independent memory indicator E : Error indicator K : Constant calculation indicator Euro : Euro currency indicator Local : Local currency indicator RATE : Conversion rate indicator □□□□ : Arithmetic operation indicators 2 / Correcting Input Errors • To completely clear a value you have just input, press C (or / (HL-820VER)). □ If you press the wrong arithmetic operation key (+, -, *, /), simply press the correct key before inputting anything else. K Clearing Calculations • To clear the calculator except for the independent memory, press A (or / twice (HL-820VER)). □ To clear the independent memory only, press U twice. 12, 1:00 PM k Error Indicator If the error indicator "E" appears on the display, press C (or / (HL-820VER)) to clear the error and continue with the calculation, or A (or / twice (HL-820VER)) to clear the entire calculation. 3 / Power Supply HL-820VER k Battery Replacement Replace the battery when the display darkens. After replacement, press / and confirm that "0." appears on the display. □ Load battery so that k and l ends are facing correctly. @@@@K Battery Replacement Do not try to replace the battery yourself. have it replaced by an authorized CASIO dealer or service center. @@@@ to restore power, press A (or / (HL-820VER)). @@@@Never try to take the calculator apart. Wipe the unit with a soft, dry cloth to clean it. @@@@12, 1:01 PM 5 / Specifications Power Supply: HL-820VER: One LR54 (LR1130) button type battery HS-8VER/MS-8VER/MS-80VER/SL-100VER/SL-160VER/SL-300VER/SL-790VER: Two-Way Power System, with solar cell and one button type battery (LR54 (LR1130)) Battery Life: HL-820VER: Approximately 7,000 hours continuous operation HS-8VER/MS-8VER/MS-80VER/SL-100VER/SL-160VER/SL-300VER/SL-790VER: Approximately 3 years (1 hour operation per day) Operating Temperature: 0°C to 40°C (32°F to 104°F) Dimensions: HL-820VER/HS-8VER: Folded: 10 (H) × 62. 4 oz) (including the battery) 6 / Euro Currency Conversion • Pressing A (or / twice (HL-820VER)) to clear the calculation memory does not clear the conversion rate setting. 12, 1:01 PM k Setting a Conversion Rate Example: To set the conversion rate for your local currency as 1 euro = 1. Hold down r for about two seconds and the currently set rate appears on the display. For rates less than 1 you can input up to 8 digits, including 0 for the integer digit and leading zeros (though only six significant digits, counted from the left and starting with the first non-zero digit, can be specified). 0012345 • You can check the currently set rate at any time by pressing A (or / twice (HL820VER)) and then E. □ The rate is retained in memory even when calculator power is turned off by pressing O (HL-820VER) or by operation of Auto Power Off. @@@@M Subtracts the displayed value from independent memory. *2 The result of the conversion is rounded off to two decimal places. .



[You're reading an excerpt. Click here to read official CASIO SL 300VER user guide](http://yourpdfguides.com/dref/5321295)
<http://yourpdfguides.com/dref/5321295>