



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for COMPAQ IPAQ POCKET PC H3900. You'll find the answers to all your questions on the COMPAQ IPAQ POCKET PC H3900 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual COMPAQ IPAQ POCKET PC H3900
User guide COMPAQ IPAQ POCKET PC H3900
Operating instructions COMPAQ IPAQ POCKET PC H3900
Instructions for use COMPAQ IPAQ POCKET PC H3900
Instruction manual COMPAQ IPAQ POCKET PC H3900



GS 3x5.book Page 1 Friday, February 14, 2003 3:45 PM



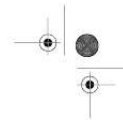


TABLE OF CONTENTS

Getting Started Guide	3
Introduktion	39
Aan de slag	75
Komme i gang	111
Aloituspäas	147
Komma igång	181

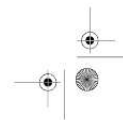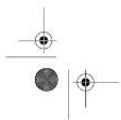

[You're reading an excerpt. Click here to read official COMPAQ IPAQ POCKET PC H3900 user guide](http://yourpdfguides.com/dref/1217843)
<http://yourpdfguides.com/dref/1217843>

Manual abstract:

this document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company. To use your Compaq iPAQ™ Pocket PC H3900 series most effectively, start by learning how to · Enter information Because your Compaq iPAQ Pocket PC uses some power to maintain files in RAM and the clock, you need to recharge the battery regularly. Keep the Compaq iPAQ Pocket PC connected to the universal cradle or the AC adapter while you are at your desk. The best policy is to keep the Compaq iPAQ Pocket PC connected to your computer when working at your desk and carry your AC adapter and DC adapter plug with you when traveling. Charge your Compaq iPAQ Pocket PC up to four hours before you first use it. CAUTION: Because most of the applications and data you install on your Compaq iPAQ Pocket PC are held in memory, you will need to reinstall them if the battery completely discharges. 5 software on the Companion CD-ROM Add-on software and applications detailed eBook guide, which you can copy to your Compaq iPAQ Pocket PC interactive Flash guide available on the CD-ROM comprehensive printable reference guide A universal cradle for both USB and serial connections a protective cover pack an extra stylus an AC adapter a rubber retainer a DC adapter plug with tether If items are missing, contact Customer Support at the numbers provided in the Worldwide Telephone Numbers booklet. Front Panel 1 Stylus: push to eject, push to lock 2 Power Indicator: amber flash = charging; amber solid = charged; green = alarm 3 Power Button 4 Speaker: alarms, recordings 5 Color Display 6 Programmable Application Buttons 1-4 (left to right): navigate to applications, default: button 1 is Calendar, button 2 is Contacts, button 3 is Inbox, button 4 is iPAQ Task 7 Navigation Button: scroll through a list 8 Record/Application Button 5 9 Light sensor: adjusts backlight - Stereo Headphone Jack q Active Bluetooth Indicator: flashes when Bluetooth radio is on (Bluetooth models only) w Microphone Top Panel 1 Stereo Headphone Jack 2 Microphone 3 Hidden Infrared Port: beams information with other mobile devices 4 Stylus: push to eject, push to lock 5 Secure Digital (SD) Expansion Slot: holds a Secure Digital (SD) card Bottom Panel 1 Charging/Communications Port: connect to universal cradle, USB, or serial cable 2 Unit Reset Switch: reset with stylus 3 Expansion Pack Connector: connect to an optional Expansion Pack Universal Cradle 1 Stabilizers: stabilizes (1) the iPAQ Pocket PC when cradled without an Expansion Pack 2 Release Button: releases (2) the stabilizers from the locked position Note: Use the stabilizers whenever possible if an expansion pack is not attached. You can receive the latest information on your Compaq iPAQ Pocket PC, as well as special offers on Compaq iPAQ Pocket PC accessories and software, by registering with Set up your Compaq iPAQ Pocket PC by first charging it with the AC adapter or the universal cradle.

Use the universal cradle to synchronize your Compaq iPAQ Pocket PC with your computer. CAUTION: For synchronization to work properly , install Microsoft ActiveSync 3. 5 before you first connect your Compaq iPAQ Pocket PC to your computer. Because your Compaq iPAQ Pocket PC uses some power to maintain RAM and the clock, you need to recharge the battery regularly. Keep the Compaq iPAQ Pocket PC connected to the universal cradle or the AC adapter while you are at your desk.

The best policy is to keep the Compaq iPAQ Pocket PC connected to your computer when working at your desk and carry your AC adapter with you when traveling. Charge your Compaq iPAQ Pocket PC up to four hours before you first use it. CAUTION: Some of the applications on your Compaq iPAQ Pocket PC are held in RAM memory, you will need to reinstall those applications if the battery completely discharges. Charge your Compaq iPAQ Pocket PC up to four hours before you first use it. The standard adapter works in any household outlet.

You can also purchase one that works in your car's cigarette lighter or a 12-volt power outlet. CAUTION: Use only Compaq recommended AC adapters. 1 Locate the AC adapter 2 Plug the AC adapter into an outlet 3 Insert the DC adapter plug into the bottom of your Compaq iPAQ Pocket PC 4 Insert the AC adapter plug into the DC adapter plug 5 Hold the DC adapter plug to the AC adapter with the rubber retainer Charge your Compaq iPAQ Pocket PC with the universal cradle. Recharge the battery of an optional expansion pack, if you have purchased one (for example, recharge the battery of the Dual-slot PC Card Expansion Pack) Charge your Compaq iPAQ Pocket PC up to four hours before you first use it. CAUTION: For synchronization to work properly , install Microsoft ActiveSync 3. 5 before you first connect your Compaq iPAQ Pocket PC to your computer. Follow the instructions in the installation wizard When prompted to download the file, select Run this program from its current location For more help, click on the Microsoft ActiveSync 3. 5 Help button during installation 2 Locate the universal cradle 3 Remove the DC adapter plug from the AC adapter 4 Insert the AC adapter into the back of the universal cradle 5 Attach either the USB or serial cable to your computer If you have a Microsoft Windows NT 4. 0 operating system on your computer, you must use a serial cable Charge your Compaq iPAQ Pocket PC with the AC adapter. Use the AC adapter to charge your optional expansion pack, if you have purchased one.

For more information about expansion packs, see Expanding Functionality with Expansion Packs in the eBook guide, the printable reference guide, or the Flash guide available on the CD-ROM. 6 Slide the bottom of your Compaq iPAQ Pocket PC into the universal cradle and push firmly The charge light blinks when your Compaq iPAQ Pocket PC is recharging the battery The charge light is solid (non-blinking) when the battery is fully charged. microsoft ActiveSync 3. 5 opens on your computer and recognizes your Compaq iPAQ Pocket PC You first connect your Compaq iPAQ Pocket PC to your computer. Compaq iPAQ Pocket PC at any time you are connected to your computer. 1 Insert your Compaq iPAQ Pocket PC into the universal cradle or cable 2 From your computer, open Microsoft ActiveSync 3. 5 before your Compaq iPAQ Pocket PC is connected to your computer for the first time. during installation , · Create partnerships, which allow you to synchronize information with multiple computers · Select the information to synchronize with your Compaq iPAQ Pocket PC, for example, Contacts, Calendar, Inbox, Tasks, Favorites, Files, Notes, and AvantGo 1 Insert the Compaq iPAQ Pocket PC Companion CD-ROM 2 Follow the instructions in the installation wizard For more help, click on the Microsoft ActiveSync 3. 5 Help button during installation 3 The information you select will automatically synchronize when your installation is complete When you turn on the screen of your Compaq iPAQ Pocket PC for the first time, you are guided through Welcome screens.



**[You're reading an excerpt. Click here to read official COMPAQ iPAQ
POCKET PC H3900 user guide](http://yourpdfguides.com/dref/1217843)**
<http://yourpdfguides.com/dref/1217843>

Synchronizing allows you to share information between your Compaq iPAQ Pocket PC and your computer.

Please note that you should have set up synchronization when you first connected your Compaq iPAQ Pocket PC to your computer. By default, Microsoft ActiveSync 3.5 continuously synchronizes with information on your computer automatically. Synchronizing allows you to share information between your Compaq iPAQ Pocket PC and your computer or your server. Please note that you should set up synchronization when I cannot see anything on the screen. 1 Make sure the screen is on 2 Press the power button 3 Make sure the Compaq iPAQ Pocket PC is connected to the AC adapter and the universal cradle 4 Plug the AC adapter into an outlet 5 From the Start menu, tap Settings 6 Tap Backlight 7 Select the backlight settings On the Battery Power tab, select when to use the backlight on battery power 8 Insert the DC plug into the DC jack on the back of the universal cradle I cannot keep my battery charged Always keep the Compaq iPAQ Pocket PC connected to a universal cradle or AC adapter when you are not using it In the backlight settings slide the bar to the lowest level to conserve the most power I do not see the charge light blinking when my Compaq iPAQ Pocket PC is connected to the universal cradle 1 Make sure the universal cradle is plugged into an outlet 2 Make sure the bottom of your Compaq iPAQ Pocket PC is pushed firmly into the universal cradle 3 Determine if the unit is fully charged.

The charge light does not blink when the unit is fully charged. On the External Power tab, select when to use the backlight on external power On the Brightness tab, select the level of brightness for the backlight Hint: Slide the bar to the lowest level to conserve the most power The backlight keeps turning off The backlight turns off to conserve power On the Battery Power tab, change the time the backlight stays on and choose to have the backlight turn on when you touch the screen or push a button My Compaq iPAQ Pocket PC is not responding or an application hangs Perform a soft reset of your Compaq iPAQ Pocket PC 1 Insert the stylus into the unit reset switch at the bottom of your Compaq iPAQ Pocket PC 2 Press the switch for 1 second I forgot my password Perform a hard reset of your Compaq iPAQ Pocket PC CAUTION: Because most of the applications and data you install on your Compaq iPAQ Pocket PC are held in memory, you will need to reinstall them if you perform a hard reset. 1 Press and hold the two outside application buttons 2 Insert the stylus into the unit reset switch at the bottom of your Compaq iPAQ Pocket PC 3 Press the switch for 5 seconds 4 To reactivate your iPAQ Pocket PC, insert the stylus into the unit reset switch and press the switch for 1 second or connect your iPAQ Pocket PC to the AC Adapter Navigate through the Compaq iPAQ Pocket PC interface in three ways: · Press application buttons Tap the screen with the pointed tip of your stylus to open applications and make selections. Press an application button on the front panel to quickly turn on the screen and open your Calendar or your Contacts or make a recording. When you turn on the screen of your Compaq iPAQ Pocket PC for the first time, you are guided through the alignment process.

realign your screen if · The Compaq iPAQ Pocket PC does not respond accurately to your taps · You perform a hard reset of your Compaq iPAQ Pocket PC 3 Tap the Screen icon 4 Tap the Align Screen button to begin the realignment process 5 Tap the cross-hair object at each location to realign the screen Be precise when you tap the cross-hair object 13 Every application on your Compaq iPAQ Pocket PC is only two taps away from any screen. Open any application on your Compaq iPAQ Pocket PC from the Start menu. Hint: Open any application by assigning it to an application button 1 Tap Start or the Microsoft logo at the upper left of the screen on the menu bar to open the Start menu Applications should close automatically as you open new applications. However, if your Compaq iPAQ Pocket PC is running slowly, manually close applications. From the application you would like to minimize, tap the x 6 Tap the hour, minutes, or seconds to select the time you want to adjust 7 Tap the up or down arrow to adjust the time 3 Tap Clock 4 Tap Home 5 Tap the time-zone down arrow to select your location and time zone Otherwise, move the hands of the clock with the stylus to adjust the time When you turn on the screen of your Compaq iPAQ Pocket PC for the first time, you are guided through setting the time. You perform a hard reset of your Compaq iPAQ Pocket PC Hint: From the Today screen, tap the clock icon to set the time. 6 Tap the hour, minutes, or seconds to select the time you want to adjust 7 Tap the up or down arrow to adjust the time 3 Tap Clock Navigate through the Interface 4 Tap Visiting 5 Tap the time-zone down arrow to select the location and time zone Otherwise, move the hands of the clock with the stylus to adjust the time When you turn on in the Notes application or from the Notes tab in · Draw and write on the screen Use the stylus as a pen to draw and write on the screen in the Notes application or from the Notes tab in · I cannot get the Letter Recognizer to type the correct letter 1 Make sure you are writing in the appropriate area (for example, ABC, abc, or 123) 2 Write letters without picking up the stylus from the screen Whenever possible, use one continuous movement to write letters I did not get the correct word conversion from writing to text. Are there any other possibilities? 5 Tap Recognize to convert writing to text If you select more than one word to convert to text and one is not recognized, all the other words will be converted to text. I want to address an e-mail message, but I cannot find the @ symbol 3 Tap Alternates to see a list of words 4 Tap an alternate 4 Tap the @ key where appropriate in an e-mail address You may want to write the word again if the alternates are not correct 5 Tap OK Enter Information 21 The application does not recognize my writing 1 Write your letters close together 2 Leave plenty of space between words 3 Zoom in to improve character recognition 4 Use the lined page 5 Write legibly and try to stay between the lines I want to change the words I typed on the Keyboard or wrote in the Letter Recognizer 1 Highlight the word(s) you typed or wrote 2 Type or write over the word(s) Otherwise, tap and hold the highlighted text to see a pop-up menu with cut, copy, paste, and clear options. Your Compaq iPAQ Pocket PC H3900 series lets you communicate in many ways, such as working with contacts.

To take full advantage of the many Compaq iPAQ Pocket PC functions, ensure that you have installed Microsoft ActiveSync 3.5 on your computer before connecting your Compaq iPAQ Pocket PC. 1 From the Start menu, tap Contacts Scroll down to see more fields 4 Tap the down arrow next to any item and enter additional details about the item For example, tap the Name down arrow to enter the contact's title, first, middle, and last name, and suffix Enter and view information about friends, family members, or business associates in the Contacts application.



[You're reading an excerpt. Click here to read official COMPAQ IPAQ POCKET PC H3900 user guide](http://yourpdfguides.com/dref/1217843)
<http://yourpdfguides.com/dref/1217843>

Work with your contact information and do any of the following: · create a contact · View and edit a contact Hint: Press the Contact application button to navigate quickly to Contacts. @@@@Declaration of Conformity for products marked with the FCC logo--United States only This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Box 692000, Mail Stop 530113 Houston, Texas 77269-2000 Or, call 1-800-652-6672 (1-800-OK COMPAQ) For questions regarding this FCC declaration, contact: Compaq Computer Corporation P. o. Box 692000, Mail Stop 510101 Houston, Texas 77269-2000 Or, call (281) 514-3333 To identify this product, refer to the Part, Series, or Model number found on the product. Products bearing the CE marking comply with both the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/ 23/EEC) issued by the Commission of the European Community and if this product has telecommunication functionality, the R&TTE Directive (1999/5/EC). Compliance with these directives implies conformity to the following European Norms (in parentheses are the equivalent international standards and regulations): · The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Compaq Computer Corporation may void the Reference authority to operate the equipment. To reduce the risk of fire or burns, do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water. Contact your local HP service representative listed in the Worldwide Phone List or visit the Web site: <http://www>. A technical support specialist will assist you in locating the HP Service Center in your region or HP Authorized Service Center in regions that do not have an HP Service Center to assist you with the resolution.

The power cord must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product. in addition , the diameter of the wire must be a minimum of 0. 75 mm2 /18AWG, and the length of the cord must be between 5 feet (1. If you have questions about the type of power cord to use, contact your local HP service representative.

Contact your local HP service representative listed in the Worldwide Phone List or visit the Web site: [http:// www](http://www). A technical support specialist will assist you in locating the HP Service Center in your region or HP Authorized Service Center in regions that do not have an HP Service Center to assist you with the resolution. A power cord should be routed so that it is not likely to be walked on or pinched by items placed upon it or against it. Particular attention should be paid to the plug, electrical outlet, and the point where the cord exits from the product. WARNING: To reduce the risk of personal injury, electric shock, fire, or damage to the equipment: Do not disable the power cord grounding plug. the grounding plug is an important safety feature. Plug the equipment into a grounded (earthed) electrical outlet that is easily accessible at all times. Disconnect power from the equipment by unplugging the power cord from the electrical outlet. Do not place anything on power cords or cables. Arrange them so that no one may accidentally step on or trip over them.

do not pull on a cord or cable. When unplugging from the electrical outlet, grasp the cord by the plug. WARNING: To reduce the risk of electrical shock, fire, or damage to the equipment: Do not use converter kits sold for appliances to power the computer. If you were not provided with a power cord for your Compaq iPAQ Pocket PC H3900 series or for an AC power accessory intended for use with your device, you should purchase a power cord that is approved for use in your country. 24-dot pitch Multi-level brightness adjustment, light sensor for automatic adjustment of brightness level Speaker, 3. 5 mm stereo headphone jack IrDA , data transfer up to 15. 2Kb per second and Universal Remote Control for control of home entertainment units Some models Communication port, Expansion Pack connector 3 mode alarm notification: flashing green LED, tone, pop-up message. To keep your Compaq iPAQ Pocket PC H3900 series in good condition and working properly, follow these guidelines: · Keep your Compaq iPAQ Pocket PC away from excessive moisture and temperature extremes. Do not expose your Compaq iPAQ Pocket PC to liquids or precipitation. Do not place anything on top of your Compaq iPAQ Pocket PC to prevent damage to the screen.

Store your Compaq iPAQ Pocket PC in a protective case when not in use. Clean your Compaq iPAQ Pocket PC by wiping the screen and the exterior with a soft, damp cloth moistened only with water. Avoid exposing your Compaq iPAQ Pocket PC to direct sunlight or strong ultraviolet light for extended periods of time. The Compaq iPAQ Pocket PC should not be disposed of along with the general household waste. In order to forward them to recycling or dispose of them properly, please use the public collection system or return them to Compaq, your authorized Compaq partners, or their agents. in North America , dispose of the Compaq iPAQ Pocket PC by taking advantage of the Compaq battery recycling program. You will be provided with a postage-paid battery pack mailer pre-addressed to a reclamation facility where the metals are recycled. Visit the following Web site for battery disposal information. Html CAUTION: To reduce the risk of electrical shock or damage to the internal components, do not spray liquid directly on the screen or allow excess liquid to drip inside your Compaq iPAQ Pocket PC. Using soap or other cleaning products on the screen may discolor the finish and damage the screen.

Because of the type of battery used in your Compaq iPAQ Pocket PC, follow local regulations regarding the safe disposal of your Compaq iPAQ Pocket PC. @@@@Declaration of Conformity for products marked with the FCC logo--United States only This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Box 692000, Mail Stop 530113 Houston, Texas 77269-2000 Or, call 1-800-652-6672 (1-800-OK COMPAQ) For questions regarding this FCC declaration, contact: Compaq Computer Corporation P. o. Box 692000, Mail Stop 510101 Houston, Texas 77269-2000 Or, call (281) 514-3333 To identify this product, refer to the Part, Series, or Model number found on the product. The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Compaq Computer Corporation may void the Reference authority to operate the equipment.



[You're reading an excerpt. Click here to read official COMPAQ IPAQ POCKET PC H3900 user guide](http://yourpdfguides.com/dref/1217843)
<http://yourpdfguides.com/dref/1217843>

Jeg ser ikke noe på skjermen 1 Kontrollér at skjermen er slått på Trykk på strømbryteren 2 Kontrollér at Compaq iPAQ Pocket PC er koblet til vekselstrømadapteren og holderen Koble vekselstrømadapteren til et strømuttak Sett likestrømpluggen inn i likestrømkontakten på baksiden av holderen Jeg klarer ikke å holde batteriet ladet 3 Tapp på Backlight 4 Velg innstillinger for bakgrunnsbelysning På kategorien Battery Power velger du når bakgrunnsbelysning skal brukes mens du kjører maskinen på batterier Koble alltid Compaq iPAQ Pocket PC til holderen eller vekselstrømadapteren når du ikke bruker maskinen I innstillingene for bakgrunnsbelysning skyver du bryteren til det laveste nivået for å spare mest mulig strøm Ladelampen blinker ikke når Compaq iPAQ Pocket PC kobles til holderen 1 Kontrollér at holderen er koblet til et strømuttak 2 Kontrollér at undersiden av Compaq iPAQ Pocket PC er skjovet helt på plass i holderen På kategorien External Power velger du når bakgrunnsbelysning skal brukes mens du kjører maskinen på ekstern strøm På kategorien Brightness velger du lysstyrken for bakgrunnsbelysningen Tips: Skyv bryteren til det laveste nivået for å spare mest mulig strøm 3 Kontrollér om batteriet er helt oppladet. Skriv et tall eller symbol i området merket 123 for å skrive et tall eller symbol Hvis du ikke legger inn et emne, vises No subject i feltet 4 Tapp på et felt for å legge inn flere opplysninger Hvis du for eksempel vil legge inn et heldagsmøte, tapper du først på Type og deretter på All Day Som standard legges det inn en 15 minutters påminnelse 5 Tapp på 15 og tapp på nedpilen for å endre påminnelsestiden 6 Tapp minutt(er) for å endre tidsenhet 7 Tapp på OK for å legge inn påminnelsen og avtalen Bruk programmet Tasks (oppgaver) for å: · Hvis du ikke legger inn et emne, vises No subject i feltet 4 Tapp på et felt for å legge inn flere opplysninger Framsida 1 Pekdon: Trykk for å mata ut, trykk for å låsa 2 Strømindikator: Blinkende gult = ladda; fast gult = ladda; grønt = alarm 3 Strømknapp 4 Høgtalare: Alarm, inspelningar 5 Färgskärm 6 Programmeringsbara applikationsknappar 1-4 (vänster till höger): Navigera till applikationer, standard: Knapp 1 är Calendar, knapp 2 är Contacts, knapp 3 är Inbox, knapp 4 är iPAQ Task 7 Navigeringsknapp: Rulla i en lista 8 Inspelnings-/applikationsknapp 5 9 Ljussensor: Justerar bakgrundsampa - Jack för stereohörlurar q Aktiv Bluetooth-indikator: Blinkar när en annan Bluetooth-enhet påträffas (Bara Bluetoothmodeller) w Mikrofon Undersidan 1 Port för laddning/kommunikation: Ansluta till universalhållare, USB eller seriell kabel 2 Omkopplare för återställning av enhet: Återställa med pekdon 3 Kontakt för Expansion Pack: Ansluta till en extra Expansion Pack Anmälan programvara till Compaq iPAQ Pocket PC, genom att anmäla dig till Compaq online på <http://www.1> Leta upp nätadaptern 2 Sätt i nätadaptern i ett eluttag 3 Sätt i kontakten till likströmsadaptern i undersidan av Compaq iPAQ Pocket PC 4 Sätt i kontakten till nätadaptern i kontakten till likströmsadaptern 5 Håll kontakten till likströmsadaptern till nätadaptern med gummihållaren Följ instruktionerna i installationsguiden När du ombeds ladda ner filen väljer du Run this program from its current location (Kör detta program från aktuell plats) Mer hjälp får du om du klickar på hjälpknappen för Microsoft ActiveSync 3.

5 under installationen 2 Leta upp universalhållaren 3 Ta ut kontakten till likströmsadaptern från nätadaptern 4 Sätt i nätadaptern på universalhållarens baksida 5 Koppla antingen USB-kabeln eller den seriella kabeln till datorn Sätt i likströmskontakten i likströmsjacket på universalhållarens baksida Laddningen behålls inte i batteriet Låt alltid Compaq iPAQ Pocket PC vara ansluten till en universalhållare eller nätadapter när du inte använder den I inställningarna för bakgrundslampa för du reglaget till den lägsta nivån för att spara maximalt med strøm Laddningslampan blinkar inte när Compaq iPAQ Pocket PC är ansluten till universalhållaren 1 Kontrollera att universalhållaren är isatt i ett uttag På fliken External Power väljer du när bakgrundslampan ska användas på extern strøm På fliken Brightness väljer du ljusstyrkenivån för bakgrundslampan Tips! 5 Peka på Recognize om du vill konvertera det du skriver till text Om du väljer fler än ett ord att konvertera till text och något av orden inte känns igen, konverteras alla andra ord till text. 2 Peka på Today 3 Lägg till en bild Peka på kryssrutan om du vill använda din bild som bakgrund Använda fönstret Today 4 Peka på OK om du vill spara ändringarna och återgå till fönstret Today Peka annars på OK och peka på Start-menyn och välj Today om du vill återgå till fönstret Today Peka för att välja ett alternativ Peka på Move Up eller Move Down om du vill ändra ordning på alternativen. Lägg märke till att den detaljerade handboken eBook finns på CD-ROM-skivan och att du även kan kopiera den till Compaq iPAQ Pocket PC. 1 Anslut Compaq iPAQ Pocket PC till datorn 2 Öppna Internet Explorer på datorn 3 Gå till <<http://das>. Kontakta en lokal HP-servicerepresentant som du hittar i häftet med telefonnummer till HP i hela världen eller gå till webbplatsen <http://www.1> Kontakta den lokala HP-servicerepresentanten som du hittar i häftet med telefonnummer till HP i hela världen eller gå till webbplatsen <http://www.1> Funktion Processor Minne Bildskärm Bakgrundslampa Ljud Infrarött Bluetooth Kommunikation Indikatorer Batteri PXA250 64 MB SDRAM eller större Transfektiv TFT-färgskärm, 240 X 320 pixlar, 64 K färgsupport, 0,24 mm punktgrad Ljusstyrkejustering (flera nivåer), ljussensor för automatisk justering av ljusstyrkenivå Høgtalare, 3,5 mm jack för stereohörlurar Systemspecifikationer 211 IrDA, dataöverföring upp till 15,2 Kb per sekund och universell fjärrkontroll för styrning av hemunderhållningsenheter Vissa modeller Kommunikationsport, kontakt till Expansion Pack 3-läges alarmmeddelande: blinkande grön LED, ton, snabbmeddelande.



[You're reading an excerpt. Click here to read official COMPAQ IPAQ POCKET PC H3900 user guide](http://yourpdfguides.com/dref/1217843)
<http://yourpdfguides.com/dref/1217843>

*US Temperatur Drift Ej i drift Relativ fuktighet Drift Ej i drift Maximal höjd Drift Ej i drift 32° till 104°F -22° till 140°F 10 till 90% 10 till 90% 0-15 000.ft
0-15 000.ft Metriskt 0° till 40°C -30° till 60°C 10 till 90% 10 till 90% 0-4. .*



[You're reading an excerpt. Click here to read official COMPAQ IPAQ
POCKET PC H3900 user guide
http://yourpdfguides.com/dref/1217843](http://yourpdfguides.com/dref/1217843)