



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for COMPAQ JORNADA 600. You'll find the answers to all your questions on the COMPAQ JORNADA 600 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual COMPAQ JORNADA 600
User guide COMPAQ JORNADA 600
Operating instructions COMPAQ JORNADA 600
Instructions for use COMPAQ JORNADA 600
Instruction manual COMPAQ JORNADA 600

HP JORNADA 600 Series Handheld PC

get Started

1 Install the main battery
Slide the battery pack into the battery slot, and push firmly until it snaps into place. Your HP Jornada should start automatically, however, if the main battery is low you may need to connect the AC adapter first, as described in step 2.

2 Connect the AC adapter
Connect the cable from the AC adapter to the DC jack on the right side of the HP Jornada. Then, connect the power cable to the AC adapter, and plug the other end of the power cable into an AC power outlet.

3 Activate the backup battery
The backup battery has been pre-installed, but must be activated before use. To activate the Backup Battery, pull the tabs from beneath the backup battery cover plate. Do not unscrew the cover plate.

4 Adjust contrast and brightness
Adjust the brightness and contrast of the display for comfortable viewing. Press **[F1]** or **[F2]** to adjust the contrast. Press **[F3]** or **[F4]** to adjust the brightness.

5 Follow the Welcome Wizard
Follow the instructions on your screen to complete the Windows CE Welcome Wizard. If you have HP Jornada model 680 or 690, the HP country value or program will prompt you to select your country to ensure that the built-in modules are configured properly.

6 Register your HP Jornada
To be sure that you receive warranty coverage, technical support, and information on upgrades from Hewlett-Packard, register your HP Jornada now at www.hp.com/jornada.

Installing PC Cards and CompactFlash Cards
The HP Jornada has a number of options needed with Windows CE to accommodate both a PC Card and a CompactFlash Card at a single, portable site. You can install either a PC Card or CompactFlash Card, or install both at the same time. For a list of recommended cards, visit the HP Web site at www.hp.com/jornada.

PC Card
The PC Card fits in the slot on the left side of the HP Jornada.

To install:

- Slide the PC Card carefully into the PC Card slot. The separation module will extend from the bottom of the unit.
- If you place your HP Jornada on a flat surface, extend the stabilizer to keep the device level.

To eject:

- Press the PC Card release tab to eject the PC Card. The PC Card will be pushed out of the unit slightly.

Do not obstruct the slot opening or hold down the separation module when ejection the PC Card.

- Hold the PC Card and pull it out completely.
- Close the PC Card slot. The separation module will retract back into the unit. Don't push it further down if necessary.

When using a Hot Swap PC Card, the release PC Card. Be aware that PC Card you may need to feel some slight resistance when pulling out the card. To prevent the card back in and eject again.

CompactFlash Card
The CompactFlash Card slot is located at the bottom of the unit, on top of the PC Card slot. Pressing the latch bar will flip open the slot door.

To install:

- Press the latch bar of the opening of the slot with your finger until sliding down the opposite end of the separation module with your thumb, as shown in the diagram.
- Slide the CompactFlash Card into the slot. The finger pull (raised edge) on the CompactFlash Card should fit snugly and the main latch door.
- Close the separation module by pushing down until it locks into place.

To remove:

- To remove a CompactFlash Card, press the latch bar while holding down the opposite end of the separation module. The separation module is spring open.

To open the separation module when a CompactFlash Card is inside, you may find it convenient to use the stylus instead of your finger to push down into the groove between the CompactFlash Card and the latch bar.

To use a CompactFlash Card that requires a cable connection, you must use a PC Card adapter to install the CompactFlash Card in the PC Card slot.



[You're reading an excerpt. Click here to read official COMPAQ JORNADA 600 user guide](http://yourpdfguides.com/dref/3194989)
<http://yourpdfguides.com/dref/3194989>

Manual abstract:

Do not unscrew the cover plate. 2 5 Follow the Welcome Wizard Follow the instructions on your screen to complete the Windows CE Welcome Wizard. If you have HP Jornada model 680 or 690, the HP country selector program will prompt you to select your country to ensure that the built-in modem is configured properly. If your HP Jornada freezes during operation, you may need to reset the device. To reset, use the stylus to press the reset button on the left side of the keyboard. 4 Adjust contrast and brightness Adjust the brightness and contrast of the display for comfortable viewing. Press adjust the contrast. Press adjust the brightness. or or to 6 Register your HP Jornada To ensure that you receive warranty coverage, technical support, and information on upgrades from Hewlett-Packard, register your HP Jornada now at www.hp.com/jornada

Installing PC Cards and CompactFlash Cards The HP Jornada has a unique expansion module with two slots to accommodate both a PC Card and a CompactFlash Card in a small, portable size. You can install either a PC Card or CompactFlash Card, or install both at the same time. For a list of recommended cards, visit the HP Web site at www.hp.com/jornada

PC Card The PC Card fits in the slot on the left side of the HP Jornada. To install 1. Slide the PC Card carefully into the PC Card slot. The expansion module will extend from the bottom of the unit. 2. To eject 1. Press the PC Card release tab to eject the PC Card. The PC card will be pushed out of the unit slightly. 2. Hold the PC Card and pull it out completely. 3. Gently push it further down if necessary. Pressing the latch-bar will flip open the slot door. To install 1. Slide the CompactFlash Card into the slot.

3. To remove 1. The expansion module springs open. 2. The Windows CE Services Setup Wizard should start automatically. 3. For free product information as well as tips and hints on how to get more from your HP Jornada, visit the Hewlett-Packard Web site at www.hp.com/jornada For additional information, tips & tricks, and updates on Microsoft Windows CE and the Microsoft programs, check the Microsoft Windows CE Web site at 2 Place your HP Jornada in the docking cradle 1. Connect the 9-pin end of the sync cable to a serial port on your desktop PC and insert the flat end of the sync cable, arrow side up, into the serial port on the docking cradle. 2. Turn off your HP Jornada and disconnect any cables (power cable, telephone cable, etc.). 3. Connect the AC adapter to the cradle and plug it in.

Do not connect your HP Jornada to more than one source of AC power. You must disconnect the AC adapter from your HP Jornada before placing it in the docking cradle to avoid damaging your HP Jornada. www.microsoft.com/windowsce

Align your HP Jornada in the docking cradle, and push down firmly until it snaps into place. 3 Establish a partnership After you place your HP Jornada in the docking cradle, your desktop PC should display the New Partnerships Wizard. Follow the instructions on the screen to choose options for synchronizing contacts, calendar, tasks, e-mail messages, and files between your HP Jornada and desktop PC. All rights reserved.



[You're reading an excerpt. Click here to read official COMPAQ](http://yourpdfguides.com/dref/3194989)

[JORNADA 600 user guide](http://yourpdfguides.com/dref/3194989)

<http://yourpdfguides.com/dref/3194989>