




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for COMPAQ V5040U. You'll find the answers to all your questions on the COMPAQ V5040U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual COMPAQ V5040U
User guide COMPAQ V5040U
Operating instructions COMPAQ V5040U
Instructions for use COMPAQ V5040U
Instruction manual COMPAQ V5040U

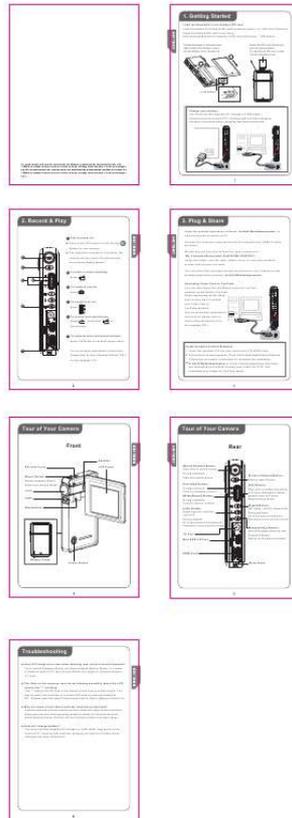

[You're reading an excerpt. Click here to read official COMPAQ V5040U user guide](http://yourpdfguides.com/dref/3645280)
<http://yourpdfguides.com/dref/3645280>

Manual abstract:

@@Close the battery/SD card cover firmly. Recommended memory capacity of SD card (Optional) - 1GB above. Follow the arrow A direction and slide to eject the battery cover. Lift the battery from Location B. Insert the SD card (Optional) into the right position. @@For more details about the camera operation and troubleshooting, please read the User Manual located on the CDROM disc included with your camera or visit <http://www.hp.com/support> and download it for the camera support page. For more details about the camera operation and troubleshooting, please read the User Manual located on the CDROM disc included with your camera or visit <http://www.hp.com/support> and download it for the camera support page.

2. Record & Play 1 Flip to power on Flip out the LCD panel or hold [Power Button for one second. @@] 3. @@@@Movies and pictures can be found on your computer at "My Computer\Removable Disk\DCIM\100HPDVC.

" Under this folder, you can view, delete, move, or copy the recorded movies and pictures you want. You can share the recorded movies and pictures to your friends via the bundled application software, ArcSoft MediaImpression. @@@@Install bundled ArcSoft Software 1. Insert the supplied CD into your computer's CD-ROM drive. 2.

The autorun screen appears. Then click Install Application Software. Follow the on-screen instructions to complete the installation. @@@@[Wide(Down)] Button During playback: Push to reduce volume. [Left] Button Digital Light On/ Light On/ Light OFF. During playback: Go to the previous movie/picture. Pressing for movie play fast rewind. @@[OK] Button Menu ON or Validate the setting. @@@@Pressing for movie play fast rewind. [Record/Play] Button Switch between Record and Playback Mode.

@@Try to switch between Macro and Normal Mode.(Macro Mode: For object in distance about 0.67 feet. Normal Mode: For object in distance beyond 6.7 feet) The files on the memory card do not display smoothly when the LCD shows the "!" marking. @@@@@Why do some of my indoor pictures look blurry and dark? @@Keep camera (and photographed subject) steady for several seconds when taking pictures. Shutter will sound when picture has been taken. How do I charge battery? You must use the supplied AC charger or USB cable. .



[You're reading an excerpt. Click here to read official COMPAQ](http://yourpdfguides.com/dref/3645280)

[V5040U user guide](http://yourpdfguides.com/dref/3645280)

<http://yourpdfguides.com/dref/3645280>