



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for D-LINK DWM-152. You'll find the answers to all your questions on the D-LINK DWM-152 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual D-LINK DWM-152
User guide D-LINK DWM-152
Operating instructions D-LINK DWM-152
Instructions for use D-LINK DWM-152
Instruction manual D-LINK DWM-152



[You're reading an excerpt. Click here to read official D-LINK DWM-152 user guide](http://yourpdfguides.com/dref/5434244)
<http://yourpdfguides.com/dref/5434244>

Manual abstract:

All rights reserved. @@@@2 Trademarks.....

.....
.....
.....
.....
.....
.....
.....

... 2 Introduction.....

.....
.....
.....
.....
.....
.....

..... 5 Features...

.....
.....
.....
.....
.....
.....
.....

... 5 Product Overview..

.....
.....
.....
.....
.....
.....

6 Package Contents.....

.....
.....
.....
.....
.....
.....

.. 6 System Requirements.....

.....
.....
.....
.....
.....
.....

... 6 Hardware Overview..

.....
.....
.....
.....
.....

..... 7 LED Indicator Information..

.....
.....
.....

.... 8 Installation.

.....
.....
.....
.....

..... 9 . SIM Card Installation..

.....
.....
.....
.....

. 9 MicroSD Card Installation....

.....
.....
.....
.....

..... 10 Software Installation.....

.....
.....
.....
.....

.. 11 Basic Functions. ..

.....
.....
.....
.....
.....

..... 12 .
Software Overview.....

.....
.....
.....
.....

..... 12 New Profile.

.....
.....
.....
.....
.....

.....
.....

13 Use Default Profile (Preset).....

.....
.....
.....

..... 13 User-Defined Profile...

.....
.....
.....

.....
.....
.....

... 14 Establishing a Connection.....

.....
.....
.....
.....

. 14 Ending a Connection.....

.....
.....
.....

.....
.....
.....

.. 14 Profile Management...

.....
.....
.....
.....
.....

..... 15 Connection Management .

.....
.....
.....

.....
.....
.....

16 . Current Connection.....

.....
.....
.....
.....

..... 16 Connection History.

.....
.....
.....

.....
.....
.....

..... 17 Usage Management .

.....
.....
.....
.....

.....

.....

.... 18 .

Usage.....

.....

.....

.....

.....

.....

.....

.....

..... *18 Usage Statistics.*

.....

.....

.....

.....

.....

.....

.....

... @@20 New/Reply/Forward Text Message.....

.....

.....

.. 21 Deleting a Message...

.....

.....

.....

.....

.....

..... 21 Saving a Sender to Contacts.....

.....

.....

.....

..... @@@@23 Adding Contacts.

.....

.....

.....

.....

.....

.....

.....

.. 23 Editing Contacts.....

.....

.....

.....

.....

.....

.....

..... 23 Deleting Contacts.....

.....

.....

.....

.....

.....

.....
.. 23 Importing vCards to Contacts....

.....

.....

.....

.... 24 Exporting Contacts to vCards.

.....

.....

.....

.....

.. 24 SIM Management.....

.....

.....

.....

.....

.....

.....

... 25 SIM Information..

.....

.....

.....

.....

.....

.....

.. 25 Enabling or Disabling a PIN Code...

.....

.....

..... 26 Changing a PIN Code. .

.....

.....

.....

.....

.....

.....

.. 27 . Unlocking a PIN Code.....

.....

.....

.....

.....

..... 27 D-Link DWM-152 User Manual 3 Profile Settings...

.....

.....

.....

.....

.....

.....

.....

..... 28 Band Settings....

.....

.....

.....

.....

.....

.....

.....
... 28 Network Selection.

.....
.....
.....
.....
.....
.....
.....

... 29 . Call Settings.....

.....
.....
.....
.....
.....
.....
.....

... 30 Missed Calls.....

.....
.....
.....
.....
.....
.....
.....

.. @@@@31 . @@@@The adapter uses a standard USB interface for fast and simple installation. Features •••••••••• Compact and sleek mobile adapter easily fits in your pocket Provides HSDPA/UMTS/GPRS/GSM/EDGE network support GSM circuit-switched (CSD) data transfer for multimedia Plug-and-Play: No CD-ROM required Connection software launches quickly and automatically Convenient USB connector requires no additional cables MicroSD card reader slot for optional removable storage Send group SMS messages to up to 25 contacts simultaneously Store up to 1000 outgoing SMS (depending on SIM card capacity) Control incoming calls with forwarding, busy tone, or continuous ringing D-Link DWM-152 User Manual 5 Section 1 - Product Overview Product Overview Package Contents D-Link DWM-152 - 3.5G HSDPA USB Adapter System Requirements • Windows 2000/XP/VISTA or Mac OS X 10.4.0+ • Pentium III or greater • 128MB RAM or greater • 50MB available disk space • Internet Explorer v6.0+ / Firefox v1.5+ • A computer with an available USB 2.

0 port D-Link DWM-152 User Manual 6 Section 1 - Product Overview Hardware Overview Status Indicator A multi-colored LED indicates connection status information. MicroSD Card Slot Accepts a MicroSD card (up to 8GB). SIM Card Slot Accepts a standard SIM Card. USB Port Connects the DWM-152 to a computer. D-Link DWM-152 User Manual 7 Section 1 - Product Overview LED Indicator Information Color Yellow Red Green Blue Purple Service System SIM Card Service WCDMA Blinking – Searching Registered Solid Device Initializing / No Signal Error (No SIM / Invalid SIM) Connected HSDPA GPRS/ EDGE – Registered Connected Connected D-Link DWM-152 User Manual 8 Section 2 - Installation Installation SIM Card Installation Follow the steps below to install a SIM card: 1. Remove the cover from the end of the adapter. □ Figure 1 2. Pull out the SIM card tray. (Figure 1) 3. Insert the SIM card with the gold contacts facing down.

(Figure 2) 4. Push the SIM card tray back into the adapter. (Figure 3) □ Figure 2 5. Connect the adapter to a USB port on your computer. (Figure 4) Note: To remove an installed SIM card, pull out the SIM card tray and gently lift the card.

Figure 3 Figure 4 D-Link DWM-152 User Manual 9 Section 2 - Installation MicroSD Card Installation The DWM-152 has a slot which can read MicroSD cards with capacities of up to 8GB. Follow the steps below to install a MicroSD card: 1. Unplug the DWM-152 USB adapter from the computer. 2. Gently lift the upper left corner of the MicroSD card slot cover.

(Figure A) 3. Insert the MicroSD card with the gold contacts facing towards the top of the adapter. (Figure B) 4. Close the MicroSD card slot cover. (Figure C) 5. Plug the DWM-152 into a USB port on your computer. 6. The computer may take a moment to recognize the device. 7. A new removable disk will appear in your computer's list of storage drives.

Note: To remove a MicroSD card, unplug the device from the computer. Open the card slot cover and gently push the card in to eject it. Figure A Figure B Figure C D-Link DWM-152 User Manual 10 Section 2 - Installation Software Installation Before you install the software, you must first install a SIM card into the USB adapter and connect the adapter to a USB port on your computer. 1. Open My Computer. 2. Double click on the removable drive labeled ConnMgr. 3. Double click the file labeled setup.exe to start the installation.

4. Follow the step-by-step instructions on the Installation Wizard. 5. The D-Link Mobile Connection Manager will launch automatically. D-Link DWM-152 User Manual 11 Section 3 - Basic Functions Basic Functions Software Overview Once the program has been installed, you may launch the DWM-152 USB Modem application by double clicking on its desktop icon, or via Start > Programs > D-Link > D-Link USB Modem.

Once launched, the D-Link Mobile Connection Manager icon will be displayed in the windows notification area. The D-Link Mobile Connection Manager provides all of the functions needed to manage your connection to a mobile service network. D-Link DWM-152 User Manual 12 Section 3 - Basic Functions New Profile Before starting, if the mobile service provider associated with your SIM card is listed in the preset profile list, you can directly connect to the desired network using its pre-defined profile. @@@@2. Click Finish to complete.

3. Click the Advanced button to display APN details. 4. Highlight an APN and click OK. @@@@After you are connected, the button will turn green with a

checkmark. @@Editing 1. Click the Profile button. 2. Select a profile and click the Edit button. @@@@5.

Click OK to close the APN window. 6. Click OK to close the Edit Profile window. Note: Profiles may only be edited when you are disconnected. Deleting a Profile 1. Click the Profile button. 2. Select a user-defined profile and click the Delete button. 3. Click Yes to confirm the deletion.

Deleting All Profiles 1. Click the Profile button. 2. Click the Delete All button. Setting the Default Profile 1.

Click the Profile button. 2. Highlight the profile to use when the DWM-152 is started. 3. Click Set as Default profile.

Reset to Factory Default 1. Click the Profile button. @@@@Select other profiles from the drop down menu. @@Connection Band - Displays the band of the current connection. @@@@Speedit. 3. Click the Edit button. 4. Modify the contacts details. @@2.

Select the contact to delete. If you would like to delete all contacts, click Select All. 3. Click the Delete button. @@2. Click the Import button. 3. Select the source of the vCard(s). 4. Click Open to import the card(s).

5. After the import, a message will display the import information. @@2. Click the Export button. 3.

Select the destination to save the vCard(s). 4. Click OK to export the card(s). 5. After the export, a message will be displayed.

@@1. Select Tools > Enable/Disable PIN code > Enabled.



[You're reading an excerpt. Click here to read official D-LINK DWM-152 user guide](http://yourpdfguides.com/dref/5434244)

<http://yourpdfguides.com/dref/5434244>

2. Enter the correct PIN code to enable. 3. Click OK to enable PIN code protection. @@1. Click Tools > Enable/Disable PIN code > Disabled. 2. Enter the correct PIN code.

@@Warning: The PIN code must be entered correctly within three tries. @@1. Click Tools > Change PIN Code > PIN1 or PIN2. @@3. Click OK to change. 4. Once complete, a confirmation window will be displayed. Click OK to close the window. Warning: The PIN code must be entered correctly within three tries. Failure to do so will cause the SIM card to become locked.

@@2. Enter the PUK code. Enter the new PIN Code, and confirm the new code. 3. Click OK to confirm the new PIN code.

@@@2G Only - Restricts the DWM-152 to using 2G service on GPRS 850/900/1800/1900 bands. Note: If you accidentally configure the wrong settings, go to Tools > Reset Settings to Default Value. To adjust the band settings follow the instructions below: 1. Click the Profile button. 2.

Select Band tab. 3. Select Automatic, 3G only, or 2G only. 4. Click Apply and OK. D-Link DWM-152 User Manual 28 Section 10 - Profile Settings Network Selection The current location of the DWM-152 may be covered by more than one network. The DWM-152 supports two network selection options: Automatic - By default the DWM-152 will automatically select the network based on the user's account and network availability. Manual - Users can also use DWM-152 to get the network list, and select an available network to use Data for Global Evolution) - Advanced GPRS that delivers multimedia and other data needing greater bandwidth at up to 237 kbps. GPRS (General Packet Radio Service) - Delivers data in packets at up to 86 kbps. GSM (Global System for Mobile Communications) - The most popular cellular network, mostly operates in 850/900 or 1800-1900 MHz; the primary 2G system.

D-Link DWM-152 User Manual 33 Appendix A - Glossary IMEI (International Mobile Equipment Identity) - A number unique to each GSM/UMTS device that can be used block network access by a stolen mobile device. IP (Internet Protocol) - Routes packets over a network. @@@Kbps (Kilobits per second) - A data flow measure; 1024 bits/second. @Mbps (Megabits per second) - A data flow measure; 1,048,576 bits/second. PPP (Point-to-Point Protocol) - An internet connection method. PIN (Personal Identity Number) - A four to eight digit security code on the SIM which permits access to a user's mobile carrier network. PUK (Personal Unblocking Key) - A code used to unlock a blocked PIN number. Usually, if the wrong PUK is entered ten times in a row, the SIM will become permanently blocked and unrecoverable, requiring a new SIM card. Rx - Shorthand for Reception. SIM (Subscriber Identity Module) - A small card that contains key mobile device identification, subscription and contact information.

SMS (Short Messaging Service) - Allows text messages of up to 160 characters. Tx - Shorthand for Transmission. D-Link DWM-152 User Manual 34 Appendix A - Glossary WCDMA (Wideband Code Division Multiple Access) - Wideband Code Division Multiple-Access (WCDMA) is one of the main technologies in the implementation of third-generation (3G) cellular systems. This product supports WCDMA up to 384kbps. D-Link DWM-152 User Manual 35 Appendix B - Technical Specifications Technical Specifications Minimum System Requirements • Windows 2000/XP/Vista or Mac OS X 10.

4.0 or higher • Pentium 500MHz or greater • 128MB RAM or greater • 50MB available disk space • Internet Explorer v6.0 or higher / Firefox v1.5 or higher GSM Band (GSM/GPRS/EDGE) • 850, 900, 1800, 1900 MHz • Power Class 4 (900 / 1850 MHz) • Power Class 1 (1800 / 1900 MHz) UMTS/HSDPA Band * • 850/1900/2100 MHz • Power Class 3 (+24 dBm) Data Rates ** • DL: 3.6 Mbps (HSDPA) • UL: 384 Kbps (UMTS) Antenna • Internal monopole antenna Interface Support • USB 2.

0 SMS • Circuit-switched (GSM) • Packet-switched (GPRS) SMS Manager • Create, edit, forward, and send messages • Inbox, outbox, draft, and sent folders Phonebook • Import, export, add, modify, and delete records USIM Slot • Standard 6-Pin SIM card interface Plug and Play • Automatic software/driver installation Connection Status • Network name, signal strength, send/receive rate LED Indicator • Five-color LED provides status information MicroSD Card Reader • Supports MicroSD Cards up to 8GB Certification • CE • FCC Dimensions (L x W x H) • 89.4 x 26.68 x 12 mm Operating Temperature • -10° to 55°C (14° to 131°F) * Supported frequency band is dependant upon regional hardware version. ** Data rates are theoretical. Data transfer rate depends on network capacity and signal strength. D-Link DWM-152 User Manual 36 .



[You're reading an excerpt. Click here to read official D-LINK](http://yourpdfguides.com/dref/5434244)

[DWM-152 user guide](http://yourpdfguides.com/dref/5434244)

<http://yourpdfguides.com/dref/5434244>