



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO 20A5. You'll find the answers to all your questions on the DAEWOO 20A5 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO 20A5
User guide DAEWOO 20A5
Operating instructions DAEWOO 20A5
Instructions for use DAEWOO 20A5
Instruction manual DAEWOO 20A5

DAEWOO

SuperVision



Instruction Manual

P/N:48586375E201

MODEL NO.

14A5/14A5T/20A5/20A5T/21A5/21A5T
14Q1/14Q1T/20Q1/20Q1T/21Q1/21Q1T
14Q2/14Q2T/20Q2/20Q2T/21Q2/21Q2T
14Q3/14Q3T/20Q3/20Q3T/21Q4/21Q4T
14T1/14T1T/20T1/20T1T/21T1/21T1T
14T2/14T2T/20T2/20T2T/21T2/21T2T
21T5/21T5T



2001



[You're reading an excerpt. Click here to read official DAEWOO 20A5 user guide](#)

<http://yourpdfguides.com/dref/3405586>

Manual abstract:

14A5/14A5T/20A5/20A5T/21A5/21A5T 14Q1/14Q1T/20Q1/20Q1T/21Q1/21Q1T 14Q2/14Q2T/20Q2/20Q2T/21Q2/21Q2T
14Q3/14Q3T/20Q3/20Q3T/21Q4/21Q4T 14T1/14T1T/20T1/20T1T/21T1/21T1T 14T2/14T2T/20T2/20T2T/21T2/21T2T 21T5/21T5T P/N:48586375E201
Z001 IDENTITY OF FEATURES ON LOCAL AND REMOTE CONTROL LOCAL CONTROL Front Back REMOTE CONTROL TV mode 1POWER
2NUMBER 0-9 3MENU 4AV 5PR (CURSOR)UP 6VOLUME UP (CURSOR RIGHT) 7OK(NORMAL) 8PR(CURSOR) DOWN 9VOLUME DOWN(CURSOR
LEFT) AMUTE BRECALL CSLEEP DSKIP EMOVE FDELETE GTELETEXT HNot Used ITIME 1 1 2 3 4 5 6 2 7 8 9 0 MENU 4 3 NORMAL 5 PR 9 OK 6 8
SLEEP PR 7 10 RECALL 12 DEL MOVE SKIP 11 13 TIME MODE 15 14 17 18 16 TELETEXT mode 1POWER 2NUMBER 0-9 3MENU 4NOT USED 5PAGE
UP 6SUBPAGE 7INDEX 8PAGE DOWN 9HOLD AMUTE BREVEAL CSIZE DCANCEL EG (VOLUME UP) FR (VOLUME DOWN) GTV HC (BRIGHT UP)
IY (BRIGHT DOWN) 1 CONTENTS * Identity of features on Local and Remote Control * Important safeguards * Installation After moving the set Inserting
Batteries into the Remote Control Unit Aerial connection Mains connection Switching the set on and off Tuning the TV Channels Edit Manual Channel Setting
* Daily use Selecting a Programme Number Volume and Picture control Timer Sleep Recall Child Lock Time * Teletext * Connecting the External Equipment
1 2 3 3 3 3 4 4 5 5 6 7 7 8 8 8 8 9 11 IMPORTANT SAFEGUARDS Water / Moisture : Never install the set in the following places:in the bathroom, in a
wet basement. Do not place any containers with liquid (e.g. flower vases) on the set. Heat : Never place the set near heat sources (e.g. radiator). Ventilation :
Do not cover the ventilation openings in the cabinet. Never place the set in a confined space such as a bookcase or built-in-cabinet, unless proper ventilation
is provided. Object Entry : Do not insert foreign objects, such as needles and coins, into the ventilation openings.
Lightning Striking: You should disconnect your set from the mains and the aerial system during thunderstorms. Cleaning : Unplug the set from the mains
before cleaning. 2 INSTALLATION AFTER MOVING THE SET If the used set is moved or placed in a different direction, the MAIN POWER button must be
switched off for at least 15 minutes in order to take out a colour strain on the screen. INSERTING BATTERIES INTO THE REMOTE CONTROL UNIT Press
down the battery compartment grip and slide the cover, Insert the batteries supplied(two 1.5v, type AA).
Make sure that the polarity matches with the (+) and (-) marks inside of the battery compartment. Used batteries should be disposed of properly. AERIAL
CONNECTION For better picture and sound quality, an effective aerial installation is the most important. If you are located in a relatively strong area, you
will be able to use the indoor aerial. When using an outdoor aerial, it is usually connected to the set by means of 75 ohm coaxial cable.
The working life of this set is 7 years since its production date and this set may be dangerous for the life, health and the property of the consumer, and for the
environment on expiry of its working life. 3 MAINS CONNECTION Plug the mains cable into the power socket with 220V/50Hz AC. SWITCHING THE SET
ON AND OFF Switching On Switch the set on with the MAIN POWER button, (). The set will turn on. @@@@The STAND-BY INDICATOR will
illuminate. @@The MAIN MENU is consist of 5 sub-menus: PICTURE, TIMER, LANGUAGE, PRESET, EDIT menu. LANGUAGE SELECTION Select a
LANGUAGE menu at the MAIN MENU by placing the cursor on the LANGUAGE with UP/DOWN button and pressing the OK button. You can choose
language you require with UP/DOWN button. Press the MENU button to return to the MAIN MENU. AUTOMATIC TUNING SYSTEM Select the PRESET
menu at the MAIN MENU.
Place the cursor to " " with the RIGHT button. Press and hold down OK button until the tuning screen appears above the PRESET menu. The cursor will
move from left to right on the VHF-L line, then VHF-H, then UHF. Please wait until EDIT menu appears. MAIN MENU PICTURE TIMER LANGUAGE
PRESET EDIT LANGUAGE ENGLISH FRANCAIS DEUTSCH ITALIANO ESPANOL PRESET P01 AUTO SEARCH PRESET P UHF >> P01 P EDIT The
EDIT menu shows you the programme position assignment. You can change this programme position assignment according to your personal preferences.
SKIPPING THE CHANNELS You can select SKIP "YES" or "NO" with the SKIP button. A programme marked with SKIP "YES" is skipped when changing
channel using the UP/DOWN button. A skipped programme number selected by NUMBER button 0..
9 will be displayed in red. DELETE PROGRAMME POSITION DATA Position the cursor to programme number to delete with the UP/DOWN, LEFT/RIGHT
buttons. Press the DEL button. While this is being carried out the "DELETE" Prog. No.
" appear and the "deleted" programme is moved to the programme no. 69 and changed SKIP "YES". The programme located in the programme no. 69 will
move to the programme no. 68.
CHANGING THE ORDER OF THE CHANNELS Position the cursor to programme number to move and press the MOVE button. The "MOVE Prog. No." will
appear. @@Two programmes will be exchanged. @@by pressing the OK button. @@@@The screen will change according to the selected programme
number. @@@@After searching a station, the tuning screen will disappear. To stop searching, press the MENU button. @@@@It obly operates whilst
the UP or DOWN button is being pressed.
@@If you want to delete a station name, select "----". @@To do so, move the cursor to the right and press OK button. Using the UP/DOWN button, select the
desired letter, number or blank. Press the RIGHT button to select the next position. Press the OK button to complete this procedure. @@@@The
NUMBER button 0..9 are used for direct programme selection. @@@@MUTE Pressing the MUTE button () once turns the sound off. @@is changed.
@@PICTURE CONTROL Press the MENU button to call up the MAIN MENU. Press the OK button to call up the PICTURE menu. You can select each
function with the UP/DOWN buttons. @@* The TINT is active only in NTSC system. The last set value is automatically stored in FAVOURITE mode.
@@SETTING THE CLOCK Press the button on the CLOCK line. Set the hours and minutes with the NUMBER button 0..9 Press the OK button to complete.
The clock will start.
Note that if you turn the TV off with MAIN POWER button, the clock setting is lost and must be reset if necessary. SETTING THE WAKE UP TIME Set WAKE
UP TIME in a same way to the above for CLOCK. Set ACTIVATE "YES" or "NO" with the LEFT/RIGHT button. When ACTIVATE is "YES", the function is
enabled. Set WAKE UP PROG using the NUMBER button 0..9 or UP/DOWN button. When WAKE UP TIME is operate, the set will switch on to this
programme number. TIMER CLOCK WACKE UP TIME ACTIVATE WACK UP PROG 12:20 --:-YES P 45 TIMER CLOCK WACKE UP TIME ACTIVATE
WACK UP PROG 12:20 7:00 YES P 45 SLEEP By pressing the SLEEP button repeatedly, you can select one of the following setting: 0->30min.



[You're reading an excerpt. Click here to read official DAEWOO 20A5 user guide](http://yourpdfguides.com/dref/3405586)
<http://yourpdfguides.com/dref/3405586>

->60min.

->90min. ->120min. ->0 The set will turn off after time you select. Automatic Switch-Off in No broadcast Signal If a broadcasting signal is not present for about 5-30 minutes, the set will be automatically turned off. In AV mode, however, this function does not operate. RECALL The RECALL button is used to display the current status: programme number, station name and clock. This display appears for 5 seconds unless any button is pressed. CHILD LOCK You can prevent the use of the TV set without the remote control. The set is child-locked after switching off the set by pressing the Y, C, TELETEXT (), POWER button () in sequence on the remote control within 5 seconds. The child-lock function is indicated by flashing the STAND-BY INDICATOR.

@@@The index page viewed last will appear. Press the TELETEXT button to return to the TV mode. @@@@SELECTING PAGES The NUMBER button 0..9 are used to enter a page number.

The selected page number appears at the top of the screen and the page appears after a short time. The UP/DOWN buttons increase or decrease the current page number by 1. INDEX PAGE You can switch directly to the programme preview (with TOP text) or the overview page of the station you are currently viewing by pressing the INDEX () button. PAGE HOLD Several sub pages can be combined under a page number and are scrolled at an interval determined by the television station. The presence of sub pages is indicated by, for example, 3/6 beneath the time, which means that you are looking at the 3rd page of a total.



[You're reading an excerpt. Click here to read official DAEWOO 20A5 user guide](#)

<http://yourpdfguides.com/dref/3405586>