



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DF-4150P. You'll find the answers to all your questions on the DAEWOO DF-4150P in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO DF-4150P
User guide DAEWOO DF-4150P
Operating instructions DAEWOO DF-4150P
Instructions for use DAEWOO DF-4150P
Instruction manual DAEWOO DF-4150P



[You're reading an excerpt. Click here to read official DAEWOO DF-4150P user guide](http://yourpdfguides.com/dref/3406286)
<http://yourpdfguides.com/dref/3406286>

Manual abstract:

· Do not open the DVD Recorder+VCR. Get a qualified technician to carry out any repairs. @ @This can lead to condensation inside the DVD Recorder+VCR, which can damage it. Wait for approx. 2 hrs for it to reach room temperature. · Make sure the DVD Recorder+VCR is placed at least 10 cm apart from other home appliances or obstacles to ensure sufficient ventilation. · The apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases should be placed on top of the recorder. · Before a storm and/or lightning, unplug the DVD Recorder+VCR from the mains supply and aerial. · Put the recorder on a steady flat surface. · Only clean the recorder with a soft, lint-free cloth.

Do not use harsh or alcohol-based cleaning agents. For your own Safety · There are no components in this product you can service or repair yourself. · Do not open the case of the DVD Recorder+VCR. Only allow a qualified engineer to repair or service your DVD Recorder+VCR. · This DVD Recorder+VCR is designed to work continuously.

Switching it off (stand-by mode) does not disconnect it from the mains. To disconnect it from the mains you have to unplug it. 1 DF-L71D1P-UA/TA 2008.4.11 2:4 PM 2 mac001 1200DPI 90LPI Important Safeguards CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated `dangerous voltage `within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance. CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. WARNING TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN CAUTION OR MOISTURE. TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. IMPORTANT FOR LASER PRODUCTS LASER This Digital Video Disc Player employs a Laser System. To ensure proper use of this product please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure. Use of control adjustments or the performance of procedures other than those specified may result in hazardous radiation exposure.

To prevent direct exposure to the laser beam, do not try to open the enclosure. Visible laser radiation when open and interlocks defeated. DO NOT STARE INTO THE BEAM. Avoid direct exposure to beam. CLASS 1 LASER PRODUCT DANGER Visible laser radiation when open and interlock failed or defeated. CAUTION Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel. CAUTION Any changes or modification in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. · Make sure the unit should be placed at least 8cm apart from the other home appliances or the obstacles to get sufficient ventilation. · This unit shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on this unit.

· Switching it off does not disconnect it from the mains (stand-by). To disconnect it from the mains, you have to unplug it. 2 DF-L71D1P-UA/TA 2008.4.11 2:4 PM 3 mac001 1200DPI 90LPI Important Safeguards INTRODUCTION This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user. 1 READ INSTRUCTIONS All the safety and operating instructions should be read before the unit is operated. ventilation to ensure reliable operation of the unit and to protect it from overheating.

These openings must not be blocked or covered. These openings must not be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat radiator. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 2 RETAIN INSTRUCTIONS The safety and operating instructions should be retained for future reference. 10 POWER SOURCES This unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions. 3 HEED WARNINGS All warnings on the unit and in the operating instructions should be adhered to. 4 FOLLOW INSTRUCTIONS All operating and use instructions should be followed.

11 GROUNDING OR POLARIZATION This unit is equipped with a polarized alternating -current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. To prevent electric shock, do not use this polarized plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted without blade exposure. If you need an extension cord, use a polarized cord. 5

CLEANING Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6 ATTACHMENTS Do not use attachments unless recommended by the unit's manufacturer as they may cause hazards. 7 WATER AND MOISTURE Do not use this unit near water- for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool. 12 POWER-CORD PROTECTION Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit. 8 ACCESSORIES Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury to a child or adult as well as serious damage to the unit.

Use this unit only with a cart, stand, tripod, bracket, or table recommended by the manufacturer.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DF-4150P user guide](#)

<http://yourpdfguides.com/dref/3406286>

13 **LIGHTNING** For added protection for this unit during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges. 8A A unit and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

PORTABLE CART WARNING (symbol provided by RETAC) 9 **VENTILATION** Slots and openings in the case are provided for 14 **DISC TRAY** Keep your fingers well clear of the disc as it is 3 **DF-L71D1P-UA/TA 2008.4.11 2:4 PM 4 mac001 1200DPI 90LPI Important Safeguards closing.** It may cause serious personal injury. 15 **OVERLOADING** Do not overload wall outlets of extension cords as this can result in a risk of fire or electric shock. uses have the same safety characteristics as the original parts. Use of replacements specified by the unit manufacturer can prevent fire, electric shock, or other hazards. 16 **OBJECT AND LIQUID ENTRY** Never push objects of any kind into this unit through openings as they may touch dangerous voltage points or 'short-out' parts that could result in a fire or electric shock. Never spill liquid of any kind on the unit. 22 **SAFETY CHECK** Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks recommended by the manufacturer to determine that the unit is in safe operating condition.

17 **BURDEN** Do not place a heavy object on or step on the product. The object may fall, causing serious personal injury and serious damage to the product. 23 **WALL OR CEILING MOUNTING** The product should be mounted to a wall or ceiling only as recommended by the manufacturer. 24 **HEAT** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 18 **DISC** Do not use a cracked, deformed or repaired disc. These discs are easily broken and may cause serious personal injury and product malfunction. 19 **SERVICING** Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20 **DAMAGE REQUIRING SERVICE** Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions. When the power-supply cord or plug is damaged.

If liquid has been spilled, or objects have fallen into the unit. If the unit has been exposed to rain or water. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.

If the unit has been dropped or the cabinet has been damaged. When the unit exhibits a distinct change in performance-this indicates a need for service. When replacement parts are required, have the service technician verify that the replacements be A. B. C.

D. E. F. 21 **REPLACEMENT PARTS 4 DF-L71D1P-UA/TA 2008.4.11 2:4 PM 5 mac001 1200DPI 90LPI Table of Contents INTRODUCTION** Introduction
 Safety Instructions _____ 1 Important Safeguards _____ 2 Table of Contents
 _____ 5 Overview _____ 6 Identification of Controls _____ 10
 Recording Basic Recording _____ 43 Recording from TV One Touch Record (OTR) Checking the Recording Time To Pause
 the Recording One Touch Copy - DVD to VHS Copy Edit (DVD → VCR) One Touch Copy - VHS to DVD Copy Edit (VCR → DVD) Timer Recording using
 Manual Set Record Screen Timer Recording using VideoPlus system Canceling a Timer Recording Stopping a Timer Recording in Progress Timer Recording
 Troubleshooting 43 44 44 44 45 45 46 46 Connections Connecting Antenna/Cable _____ 15 Connecting a TV
 _____ 16 Connecting an Amplifier/Receiver _____ 17 Connecting Optional Equipment _____ 18
 Connecting a Digital Camcorder _____ 18 Timer Recording _____ 47 47 48 49 49 49 Recording from an External
 Input _____ 50 Setup Initial Installation _____ 19 Initial Setup _____ 21 Setup
 Menu Overview Menu Navigation **INSTALLATION** Settings **RECORDING OPTIONS** Settings **LANGUAGE** Settings **PREFERENCES / Video** Settings
PREFERENCES / Audio Settings **PREFERENCES / Parental Controls** **PREFERENCES / Auto** Settings **PREFERENCES / VCR System** Inford a number,
 enabling you to easily locate the track you want. About DVD Recording Notes on Recording · The recording times shown are not exact because the DVD
 Recorder+VCR uses variable bit-rate video compression. This means that the exact recording time will depend on the material being recorded. · When
 recording a TV broadcast, if the reception is poor or the picture contains interference, the recording times may be shorter. · Discs recorded at high speeds
 (equal to or greater than 2X) may not be recognized.

· If you record still pictures or audio only, the recording time may be longer. · The displayed times for recording and time remaining may not always add up to the exact length of the disc. · The available recording time may decrease if you heavily edit a disc. · When using a DVD+R disc, you can keep recording until the disc is full, or until you finalize the disc. Before you start a recording session, check the amount of recording time left on the disc. Recording TV Audio Channels The DVD Recorder+VCR can record one or two channel audio. For TV broadcasts, this usually means mono or stereo, but some programs are broadcast in bilingual audio channel. You can record either BIL I, BIL II or both. Restrictions on Video Recording · You cannot record copy-protected video using this DVD Recorder+VCR. Copy-protected video includes DVD- 7 **DF-L71D1P-UA/TA 2008.**

4.11 2:4 PM 8 mac001 1200DPI 90LPI Overview Video discs and some satellite broadcasts. If copy-protected material is encountered during a recording, recording will pause or stop automatically and an error message will be displayed on-screen. · Video that is 'copy-once only' can only be recorded using DVD+RW discs with CPRM. Copyright Notice · Audio and video recordings you make using the DVD Recorder+VCR are for your personal use only. You may not sell, lend, or rent them to other people. · This product incorporates copyright protection technology that is protected by method claims of certain U.S.patents and other intellectual property rights owned by Macrovision Corporation and other rights owners.



[You're reading an excerpt. Click here to read official DAEWOO DF-4150P user guide](http://yourpdfguides.com/dref/3406286)
<http://yourpdfguides.com/dref/3406286>

Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision corporation.

Reverse engineering or disassembly is prohibited. Precautions Handling the Unit When shipping the unit The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packaged at the factory. When setting up the unit The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc. To keep the surface clean Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface. Cleaning the Unit To clean the cabinet Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution.

Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit. To obtain a clear picture The DVD Recorder+VCR is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.) For details, please contact your nearest dealer. Remote Control Operation Range Point the remote control at the remote sensor and press the buttons. Distance: Within 23 ft (7 m) of the remote sensor. Angle: Within 30° in each direction of the remote sensor. Remote Control Battery Installation Detach the battery cover on the rear of the remote control, and insert two AAA batteries.

Make sure the polarities (+ and -) are aligned correctly. Caution Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.). 8 DF-L71D1P-UA/TA 2008.

4.11 2:4 PM 9 mac001 1200DPI 90LPI Overview INTRODUCTION Notes on Discs Handling Discs Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface. Do not stick paper or tape on the disc. Storing Discs After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car. Cleaning Discs Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center outward. Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records. Yes No About Symbols About the Symbol ` may appear on the TV screen during operation. This icon means the function explained in this User's Guide is not available on that specific disc. 9 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `10 mac001 1200DPI 90LPI Identification of Controls Front Panel ! @ # \$ % ^ *) 2 & (1 3 4 5 6 7 ! STANDBY/ON Turns the DVD Recorder+VCR on and off.

Lock/Unlock the front panel and Remote control by pressing and holding it over 5 seconds. @ Cassette Compartment (VCR deck) Insert a video cassette here. # EJECT (VCR) Ejects the tape in the VCR deck. \$ Disc Tray (DVD deck) Insert a disc here. % OPEN/CLOSE (DVD) Opens or closes the disc tray. ^ REW DVD: Skips to previous chapter. VCR: Rewinds the tape during Stop mode. Press during Play mode for fast reverse picture search. & DISC MENU * PLAY/PAUSE Starts playback of a disc or tape. Pauses playback or recording temporarily.

(STOP Stops playback.) FF DVD: Skips to next chapter. VCR: Advances the tape during Stop mode. Press during Play mode for fast forward picture search. 1 REC SPEED 2 SELECT DVD/VCR Toggles control between the DVD deck and the VCR deck.

3 Front Panel Display Shows the current status of the DVD Recorder+VCR. 4 PR+/- Scans up or down through memorized channels. Also moves up and down in DVD navigation menus. 5 REC Starts recording. Press repeatedly to set the recording time.

Lights red when the DVD Recorder+VCR is recording. 6 AVF (VIDEO, L-AUDIO-R) Connects to the audio/video output of an external source (VCR, Camcorder, etc.). DF-8100P/8150P only 7 DV IN Connects to the DV output of a digital camcorder, video deck, or DVD+R/RW recorder. 10 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `11 mac001 1200DPI 90LPI Identification of Controls INTRODUCTION Front Panel Display !@ # \$ % ^ & * () 1 2 3 4 ! Indicates a VHS tape is inserted in the VCR deck. @ Circle : Indicates the VCR is recording. Clock : Indicates a VCR Timer Recording is set. # Indicates that a stereo broadcast is being received.

\$ Indicates when the DVD Recorder+VCR is playing or recording a tape with Hi-Fi sound. % Indicates the DVD Recorder+VCR is in TV mode (as set by the [TV/DVD] button). ^ Indicates the current Repeat mode. & Indicates when the DVD Recorder+VCR is locked. * Indicates when the DVD Recorder+VCR is outputting the video signal in Progressive Scan mode. (Disc Type indicators Indicates the type of disc loaded.) Circle : Indicates a DVD+R(+RW) is recording. Clock : Indicates a DVD Timer recording is set. 1 Indicates a disc is inserted in the DVD deck. 2 Indicates the current Recording mode.

3 Front Panel Display Message Indicates clock, total playing time, elapsed time, remaining time, title number, chapter/track number, channel, VCR counter, etc. 4 DTS: Indicates a DVD is playing with a DTS soundtrack. Dolby : Indicates a DVD is playing with a Dolby Digital soundtrack. 11 DF-L71D1P-UA/TA 2008.4.

11 2:4 PM `12 mac001 1200DPI 90LPI Identification of Controls Remote Control Turns the DVD Recorder+VCR on and off. - Opens and closes the disc tray in DVD mode. - Ejects the tape in the VCR deck in VCR mode. Selects DVD mode. Selects VCR mode.

Switches between the DVD Recorder+VCR tuner and your TV tuner. Switches the view on your TV to the DVD Recorder+VCR tuner. - Selects numbered options in menus. - Selects TV channels. - Manually adjusts tracking. Resets the tape counter in VCR mode. Press and hold for 3 seconds to switch between Progressive Scan and Interlace Scan mode. Accesses DVD disc menus. Displays or exits the Setup menu. Edits chapters or splits titles of DVD+R(+RW) discs.

Displays information about the currently loaded disc, VHS tape, or TV channel. - oe ... : Selects menu options. - PR +/- : Selects channels. Confirms menu selections. Skips to the next or previous chapter/track. - DVD: Searches backward/forward. - VCR: Rewinds/advances during Stop mode.

Press during Play mode for fast reverse/forward picture search. Increases or decreases the slow motion speed when playing a DVD or VHS tape.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3406286)

[DF-4150P user guide](http://yourpdfguides.com/dref/3406286)

<http://yourpdfguides.com/dref/3406286>

- Starts playback. - Pauses playback or recording temporarily. Press again to exit Pause mode.

Stops playback or recording. 12 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `13 mac001 1200DPI 90LPI Identification of Controls INTRODUCTION Starts recording. Press repeatedly to set the recording time.

For more details, Refer to One Touch Record (OTR) on page 44. Copies from DVD to VCR (or from VCR to DVD). Selects Recording mode: - DVD : HQ (1hr), SP (2hrs), EP (4hrs) or SLP (6hrs). - VCR : SP or LP. Switches the DVD Recorder+VCR input to Tuner, AV1, AV2, AVF, or DV. (DV : DF-8100P/8150P only.) Selects a subtitle language, if available. Selects a DVD camera angle, if available. Enlarges the DVD video image. Repeats the current chapter, track, title or the entire disc.

Repeats playback between two points (A and B). Searches for a specific title or a chapter. Selects an audio language (DVD), audio channel (CD) or audio type (TV). Displays a disc's Title menu, if available. Displays the Timer Recording menu. Progressive Scan Mode · If your TV supports Progressive Scan, you can view high quality video by setting the DVD Recorder+VCR to Progressive Scan mode. If your TV does not support Progressive Scan, do NOT change to Progressive Scan mode. If you do so accidentally, press and hold the [P.SCAN] button for 3 seconds to restore normal viewing. · When video output mode is changed from RGB to Interlace or Progressive (Scart 1) must not be correct color for Component video.

· As component outputs have their own Jacks on the back side, change the TV input into Component input, after connecting the component cables from the DVD Recorder+VCR to TV. · Changing from Interlace or Progressive to RGB, should be the opposite of above. 13 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `14 mac001 1200DPI 90LPI Identification of Controls Rear panel ! @# \$ ^ (* % & ! AC Power Cord Plug into a power outlet.

@ AUDIO OUT (L, R) Connect to a TV or other equipment with audio inputs. # COMPONENT/PROGRESSIVE VIDEO OUT (Y Pb Pr) Connect to a TV with Component Video (Y Pb Pr) inputs. \$ Scart socket 2 Connection of an additional device (satellite receiver, set-top box, video recorder, camcorder, etc.) % Scart socket 1 Connection of a TV set. Composite-output and RGB-output ^ RF IN (FROM ANT.

) Connect to your antenna or cable TV outlet. & RF OUT (TO TV) Connect to a TV with an RF coaxial input. * COAXIAL (Digital Audio Out) Connect to an amplifier with a coaxial digital audio input. (S-VIDEO OUT Connect to a TV with an S-Video Input. Caution · Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the DVD Recorder+VCR. 14 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `15 mac001 1200DPI 90LPI Connections INTRODUCTION · There are a variety of ways to connect the DVD Recorder+VCR to your TV and other equipment. Use only one of the connections described below.

Whichever TV connection you use will work with all input sources. · Please refer to the manuals for your TV, VCR, stereo system, or other devices as necessary to make the best connections. · For better sound reproduction, connect the DVD Recorder+VCR's AUDIO OUT jacks to the audio in jacks of your amplifier, receiver, stereo, or audio/video equipment. See `Connecting an Amplifier/Receiver` on page 17. Caution · Make sure the DVD Recorder+VCR is connected directly to the TV, and the TV is set to the correct video input. · Do not connect the DVD Recorder+VCR's AUDIO OUT jack to the phono in jack (record deck) of your audio system. · Do not connect the DVD Recorder+VCR via your VCR. The DVD image could be distorted by the copy protection system. CONNECTIONS Connecting Antenna/Cable 1 2 Disconnect the antenna/cable from the rear of your TV. Connect this cable to the jack marked RF IN (FROM ANT.

) on the rear panel of the DVD Recorder+VCR. Antenna Antenna Cable TV Wall Jack Flat Wire (300ohm) 300/75ohm Adapter (Not supplied) OR OR Rear of DVD Recorder+VCR If your cable wire is connected to your TV without a converter or descrambler box, unscrew the wire from your TV and attach it to the RF IN (FROM ANT.) jack on the rear panel of the DVD Recorder+VCR. Use the supplied RF cable to connect between the DVD Recorder+VCR's OUT (TO TV) jack and the antenna input jack on your TV. With this connection, you can receive all midband, superband, and hyperband channels (all cable channels).

15 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `16 mac001 1200DPI 90LPI Connections Connecting a TV Choose one of the following TV connections, depending on the capabilities of your equipment. RF Connection Connect the RF OUT (TO TV) jack on the DVD Recorder+VCR to the antenna in jack on your TV using the supplied 75-ohm RF cable (R). This set doesn't apply the modulator output.

However, still apply the RF through Output. Rear of TV S-VIDEO INPUT COMPONENT/PROGRESSIVE VIDEO INPUT ANTENNA INPUT Y Pr Pb Scart Connection 1 Plug a scart cable into the scart socket EURO AV1 at the back of the DVD Recorder+VCR and the corresponding scart socket at the back of the TV set. (V) S C V R 2 Plug a scart cable into the blue scart socket EURO AV2/DECODER at the back of the DVD Recorder+VCR and the corresponding scart socket at the back of the Decoder. Rear of DVD Recorder+VCR S-Video Connection 1 Connect the S-VIDEO OUT jack on the DVD 2 Recorder+VCR to the S-Video in jack on your TV using an S-Video cable (S). Connect the Left and Right AUDIO OUT jacks from the DVD Recorder+VCR to the left/right audio in

jacks on your TV using the audio cables. Component Video Connection 1 Connect the COMPONENT/PROGRESSIVE VIDEO OUT jacks on the DVD Recorder+VCR to the corresponding in jacks on your TV using a Y Pb Pr cable (C) if the component (Y, Pb, Pr) is available on your TV. 2 Connect the Left and Right AUDIO OUT jacks from the DVD Recorder+VCR to the left/right audio in jacks on your TV using the audio cables. Progressive Scan Connection ·

If your television is a high-definition or `digital ready` television, you may take advantage of the DVD Recorder+VCR's Progressive Scan output for the highest video resolution possible. · If your TV does not accept the Progressive Scan format, the picture will appear scrambled. 1 2 Connect the COMPONENT/PROGRESSIVE VIDEO OUT jacks on the DVD Recorder+VCR to the corresponding in jacks on your TV using an optional Y Pb Pr cable (C).

Connect the Left and Right AUDIO OUT jacks from the DVD Recorder+VCR to the left/right audio in jacks on your TV using the audio cables. · Be sure to set the DVD Recorder+VCR to Progressive Scan mode by pressing and holding [P.SCAN] for 3 seconds (or changing the `Video Output` in the Setup Menu; see page 27). · Progressive Scan does not work with the RF, Audio/Video or S-Video connections.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3406286)

[DF-4150P user guide](http://yourpdfguides.com/dref/3406286)

<http://yourpdfguides.com/dref/3406286>

16 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `17 mac001 1200DPI 90LPI Connections Connecting an Amplifier/Receiver Connecting to an amplifier equipped with two channel analog stereo or Dolby Pro Logic II/Pro Logic Connect the Left and Right AUDIO OUT jacks on the DVD Recorder+VCR to the left and right audio in jacks on your amplifier, receiver, or stereo system, using the supplied audio cables (A). Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/Video receiver equipped with a multi-channel decoder (Dolby DigitalTM, MPEG 2, or DTS) CONNECTIONS 1 2 Connect the DVD Recorder+VCR's DIGITAL AUDIO OUT jack (Coaxial) to the corresponding in jack on your amplifier. Use an optional digital coaxial audio cable. (X) You will need to activate the DVD Recorder+VCR's digital output; see 'Audio' Settings on page 28.

Digital Multi-Channel Sound? A digital multi-channel connection provides the best sound quality. For this you need a multi-channel audio/video receiver that supports one or more of the audio formats supported by your DVD Recorder+VCR (MPEG 2, Dolby Digital, and DTS). Check the receiver manual and the logos on the front of the receiver. Due to the DTS Licensing agreement, the digital output will be in DTS digital out when DTS audio stream is selected. If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all. 5.1 channel digital surround sound via the digital connection can only be obtained if your receiver is equipped with a digital multi-channel decoder. To see the audio format of the current DVD on the on-screen display, press [AUDIO]. The DVD Recorder+VCR does not perform internal (2-channel) decoding of DTS sound tracks. To enjoy DTS multichannel surround, you must connect the DVD Recorder+VCR to a DTS compatible receiver via one of the DVD Recorder+VCR's digital audio outputs.

Rear of DVD Recorder+VCR A X L R COAXIAL DIGITAL INPUT AUDIO INPUT Amplifier (Receiver) 17 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `18 mac001 1200DPI 90LPI Connections Connecting Optional Equipment To receive audio/video signals from other equipment, connect the AVF jacks on the DVD Recorder+VCR to the audio/video out jacks on your external component, using optional audio/video cables. Jack Panel of Accessory Component (VCR, Camcorder, etc.) Front of DVD Recorder+VCR Connecting a Digital Camcorder DF-8100P/8150P only DV Digital Camcorder DV IN/OUT Using the front panel DV IN jack, it is possible to connect a DV digital camcorder, video deck or DVD+R/RW recorder and digitally transfer DV tapes or DVD+R/RW discs to DVD+R/RW. Use a DV cable (not supplied) to connect the DV In/Out jack of your DV camcorder/video deck to the front panel DV IN jack of the DVD Recorder+VCR. This jack is for connection to DV equipment only. It is not compatible with digital satellite tuners or D-VHS video decks. DV IN Front of DVD Recorder+VCR 18 DF-L71D1P-UA/TA 2008.4.

11 2:4 PM `19 mac001 1200DPI 90LPI Initial Installation Initial Installation After successfully connecting your DVD Recorder+VCR to your TV and other devices, this chapter will show you how to complete the initial installation. You must follow the initial installation process to set the time, date, channels, and language preferences for the DVD Recorder+VCR. Installation Welcome. Press [Enter] to begin auto channel search. CONNECTIONS 1 A Welcome message is displayed on the screen. Make sure the RF cable from your antenna or cable TV jack is connected. Press [ENTER] to begin initial installation. Select the desired language for the on-screen menu using [...].

[/]. Press [ENTER] to confirm. Ensure aerial is connected. Instructions Setup-Exit 2 Installation Please select your language to begin auto install procedure: English Spanish French Czech Danish German Dutch Instructions Enter-Confirm Setup-Exit Move .. . SETUP 3 Select the desired country using [...].

Press [ENTER] to confirm. Installation Please select your country of use: Australia Belgium Denmark Finland France Instructions Enter-Confirm Setup-Exit Move ... 4 Select the desired disc menu language using [...]. Press [ENTER] to confirm. Installation Please select disc menu language: Default English Spanish French Czech Danish German Instructions Enter-Confirm Setup-Exit Move ..

.. 5 Select the desired disc playback audio language using [...]. Press [ENTER] to confirm. Installation Please select disc audio language: Default English Spanish French Czech Danish German Instructions Enter-Confirm Setup-Exit Move ...

19 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `20 mac001 1200DPI 90LPI Initial Installation 6 Select the desired disc playback subtitle language using [...]. Press [ENTER] to confirm. Installation Please select disc subtitle language: Default English Spanish French Czech Danish German Instructions Enter-Confirm Setup-Exit Move ...

7 The DVD Recorder+VCR detects channels automatically and stores them in memory. Installation Searching for available TV stations: 2 channels found Please wait... Instructions Setup-Exit 8 9 10 After finishing Auto Channel Search, set the clock. Use [oe/] to move left/right and use [.../] to change the settings. After setting the clock, press [ENTER] to confirm.

If you cancel the process during Initial Installation, you should repeat this procedure. Set Clock Please set the clock: ... Time : 13 : 00 Date : Jan / 02 / 2010 (SAT) Instructions Enter-Confirm Setup-Exit Move ... Re-Installation This set is equipped with the muti-tuner for receiving many countries' broadcasting. In order to receive broadcasting of different countries, follow as below. 1 Press [SETUP] and select the 'Restore Defaults' using [oe/].

Then, RESET the set. (see page 32) 2 Power On, then you see the 'Initial Installation'. 3 Select the contry which you want to (see step 3 on page 19), then repeat the steps 4~10 on page 19~20. 20 DF-L71D1P-UA/TA 2008.4.

11 2:4 PM `21 mac001 1200DPI 90LPI Initial Setup Setup Menu Overview The DVD Recorder+VCR Setup menu includes six categories, including: Installation, Recording Options, Languages, Preferences, System Info, and Restore Defaults. Press [SETUP] and [oe/] on the remote control to view the first and second levels of the Setup menu. Menu Navigation 1 2 3 4 5 6 Press [SETUP]. The Setup menu appears. Use [oe/] to select the desired category. While the desired category is selected, press [.../] to move to the second level. Press [ENTER] to move to the third level. Use [.../] to select the desired setting, then press [ENTER] to confirm your selection. SETUP Some items require additional steps.

Press [SETUP] at any time to return to the previous menu.



[You're reading an excerpt. Click here to read official DAEWOO DF-4150P user guide](http://yourpdfguides.com/dref/3406286)
<http://yourpdfguides.com/dref/3406286>

Press [SETUP] to exit the Setup menu. INSTALLATION Settings Manual Set To complete the set-up of your DVD Recorder+VCR when the auto set has not stored all of the channels or when you wish to store a new channel. Installation Manual Set Auto Set Set Clock Adjust Channels Instructions Enter-Confirm Setup-Exit Move ... 1 2 3 4 5 6 Press [SETUP]. The Setup menu appears. Use [oe/] to select Installation ` While Installation `is selected, press [] to select Manual Set `

Manual Set `

Press [ENTER]. The Manual Setup' menu appears. Use [...

] to select Standard ` Press [ENTER] to move to the second level. Use [...

] to select the desired Standard' (PAL-BG, PAL-II, PAL-DK, or SECAM-L), then press [ENTER]. This set is equipped with the Multi-Tuner. You can search broadcastings of other countries. If the set can not search the channels, please Re-Install. (see page 20.) Manual Setup Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name Instructions PAL-BG The Select Aerial standard. CH02 PAL-BG PAL-II Off PR01 PAL-DK P-01 SECAM-L Enter-Confirm Setup-Exit Move ... 7 8 Use [.

../] to select Reception ` Press [ENTER] to move to the second level. Use [.../] to select the desired broadcast system (Aerial or Cable), then press [ENTER]. Manual Setup Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name Instructions PAL-BG Aerial Select The CH02 Reception.

Aerial Off PR01 Cable P-01 Aerial: If you are using a standard antenna to receive channels.

Cable: If you are using basic cable to receive channels. Enter-Confirm Setup-Exit Move ... 21 DF-L71D1P-UA/TA 2008.

4.11 2:4 PM `22 mac001 1200DPI 90LPI Initial Setup 9 10 Use [.../] to select Auto Search `

Search the real channel number by pressing [oe/]. Manual Setup Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name Instructions PAL-BG Aerial CH02 Off PR01 P-01 Enter-Confirm Setup-Exit Move ... 11 Select Fine Tune'. You can adjust the fine tuning. Manual Setup Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name Instructions PAL-BG Aerial CH02 Off PR01 P-01 Enter-Confirm Setup-Exit Move ... 12 13 Use [.

../] to select Decoder ` Press [ENTER] to move to the second level. When the program is encoded (and you have a decoder connected to socket EURO AV2), press [.../] to select On' and press [ENTER] to confirm. Manual Setup Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name Instructions PAL-BG Aerial CH02 Off Select Decoder PR01 State P-01 Off Enter-Confirm Setup-Exit Move ..

. On 14 15 Use [.../] to select Store Channel `

Press [ENTER] to move to the second level. Use [.../] to select program number to store and press [ENTER] to confirm.

Manual Setup Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name Instructions PAL-BG Aerial CH02 Off PR01 Select Channel To P-01 Store PR99 Enter-Confirm Setup-Exit Move ... 16 17 Use [.../] to select Program Name ` Press [] to move to the second level. If your DVD Recorder+VCR is showing no station name or is showing a station name incorrectly, you can correct this. Either select the name from the stored list or you create the station name and enter a 4-digit name.

Change the letters with the [.../], move the next letter with the [oe/]. Manual Setup Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name Instructions PAL-BG Aerial CH02 Off PR01 Edit Channel P-01 Name P0 Enter-Confirm Setup-Exit Move ... 1 22 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `23 mac001 1200DPI 90LPI Initial Setup Auto Set The DVD Recorder+VCR has a frequency synthesized tuner capable of receiving up to 119 channels.

These include VHF channels 2-20, 74-80, UHF channels 2169 and CATV channels 1-41. Installation Manual Set Auto Set Set Clock Adjust Channels Instructions Enter-Confirm Setup-Exit Move ... Preparation: Connect the DVD Recorder+VCR to the desired type of antenna or cable TV system, as shown in Connecting Antenna/Cable ` on page 15.

1 2 3 Follow steps 1-2 as shown under Manual Set'. While Installation `is selected, press [.../] to select Auto Set `

Press [ENTER] to begin the channel search. The tuner will automatically search for all available channels in your area and place them in the tuner's memory. After Auto Set is complete, follow the instructions above to make sure that Tuning Band is set correctly. Installation SETUP Searching for available TV stations: 5 channels found Please wait... Instructions Setup-Exit Set Clock 1 Follow steps 1-2 as shown under Manual Set'. 2 Use [...

] to select Set Clock ` Installation Manual Set Auto Set Set Clock Adjust Channels Instructions Enter-Confirm Setup-Exit Move ... 3 4 Press [ENTER]. The Set Clock' menu appears. Enter the date and time. oe / (left/right): Moves the cursor to the previous or next column. ...

./ (up/down): Changes the setting at the current cursor position. Set Clock Please set the clock: ...

Time : 12 : 00 5 Date : 02 \ Jan \ 2010 (Sat) Instructions Enter-Confirm Setup-Exit Move ... Press [ENTER] to confirm your setting, then press [SETUP] to exit the Setup menu. 23 DF-L71D1P-UA/TA 2008.

4.11 2:4 PM `24 mac001 1200DPI 90LPI Initial Setup Adjust Channels 1 Follow steps 1-2 as shown under Manual Set'. 2 Use [.../] to select Adjust Channels ` 3 Press [ENTER]. The Adjust Channels menu appears. 4 Use [...

../] to select the PR number you want to adjust. Then press [ENTER]. Installation Manual Set Auto Set Set Clock Adjust Channels Instructions Enter-Confirm Setup-Exit Move ... Delete After tuning TV stations into your DVD Recorder +VCR, you may wish to delete a station. 1 Edit Use [...

] to select 'Delete' and press [ENTER]. Adjust Channels ... After tuning TV stations into your DVD Recorder +VCR, you may wish to put a name into any channel you want to.

1 2 3 Use [.../] to select 'Edit' and press [ENTER]. You can put a name by pressing [.

../] and [oe /]. Press [ENTER] to confirm. PR-01 PR-02 PR-03 PR-04 PR-05 PR-06 Select Channel Options Delete Edit Align Instructions Enter-Confirm Setup-Exit Move ... Align After tuning TV stations into your DVD Recorder +VCR, you may wish to change the order of PR's you have in your set, as your preference. 1 2 3 Use [...

../] to select 'Align' and press [ENTER]. Press [.../] to select the PR number you want to move to. Press [ENTER]. The selected PR Will be moved to the new PR number. RECORDING OPTIONS Settings DVD Record Quality You can set the default DVD recording quality to: HQ (High Quality - 1 hr/disc), SP (Standard Play - 2 hrs/disc), EP (Extended Play - 4 hrs/disc), or Recording Options SLP (Super Long Play - 6 hrs/disc). 1 2 3 4 5 6 24 Press [SETUP].

The Setup menu appears. Use [oe/] to select Recording Options ` While Recording Options `is selected, press [] to select DVD Record Quality `

[You're reading an excerpt. Click here to read official DAEWOO DF-4150P user guide](#)



<http://yourpdfguides.com/dref/3406286>

Press [ENTER] to move to the second level. Use [./] to select the desired Record Quality (HQ, SP, EP, or SLP). DVD Record Quality VCR Record Quality Auto Chapter Instructions HQ Select Record LP Quality Off SLP EP SP Enter-Confirm Setup-Exit HQ Move ..

Press [ENTER] to confirm your selection, then press [SETUP] to exit the menu. DF-L71D1P-UA/TA 2008.4.11 2:4 PM `25 mac001 1200DPI 90LPI Initial Setup VCR Record Quality You can set the default VCR recording quality to SP (Standard Play) or LP (Long Play). SP is higher quality, but LP provides 2 times the recording time; e.g., a 2 hour tape will record for 4 hours in LP mode. Follow the same procedure as the 'DVD Record Quality'. Recording Options DVD Record Quality VCR Record Quality Auto Chapter Instructions Enter-Confirm Setup-Exit Move .

HQ LP Select VCR Off Quality LP SP Auto Chapter During recording, chapter markers are added automatically at fixed intervals. You can set this interval to 5 minutes, 10 minutes or 15 minutes. To turn off automatic chapter marking, select 'Off'. Follow the same procedure as the 'DVD Record Quality'. Recording Options SETUP DVD Record Quality VCR Record Quality Auto Chapter Instructions HQ Select Auto LP Chapter Off Off 5min 10min Enter-Confirm Setup-Exit 15min Move ... LANGUAGE Settings OSD Language Select a language for the DVD Recorder+VCR Setup menu and onscreen displays. 1 2 3 4 5 6 Press [SETUP]. The Setup menu appears. Use [oe] and [] to select 'Language'. While 'Language' is selected, press [] to select 'OSD Language'. Press [ENTER] to move to the second level.

Use [./] to select the desired language. Press [ENTER] to confirm your selection, then press [SETUP] to exit the menu. Language OSD Language Menu Language Subtitle Language Audio Language Instructions English OSD Select Default Language Default English Default Spanish French Enter-Confirm Setup-Exit Czech Move ... 25 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `26 mac001 1200DPI 90LPI Initial Setup Menu/Subtitle/Audio Language Select your preferred language for Disc Menus, Subtitles, and Audio soundtracks. Follow the same procedure as the OSD Language. Language OSD Language Menu Language Subtitle Language Audio Language Instructions English Select Default Menu Language Default Default Default English Default : The disc's default language is selected. ..

Enter-Confirm Setup-Exit Spanish Move ... French Language OSD Language Menu Language Subtitle Language Audio Language Instructions English Select Default Subtitle ... Language Default Default Default English Enter-Confirm Setup-Exit Spanish Move ...

French Language OSD Language Menu Language Subtitle Language Audio Language Instructions English Select Default Audio Language Default Default Default English ... Enter-Confirm Setup-Exit Spanish Move ..

French 26 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `27 mac001 1200DPI 90LPI Initial Setup PREFERENCES / Video Settings 1 2 3 4 Press [SETUP]. Use [oe/] to select 'Preferences'.

While 'Preferences' is selected, press [] to select 'Video'. Press [ENTER]. The 'Video' submenu is displayed. Preferences Video Audio Parental Controls Auto Settings VCR Instructions Enter-Confirm Setup-Exit Move ... TV Aspect Ratio 1 Use [./] to select 'TV Aspect' while the 'Video' submenu is displayed.

SETUP Video TV Aspect Video Output Auto Select Picture Interlace Format 4:3 LB 4:3 PS 16:9 Instructions Auto 2 3 4 5 Press [ENTER] or [] to go to the second level. Use [./] to select the desired 'TV Aspect'. Press [ENTER] to confirm your selection. Press [SETUP] to exit the menu. Enter-Confirm Setup-Exit Move ...

4:3 LB : Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture. 4:3 PS : Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Both sides of the picture are cut off.

16:9 : Select when a 16:9 wide screen TV is connected. Auto : Convert to the appropriate aspect ratio automatically. Video Output Progressive Scan Video provides the highest picture quality with reduced flickering. Video TV Aspect Video Output Auto Interlace Video Select Output Interlace Progressive Instructions Enter-Confirm Setup-Exit Move ..

RGB : If you connect the DVD Recorder+VCR to a analog television using the SCART jacks, set Video Output to 'RGB'. Interlace or Progressive : If you connect the DVD Recorder+VCR to a digital television (DTV) or Monitor using the COMPONENT jacks, set Video Output to 'Interlace' or 'Progressive'. Follow the same procedure as 'TV Aspect Ratio' to change the 'Video Output'. RGB Caution · Once the Progressive Scan setting is entered, an image will only be visible on a Progressive Scan compatible TV or monitor. Press and hold [P.SCAN] for 3 seconds to return to Interlace Scan mode. 27 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `28 mac001 1200DPI 90LPI Initial Setup PREFERENCES / Audio Settings Follow the same procedure as 'Video' Settings to select 'Audio' Settings.

Preferences Video Audio Parental Controls Auto Settings VCR Instructions Enter-Confirm Setup-Exit Move ... Digital Output 1 Use [./] to select 'Digital Output' while the 'Audio' submenu is displayed. 2 3 4 5 Off Press [ENTER] or [] to go to the second level. Use [./] to select the desired digital output type. Press [ENTER] to confirm your selection. Press [SETUP] to exit the menu. Audio Digital Output Dynamic Range Virtual Surround Off Select Digital Off Output Off Off Bitstream LPCM No signal will be output from the Digital Audio Out jacks.

LPCM Instructions Enter-Confirm Setup-Exit Move ... Select when connected to a 2 channel digital stereo amplifier. The DVD Recorder+VCR's digital audio signal will be output in the PCM 2ch format when you play a DVD (or VHS tape) recorded with a Dolby Digital (only for DVD) or MPEG soundtrack. If the DVD is recorded with a DTS sound track then no sound will be heard. Bitstream Select when connected to a Dolby Digital or DTS decoder (or an amplifier or other equipment with a Dolby Digital or DTS decoder). Dynamic Range While watching DVD movies, you may wish to compress the dynamic range of the audio output (the difference between the loudest and quietest passages). This allows you to listen to a movie at a lower volume without losing clarity of sound. Set 'Dynamic Range' to Low or High for this effect. Follow the same procedure as 'Digital Output' to set the 'Dynamic Range'. Audio Digital Output Dynamic Range Virtual Surround Off Off Select Dynamic Off Range Off Low Instructions Enter-Confirm Setup-Exit Move ... High Virtual Surround You can enjoy a simulated 3D effect from two speakers by setting Virtual Surround to On.

Follow the same procedure as 'Digital Output' to set the 'Virtual Surround' option. Audio Digital Output Dynamic Range Virtual Surround Off Off Off Select Virtual Surround Off Instructions On Enter-Confirm Setup-Exit Move .



[You're reading an excerpt. Click here to read official DAEWOO DF-4150P user guide](http://yourpdfguides.com/dref/3406286)

<http://yourpdfguides.com/dref/3406286>

.. 28 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `29 mac001 1200DPI 90LPI Initial Setup PREFERENCES / Parental Controls Set Parental Level The Parental Controls feature allows you to prevent DVDs from being played based on their ratings or to have certain discs played with alternative scenes. You can set the parental level from 'ADULT' to 'Kid safe'. Preferences Video Audio Parental Controls Auto Settings VCR Instructions Enter-Confirm Setup-Exit Move .. 1 2 3 Press [SETUP]. Use [oe/] to select 'Preferences ` While 'Preferences ` is selected, press [] to select 'Parental Controls ` And press [ENTER]. 4 Parental Control Use [../] to select 'Set Parental Level' and press [ENTER]. The Password Input dialog will appear. Enter a 4-digit password using the [0-9] buttons. If this is the first time you have entered a password, you will be prompted to enter the password again to confirm it. The initial password is '0000 ` You must enter this password before you can change the Parental Level. Set Parental Level Off Change Password Set Parental Country Code SETUP Instructions Enter-Confirm Setup-Exit Move ... 5 After setting the password, press [ENTER] while 'Set Parental Level' is displayed. Change Password Current Code Enter New Code Confirm Code Instructions Setup-Exit _____ 6 Enter your new password. Set the new password to something other than '0000'.

Password Enter Password Instructions Setup-Exit **__ 7 Use [../] to select the desired parental level and press [ENTER] to confirm. Parental Control Set Parental Level Select the Off Change Password parental level Off Set Parental Country Code ADULT NC-17 Off : If you select Unlock, the Lock feature is not active. All discs will play in full. ADULT to Kid safe: Some discs contain scenes not suitable for children. If you set a rating for the DVD Recorder+VCR, all scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an Instructions alternative scene is available on the disc. The alternative must have the Enter-Confirm Setup-Exit Move .
.. same rating or a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc.

29 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `30 mac001 1200DPI 90LPI Initial Setup 8 Press [ENTER] to confirm your rating selection, then press [SETUP] to exit the menu. Parental Control Set Parental Level ADULT Change Password Set Parental Country Code Instructions Enter-Confirm Setup-Exit Move .. . Change Password 1 While 'Preferences ` is selected, press [] to select 'Parental Controls ` 2 Press [ENTER]. The 'Parental Controls ` submenu appears. 3 Use [../] to select 'Change Password ` then press [ENTER]. 4 The 'Change Password' submenu appears. Enter your current 4-digit password.

Parental Control Set Parental Level ADULT Change Password Set Parental Country Code 5 Enter a new 4-digit password. Re-enter the new password to confirm, press [ENTER]. Master Password : If you forget your password, press 3,3,0,8 on the remote control and then press [ENTER]. Set the new password to something other than '0000'. Instructions Enter-Confirm Setup-Exit Move ... Change Password Current Code Enter New Code Confirm Code Instructions Setup-Exit **** * Set Parental Country Code 1 While 'Preferences ` is selected, press [] to select 'Parental Controls ` Then press [] to select 'Set Parental Country Code ` Parental Control Set Parental Level ADULT Change Password Set Parental Country Code 2 3 Press [ENTER]. Enter your current 4-digit password then press [ENTER]. Use [../] to select the desired country and press [ENTER] to confirm. Instructions Enter-Confirm Setup-Exit Move ... Parental Country Code Please select Country for Parental Setup ..

. Australia Belgium Denmark Finland France Instructions Enter-Confirm Setup-Exit Move ... 30 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `31 mac001 1200DPI 90LPI Initial Setup PREFERENCES / Auto Settings 1 2 While 'Preferences ` is selected, press [] to select 'Auto Settings ` Press [ENTER] to display the submenu. Preferences Video Audio Parental Controls Auto Settings VCR Instructions Auto Clock Set Auto Clock enables the DVD Recorder+VCR to set the clock automatically whenever it is in Standby mode (plugged in but powered off). Auto Clock is only available for models with the VPS/PDC function.

Some broadcasting stations may send the time and date along with the VPS/PDC data. The video will automatically use this time and date during the initial setting up procedure during normal use, and every time you switch the video off at the mains. If you find that this time and date is incorrect you can remove this feature by following the steps below changing it to the OFF mode, you will then have to manually set the time and date, see above. Enter-Confirm Setup-Exit Move ... Auto Settings Auto Clock Set AV Link VPS/PDC Off Select Auto Off Clock Status Off Off On Instructions Enter-Confirm Setup-Exit Move ... SETUP 1 2 Use [

../] to select 'Auto Clock Set' and press [ENTER]. Use [.

./] to change the 'Auto Clock Set' status, and press [ENTER] to confirm. AV Link If your TV is AV Link available, you can download the channels Auto Settings information from your TV set, connecting the SCART1 jack to TV. Follow the same procedure as 'Auto Clock Set' to set the 'AV Link' status. Auto Clock Set AV Link VPS/PDC On Off Select AV Off Status Link Off On Instructions VPS/PDC Enter-Confirm Setup-Exit Move ..

.. VPS/PDC is a service provided by some stations to enable you to perform Auto Settings timer recordings precisely even if the broadcaster delays the start time of the programme slightly. The time you enter is the VPS/PDC time so this Auto Clock Set On must be correct. Not all stations offer VPS/PDC, in which case the player AV Link On will start at the time you enter and not the actual start time of the VPS/PDC Off Select VPS/ programme. PDC Status If you wish to start recording at a specific time without it being adjusted Off by the VPS/PDC system in the event of a delay, switch VPS/PDC off Instructions On otherwise the player will not record. Enter-Confirm Setup-Exit Move ... Follow the same procedure as 'Auto Clock Set' to set the 'VPS/PDC' status.

.. "VPS/PDC" and "Auto Clock Set" are not provided for some countries. 31 DF-L71D1P-UA/TA 2008.4.11 2:4 PM `32 mac001 1200DPI 90LPI Initial Setup PREFERENCES / VCR This feature enables you to search for Index marks or specific times on your VHS tapes. Preferences Video Audio Parental Controls Auto Settings VCR Instructions Enter-Confirm Setup-Exit Move ... 1 2 3 4 5 6 While 'Preferences ` is selected, press [] to move to the second level.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DF-4150P user guide](#)

<http://yourpdfguides.com/dref/3406286>

Use [...]

[.] to select VCR: Press [ENTER] to display the submenu. Select Index+, Index' or Go to Zero'. If you select Index+ (or Index') and press [ENTER], your DVD Recorder+ VCR will locate your index mark and begin playback.

If you select Go-To Search' and press [ENTER], your DVD Recorder+ VCR will wind to the position 0:00:00 and stop. VCR Index+ Index Go to Zero VCR Index+ Index Go to Zero VCR Index+ Index Go to Zero · The VCR menu is activated only when a video cassette tape is inserted. System Information System Information helps service personnel identify key firmware information about your DVD Recorder+VCR in case service is required. System Info Version Main Build Micom Software DVD Navigation Loader Version Instructions Enter-Confirm Setup-Exit Move ..

· EP Set 1.0 DR3-1.0.2 0.0.0 1.0.0 DVS-RA20 Restore Defaults If you wish, you can reset the DVD Recorder+VCR to its original factory settings. 1 2 3 4 Press [SETUP].

Use [oe/] to select Restore Defaults: Press [ENTER]. The Initialize menu will appear. Use the [...] buttons to select Yes and press [ENTER]. Restore Defaults If you select this function all settings will be removed and Are will be set into the product you sure you want to restore default settings? initial (factory) mode. Yes No Instructions Enter-Confirm Setup-Exit Move ..

· Some options cannot be reset, including Parental Controls, Password, and Country Code. · After Restoring Defaults the unit reboots automatically and the Installation menu appears. You must set the country, language, channel, and clock settings again. 32 DF-L71D1P-UA/TA 2008.

4.11 2:4 PM `33 mac001 1200DPI 90LPI On-Screen Display Overview The On-Screen Display provides feedback on the status of the DVD Recorder+VCR and/or the currently loaded disc or tape. To access the On-Screen Display (or OSD), press [DISPLAY]. Displaying Disc Information To display information about the currently loaded disc or tape: On-screen display operation 1 2 Press [DISPLAY] repeatedly to display/change the information displayed on-screen. To remove the on-screen display, press [DISPLAY] repeatedly until it disappears.

See the descriptions below for detailed explanations of the on-screen displays for each media type. · Some discs may not provide all the features shown in the on-screen display examples. Temporary Feedback Icons Action prohibited or not available SETUP Changing TV Channels PLAYBACK If no disc is playing, you can change TV channels using the [0-9] or [PR+/-] buttons on the remote control or [PR+/-] buttons on the front panel. Changing the TV Audio Channel You can change the TV audio using the [AUDIO] button. Press [AUDIO] repeatedly to change the TV audio, according to the Broadcast audio signal as shown below. · STEREO Audio Signal Stereo " Mono " Stereo · BIL Audio Signal BIL I " BIL II " (BIL Off) " BIL I · MONO Audio Signal Mono The current audio channel is displayed on-screen. · If the sound is poor quality when set to Stereo, you can often improve it by changing to Mono. · When an external input is selected, the audio channel can be switched only to Stereo. 33 DF-L71D1P-UA/TA 2008.4.

11 2:4 PM `34 mac001 1200DPI 90LPI On-Screen Display Overview OSD Menu Options for DVD During DVD playback, press [DISPLAY] to show information about the current disc. While the disc information is displayed, press [DISPLAY] again to show the disc remaining time. Title Shows the current title number and total number of titles, and skips to the desired title number. 1 2 3 4 Press [DISPLAY] during playback. The on-screen display appears on the TV screen. Use [...] to select the Title icon on the on-screen display. Press [ENTER] to display a submenu.

Use [...] to change the numbers. Press [ENTER] to confirm.

Chapter Shows the current chapter number and total number of chapters, and skips to the desired chapter number. 1 2 3 4 Press [DISPLAY] during playback.

The on-screen display appears on the TV screen. Use [...]

[.] to select the Chapter icon on the on-screen display. Press [ENTER] to display a submenu. Use [...] to change the numbers. @@The on-screen display appears on the TV screen. Use [...]

[.] to select the Angle icon on the on-screen display. Press [ENTER] to display a submenu. Use [...] to change the numbers. @@The on-screen display appears on the TV screen. Use [...]

[.] to select the Audio icon on the on-screen display. Press [ENTER] to display a submenu. Use [...]

[.] to change the numbers. @@The on-screen display appears on the TV screen. Use [...]

[.] to select the Subtitle icon on the on-screen display. Press [ENTER] to display a submenu. Use [...] to change the numbers. @@The on-screen display appears on the TV screen. Use [...]

[.] to select the Elapsed' icon on the on-screen display. Press [ENTER] to search by time. The submenu appears. Use [...] to change the numbers and use [oe] to move left or right. Within 7 seconds, press [ENTER] to confirm the start time. @@@@ Press [OPEN/CLOSE] to close the tray.

@@@If playback does not start, press [PLAY ()]. @@@@The Region code for this DVD Recorder+VCR is 2 (two). @@Some features may also be available in the Setup menu. @@@@The DVD Recorder+VCR will go into Still mode. @@@@The DVD Recorder+VCR will go into Search mode.

@@oe oe oe oe Slow Motion Press [SLOW+] to enter Slow Motion mode. The default speed is 1/2. When you press [SLOW+] repeatedly, the speed will be set to 1/4, 1/8, and normal speed. · Slow reverse playback is not supported. 36 DF-L71D1P-UA/TA 2008.

4.11 2:4 PM `37 mac001 1200DPI 90LPI DVD Playback Changing the Audio Language Press [AUDIO] and then press [AUDIO] repeatedly during playback to hear a different audio language or audio track. Subtitles Press [SUBTITLE] and then press [SUBTITLE] repeatedly during playback to select among all available subtitle languages. Camera Angle If a DVD contains scenes recorded at different camera angles, angle icon displays automatically. You can select among these angles during playback. Press [ANGLE] and then press it repeatedly during playback to select the desired angle. The number of the current angle appears on the TV screen. · The Camera Angle icon is displayed on the TV screen when alternate angles are available. Zoom The Zoom function allows you to magnify the video image and scroll around the enlarged image. 1 2 3 Press [ZOOM] during Play mode to activate the Zoom function.

Each press of the [ZOOM] button changes the Zoom level as follows: X1 (normal size) " X2 " X4 " X1 (normal size) Use the [oe ...] buttons to scroll around the zoomed picture. To resume normal playback, press [ZOOM] repeatedly until the X1 (normal picture) appears. · The Zoom function may not work on some DVDs. · The Zoom function does not work in PAUSE mode.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DF-4150P user guide](#)

<http://yourpdfguides.com/dref/3406286>