



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DHC-X100. You'll find the answers to all your questions on the DAEWOO DHC-X100 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAEWOO DHC-X100**  
**User guide DAEWOO DHC-X100**  
**Operating instructions DAEWOO DHC-X100**  
**Instructions for use DAEWOO DHC-X100**  
**Instruction manual DAEWOO DHC-X100**



[You're reading an excerpt. Click here to read official DAEWOO DHC-X100 user guide](#)

<http://yourpdfguides.com/dref/3406164>

**Manual abstract:**

**DIGITAL HOME CINEMA SYSTEM DHC-X100E Important Safeguards WARNING : TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.** Important Safeguards CAUTION 5. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings. 6.

Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat. 7. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. 8. Grounding or Polarization - The precautions that should be taken so that the grounding or polarization means of an appliance is not defeated.

9. Power - Cord Protection - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance. 10. Protective Attachment Plug - If the appliance is equipped with an attachment plug having overload protection. This is a safety feature.

See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has same overload protection as the original plug. 11. Cleaning - The appliance should be cleaned only as recommended by the manufacturer. 12.

Power Lines - An outdoor antenna should be located away from power lines. 13. Outdoor Antenna Grounding - If an outside antenna is connected to the receiver be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to and antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Figure 1. 14. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time. 15. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings. 16.

Damage Requiring Service - The appliance should be serviced by qualified service personnel when: a) The power-supply cord or the plug has been damaged; or b) Objects have fallen, or liquid has been spilled into the appliance; or c) The appliance has been exposed to rain; or d) The appliance does not appear to operate normally or exhibits a marked change in performance; or e) The appliance has been dropped, or the enclosure damaged. 17. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel. RISK OF ELECTRIC SHOCKS DO NOT OPEN CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER(OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. THIS SYMBOL IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS. Getting Started THIS SYMBOL IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE(SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE. CAUTION TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

LASER SAFETY THIS UNIT EMPLOYS A LASER. ONLY QUALIFIED SERVICE PERSONNEL SHOULD REMOVE THE COVER OR ATTEMPT TO SERVICE THIS DEVICE DUE TO POSSIBLE EYE INJURY. CAUTION : USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. ATTENTION : POUR EVITER LED CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

Important Safety Instructions - All the safety and operating instructions should be read before the appliance is operated. - The safety and operating instructions should be retained for future reference. - All warnings on the appliance and in the operating instructions should be adhered to. - All operating and use instructions should be followed. 1.

Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like. 2. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer. 3.

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn. 4. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer. "NOTE TO CATV SYSTEM INSTALLER: THIS REMINDER IS PROVIDED TO CALL THE SYSTEM INSTALLER'S ATTENTION TO ARTICLE 820-40 OF THE NEC THAT PROVIDES GUIDELINES FOR PROPER GROUNDING AND, IN PARTICULAR SPECIFIES THAT THE CABLE GROUND SHALL BE CONNECTED TO THE GROUNDING SYSTEM OF BUILDING, AS CLOSE TO THE POINT OF CABLE ENTRY AS PRACTICAL." 2 3 Precautions 1.

Warranty Claim You can find the serial number on the rear panel of this unit. In case of warranty claim, please report this number. 2. Recording Copyright Recording of copyrighted material for other than personal use is illegal without permission of the copyright holder. 3. AC Fuse The fuse is located inside the chassis and is not userserviceable. If power does not come on, contact your authorized service center. 4. Power WARNING BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY. The voltage of the available power supply differs according to country or region.

Be sure that the power supply voltage of the area where this unit will be used meets the required voltage (e.g., AC 230 V, 50 Hz or AC 120 V, 60 Hz) written on the rear panel. Worldwide models are equipped with a voltage selector to conform to local power supplies. Be sure to set this switch to match the voltage of the power supply in your area before plugging in the unit.



[You're reading an excerpt. Click here to read official DAEWOO DHC-X100 user guide](http://yourpdfguides.com/dref/3406164)  
<http://yourpdfguides.com/dref/3406164>

5. Do not touch this unit with wet hands Do not handle this unit or power cord when your hands are wet or damp. If water or any other liquid enters the case, take this unit to an authorized service center for inspection. 6. Location of this unit Place this unit in a well-ventilated location.

Take special care to provide plenty of ventilation on all sides of this unit especially when it is placed in an audio rack. If ventilation is blocked, this unit may overheat and malfunction. 8. Notes on Handling Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. When shipping the machine, use the original shipping carton and packing materials. For maximum protection, repack the unit as it was originally packed at the factory. Do not use volatile liquids, such as insect spray, near the machine. Do not leave rubber or plastic products in contact with the machine for a long time. They will leave marks on the finish. The top and rear panels of the machine may become warm after a long period of use.

This is not a malfunction. When the machine is not in use, be sure to remove the disc and turn off the power. If you do not use the machine for a long period, the unit may not function properly in the future. Turn on and use the machine occasionally. 9. To Obtain a Clear Picture The machine is a high technology, precision device. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality becomes poor. To obtain a clear picture, we recommend regular inspection and maintenance (cleaning or parts replacement) every 1,000 hours of use depending on the operating environment. For details, contact your nearest dealer. 10.

Notes on Moisture Condensation Moisture condensation damages the machine. Please read the following carefully. Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the machine.

Table of Contents Important Safeguards/Precautions/Table of Contents.....

.....

.....

.....

.....

..... 2/3/4/5 Getting Started 6 Features.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....6 Index to Parts and Controls.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..7/8/9 Preparing the Remote Controller, About This Instruction Manual, Note on Copyright ...

.....

.....

.....

.....

.....

.....

.....



.....  
.....  
.....  
.....  
.....  
.....  
.....

15 Connecting the Power/Turning on the machine.....

.....  
.....  
.....  
.....  
.....

.....16 Speaker Setup...

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....

....17 Basic Operation 18 STA NDBY/ON STANDBY/ON Do not expose this unit to direct sunlight or heating units as this unit's internal temperature may rise and shorten the life of the pickup.

Avoid damp and dusty places and places directly affected by vibrations from the speakers. In particular, avoid placing the unit on or above one of the speakers. Be sure this unit is placed in a horizontal position. Never place it on its side or on a slanted surface as it may malfunction. When you place this machine near a TV, radio, or VCR, the playback picture may become poor and the sound may be distorted.

In this case, place the machine away from the TV, radio, or VCR. 7. Care From time to time you should wipe the front and rear panels and the cabinet with a soft cloth. For heavier dirt, dampen a soft cloth in a weak solution of mild detergent and water, wring it out dry, and wipe off the dirt. Following this, dry immediately with a clean cloth. Do not use rough material, thinners, alcohol or other chemical solvents or cloths since these could damage the finish or remove the panel lettering. Moisture condensation occurs in the following cases. - When you bring the machine directly from a cold place to a warm place. - When you use the machine in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit. - In summer, when you use the machine in a hot and humid place just after you move the unit from an air conditioned room.

- When you use the machine in a humid place. DEO CD/MP3 CD/audio CD disc tray 4. OPEN/CLOSE ( ) button 5. PLAY ( ) button 6. STOP ( ) button 7. PREV ( ) button 8. NEXT ( ) button 9. FUNCTION button 10. Remote Control Sensor 11. Display 12.

MASTER VOLUME control 13. PHONES jack ANDBY/ON ST \* "DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc.® \*\* Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbols are trademarks of Dolby Laboratories. Confidential Unpublished Works.

1992-1997 Dolby Laboratories, Inc. All rights reserved. 1. STANDBY indicator 2. STANDBY / ON button 3.

DVD/VIDEO CD/MP3 CD/audio CD disc tray 4. Remote Control Sensor 5. Display 6. MASTER VOLUME control 7. OPEN/CLOSE ( ) button 8. PLAY ( ) button 9. STOP ( ) button 10. PREV ( ) button 11. NEXT ( ) button 12. FUNCTION button 13.

PHONES jack 6 7 Index to Parts and Controls Remote controller 1. STANDBY/ON button 2. OPEN/CLOSE button 3. MUTE button 4. INPUT SELECTOR: TV/AUX button 5. INPUT SELECTOR: DVD button/ TV SYSTEM(PAL/NTSC: DVD only) button 6. INPUT SELECTOR: VIDEO button 7. INPUT SELECTOR: TUNER button 8. FAST REVERSE(FR) ( ) button 9. FAST FORWARD(FF) ( ) button 10.

SKIP PREV ( ) button 11. SKIP NEXT ( ) button 12. Direction ( / / / ) buttons 13. Enter button 14. PLAY ( ) button 15.

VOLUME( / ) buttons 16. SETUP button 17. STOP( ) button 18. MENU/RETURN button 19. PAUSE/STEP button 20.

GO TO/AUTO MEMORY button 21. TEST-TONE button 22. Number buttons 23. CH-LEVEL button 24. DISPLAY/FM MODE button 25. A-B REPEAT button 26. REPEAT button 27. RANDOM button 28. SLOW button 29. SUB TITLE button 30.

TITLE button 31. AUDIO button 32. ANGLE button 33. PBC button 34. SURROUND MODE button 35. ZOOM button 36. SLEEP button 37. DELAY TIME

button 38. SPEAKER SETUP button 39. MPX/PTY SEARCH button 40.

DIGEST/RDS MODE button Index to Parts and Controls Display Getting Started 1 2 4 5 8 10 3 6 7 9 11 12 13 ENTER 14 16 17 18 19 15 15 20 21 1. Pro  
Logic indicator 2. DOLBY DIGITAL indicator 3. DTS indicator 4. DVD indicator 5.  
VCD indicator 6. MP3 indicator 7. DRC indicator 8. SLEEP indicator 9. REPEAT indicator 10.  
ALL indicator 11. TOTAL indicator 12. REMAIN indicator 13. RDS indicator 14. PLAY indicator 15. PAUSE indicator 16. TITLE indicator 17. CHAPTER  
indicator 18. TRACK indicator 19. DSP indicator 20.

STEREO indicator 21. RANDOM indicator 22. MUTE indicator 23. PBC(Playback Control) indicator 24. PRESET indicator 25. PLAYING INFORMATION  
display 22 4 5 Rear Panel 23 25 26 29 30 33 34 37 38 24 27 28 31 32 35 36 39 40 S-VIDEO OUT (DVD ONLY) 1. AUDIO IN jacks 2. VIDEO IN jack 3.  
MONITOR OUT jack 4. DIGITAL OUTPUT jack 5.  
S VIDEO MONITOR OUT jack 6. SCART jack or COMPONENT VIDEO OUTPUT Y/Pb/Pr jacks(Optional) 7. Power cord 8. AM ANTENNA connector 9.  
FM ANTENNA connector 10.  
FRONT SPEAKER connectors 11.



[You're reading an excerpt. Click here to read official DAEWOO DHC-  
X100 user guide](#)

<http://yourpdfguides.com/dref/3406164>

CENTER SPEAKER connectors 12. WOOFER SPEAKER connector 13. REAR SPEAKER connectors 14. SUBWOOFER output jack 9 8 Preparing the Remote Controller Inserting the Batteries 1.

Detach the battery cover. 2. Insert the batteries. Be sure to match the + and - ends of the batteries with the diagram inside the battery compartment. 3. Attach the battery cover. UM-4/ size AAA/ R03 x 2pcs Notes Do not mix new batteries with old batteries or different kinds of batteries. To avoid corrosion, remove the batteries if the remote controller is not to be used for a long time. Remove dead batteries immediately to avoid damage from corrosion. If the remote controller does not operate smoothly, replace both the batteries at the same time.

The life of the batteries supplied is about six months but this will vary depending on usage. Notes on Discs This section shows you how to handle, clean, and store discs. On Handling Discs Do not touch the playback side of the disc. Do not attach paper or tape to discs. VIDEO CD equipped with PBC function (Version 2.0) In addition to operation of the VIDEO CD not equipped with the PBC function, you can enjoy playback with interactive software and with search function by using the menu displayed on the TV screen (Menu Playback). Some of the functions described in this Instruction Manual may not work with some discs. Getting Started Playable Discs This machine can play back the following discs. 1 2 3 On Cleaning Discs Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the center outwards with a soft cloth.

Always keep the disc clean. Disc Type Contents Disc size Maximum playback time Approx. 240minutes (Single sided disc) Using the Remote Controller Pointing the remote controller in the right direction Point the remote controller toward the remote control sensor. STANDBY/O N 12 Cm DVD videos Digital Audio with an suitable + region number Digital Video or ALL (MPEG2) Approx. 480minutes (Double sided disc) Approx.

80minutes (Single sided disc) Notes 8 Cm Place the unit away from strong light such as direct sunlight or inverted fluorescent light which can prevent proper operation of the remote controller. Using another remote controller of the same type in the same room or using the unit near equipment which uses infrared rays may cause operational interference. Do not put any object such as a book on the remote controller. The buttons of the remote controller may be pressed by mistake and drain the batteries. Make sure the audio rack doors do not have colored glass.

Placing the unit behind such doors may prevent proper remote controller operation. If there is any obstacle between the remote controller and the remote control sensor, the remote controller will not operate. Approx. 160minutes (Double sided disc) Approx. 74 minutes Approx. 20 minutes Approx. 74 minutes If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth. Do not use any type of solvent such as thinner, benzine, commercially available cleaners or antistatic spray for vinyl LPs. It may damage the disc. VIDEO CDs (Version 1.

0 / 1.1 / 2.0) or SVCD Audio CDs (PCM or dts) CD-Rs, CD-RWs Digital Audio + Digital Video (MPEG1) Digital Audio 12 Cm 8 Cm 12 Cm 8 Cm (CD Single) Approx. 20 minutes On Storing Discs Do not store discs in a place subject to direct sunlight or near heat sources. Do not store discs in places subject to moisture and dust such as a bathroom or near a humidifier. Store discs vertically in a case. Stacking or placing objects on discs outside of their case may cause warping. Digital 12 Cm Approx. 74 minutes Video(MPEG1), Digital Audio or 8 Cm Approx. 20 minutes Only MP3 files (CD Single) MP3, JPEG Files 12 Cm 8 Cm Approx.

640 MBytes Approx. 200 MBytes ENTE R About This Instruction Manual This instruction manual explains the basic procedures for operating of the machine. Some DVD videos are produced in a manner that allows specific or limited operation during playback. As such, the machine may not respond to all operating commands. Refer to instruction notes on discs.

A " " mark may appear on the TV screen during operation. The " " mark means that the operation is not permitted by the machine or the disc. Note on Copyright It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission. DVD videos are copy protected, and any recordings made from these discs will be distorted. This product incorporates copyright protection technology that is protected by method claims of certain U.

S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. 10 4 5 CD-ROMs Note on Region Numbers The region number are allocated to machine and software according to where they are sold. DVDs can be played on this machine if their region number is the same or includes the same number, or if the DVD is marked "ALL". Confirm the region number for this machine before choosing discs. The number for machine is indicated on the rear panel. You cannot play back discs other than those listed above. - DVD with an un suitable region number - DVD-Audio - DVD-ROM - DVD-RAM - DIVX Video Disc - VSD - CD-ROM - CDV - CVD - CD-G - SACD This machine uses the PAL/NTSC color system, and cannot play back DVD videos recorded in any other color system (SECAM, etc.

). Avoid using heart-shaped or octagonal discs. Playing irregularly shaped discs may damage the internal mechanism of the machine. Do not use discs on which adhesive from adhesive tape or a disc label (if it is a rental disc) remains. Otherwise, you may not be able to eject the discs or the machine may become inoperative. On VIDEO CDs This machine supports VIDEO CDs equipped with the PBC(Version 2.0)function. (PBC is the abbreviation of Playback Control.) You can enjoy two playback variations depending on the type of disc. VIDEO CD not equipped with PBC function(Version 1.

1) Sound and movies can be played on this machine in the same way as an audio CD. Notes : playing MP-3 CD The machine can play only single session marked CD-R/RW for ISO9660, Joliet format. For other format, it cannot play the discs. 11 Connecting to a TV Before connecting Refer also to the instruction manual of the TV. When you connect the machine to the TV, be sure to turn off the power and unplug both the units from the wall outlets before making any connections.

Connect the machine to the TV directly. If you connect the machine to a VCR, TV/VCR combination, or video selector, the playback picture may be distorted as DVD videos are copy protected.



[You're reading an excerpt. Click here to read official DAEWOO DHC-X100 user guide](http://yourpdfguides.com/dref/3406164)  
<http://yourpdfguides.com/dref/3406164>

Automatically switched to the TV set A/V mode(DVD, Video) Do not change to Video Aspect Ratio. Note that only video cable for monitor output is supplied. Connecting to Audio/Video Equipment Before connecting Refer also to the instruction manual of each component to be connected.

When you connect the machine to audio/video equipment, be sure to turn off the power and unplug all the units from the wall outlets before making any connections. Connect the plugs securely. Getting Started Connecting to a TV without Color Difference Inputs If the TV or monitor is equipped with an S video input, make the S video connection in addition to the normal video connection. The S video connection will provide higher quality picture playback. S-VIDEO OUT (DVD ONLY) S-VIDEO OUT (DVD ONLY) CAUTION The machine's video output signals may be varied depending on setting of "VIDEO OUT" on "Customizing the function settings". Selecting RGB of the setup menu is needed only for a monitor. When you connect the machine to TV or Monitor, be sure to select the Video output setting in accordance with video input of TV or monitor. Connecting to a TV with Color Difference Inputs If the TV or monitor is equipped with the color difference inputs, select the connection on the above. Connecting to these inputs allows you to enjoy higher quality picture playback compared to the above connection. Notes Actual labels for color difference inputs may vary depending on the TV manufacturer (ex.

Y/Cb/Cr, Y/R-Y/B-Y, Y/Pb/Pr or Component video). In some TVs or monitors, the color levels of the playback picture may be reduced slightly or the tint may change. In such a case, adjust the TV or monitor for optimum performance. Caution You may need to maximize the volume of the TV speaker(s) when you carry out steps in "Speaker Setup". Be sure to turn down the volume of the TV speaker(s) before changing the TV source input and using the TV speaker(s) as a normal TV speaker(s). 12 13 Connecting Speakers Before connecting This machine is designed to reproduce optimum sound quality when speakers with the specified impedance below are connected. Please check the following information and choose speakers with appropriate impedance for the connections. Front speakers / Center speaker / Surround Speakers : 6 ohms min. per speaker Woofer speaker : 8 ohm min To prevent damage to circuits, never shortcircuit the positive (+) and negative (-) speaker wires. Do not connect the speaker cable to the L and R connectors at the same time and do not connect more than one speaker to the same speaker connectors.

Making Antenna Connections Connecting the Supplied Antennas Getting Started S-VIDEO OUT (DVD ONLY) White/Black Red/White S-VIDEO OUT (DVD ONLY) Red/White Blue/Black White/Black Blue/Black Adjusting the position of the FM antenna While listening to an FM program, extend the antenna and move it in various directions until the clearest signal is received, then secure the antenna with push pins in the position with the least distortion. Adjusting the position of the MW(AM) antenna While listening to a MW(AM) program, set the antenna in the direction and position where you receive the clearest sound. Put it as far away as possible from the unit, TVs, speakers, cables, and power cords. Positioning Speakers Speaker placement plays an important role in the reproduction of Surround sound. The placement of the speakers varies depending on the size of the room and the wall coverings used in the room.

The illustration below shows an example of a layout for standard speaker placement. Refer to this example when you position the speakers in order to experience the best of Surround sound. Standard speaker placement For ideal Surround effects, all speakers should be installed. Front The left, right, and center speakers should face the seated listener and be placed at ear level. The center speaker reproduces a richer sound image by enhancing the perception of the sound's source and movement.

Surround Place the left and right Surround speakers 1 meter (3 feet) above the listener's ear level and facing toward the sides of the room, making sure that the listener is within the speakers' dispersion angle. These speakers reproduce the feel of a moving sound while creating the sensation of being in the middle of the action. Subwoofer Install a subwoofer for powerful bass sounds. The placement of the subwoofer does not affect the final quality of the sound image too much, so you can install it wherever it is convenient not to close the TV screen. Installing too close to the TV may make a distortion the screen. Connecting the FM outdoor Antenna(not supplied) 14 15 Connecting the Power/Turning on the machine Before connecting Turning on the machine may cause a momentary power surge, which might interfere with other electrical equipment such as computers. If this happens, use a wall outlet on a different circuit. Speaker Setup Before operating your machine, you need to set up the speaker configuration and the delay time from the listening position to each speaker. Note It is not necessary to set the parameters again once you have completed the setup unless you change the speaker configuration. 3.

Press ENTER on selected delay time. 4. Press DELAY TIME to stop delay time setup again. Getting Started DHC-X100E ANDBY/ON ST 1. Press SPK SETUP to display the Front, Center, Rear speaker and Subwoofer configuration. The front, center, rear speaker and subwoofer configuration appears on the TV screen. 2. Select the speaker to setup using -- SPEAKER SETUP PAGE -FRONT CENTER REAR SUBWOOFER LARGE SMALL . Adjusting Each Speaker's Relative Volume Balance Test Tone If headphones are connected, remove the headphones. 1.

Press TEST TONE. Each speaker emits the test tone (pink noise) in the following order: 3. Select the speaker configuration using . 4. Press ENTER on selected item.

5. Press SPK SETUP to stop speaker setup again. 1. Connect the power cord to a wall outlet. The machine enters standby mode.

The STANDBY indicator lights up. 2. Press STANDBY/ON on the machine or POWER on the remote controller. The machine turns on. The STANDBY indicator turns off. Note To turn off the machine, press STANDBY/ON on the machine, or POWER on the remote controller. The machine enters standby mode. Note : If satellite speakers connected to the machine, select Small speaker configuration. If you select the analogue signal(tuner, EXT video, etc) function, the output of subwoofer speaker always operate. 2.

Press CH.LEVEL repeatedly to select to raise or the speaker, then press lower the volume level until you have an equal volume balance with the other speakers at your listening position. The volume level can be adjusted between -12 and +12dB. 3. When you have completed the adjustment, press ENTER. 4. Repeat step 2~3 to adjust other speaker's volume balance. To cancel the test tone, press TEST TONE.



[You're reading an excerpt. Click here to read official DAEWOO DHC-](http://yourpdfguides.com/dref/3406164)

[X100 user guide](http://yourpdfguides.com/dref/3406164)

<http://yourpdfguides.com/dref/3406164>

*Adjusting Surround Speaker's Delay Time 1. Press Delay time button.*

*The digital out and delay time informations appear on the display. repeatedly to enter the 2. Press proper delay time to your listening position. Re-try to each of the speakers. SPEAKER POSN DIGITAL OUT FRONT POSN CENTER POSN REAR POSN 5FT/1.*

*5M Note 16 When °ON° is selected in DIGITAL OUT menu, DELAY TIME of each speaker can not be accessed. 17 Playing DVD Videos / VIDEO CDs / MP3 CDs / Audio CDs This section shows you the basics on how to play discs. Before playing DVD Videos, VIDEO CDs, MP3 CDs, and audio CDs can be played with the machine. Do not play anything else. When playing DVD videos and VIDEO CDs, MP3 CDs turn on the TV and set the TV to the machine's input.*

*About the , , and marks in the pages related to DVD video / VIDEO CD / MP3 CD / audio CD operation means "The function or title is related to DVD operation." means "The function or title is related to VIDEO CD operation." means "The function or title is related to MP3 CD operation." means "The function or title is related to audio CD, CD-R, CD-RW operation." Tip to obtain a higher quality picture Occasionally, some picture noise not usually visible during a normal broadcast may appear on the TV screen while playing a DVD video because the high resolution pictures on these discs include a lot of information. While the amount of noise depends on the TV you use, you should generally adjust the TV to reduce sharpness when viewing DVD videos.*

*Playing DVD Videos / VIDEO CDs / MP3 CDs / Audio CDs If a sound selection menu appears on the TV screen See "Enjoying the Sound Effects" for details of the sound systems. Select the appropriate sound using , then press ENTER. For example, if you need to select either "DTS" or "Stereo", select "DTS" since the machine is able to reproduce DTS (Digital Theater System) Surround sound. Note The location index memory will also be cleared when: The power cord is unplugged, The machine has entered standby mode, The disc tray is opened, and The parental lock setting is changed or a disc menu language is selected.*

*To remove the disc Press OPEN/CLOSE to open the disc tray. Remove the disc after the disc tray opens completely. After removing the disc, be sure to press the button again to close the tray. Notes When you start playing a CD, the sound may not be reproduced briefly while the machine recognizes the sound system (DTS Surround or STEREO). If this happens, stop playback by pressing STOP, then press PLAY to restart playback. The sound will be reproduced from the beginning of the disc. Do not move the machine during playback. Doing so may damage the disc. Use OPEN/CLOSE on the remote controller or machine to open and close the disc tray. Do not touch the disc tray while it is moving.*

*Doing so may cause the machine to malfunction. Do not press down on the disc tray or put any objects other than playable discs on the disc tray. Doing so may cause the machine to malfunction. In many instances, a menu screen appears when playback of a movie is complete. Prolonged display of an on-screen menu may damage your television set, permanently etching that image onto its screen.*

*To avoid this, be sure to press STOP once the movie is complete. Basic Operation Basic Playback 1. Press OPEN/CLOSE. The disc tray opens. Note If the machine is in the input source is other than DVD, when you press OPEN/CLOSE, it takes several seconds until the disc tray opens.*

*To pause playback (still mode) The type of the inserted disc lights DTS Press PAUSE during playback. To start playback, press PLAY. To play frame by frame Press the button repeatedly during pause. Each time you press the button the picture advances one frame. To resume normal playback, press PLAY. Note The sound is muted during still mode and frame by frame playback. DOLBY DIGITAL DOLBY Pro Logic If a title menu appears on the TV screen The DVD video has a title menu, or the VIDEO CD is equipped with the PBC (Playback Control) function. Follow steps 2 and 3 in "Locating a title using the title menu".*

*Select desired folder 1. Press repeatedly to select the folder and an MP3 file you want to play at the stop mode.*

*2. Press ENTER after selecting your favorite song. When you know the title number, enter the MP3 title number using the numeric buttons on the remote controller and then press the ENTER button. Press button on remote controller to choose button for previous title. next title. Press 2. Place the disc on the disc tray. Put the disc in the tray with the label side facing up. There are two different disc sizes. Place the disc in the correct guide on the disc tray.*

*Slow searching Press SLOW during playback. Each press of [SLOW] changes the slowmotion speed as follows: DVD:SF 2X SF 4X SF 8X SF 16X SR 2X SR 4X SR 8X SR 16X PLAY VCD:SF 1X SF 2X SF 3X STEP BWD PLAY SF 2X SF 4X SF 8X SF 16X To stop playback Press STOP. When you press PLAY to restart playback, playback starts from the location where you stopped playback because the location index is stored in memory.(This state is called PRESTOP: DVD only.) SR 2X ANDBY/ON ST CAUTION Keep your fingers well clear of the disc tray as it is closing.*

*Neglecting to do so may cause serious personal injury. 3. Press PLAY. The disc tray is closed and playback starts. If you press OPEN/CLOSE to close the tray after step 2, playback may automatically starts depending on the disc.*

*One of the indicators which indicate the digital sound format of the playing source lights. Note The location where playback resumes may vary depending on the disc or the stopped scene. SR 4X SR 8X SR 16X PLAY Note When an MP3 disc is loaded, MP3 menu screen is displayed automatically depending on MP3 disc's folder (directory) structure as shown below. Select MP3 title when stopped SMART NAVI ROOT [CASA..] MA [CASA..] MA BACH BERIOZ BIZET ANDREA Resuming playback from the beginning Press STOP again after stopping playback to clear the location index memory, then press PLAY to start playback. Playback starts from the beginning of the current title. To start playback from the beginning of the DVD video, open and close the disc tray (press OPEN/CLOSE twice) then press PLAY to start playback.*

*Playback starts from the beginning of the disc. SF 1X SF 2X SF 3X STEP BWD PLAY Notes The sound is muted during slow-motion playback. To resume normal playback, press PLAY or press SLOW repeatedly until "PLAY" displayed. 18 19 Playing DVD Videos / VIDEO CDs / MP3 CDs / Audio CDs Fast Searching Press (Fast Reverse) or (Fast Forward) during playback or pause. The playback speed becomes two times the normal speed. Each press of or changes the playback speed as follows: FF 2X FF 4X FF 8X FF 16X 16 FF 32X 32 FF 64X 64 FF 128X 128 PLAY Locating a Specific Title/Chapter/Track by Disc Menu Notes The instructions above describe basic procedures which may vary depending on the contents of the DVD video.*



[You're reading an excerpt. Click here to read official DAEWOO DHC-X100 user guide](http://yourpdfguides.com/dref/3406164)

<http://yourpdfguides.com/dref/3406164>

If different instructions appear on the TV screen, follow those instructions. If you display the title menu during playback and press TITLE again without selecting any title, the machine usually resumes playback from the point where you first pressed TITLE. (There may be exceptional cases depending on the discs.) This method of locating a title is available only on a disc that contains a title menu.

Instruction notes of discs may refer to the button that displays the title menu as "TOP MENU". Locating a track using the PBC menu If a Video CD has "Playback Control" written on its disc or jacket, it means that particular scene or information can be selected for viewing interactively with the TV monitor using the PBC menu screen. Press PBC to select PBC[ON] [ON] To view the PBC menu screen when playing a PBC featured Video CD. [OFF] For playing a PBC featured Video CD without using the menu PBC screen. Press the MENU to return to the preceding PBC menu.

If there is no preceding menu (in case of the first menu), this function may not be executed. Notes No sound is reproduced and no subtitles appear during fast forward or reverse playback while playing back a DVD or a VIDEO CD, whereas the sound is reproduced while playing back an audio CD. The x2, x4, x8, x16, x32, x64 and x128 speeds are only approximate speeds. These speeds may vary slightly from disc to disc. FF 1X One FF 2X FF 3X Three FF 4X PLAY To resume normal playback, press PLAY or press / repeatedly until "PLAY" displayed.

FF 1X One MP3 FF 2X FF 2X PLAY Basic Operation FF 4X FF 6X Six FF 8X PLAY Locating a Specific Title/Chapter/Track by Disc Menu Normally, DVD videos are divided into titles, and the titles are subdivided into chapters. VIDEO CDs, and audio CDs are divided into tracks. Certain MP3 CDs are divided into MP3 files or folders, and the folders are subdivided into MP3 files or subfolders. You can quickly locate any specific title, chapter, track or MP3 file.

Locating a Specific Title/Chapter/Track/MP3 File/Location Locating a specific location by entering the time You can locate a specific location by entering its corresponding time (hours, minutes, and seconds). 1. Press GO TO. Make sure that the number next to "TIME" is highlighted. (DVD: Press it twice) 2. Press the number button(s) to enter the title number for the desired time.

Locating a specific chapter If a DVD video contains the numbers corresponding to the titles and chapters, you can locate a specific chapter in a specific title directly by entering the numbers. 1. Press GO TO to select CHAPTER. Make sure that the number next to "CHAPTER" is highlighted. Locating a title using the title menu If a DVD video contains a title menu, you can locate a specific title using the title menu function. 1. Press TITLE. (Depending on the DVD video, press MENU.) The title menu appears on the TV screen. Example of a title menu.

e.g. DVD Title 2. Press to select the title, MP3 file or directory you want. If the titles in the title menu are assigned a number, you can also directly locate a specific title by entering its assigned number using the number buttons.

3. Press ENTER or PLAY. @@ In case of MP3 CD, repeat steps 2 and 3 to select MP3 file. The machine start playback the selected MP3 file. e.g. @@@@ @e.g. To select chapter 4 TITLE 01/24 CHAPTER 004/025 3 . Press ENTER or PLAY. @@ Some scenes may not be located precisely. @@ Press ENTER or PLAY. @@ Press GO TO to select TITLE. 2. Press want.

@@1. @@e.g. To select track 12 Tuning Stations 1. @@1. Tune in the radio station you wish to preset using or 2. Press or to tune to the station. Station select mode will be changed from PRESET to Manual Tuning. 3. Press or to change the frequency.

@@ When a broadcast is received, scanning stops. 2. Select the preset number. 3. @@e.

g. To select title 2 TITLE 01/24 CHAPTER 001/004 2. Press ENTER or PLAY. The machine starts playback from the selected track. 3.

@@@@ @@@@1. Press TUNER to switch the input source to the tuner. "FM" appears in the machine's display. 2. Press or repeatedly to select a station you want. @@ Press ENTER or PLAY. @@ Notes Some title may not display chapter numbers. @@@@ @@@@ Press zoom button. (OSD zoom on) 2. Press or to zoom JPEG file.

You can magnify the JPEG file by 25, 50, 100, 150 and 200%. 3. Press to enjoy pan scan mode. You can store up to FM : 30 stations, AM : 20 stations. You can preset radio stations only with the buttons on the remote controller. Press TUNER to select FM./AM Press AUTO MEMORY. Preset no and Frequency displayed on the display. Deleting Preset Stations 1. Keep press STOP for more 1 second at the station you want to delete.

2. Press PAUSE/STEP while the frequency display is blinking. If you want to select one picture, move the cursor pressing press ENTER or PLAY. ,then Notes : Play modes of MP3 and JPEG files. DISC : Play all the tracks in the disc then stop.

DISC SCAN: Play the first 10 seconds of all the tracks in the disc then stop. FOLDER REP : Play all the tracks in the folder repeatedly. FOLDER : Play all the tracks in the folder then stop. REP ONE : Play a track repeatedly. SINGLE : Play a track then stop.

SHUFFLE ON : Play all the tracks in the folder randomly one time then stop. RANDOM : Play the tracks in the folder randomly. The JPEG function has 12 different slide shows. Press ANGLE to change the slide mode. 22 23 Receiving FM stations with RDS(Europe only) RDS(Radio Data System) is a broadcasting service which a growing number of FM stations are now providing. It allows the FM stations to send additional signals along with their regular program signals. For example, the stations send their station names and informations about what type of program they broadcast, such as sports or music, etc. When tuned to an FM station which provides the RDS service, the RDS indicator lights up, the station frequency(and then the station name if sent)is displayed. Not all FM stations provide RDS service, nor do all RDS stations provide same services. If in doubt, check with local radio stations for details on RDS services in your area.

This unit can use the following RDS service. PS (Programme Service name) Identifies each station by a name. RT (Radio Text) Allows the RDS station to send text messages that appear on the display of the unit. PTY (Programme Type) Identifies the type of RDS programme. This allows you to locate a specific type name of program being broadcast. Various Functions Common to all the Sources Adjusting the Volume The volume of the front left and right, center, surround left and right, and subwoofer speakers will be adjusted at the same time. When headphones are connected, you can adjust the volume of the sound Press VOLUME on the remote control unit or turn VOLUME on the machine. The volume level increases or decreases. Using the Sleep Timer Press SLEEP on the remote controller. "SLEEP 10" and SLEEP indicator appears in the machine's display, which means the machine will turn off and enter standby mode in 10 minutes.



[You're reading an excerpt. Click here to read official DAEWOO DHC-X100 user guide](http://yourpdfguides.com/dref/3406164)  
<http://yourpdfguides.com/dref/3406164>

Each time the button is pressed, the sleep time is changed to 10, 20, 30, 60, 90 minutes and OFF. When Sleep Timer is on, System's display dimmed. To cancel the Sleep Timer Press SLEEP repeatedly until the SLEEP indicator is disappeared. Switching the display contents To view RDS information on the display. Each time you press the button, the display changes to show the following informations.

PS(Programme Service) PTY(Programme Type) RT(Radio Text) Station frequency Basic Operation Searching for a desired programme by PTY codes One of the advantages of the RDS service is that you can locate a particular kind of program by specifying the PTY codes. The PTY Search function is applicable to preset stations only. To search for a programme using the PTY codes, follow this procedure Using the remote control unit. 1. Press PTY SEARCH button. "PTY" and "SELECT" appear alternately on the display. 2. Press or to select PTY. The display changes with each press of the button as shown below: NEWS AFFAIRS INFO SPORT EDUCATE DRAMA CULTURE SCIENCE VARIED POP M ROCK M EASY M LIGHT M CLASSICS OTHER M WEATHER FINANCE CHILDREN SOCIAL RELIGION PHONE IN TRAVEL LEISURE JAZZ COUNTRY NATIONAL M OLDIES FOLK M DOCUMENT TEST ALARM 3. Press the PTY SEARCH button again. While the search function is running, the selected program type and "SEARCH" alternate on the display. Once the station which is broadcasting the selected PTY(Program type) is located, searching will stop. Then the PTY will be indicated and the broadcast will commence. If a station broadcasting a selected PTY cannot be found, "NOT FOUND" is displayed on the display. The unit will then return to the station to which it was tuned prior to the start of the PTY Search.

RDS may not work correctly if the station to which you are tuned is not transmitting properly or if the signal strength is weak. RDS information could be changed with only remote control unit. If no adjustment are made in PTY Select mode, "PTY" and "SELECT" will continuously appear on the display. Perform the next step while "PTY" and "SELECT" are being displayed. Notes : To avoid damage to the speakers, do not keep operating the volume with distorted strong sound. Adjust the volume to the optimum listening level. Listening Through Headphones Connect the plug of the stereo headphones to the PHONES jack on the machine. Notes : The speakers will not reproduce sound while headphones are connected. Sound will automatically be switched to STEREO after connecting the headphones to the PHONES jack. Muting the Sound Press MUTE.

MUTE indicator in the machine's display is displayed. To restore the sound, press MUTE or Volume . Playing the Connected Source This section shows you how to play the sources connected to the machine. You may need to see "Connecting to a TV" on page 12 and "Connecting to Audio/Video Equipment" on page 13 while following the steps in this section. 1.

Press one of the INPUT SELECTOR buttons to select the input source: 2. Start playing the selected source 24 25 Enjoying the Sound Effects The surround sound of the machine lets you enjoy the presence of a movie theater or concert hall in your room. Before using any sound effect, make sure the Speaker Setup configurations have been set correctly. The speaker configuration is very important for the surround sound. See "Connecting Speakers" and "Positioning Speakers".

Following are the sound systems the machine can reproduce. Playing Repeatedly DOLBY DIGITAL Surround and DTS (Digital Theater System) Surround You can play a specific title, chapter, track or segment repeatedly (Title repeat, chapter/track repeat, all tracks and A-B repeat). DOLBY PRO LOGIC Surround This surround format consists of four channels (left and right front, center, and monaural surround channel) and emphasizes the center channel. This format is very effective for panning music, conversation, and threedimensional sound movement output from three front channels. It also simulates the atmosphere and surround effects of the sound reflected from the side and rear walls of the theater. VHS, VHS Hi-Fi, video disc, and DVD videos that have the mark are recorded using this system. DSP[Digital Signal Processor] The machine automatically detects the sound system when DOLBY DIGITAL Surround, DTS Surround is played back. The sound system appears in the machine's display. Lights up when DTS Surround sound is reproduced. Lights up when DOLBY DIGITAL Surround sound is reproduced.

Lights up when DOLBY Pro Logic Surround sound is reproduced. Lights up when DSP Surround sound is reproduced. Repeating a Title, Chapter, or Track You can play the same title, chapter, or track repeatedly (Title, chapter/ track repeat). Press repeatedly REPEAT to select the repeat function. When use DVD: CHAPTER REPEAT ON Repeating a Specific Segment You can play a specific segment repeatedly (A-B repeat). 1. Press A-B at the beginning of the segment (point A) you want to play repeatedly. A TO B SET A This 5.1-channel digital surround format lets you individually play five channels (left and right front, center, two surround channels) plus an LFE(Low Frequency Effect) channel for the low-range effect sound. It creates a realistic sound like that heard in theaters and concert halls.

repeat a current chapter repeat a current title TITLE REPEAT ON DOLBY DIGITAL Surround DVD videos that have the this format. mark are recorded using REPEAT OFF 2. Press A-B again at the end of the segment (point B). The machine automatically returns to point A and starts repeat playback of the selected segment (A-B). A TO B SET B Advanced DVD/Audio CD Operation DOLBY Surround DVD videos, video discs, and CDs that have the mark are recorded using this format.

To play back DTS Surround sound with connected equipment such as a video disc player, you must make the digital connection in addition to the above speaker configuration. Notes : DTS Surround If you play a DTS Surround encoded disc with the DTS, or a DTS encoded disc using a digitally connected player, you may hear a noise for a short while until the DTS decoder of the machine recognizes the DTS encoded signal and starts operating. This is not a malfunction. If you play in fast reverse or fast forward, pause, or skip a chapter or track, while playing a DTS Surround source, noise may be heard. This is not a malfunction.

Even when playback of the DTS Surround source stops and the DTS signal transmission ends, the machine remains in DTS mode and the DTS indicator remains lit. This is to prevent noise when you pause, fast forward, fast reverse, or skip a chapter or track of the playback source. Some CD players (if connected to the machine) and video disc players may be unable to play DTS Surround sources correctly even if you connect the player to the machine digitally. In such a case, the digital signals (such as the output level, sampling frequency, frequency response, etc.



[You're reading an excerpt. Click here to read official DAEWOO DHC-X100 user guide](http://yourpdfguides.com/dref/3406164)  
<http://yourpdfguides.com/dref/3406164>

) processed by the player cannot be recognized as DTS data by the machine and you may hear noise instead of the proper sound. When use Video CD/Audio CD REPEAT ONE repeat current track repeat all tracks To resume normal playback Press A-B repeatedly until "A TO B CANCELLED" displayed on screen or disappear "REPEAT A-B" indicator in the machine's display. Notes Some discs may not permit A-B repeat operation. You can play a specific segment only within the current title or track. You cannot set the A-B repeat function for segments that include multiple camera angles. There may be a slight difference between point A and the location where playback actually resumes depending on the disc.

**REPEAT ALL REPEAT OFF** While playing back sources other than DOLBY DIGITAL and DTS Surround sounds, you can select the desired DSP mode. Press SURR. MODE on the remote controller repeatedly until the desired DSP mode appears in the machine's display. The DSP indicator lights up when one of the DSP modes is selected. Each press of the button changes the DSP mode as follows: Ex) STEREO DOLBY PRO LOGIC MUSIC(PRO LOGIC II) MOVIE(PRO LOGIC II) STADIUM(DSP) To resume normal playback Keep on pressing REPEAT button until REPEAT OFF is displayed on the TV. The repeat function becomes cleared and the playing state changes to normal. Notes Some discs may not permit repeat operation. Repeat play works only with discs for which the elapsed playing time appears in the machines display during playback. 26 27 Playing in Random Order Zooming a Picture Selecting the Camera Angle You can play titles, chapters within a title, or tracks in random order (SHUFFLE playback). You can zoom in on a picture. You can also shift the zoom point. Some DVD discs may contain scenes, which have been shot simultaneously from a number of different angles. For these discs, the same scene can be viewed from each of these different angles using the ANGLE button. If the loaded disc supports multiple angles, you can see indicator on the machine's display and TV screen. Playing Chapters or Tracks in Random Order The machine automatically selects the chapters in a DVD video, or tracks in a VIDEO CD/audio CD, and plays them randomly.

1 Press STOP button Press the STOP button for normal VCD or Audio CD, PBC button for CVD, SVCD and VCD 2.0 with PBC to stop playing because this function is valid only for STOP state. 2 Press RANDOM button on remote controller When the RANDOM button is pressed, SHUFFLE ON is displayed on the TV screen and the RANDOM indicator on the machine's display is turned on. SHUFFLE ON Zooming a Picture and Shifting the Zoom Point 1. Press ZOOM during normal or still playback.

If you press ZOOM repeatedly, the magnification level increases. ZOOM X 1.5 Changing the Camera Angle If the scene was recorded from multiple angles, you can easily change the camera angle of the scene you are watching. 1. Press ANGLE while playing a scene recorded with multiple angles. Press ANGLE while the angle icon is displayed. ZOOM X 2 Advanced DVD/Audio CD Operation ZOOM X 3 ZOOM OFF 2. Press ANGLE or while the angle number is displayed on the TV screen. Each time you press ANGLE, the camera angle changes. To turn off the angle number display Press ANGLE repeatedly to select the Original Angle Number.

**SHUFFLE OFF** To shift the zoom point Press . 3 Press PLAY button When the PLAY button is pressed, the shuffled track starts playing. To resume normal playback press STOP to stop random playing and then press RANDOM button. When the RANDOM button is pressed, SHUFFLE OFF is displayed on TV and the RANDOM indicator on the machine's display is turned off. Notes Notes Some discs may not permit to zoom operation. During some scenes, the buttons may not work as described above. Zooming does not work on subtitles or menu screens included on DVD videos. During zoom playback, does not work on menu screens included on DVD videos. If you want to view the menus, cancel zoom playback. The magnification level varies depending on the picture size you select.

Some discs may not permit random playback operation. If you press during random playback, the DVD Receiver goes to another title or track and continues random playback. The display between TV screen and the machine is different. While the machine display "RANDOM", TV screen may display "SHUFFLE". To resume normal playback Press ZOOM repeatedly until "ZOOM OFF" display.

28 29 Selecting the Digest This function helps speedy search to the desired track by displaying 9 different small screens per page showing information regarding the tracks recorded on the disc. Selecting Subtitles Included on the DVD 1. Press STOP button Press the STOP button for normal VCD or PBC button for CVD, SVCD and VCD 2.0 with PBC to stop playing because this function is valid only for the STOP state. 2. Press DIGEST button If the DIGEST button is pressed, 4 submenus are displayed on the TV screen as shown below. Select the submenu, which you want, by pressing the appropriate number button and the ENTER button. If you don't want this function, press number 4 for exit. 1 2 INTRO DISC 3 4 TRACK EXIT 3. When you choose INTRO All the tracks on the disc are played for 10 seconds if no key is pressed. After all the tracks are played, it stops and displays STOP on the TV. 4. When you choose DISC or TRACK Digest function will play and display in the small screen in the center. Each screen plays approximately five seconds while displaying a total of nine screens as shown in the figure. Press NEXT button to see the next page and press PREV button to see the previous page.

1 2 3 You can display subtitles on the TV screen and select a subtitle language from those included on the DVD video. Selecting a Subtitle Language You can select a subtitle language from those included on the DVD video. 1. Press SUBTITLE during playback. The subtitle setting is displayed for about 3 seconds. SUBTITLE 01/03 ENGLISH To turn subtitles off During playback 1. Press SUBTITLE repeatedly until the "SUBTITLE OFF" displayed on the TV screen.

SUBTITLE OFF 8 9 4 7 6 5 Digest submenu for VCD 2. Press SUBTITLE. Each time you press SUBTITLE, the subtitle language changes to the next language included on the DVD video.

SUBTITLE 01/03 ENGLISH Notes Some DVD videos are set to display subtitles automatically, and you cannot turn them off even if you set the subtitle function to off. During some scenes, the subtitles may not appear immediately after you select "On". Some DVD videos will allow you to make subtitle selections and turn subtitles on or off only by using the disc menu. Advanced DVD/Audio CD Operation 1. INTRO plays each track for 10 seconds (VCD only).

2. DISC shows digest screen based on the disc. It plays each track on the thumbnail screen for about 5 seconds (VCD only). 3. TRACK shows digest screen based on the track.



[You're reading an excerpt. Click here to read official DAEWOO DHC-X100 user guide](http://yourpdfguides.com/dref/3406164)  
<http://yourpdfguides.com/dref/3406164>

It plays partitioned track on thumbnail screen for about 5 seconds (VCD only). 4. EXIT just exits digest function Digest - DISC 1 2 3 SUBTITLE 02/03 KOREAN 9 4 8 7 6 5 SUBTITLE 03/03 SPANISH Digest - TRACK 5. Press the desired screen number If you press the desired number of small screen, it starts playing from the position where the small screen begins. You don't need to press the ENTER button. Notes This function is a disc dependent. There are some DVD discs that prevent selecting subtitle even though the disc supports multiple subtitles. In this case, the subtitle should be selected via the disc menu. If a disc has not the subtitle selected on SET UP menu, the prior programmed language in the disc will be displayed. During some scenes, the subtitles may not appear immediately after you change the subtitle language.

30 31 Selecting the Audio Language/Sound Included on the Disc Selecting the Audio Language/Sound Included on the Disc You can view information about a disc and its operational status on the TV screen. Checking the Total Number of the Titles/Tracks, Current Title/Chapter/Track, Remaining and Elapsed Time, etc. You can select a preferred audio language and sound system. Press DISPLAY while the disc is stopped or playback. Each time you press DISPLAY, the on-screen display on the TV screen changes as follows. About recording systems This machine uses the Dolby Digital, DTS, and PCM systems and cannot play DVD videos recorded in any other sound system. Notes Some discs allow you to change audio selections only by using the disc menu. If this is the case, press MENU and choose the appropriate language from the selections in the disc menu. Some discs may have only one audio language and sound recording system set and you cannot change this selection. The "Audio Language" setting in the setting menu is for automatic selection of the audio language among those included on the DVD video when the DVD is inserted.

Therefore, the selection in this section will not change the setting of "Audio Language" in the setting menu. (Occasionally, the audio language and sound system are selected by the disc.) TITLE REMAIN 00:10:00 SINGLE REMAIN 00:01:40 Selecting a Playback Audio Setting You can select the preferred audio language and sound system as a set from those included on the DVD video. This function lets you temporarily change the audio language which you selected as the automatic setting in the setting menu, and choose the sound system if the DVD video is recorded in more than one sound format. 1.

Press AUDIO during playback. The audio setting is displayed for about 3 seconds. In case of DVD video TITLE 01/09 CHAPTER 005/044 00:51:40 In case of VIDEO CD/AUDIO CD SINGLE ELAPSED 00:02:40 CHAPTER ELAPSED 00:08:00 TOTAL ELAPSED 00:10:40 Advanced DVD/Audio CD Operation AUDIO 1/3 : D 5.1 KOREAN CHAPTER REMAIN 00:01:00 TOTAL REMAIN 00:15:40 2. Press AUDIO.

Each time you press AUDIO, the language and audio recording system set changes. AUDIO 1/3 : D 5.1 KOREAN Selecting Sound Channels A Video CD may left and right channels which contain sounds or languages on each channel. You can switch these two channels to hear a preferred sound or language.

During playback, press MPX (repeatedly) to select the sound channel. In case of MP3 CD CHAPTER ELAPSED 00:05:00 AUDIO 2/3 : D 2CH KOREAN AUDIO 3/3 : DTS 5.1 KOREAN CHAPTER REMAIN 00:01:07 Note Dolby Digital 5.1 Channel sound may be displayed as " D 5.1." 32 33 Customizing the Function Settings When you insert a DVD Video, VIDEO CD, the various functions of the machine will be set (reset) according to the setting menu.

You can customize this setting menu according to your preference. PARENTAL LOCK (DVD only) This function is to disable the playing of specified DVD that are unsuitable for children. As each disc has slightly different codes, please refer to the disc instruction. There are 8 levels. If the level is 8, the contents of the disc are suitable for adult. If the level is 1, the contents of the disc are suitable for child. If you didn't set a new password and level, there is no restriction playing discs. When you turn on this unit for the first time, setting the new password is recommended Selecting a Setting The setting menu asks you to select a setting category from among LANGUAGE, AUDIO and OPERATION. Each selected setup menu will provide you with setting details. 1.

Press SETUP / SPK SETUP / DELAY TIME. The on-screen display appears. SETUP -- SET UP PAGE -TV DISPLAY TV DISPLAY TV TYPE OSD LANG DYNAMIC VIDEO OUTPUT AUDIO SUBTITLE DISC MENU NORMAL/PS NORMAL/LB VIDEO PARENTAL You can set the parental lock level what you want. Once selected, whenever you play a disc, the selected parental is compared to the level on the disc, if the level you selected is greater then the level of the disc, you may play the loaded disc. If not, you may not play the disc.

To set appropriate parental level, do the following instruction. 1. If you move the cursor to PARENTAL button on SET UP PAGE, using you can see the sub items of PARENTAL. -- SET UP PAGE -OSD LANG DYNAMIC VIDEO OUTPUT AUDIO SUBTITLE DISC MENU DEFAULT PARENTAL 2 3 PG 4 PG 13 5 6 PG-R 7 NC-17 8 ADULT NO\_PARENTAL PASSWORD You can change the password for the parental lock. To change the current password to the new one, do the following instruction.

2. Press to select the setup menu. 3. Press ENTER on the selected menu. SPEAKER SETUP -- SPEAKER SETUP PAGE -FRONT CENTER REAR SUBWOOFER LARGE SMALL 4. Press to move the setting item. 1. If you move the cursor to PASSWORD using button on SET UP PAGE, you can see CHANGE. -- SET UP PAGE -- Advanced DVD/Audio CD Operation 5. Press to select the setting item.

DYNAMIC VIDEO OUTPUT AUDIO SUBTITLE DISC MENU DEFAULT PARENTAL PASSWORD CHANGE DELAY TIME SPEAKER POSN DIGITAL OUT FRONT POSN CENTER POSN REAR POSN OFF ON In case of the password setup menu. and ENTER to set 4 digits password Press number. 6. Press ENTER on the selected item. 7. Press to select the setup menu. 2. You can move to the level position by pressing the button. Move to the level what you want using button, than select by pressing ENTER button. 2.

You can move to CHANGE by pressing the button. Press ENTER button. 8. To finish the setup, Press SETUP / SPK SETUP / DELAY TIME . Repeat 1~6 Steps to select your desired setting.

3. Input your password. If it is the first time inputting password, the password is "0000". INPUT PASSWORD : 3. Input your current password on OLD PASSWORD.

Input the new password what you want to use from now on NEW PASSWORD. Re-input the new password on CONFIRM PWD. If it is the first time changing password, Input "0000" on OLD PASSWORD. PASSWORD CHANGE PAGE OLD PASSWORD : NEW PASSWORD : CONFIRM PWD : 4. The parental level will be changed by pressing the ENTER button. Notes AUDIO / SUB TITLE / DISC MENU / DEFAULT / PARENTAL / PASSWORD can only be selected/accessed in STOP mode.



[You're reading an excerpt. Click here to read official DAEWOO DHC-](http://yourpdfguides.com/dref/3406164)

[X100 user guide](http://yourpdfguides.com/dref/3406164)

<http://yourpdfguides.com/dref/3406164>