



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DLT-19W4T. You'll find the answers to all your questions on the DAEWOO DLT-19W4T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO DLT-19W4T  
User guide DAEWOO DLT-19W4T  
Operating instructions DAEWOO DLT-19W4T  
Instructions for use DAEWOO DLT-19W4T  
Instruction manual DAEWOO DLT-19W4T

DAEWOO   
ELECTRONICS

GB

## LCD TELEVISION INSTRUCTION MANUAL

**DLT-19W4T**  
**DLT-22W4T**  
**DLT-20J1T**  
**DLT-20J3T**  
**DLT-20J9T**



[You're reading an excerpt. Click here to read official DAEWOO DLT-19W4T user guide](http://yourpdfguides.com/dref/3403777)  
<http://yourpdfguides.com/dref/3403777>

**Manual abstract:**

**@@@CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. DISPOSAL OF USED ELECTRICAL & ELECTRONIC EQUIPMENT (Europe only)** The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipment waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. @The recycling of materials will help conserve natural resources. @@@@Always follow all warnings and instructions marked on the television. 1. Read, Retain and Follow All Instructions Read all safety and operating instructions before operating the TV. Retain them safely for future reference. Follow all operations and instructions accordingly.

2. Heed Warnings Adhere to all warnings on the appliance and in the operating instructions. 3. Cleaning Unplug the TV from the wall outlet before cleaning. Do not use liquid, abrasive, or aerosol cleaners.

Cleaners can permanently damage the cabinet and screen. Use a lightly dampened cloth for cleaning. 4. Attachments and Equipment Never add any attachment and/or equipment without approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury. 5. Water and Moisture The apparatus must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed very close to the apparatus. Because they may be splashed when watering the plant. 6. Setting Do not place this TV on an unstable cart, stand or table. Placing the TV on an unstable base can cause the TV to fall, resulting in serious personal injuries as well as damage to the TV. Use only a cart, stand, bracket or table recommended by the manufacturer or salesperson. 7. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the TV and to protect it from overheating. Do not cover the ventilation openings in the cabinet and never place the set in a confined space such as a built-in cabinet unless proper ventilation is provided. Leave a minimum 10 cm gap all around the unit.

8. Power Source This TV should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company. 9. Grounding or Polarization This TV is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet.

Do not defeat the safety purpose of the polarized plug.

This is because apparatus with CLASS II construction must be connected to a MAINS socket outlet with a protective earthing connection. 10. Power-Lead Protection Power-supply leads should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to leads at plugs, wall outlets, and the point where they exit from the TV. MAINS plug which is used as the disconnect device. The disconnect device shall remain readily operable.

11. Lightning For added protection for this TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV due to lightning and power-line surges. 3 Important Safeguards 12. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits.

When installing an outside antenna system, extreme care should be taken from touching such power lines or circuits as contact with them might be fatal. 13. Overloading Do not overload wall outlets and extension leads as this can result in a risk of fire or electric shock. 14. Object and Liquid Entry Never push objects of any kind into this TV through openings as they may touch dangerous voltage points or short-out parts that could result in fire or electric shock. Never spill liquid of any kind on or into the TV. 15. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and buildup static charges. Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

**EXAMPLE OF ANTENNA GROUNDING** Antenna lead in wire Ground clamp Electric Service Equipment Antenna discharge unit (NEC section 810-20) Grounding conductors (NEC section 810-21) Ground clamps Power service grounding Electrode system (NEC art 250, part h) 16. Servicing NEC -- national electrical code Do not attempt to service this TV yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 17. Damage Requiring Service Unplug the TV from the wall outlet and refer servicing to qualified service personnel under the following conditions: (a) When the power-supply lead or plug is damaged. (b) If liquid has been spilled, or objects have fallen into the TV. (c) If the TV has been exposed to rain or water. (d) If the TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the TV to its normal operation. (e) If the TV has been dropped or the cabinet has been damaged.

(f) When the TV exhibits a distinct change in performance - this indicates a need for service. 18. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards. 19.

Safety Check Upon completion of any service or repair to the TV, ask the service technician to perform safety checks to determine that the TV is in a safe operational condition. 20. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.



**[You're reading an excerpt. Click here to read official DAEWOO DLT-19W4T user guide](http://yourpdfguides.com/dref/3403777)**  
<http://yourpdfguides.com/dref/3403777>

21. Disconnection Please place the TV set in such a way that the main plug can be easily disconnected.

4 Warning This section must be read carefully and followed by the user prior to the operation of the product. The manual states important instructions for the user's own safety, and the proper operation of the product. Ignoring or disregarding the contents of this section and improper operation of the product may result in the person's death or serious injury. WARNING To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside. Refer to qualified service personnel for repair. To prevent fire and damages to the product, unplug the unit from the outlet during a lightning storm, or when it is left unattended and unused for a long period of time Slots and openings in the case are provided for ventilation to ensure reliable operation of the product. Never put in any items-such as coins, paper, matches- through these openings as they may touch dangerous voltage points that could result in fire or shock hazard. Hold the plug when unplugging the unit from the outlet. The lead may cause fire or electric shock if damaged.

In case of an accident, please unplug the unit from the outlet immediately. Do not put any object that contains water - for example a vase,flower pot,etc.- near to the unit.The water may penetrate into the unit, and be a cause of fire or hazardous electric shock. Do not put on or use the product near water and moisturesuch as in a bathroom, washbowl, etc. It may cause fire and electric shock hazards Do not let children hang on to or climb on the product since it may cause serious injury. Do not cause the product to lean or put it in an unstable position because if it falls it may cause serious injury to a person, as well as damage to the product if it falls. Do not spill water or drop the remote control since it may cause a malfunction. Do not put volatile substances such as benzene, naphtha- near the product since it may cause a change in the product's colour. 5 Warning This section must be read carefully and followed by the user prior to the operation of the product.

The manual states important instructions for the user's own safety, and the proper operation of the product. Ignoring or disregarding the contents of this section and improper operation of the product may result in the person's death or serious injury. CAUTION Do not view the TV too closely since it may cause damage to your eyes. Please keep the user's manual in a safe place for future reference. Refer servicing to qualified service personnel for cleaning at least once a year since dust inside the TV set may result in a fire or malfunction of the product.

The product should be situated away from any heat sourcesuch as radiators, heat registers,stoves,or other products that produce heat. Do not cover the top of the television set.Ventilation will be prevented,and it may cause a fire if the product is internally overheated. Do not put heavy items on the power lead since it may result in a fire or hazardous electric shock if the lead is damaged. Please be aware of electric wires and cables when installing the antenna.

It may be a cause of hazardous electric shock and fire if the antenna touches or falls on the electric wire; thus, it must be installed firmly, and far away from the cables. Do not expose the product to a dusty or moisturised place since it may cause malfunction. Do not touch the power lead with moisturised or wet hands when plugging to or unpluggingfromtheoutletsinceitmay cause an electric shock. 6 Table of Contents Installation and Maintenance Supplied

Accessories . . . . .

. Install Stand . . . . .

. . . . Parts of the Remote Control .

. . Name of Each Part . . .

. . . . . Preparation . . . . .

. . . . .

Antenna Connection . . . . .

. . . External Equipment Connection. PC Connection .

. . . . .

. Multimedia Connection Notes . . Digital Amp. Connection . . . . .

. . . . .

. . . . .

. . . . .

. . . . .

. . . . .

. . . . .

. . . . .

. . . . . 7. 21. NORMAL : The NORMAL button changes picture mode as follows: Normal Movie Favourite Dynamic Normal 22.

RECALL : You can recall the present modes (TV, Video, Component, HDMI, PC) and Signal information. In TV mode, the Programme number and Sound.

PR/PAGE PR/PAGE SELECT OK 23. CANCEL/EXIT (digital mode only): Using this button to move upper menu or exit the menu on DVB-T. 24.

Colour Keys (RED, GREEN, YELLOW, BLUE) : Using on text or DVB-T mode. 25.TEXT (TEXT, REVEAL, T.CANCEL, SIZE, SUBCODE, HOLD, MIX, INDEX): see page 45. 26.

GAME (option) : You can play Sudoku game. SUBCODE 11 Name of Each Part Front LED Indicator DLT-19W4; DLT-22W4 Remote Sensor LED Indicator DLT-20J1; DLT-20J9 Remote Sensor AV PR Up/Down Volume Up/Down Volume Up/Down PR PR Up/Down AV Menu Power On/Off Power On/Off Remote Sensor LED Indipicture below, if necessary. See note below. 3. Turn on the PC and TV set. " button of the TV set. 4. Select HDMI mode by pressing the "AV" button on the remote control or " PC Back of the tv set Note : If the graphic card of the PC only supports a DVI signal, you must connect the Audio cable as shown in the picture above. 18 Multimedia Connection Notes Common notes - If you turn on TV when the TV is cold, small „flickering" object like pen for a long time. It may cause some temporary distortion effects on the screen.

phenomenon can happen. But this is normal and no - Red, Green or Blue spots may appear on the screen. malfunction of LCD TV. - Please do not touch or press LCD screen with finger or But monitor performance is not effected. PC Connection Notes - If possible please use the best resolution to the below. \* DLT-19W4, 22W4 : 1440 x 900 at 60Hz \* DLT-20J1,20J3,20J9 : 640 x 480 at 60Hz - If there is a "Vertical Frequency" setting menu in the [Display] Menu of the PC, adjust the frequency to 60Hz. - If the PC resolution is too high, it may be hard to detect signals. Select a suitable resolution. - HDMI input port receives only digital Signal. - Depending on the graphic card when you plug & unplug the HDMI connection the screen may not display correctly.

Restart the computer if this happens. PC input resolution table in LCD Resolution 640 x 480 800 x 600 1024x768 1280x768 1440 x 900 V-freq 60Hz 60Hz 60Hz 60Hz 60Hz DLT-19W4, 22W4 PC(D-Sub) HDMI o o o o o o x o x DLT-20J1, 20J3, 20J9 PC(D-Sub) HDMI o o x x x x x x x x Remark - Depending on

*graphic card, problems like no signal detected or line noises can occur. If these problems do occur contact the graphic card company for help. - Due to window version, some message may appears on the screen. Then follow the message shown.*

*- If the message "No signal" appears on the screen, please adjust the PC output by referring to the below "PC resolution table" . - When you connect with component, PC(D-Sub), and HDMI, you must check the input resolution of external devices. DVD / Set Top Box connection notes Note : · Be sure that 720x480i and 720x576i are not available by HDMI input in this LCD TV.*



**[You're reading an excerpt. Click here to read official DAEWOO](#)**

**[DLT-19W4T user guide](#)**

**<http://yourpdfguides.com/dref/3403777>**



Press the Number buttons (0.

..9) or the " PR " button to select a program number you want. SELECT OK PR/PAGE PR/PAGE 2. Locate the selection bar on the Manual tuning at the Install menu. · Press the "MENU" button to select the Install menu. · Move the selection bar to the Install menu with " / " buttons. · Place the selection bar on Manual Tuning and press the " " button. PR/PAGE Picture SELECT OK PR/PAGE Auto Tuning Manual Tuning Setup Access Access Access Access Screen Sound Install Function DVB Select Edit Access Exit 3. Execute Manual Tuning.

· A tuning screen will appear and cursor will move from left to right / from right to left. If you want to stop tuning press the "MENU" button. · You should press the "OK" button to store a program then the PR number is changed to red. If you don't want to store the program, press " / " button to skip the program. · To store another program, select other PR number using " / " buttons and press " / " buttons. PR/PAGE SELECT OK PR/PAGE Manual Tuning Pr08 Access Euro Exit Note : · If you are unable to get any programs using Auto Tuning due to a poor broadcasting signal, it may still be possible to store channels using the Manual tuning. · If present channel is SECAM L/L', TV set search SECAM L/L'. And, if present channel is not SECAM L/L', TV set search all channels except SECAM L/L'. 25 Setting Up TV Stations Setup The Setup menu shows you information as follows: - Channel, System, Frequency, Station name,

Program number and Store to PR number. 1.

Searching for channels in the Setup menu. · Press the " PR " buttons to select a program number you want. · Move to Setup in the Install menu. · Search a real channel informations (Channel, System and Program) with " / " buttons. · Search: Press and hold for more than 1second the remote control " / " buttons to start up/down manual tuning.

· Searching will stop automatically at the next channel found (to stop tuning, press the remote control MENU button). · Also you can directly locate a program by entering the data into the "Channel" or the "Frequency" function. 2. Fine tuning. · Move to Setup in the Install menu.

· Move the cursor to Frequency by pressing " / " buttons. · Adjust the fine tuning with the " / " buttons. @@Enter a station name. · Move to Setup in the Install menu. · Move the cursor to Name by pressing " / " buttons. @@@@- Skip information: Yes or No. 1. Deleting the program positions. · Move to Edit in the Install menu. @@@@- Moving the program positions.

· Move to Edit in the Install menu. · Press the "Move" (GREEN) button. The program and station name is highlighted in green. @@@@-00 Name Channel C 04 C 33 C 25 C 02 C 12 C 21 Exit Skip Skip No No No No No No 3. Skipping the Programs. · Move to Edit in the Install menu. · Move the selection bar to the program number you want to skip · Press the "Skip" (YELLOW) button, then the skip area will cycle through : Yes and No. OK PR/PAGE Screen Sound Install Function DVB Select Delete 01 02 03 04 05 Move 27 DVB Menu The very first time that you switch to DVB mode, the Country selection menu will appear on the screen. Its purpose is to enable you to select the country that will be used for all the OSD (On Screen Display) menus. The user must enter a choice of country before proceeding further.

For Spain, also select the region where you locate("Peninsula"or"Canarian Islands"). @@Then, select DVB menu. You may see the DVB during any DVB menu directory, press MENU OSD. @@@@- Upgrade the software. View the signal information.

@@- EPG : Electronic Program Guide. @@@@- The menu will be displayed on the screen.

@@@@- Select a favourite list and press the "OK" button to modify the list as you do in the create a favourite list menu. Favourite lists Create Modify Delete Access Access Select OK Access Return EXIT Exit DELETE Select the list name that you want to delete using the " / " buttons, and press the "OK" button to delete the selected favourite list. The popup menu will ask if you confirm or cancel the delete operation.

Note : The default favourite channel list names (RADIO and TV) are not displayed in the list, so you can only delete the list name you created. Modify a favourite list Radio TV FAV1 FAV2 FAV3 Select OK Access Return EXIT Exit Configuration You can select desired item by using the " / " buttons and press the "OK" button to enter selected one. Configuration Installation User Settings System Parameters Time Settings Signal Information Access Access Access Access Access Access INSTALLATION Use these options If you have moved location or want to rescan for new channels. Press "OK" button to display the Installation menu. - Auto is the function to scan each channel automatically. Press the "OK" button and choose the installation type by using the " / " buttons. and press the "OK" button to start the installation process. If you choose "Add" the new channels will be added in the channel , list. If you choose "New" the new channels will replace the previous , channels in the channel list. If you cancel automatic search before it is completed, the previous list of services is used, if already stored.

- Manual is the function to scan for an individual channel. Choose scan type (update or new) and select channel number to be scanned. Conditional Access Select OK Access Return EXIT Exit Installation Auto Manual New Channels Access Access Access Select OK Access Return EXIT Exit Installation Installation type Add Select OK Access Return EXIT Exit 30 DVB Menu - New Channels shows the channels that you add in the channel list recently. The type icon of the program is displayed against the channel name. Note : · The DVB system requires a good signal to provide the best picture. For the DVB system, interference can disrupt the flow of data causing the picture to appear to be made up of large blocks or to freeze intermittently. Also if there are no channel in the list after installation, do install process again. · If the picture disappears completely, this could mean that signal quality is very poor. If this happens, you may need to improve your aerial system to provide a better signal. New Channels TV TV 13 14 ITV1 ITV3 Select OK Access Return EXIT Exit USER SETTINGS - Menu Language You can select DVB menu language among to the followings: English, French, German, Italian, Spanish, Danish, Netherland, Greek, Portugal, Turkey.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DLT-19W4T user guide](#)

<http://yourpdfguides.com/dref/3403777>

Notes : · When you change DVB menu language, Analogue menu language will be change simultaneously. · The language you selected in this menu is not Analogue OSD language, then the Analogue OSD will be replaced by English automatically. For example, if you select Turkey for DVB menu then Analogue menu will be set to English (also refer "Available Language Table" on page 41). User Settings Menu language Audio language Audio language 2 Subtitles language Subtitles language 2 Subtitle display Antenna Power Select OK English English English English Off Off Return EXIT Access Exit - Audio language / Audio language 2 This function select which language soundtrack you will hear when switching to a channel broadcasting with multiple soundtracks. Move cursor to the Audio language item and select the desired language by " / " buttons.

@@@ Move cursor to the Subtitle language and select desired language. @@- Subtitle display You can toggle between subtitle On and Off. @@@@ When you enter this menu warning message will ask proceed or not. @@@@ And then press "OK" button to upgrade software. If there is a new software, the unit will upgrade itself.

@@@ If you select Auto, time will be automatically set by broadcasting signal. In this option time can be different than real time. If you select Manual, you can set time by yourself. SIGNAL INFORMATION Select Signal Information item and press "OK" button. Cycle through the channel option by using the " / " buttons on the remote control. The signal level and signal quality of the channel that offers the upgrade software can be observed on the two bar graphs. The bar graphs of signal quality and signal level give a good indication of whether the selected channel is likely to be found. If the signal quality bar is high as well then it is a digital frequency and digital channels will probably be found. 32 Re-installation confirmation All private settings and other user data will be erased. Do you want to proceed? Yes Select OK Access Return EXIT Exit Time Settings Date and Time Mode 01/01/2007 00:26 Auto Select OK Access Return EXIT Signal Information Channel Frequency Level Quality 05 178.

750 Select OK Access Return EXIT Exit DVB Menu CONDITIONAL ACCESS - This allows you to upgrade your TV set with additional features including access to extra channels (if available) using a conditional access module (eg. TopUp TV). - If there is no CI Card in the slot, "No CI or CA device present" appears on the screen. - The Common Interface menu allows you to access a pay-per-view(PPV) service on your TV set. This feature operates once you have obtained a CI module and a viewing card. If you want to know the PPV service in your region, please contact your nearest PPV provider for detail. - Sub menu shown to the right is depends on module and may different than yours. Note : A Common Interface is available to connect a CAM (conditional access module) and a smartcard. Please contact your service provider to get more information about these modules. Multi CI-CA List Top Up TV Select OK Access Return EXIT Exit Parental Control You can prevent unauthorized users such, as children, from watching Parental control unsuitable programmes by a digit PIN code that is defined by the user Parental control Disabled (PIN: Personal Identification Number).

Channel lock No Maturity level None PARENTAL CONTROL You can select between Enabled and Disabled by using " / " buttons. If you select enabled then the following items can be altered. PIN code change Channel lock Select Access Return Exit If you toggle this option to Yes, the channels you locked in the edit channel list menu can't be displayed before you enter the PIN Code. Maturity level There are 18 levels total. If you toggle this option to a number (1-18), for example, you toggle it to 12, that's to say, if the channels broadcast material is not suitable for the family members who are under 12 years old, you must enter the PIN Code before you can view them.

(The maturity level information should be broadcast with these programs.) PIN Code change Press the "RED" button and enter the previous code by using the 0-9 buttons on the remote control. Then enter the new code twice times to confirm. Press the "OK" button to quit the parental control menu with saving these alteration. If you don't want to change new PIN Code press the "CANCEL/EXIT" button to quit the parental control menu.

OK EXIT Note : · The default PIN Code for parental setting is "0000" . · If you have forgotten your personal password, you can reset to the default password "0000" by pressing the key sequence: RED - RED - GREEN - GREEN - YELLOW - YELLOW - BLUE - BLUE 33 DVB Menu EPG (Electronic Programme Guide) You can check program schedules by press the "GUIDE" button on the remote control. When you enter EPG current program is highlighted and you can navigate channel by pressing the channel up/down " / " buttons to change channels and view the other programmes on the selected channel. Press the " / " navigation buttons to scroll through and show programme content. There is a 7day EPG, you can see the other days channel list by using left / right navigation arrow " / " buttons. The short description of the highlighted channel is shown under the image window, and you can see the extended description by press) and you can close this window by pressing the "INFO" button ( ing this button again. TV Guide 1 Five Tuesday 09/10 06:00 Breakfast 09:15 Real Rescues 10:00 Homes Live 11:00 To Buy or Not to Buy 11:30 Car Booty 12:15 Bargain Hunt 13:00 BBC News 13:30 BBC London News Other days Select Start your day with all the latest news, sport, business and weather from the BBC's Breakfast team. Includes regional news at 25 and 55 minutes past each hour. Details Return EXIT Exit 34 AV Selection Setting screen modes Adjustment of Screen Size in TV and AV mode - Press "AV" button on the remote control then screen changes as follows: TV AV1 AV2 Component HDMI PC TV - When you select HDMI or PC mode, check to the following. 1.

For optimum picture quality, use to the below computer or set top box output. Using other formats or refresh rates may result in reduced picture quality. \* DLT-19W4/22W4 : 1440 x 900 at 60Hz refresh rate \* DLT-20J1/20J3/20J9 : 640 x 480 at 60Hz refresh rate 2. If the message "No signal" appears on the screen, adjust the PC output to a format listed in the PC input resolution table on page 19. Note : · The menu disappears if you do not operate any button for about 60 seconds from the menu appearing. · See page 17 for connection method of Camcorder and Video. Setting various screen modes - User can select various screens designed for a good picture without adjusting The brightness, contrast or colour individually by pressing "NORMAL" button on remote controller.



[You're reading an excerpt. Click here to read official DAEWOO DLT-19W4T user guide](http://yourpdfguides.com/dref/3403777)  
<http://yourpdfguides.com/dref/3403777>

· The screen changes as follows: Normal Movie Dynamic Favourite Normal · The screen adjustment status changes as the following screens are displayed sequentially whenever pressing the "NORMAL" button. 35 Screen Adjustment When adjusting the screen to taste - You can enjoy various screens by adjusting Brightness, Contrast, Colour, Sharpness, etc. to the user's taste.

1. Select "Picture" by pressing the "MENU" button. · The menu screen appears as follows. PR/PAGE Picture SELECT OK PR/PAGE Picture Mode Brightness Contrast Dynamic 41 51 31 31 R Off Normal Exit G0 Screen Sound Install Function DVB Select Colour Sharpness Tint N.R. Colour Temp Access 2. Select and adjust each item. · Move to the Picture menu. · Whenever pressing the "/" button, you can select Picture Mode, Brightness, Contrast, Colour, Sharpness, N.R and Colour Temperature EG.

Warm or Cool (if reddish bluish picture). Picture Screen Sound Install Function DVB Select Picture Mode Brightness Contrast Colour Sharpness Tint N.R. Colour Temp Access R Dynamic 41 51 31 31 G0 Off Normal Exit · The screen appears, as on the right, if pressing the "/" buttons after selecting items desired to adjust with the "/" buttons. · You can adjust all items by pressing the "/" button. Brightness 31 Note : · Picture Mode : Changing the picture mode, Normal Movie Dynamic Favourite · Brightness: Adjusts the whole of screen brighter or darker. · Contrast: Adjusts difference between brightness and darkness between objects and background on the screen. · Colour: Adjusts colour saturation. · Sharpness: Adjusts outline of the screen smoothly or sharply. · N.

R : Noise reduction. · Colour Temperature: Changing the tone of colour: Normal: Normal white Warm : Reddish white Cool: Bluish white · Tint activates when receiving a NTSC signal. · The adjusted levels are stored automatically in Favourite mode. 36 Screen Adjustment Adjustment of Screen Size in TV and AV mode Default ZOOM format will be selected. Otherwise, the preferred mode of the user can be forced by repeated pressing of the remote control "ASPECT" button: The following picture formats is available: DLT-19W4, 22W4 RF, AV1, AV2 MODE COMPONENT, HDMI, PC DVB-T MODE 4:3, FULL SCREEN DLT-20J1, 20J3, 20J9 WIDE, FULL SCREEN FULL SCREEN WIDE, FULL SCREEN Adjustment of the screen in the PC mode 1. Auto Adjustment. · Move to Auto in the Screen menu. · Press the "/" buttons to detect optimal resolution automatically. PR/PAGE Picture SELECT OK PR/PAGE PC Auto Adjustment H Position Start Screen Sound Install Function DVB Select V Position Phase Frequency Access Exit PR/PAGE 2. Adjustment of the H-Position. · Move to H-Position in the Screen menu. · Press the "/" buttons to adjust the horizontal position of displayed image. Picture SELECT OK PR/PAGE PC Auto Adjustment H Position Start Screen Sound Install Function DVB Select V Position Phase Frequency Access Exit PR/PAGE 3. Adjustment of the V-Position. · Move to V-Position in the Screen menu.

· Press the "/" buttons to adjust the vertical position of displayed image. Picture SELECT OK PR/PAGE PC Auto Adjustment H Position Start Screen Sound Install Function DVB Select V Position Phase Frequency Access Exit 37 Screen Adjustment PR/PAGE 4. Adjustment of the Phase. · Move to Phase in the Screen menu. · Press the "/" buttons to adjust the phase to get a clear picture.

Picture SELECT OK PR/PAGE PC Auto Adjustment H Position Start Screen Sound Install Function DVB Select V Position Phase Frequency Access Exit PR/PAGE 5. Adjustment of the Frequency. · Move to Frequency in the Screen menu. · Press the "/" buttons to adjust the frequency to fit the size of the screen. Picture SELECT OK PR/PAGE PC Auto Adjustment H Position Start Screen Sound Install Function DVB Select V Position Phase Frequency Access Exit Note : · During the Auto Adjust, you must not alter the screen on the monitor. · During the moving picture, Auto Adjust is unable to work correctly. So you must execute Auto Adjust on a still image. · Auto Adjust works incorrectly on a part graphic card or picture. · When Auto Adjust is not correctly working, you can adjust with H/V position, and phase manually. 38 Sound Adjustment When adjusting sound to taste - The user can enjoy various sounds by adjusting AVC, Effect, Balance and Equalizer.

1. Select AVC Mode. · Select AVC (Auto Volume Correction) On/Off by pressing "/" button. · Each sound source has its own signal conditions and it's not so easy to adjust the volume level every time. However if you select AVC On, when the modulation signal is high then the sound output will be lower automatically. PR/PAGE Picture SELECT OK PR/PAGE AVC Effect Balance L On Off R Access -12 Screen Sound Install Function DVB Select Equalizer Access Exit PR/PAGE 2. Select Sound Effect Mode. · The Effect changes as follows : Off SPATIAL 3D Panorama Picture SELECT OK AVC Effect Balance L On Off R Access -12 Screen PR/PAGE Off Sound Install Equalizer Note : · 3D PANORAMA: This function generates virtual surround sound from the left and right speaker by expanding the existing surround system function. PR/PAGE Function DVB Select Access Exit 3. Select Balance Mode.

· Move to Balance in the Sound menu. · Select Balance by pressing "/" button, then the sound balance of left and right speaker can be adjusted for equal sound reception from both speakers according to where you are sitting. Picture SELECT OK PR/PAGE AVC Effect Balance L On Off R Access -12 Screen Sound Install Function DVB Select Equalizer Access Exit 4. To adjust the audio equalizer. · Move to Equalizer in the Sound menu.

· Select and use the relevant frequency by pressing the "/" button. · You can adjust the degree of the frequency by using the "/" button. Note : · Whenever you adjust the audio equalizer, it stores in the Favourite mode. · Equalizer: High quality sound range adjustment method used for audio product. 100Hz, 300Hz: Low sound range / 1KHz, 3KHz: Middle sound range / 10KHz: High sound range PR/PAGE Picture SELECT OK PR/PAGE Equalizer Preset 100Hz Normal 6 6 6 6 Screen Sound Install Function 300Hz 1kHz 3kHz 10kHz DVB Select Change Exit 39 Sound Adjustment Multi-Sound and Stereo 1. Mono Sound Selection. · During Stereo sound reception if the stereo is weak, you can switch to MONO by pressing the "" button.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3403777)

[DLT-19W4T user guide](http://yourpdfguides.com/dref/3403777)

<http://yourpdfguides.com/dref/3403777>



Then the colour of "MONO" character will change to Red. In Mono reception the depth of sound is improved. · To switch back to stereo, press the " " button again. PR/PAGE PR 19 Mono Full Screen PR 19 Mono Full Screen Note : · " " only works in RF mode. 2. Adjustment of Bilingual sound. · In bilingual broadcast reception, you can switch from Dual 1 to Dual 2 by pressing the " " button repeatedly. PR/PAGE PR 19 Dual 1 Full Screen PR 19 Dual 2 Full Screen 40 Analogue Menu Language Selection Analogue Menu Language Selection 1.

Press the "MENU" button and select "Function". SELECT OK PR/PAGE PR/PAGE Picture Screen Sound Install Function DVB Select Language Child Lock English Off Change Exit 2. Select "Language" by pressing " / " button. 3. Select your desired language by pressing the " / " button. Then it will set automatically. The language changes as follows. English German French Spanish Italian Danish Finnish Swedish Greek Norwegian Netherland Portugal Cheskey Polish Romania Russian Magyar Bulgarian PR/PAGE Picture SELECT OK PR/PAGE Language Child Lock English Off Screen Sound Install Function DVB Select Change Exit Note : · When you first turn on the TV set, the "language selection" is displayed automatically. · When you change Analogue menu language, DVB menu language will be change simultaneously. · The language you selected in this menu is not DVB menu language, then the DVB menu language will be replaced by English automatically.

For example, if you select Finnish for Analogue menu then DVB menu will be set to English (see below table). Available Language Table Available in both analogue & digital Only available in analogue Only available in digital English, German, French, Italian, Danish, Portugal, Netherland, Greek, Spanish Finnish, Swedish, Norwegian, Cheskey, Polish, Romania, Russian, Magyar, Bulgarian Turkey 41 Other Functions Child Lock · Move to Child Lock in the Function menu. · Select Child Lock to On using the " " button Note : · If stand-by indicator is flashing red, and green then the TV set is in child lock mode. It is necessary to use the remote control POWER button, NUMBER 0..

.9 buttons, or PR UP/DOWN buttons. The local PR UP/DOWN buttons will not function. Once on, the stand-by indicator turns to green and the picture appears on the screen. PR/PAGE Picture SELECT OK PR/PAGE Language Child Lock English Off Screen Sound Install Function DVB Select Change Exit Sleep · By pressing the "SLEEP" button on the remote controller repeatedly, you can select one of the following settings: Sleep Timer: OFF 15 30 45 60 75 90 105 120 OFF · The set will turn off after the time you select.

Note : · If an active signal is not present for about 10 minutes, the set will automatically turn to ST-BY mode. 42 Sudoku Game (option) Sudoku Game - This TV set allows you to enjoy playing the Sudoku game, it offers 3 levels of difficulties, enables you to save your grid and resume it later. ENTERING / EXITING GAME MODE Pressing "GAME" key on your remote handset will switch the TV Set into game mode. If you press the same key in game mode, you will exit game mode without saving your grid. SUBCODE 00 : 00 Easy Normal Hard Load PR/PAGE STARTING THE GAME You can either decide to resume your last game or start a new game. To start a new game, move the cursor to desired level: Easy, Normal or Hard and press "OK" button. To recall an old game, move the cursor down to the "Load" menu and press "OK" button. SELECT OK PR/PAGE 43 Sudoku Game (option) PLAYING Use direction keys on the remote handset to move cursor to desired position. Press digit keys to enter a number. It is always possible to overwrite a number previously entered.

Trials and errors: - To erase a cell press "0". - You might want to draw some numbers in a different colour (trial numbers) because you need to fill up more cells to confirm that your option is valid. This can be done by typing twice the same digit. Once you have confirmed the number is correct, you can press again the same digit key to change the colour. Volume New Exit NEW GAME At anytime you can ask your TV set to create a new grid. This can be done by moving the cursor to the right hand side on the "New" menu, and pressing "OK" button. Then you will be asked to select a level to create a new grid.

ADJUSTING AUDIO VOLUME To control audio volume in game mode, you must move the cursor to the right hand side of the screen on the "Volume" menu. Then pressing " / " key enables you to decrease / increase volume. Press " / " key to exit from this audio adjustment mode.

EXIT AND SAVE If you wish to exit the game and save your grid, for further play, move the cursor to the right hand side on the "Exit" menu, and press "OK" This will close the game and return to normal TV mode. . 44 Teletext SWITCHING TELETEXT ON/OFF Press the "TEXT" button ( ). The index page or the page viewed last will appear. Press the "TEXT" button again to return to the TV mode.

NOTE: Teletext works only in TV/AV mode. However digital broadcasts have digital text. To use digital text press the "TEXT" button in DVB mode. COLOUR BUTTONS IN TOP (Tables Of Pages) NB. not used in the UK /FLOF (Full Level One Feature) TELETEXT A red, green, yellow and blue field is shown at the bottom of the screen.

If TOP or FLOF Teletext is transmitted by the station, pressing the corresponding colour button R,G,Y,B on the remote controller, enables you to select the desired page easily. SELECTING PAGES The "NUMBER" buttons are used to enter a page number. The selected page number appears at the top of the screen and the page appears after a short time. The " / " buttons increase or decrease the current page number by 1. INDEX PAGE You can switch directly to the programme preview (with TOP text) or the overview page of the station you are currently viewing by pressing the "INDEX" button ( ). PAGE HOLD Several sub pages can be combined under a page number and are scrolled at an interval determined by the television station. @@@@ @@@@ CALLING UP SUB-PAGE DIRECTLY (option) Pressing the "SUBCODE" button ( ), " - - - " appears. Enter the sub-page number that you want to call up with the "NUMBER" button, for example, the 2nd page, sequence 0002. The desired sub-page will eventually be displayed on the screen and it will be hold there. Meanwhile whilst you are waiting, it is possible to go back to the TV picture by pressing the "T".



[You're reading an excerpt. Click here to read official DAEWOO DLT-19W4T user guide](http://yourpdfguides.com/dref/3403777)  
<http://yourpdfguides.com/dref/3403777>

CANCEL" button ( ) on the remote control and after a while, press the "T.CANCEL" button again to revert back to the saved Teletext sub page. @@@@REVEAL ANSWER This function can be used on certain pages to reveal the solution of riddles. Press the "REVEAL" button ( ) to reveal a hidden answer and press again to hide it. DOUBLING CHARACTER SIZE Repeatedly pressing the "SIZE" button ( ) doubles the character size in the following order: Upper half of the page Lower half of the page Normal size Upper half of the page CONTRAST CONTROL This is only for teletext display. You can adjust CONTRAST for 4 steps by pressing left (for decreasing) / right (for increasing) cursor key on the remote control (no menu like bargraph will be displayed). And leave teletext mode and enter again then changed contrast value will be applied to teletext screen. 45 Troubleshooting Symptoms and Solutions Please check the following list prior to calling Daewoo Electronics Customer Service Centre for assistance. Symptom Neither picture nor sound

Check items - Check the contact of sockets is OK. - Check the TV main power is on.

Picture is OK but no sound - Check the Volume control is not set to minimum or mute. Sound is OK, but no colour. The picture has ghost image. - Check the colour control and adjust it properly. - Check the program is in colour and not in black & white.

- Picture ghost image is caused by signals reflecting from large buildings. To improve move antenna for best reception or instal an aerial with a small pick up foot print. - Check the antenna is installed correctly and if not, adjust the antenna towards the broadcasting transmitter. - Check the antenna is installed correctly and if not, adjust the antenna towards the broadcasting transmitter. - Check the antenna or its connection is correct and if not, correct the antenna fault or connection cable fault.

- Check if car traffic or neon sign disturbs the sound effect. - Check the susceptible interference by other electronic devices such as radio and television and keep magnetic or electronic devices away from the TV. - Long distance from the station or other radio waves can generate bad sound reception. If so, change the mode to Mono. Picture has "snow noise" . Stripes on picture. Bad stereo or Dual sound. Remote control does not work. - Check if the batteries in the Remote control are dead. - Check if any object between IR sensor of the TV and the Remote control is not obstructing the infra red beam.

46 Troubleshooting In PC mode Symptom "NO SIGNAL" appears on the screen. Check items - Ensure that the signal cable is firmly connected to PC and TV. - Check the resolution and frequency of your PC. Then, adjust them to optimum condition for LCD TV. - Refer to the table of PC mode input format (If registered resolution and frequency on the table not listed then no picture will be displayed.) - Adjust the PHASE control. Image is not clear. Image is not centred. - Adjust the H-POSITION and V-POSITION control. · AFTER SALES SERVICE Do not hesitate to contact your retailer or service agent if a change in the performance of your product indicates that a faulty condition may be present.

47 Specifications Model Screen Size Display Colour Aspect Ratio Resolution Pixel Pitch Contrast Ratio Appearance (W x H x D) Weight (Net) w/o stand with stand w/o stand with stand DLT-19W4 480mm (diagonal) DLT-20J1/J3/J9 510.54mm (diagonal) 16.7 M DLT-22W4 558.673mm (diagonal) 16:10 1440 x 900 (WXGA+) 0.2835 x 0.2835 1000:1 476.3 x 346 x 80 476.3 x 401.5 x 190 4.9 Kg 5. 2 Kg 42 W 4:3 640 x 480 (VGA) 0.6375 x 0.6375 350:1 514 x 460 x 85 514 x 498 x 239 7.0 Kg 8.0 Kg 52 W 2.0W + 2.0W 16:10 1680 x 1050 (WSXGA+) 0.2835 x 0.2835 1000:1 545.4 x 400 x 81 545. 4 x 426 x 81 5.6 Kg 5.9 Kg 50 W Power Consumption Sound Output Terminals AV IN : SCART, COMPOSITE VIDEO, AUDIO L/R, COMPONENT, PC, HDMI HEADPHONE : 3.5mm STEREO MINI-JACK DIGITAL AUDIO OUT: Coaxial ANT. IN : COAXIAL-TYPE VHF BAND I : CH2-CH4 BAND II : CH5-CH12 UHF HYPER BAND : S1'-S3', S1-S20 BAND IV, V : CH21-CH68 PAL-B/G, D/K, SECAM-L/L', NTSC(AV input only) AC 220 ~ 240V, 50Hz Reception Channel Power Source Owing to our policy of continuous improvement, specifications may change. 48.



[You're reading an excerpt. Click here to read official DAEWOO DLT-19W4T user guide](http://yourpdfguides.com/dref/3403777)  
<http://yourpdfguides.com/dref/3403777>