



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DLT-42G1. You'll find the answers to all your questions on the DAEWOO DLT-42G1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAEWOO DLT-42G1**  
**User guide DAEWOO DLT-42G1**  
**Operating instructions DAEWOO DLT-42G1**  
**Instructions for use DAEWOO DLT-42G1**  
**Instruction manual DAEWOO DLT-42G1**

DAEWOO  
ELECTRONICS



GB

## **LCD TELEVISION INSTRUCTION MANUAL**

**DLT-32G1**  
**DLT-37G1**  
**DLT-42G1**



[You're reading an excerpt. Click here to read official DAEWOO DLT-42G1 user guide](http://yourpdfguides.com/dref/3403766)  
<http://yourpdfguides.com/dref/3403766>

**Manual abstract:**

**@@@CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. DISPOSAL OF USED ELECTRICAL & ELECTRONIC EQUIPMENT (Europe only)** The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous waste to the environment and to human health, products could otherwise be caused by unsuitable waste handling of this products. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. RoHS (Directive 2002/95/EC) Compliant This environment-friendly product does not contain the EU RoHS restricted substances (Pb, Hg, Cd, Cr6+, PBB, and PBDE). 2

**Important Safeguards** Please read the following safeguards for your TV and retain for future reference.

Always follow all warnings and instructions marked on the television. 1. Read, Retain and Follow All Instructions Read all safety and operating instructions before operating the TV. Retain them safely for future reference. Follow all operations and instructions accordingly.

2. Heed Warnings Adhere to all warnings on the appliance and in the operating instructions. 3. Cleaning Unplug the TV from the wall outlet before cleaning. Do not use liquid, abrasive, or aerosol cleaners.

Cleaners can permanently damage the cabinet and screen. Use a lightly dampened cloth for cleaning. 4. Attachments and Equipment Never add any attachment and/or equipment without approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury. 5. Water and Moisture The apparatus must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed very close to the apparatus. Because they may be splashed when watering the plant. 6. Setting Do not place this TV on an unstable cart, stand or table. Placing the TV on an unstable base can cause the TV to fall, resulting in serious personal injuries as well as damage to the TV.

Use only a cart, stand, bracket or table recommended by the manufacturer or salesperson. 7. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the TV and to protect it from overheating. Do not cover the ventilation openings in the cabinet and never place the set in a confined space such as a built-in cabinet unless proper ventilation is provided. Leave a minimum 10 cm gap all around the unit. 8. Power Source This TV should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company. 9. Grounding or Polarization This TV is equipped with a polarized alternating current line plug (a plug having one blade wider than the other).

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

This is because apparatus with CLASS I construction must be connected to a MAINS socket outlet with a protective earthing connection. 10. Power-Lead Protection Power-supply leads should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to leads at plugs, wall outlets, and the point where they exit from the TV. MAINS plug which is used as the disconnect device. The disconnect device shall remain readily operable.

11. Lightning For added protection for this TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV due to lightning and power-line surges. 12. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken from touching such power lines or circuits as contact with them might be fatal. 13. Overloading Do not overload wall outlets and extension leads as this can result in a risk of fire or electric shock. 14. Object and Liquid Entry Never push objects of any kind into this TV through openings as they may touch dangerous voltage points or short-out parts that could result in fire or electric shock.

Never spill liquid of any kind on or into the TV. 15. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and buildup static charges. Section 810 of the National Electric Code, ANSI /NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. EXAMPLE OF ANTENNA GROUNDING Antenna lead in wire Ground clamp Electric Service Equipment Antenna discharge unit (NEC section 810-20) Grounding conductors (NEC section 810-21) Ground clamps Power service grounding Electrode system (NEC art 250, part h) 16. Servicing NEC -- national electrical code Do not attempt to service this TV yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 17. Damage Requiring Service Unplug the TV from the wall outlet and refer servicing to qualified service personnel under the following conditions: (a) When the power-supply lead or plug is damaged.

(b) If liquid has been spilled, or objects have fallen into the TV. (c) If the TV has been exposed to rain or water. (d) If the TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the TV to its normal operation.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DLT-42G1 user guide](#)

<http://yourpdfguides.com/dref/3403766>

(e) If the TV has been dropped or the cabinet has been damaged.

(f) When the TV exhibits a distinct change in performance - this indicates a need for service. 18. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards. 19.

Safety Check Upon completion of any service or repair to the TV, ask the service technician to perform safety checks to determine that the TV is in a safe operational condition. 20. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 21. Disconnection Please place the TV set in such a way that the main plug can be easily disconnected. 4 Warning This section must be read carefully and followed by the user prior to the operation of the product. The manual states important instructions for the user's own safety, and the proper operation of the product. Ignoring or disregarding the contents of this section and improper operation of the product may result in the person's death or serious injury. WARNING To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside.

Refer to qualified service personnel for repair. In case of an accident, please unplug the unit from the outlet immediately. Do not put any object that contains water - for example a vase, flower pot, etc. - near to the unit. The water may penetrate into the unit, and be a cause of fire or hazardous electric shock. Do not put on or use the product near water and moisture such as in a bathroom, washbowl, etc. It may cause fire and electric shock hazards. To prevent fire and damages to the product, unplug the unit from the outlet during a lightning storm, or when it is left unattended and unused for a long period of time. Slots and openings in the case are provided for ventilation to ensure reliable operation of the product. Never put in any items - such as coins, paper, matches - through these openings as they may touch dangerous voltage points that could result in fire or shock hazard. Hold the plug when unplugging the unit from the outlet. The lead may cause fire or electric shock if damaged.

Do not let children hang on to or climb on the product since it may cause serious injury. Do not cause the product to lean or put it in an unstable position because if it falls it may cause serious injury to a person, as well as damage to the product if it falls. Do not put volatile substances such as benzene, naphtha near the product since it may cause a change in the product's colour. Do not spill water or drop the remote control since it may cause a malfunction. 5 Warning This section must be read carefully and followed by the user prior to the operation of the product.

The manual states important instructions for the user's own safety, and the proper operation of the product. Ignoring or disregarding the contents of this section and improper operation of the product may result in the person's death or serious injury. CAUTION Do not view the TV too closely since it may cause damage to your eyes. Please keep the user's manual in a safe place for future reference. Refer servicing to qualified service personnel for cleaning at least once a year since dust inside the TV set may result in a fire or malfunction of the product.

The product should be situated away from any heat sources such as radiators, heat registers, stoves, or other products that produce heat. Do not cover the top of the television set. Ventilation will be prevented, and it may cause a fire if the product is internally overheated. Do not put heavy items on the power lead since it may result in a fire or hazardous electric shock if the lead is damaged. Please be aware of electric wires and cables when installing the antenna. It may be a cause of hazardous electric shock and fire if the antenna touches or falls on the electric wire; thus, it must be installed firmly, and far away from the cables.

Do not touch the power lead with moistured or wet hands when plugging to or unplugging from the outlets since it may cause an electric shock. Unplug the power from the outlet and all the related connections from the unit to prevent an electric shock. At least two people must work together to move the TV set when transporting to prevent the TV from falling and consequently, any serious injury or damage. Do not expose the product to a dusty or moistured place since it may cause malfunction.

6 Table of Contents Installation and Maintenance Antenna Connection . . . . .  
    .. Video Connection . . . . .  
    . . . . .  
    . . . . . Camcorder & Video Game Connection DVD Player Connection . . . . .  
    . . . . . STB (Set Top Box) Connection . . . . .  
    .. PC Connection . . . . .

... the TV set ANT/CABLE 10 Antenna Connection Outdoor Antenna Connection An outdoor Antenna connection - such as VHF and/or UHF - may be necessary for installation in private houses.

Single Antenna Connection VHF Antenna Left side of the tv set UHF Antenna ANT/CABLE UP-GRADE PORT Separate Antenna Connection. VHF Antenna In case of coaxial cable In case of feeder cable UHF Antenna ANT/CABLE ANTENA combining Adapter (Separate purchase) 11 Video Connection Connecting with an External Source You may connect an S-Video input to enjoy clearer and brighter picture images. You can make the connection with the AV3 input. VIDEO S-VIDEO R - AUDIO - L S-Video AV 3 Note : If S-video and the RCA phono jacks are connected at the same time, the TV set will only detect the S-Video mode. If your AV device has both Video OUT terminal and S-Video OUT terminal, the S-Video connection is recommended for better picture quality. Connecting with SCART VIDEO 1. Prepare the scart lead for picture / sound. 2. Connect the SCART input / output terminal of your video with the SCART1(AV1), SCART2(AV2), input/output terminal of the TV. 3.

Turn on the video, Insert the video cassette, and press the "PLAY" button. INPUT HDMI 1 HDMI 2 DIGITAL AUDIO OPTICAL COMPONENT Pr Pb Y PC INPUT PC AUDIO R - AUDIO - L Back of the tv set VIDEO Note : SCART1 has CVBS/RGB input and CVBS output. It is used to connect a STB, VCR or DVD. SCART2 has CVBS input. It is used to connect a STB, VCR or DVD. 12 Camcorder & Video Game Connection Watching a Camcorder Recording on TV or playing a Video Game 1. Prepare the S-video and RCA connector. 2. These connectors connect to S-video or AV 3 as shown in the picture below. 3. Turn on the TV set and camcorder/video game. 4. Select AV3/S-video mode, using the "AV" button of the Remote controller or " " button of the TV set. Side of the tv set VIDEO S-VIDEO R - AUDIO - L Camcorder AV 3 Video game Note : If the S-video and RCA jack are connected at the same time, the TV set only detects the S-Video mode.



[You're reading an excerpt. Click here to read official DAEWOO DLT-42G1 user guide](http://yourpdfguides.com/dref/3403766)  
<http://yourpdfguides.com/dref/3403766>





**NORMAL** : The **NORMAL** button changes picture mode as follows: Normal Cinema Dynamic Favourite Normal 7. 8. **VOL** : Adjusts the volume. : Changes the program on your TV. **GUIDE SUBTITLE LANGUAGE FAVOURITE CANCEL / EXIT MENU ASPECT M RECALL S.EFFECT PR/PAGE / ABC DEF GHI I JKL 2 MNO 3 PQR 9. : Moves the cursor up/down in the menu. 4 STU 5 VWX 6 YZ&. 10.**

**/** : Accesses and adjusts item in the menu. 11. **OK/SELECT** : Auto Tuning Start and Manual Tuning Store. 12. **GUIDE** : Move to Now/Next EGP at Guides on DVB MENU directly. See page 34. 13. **SUBTITLE** : Select the Subtitle On/Off on DVB MENU directly, or show the subtitle if it has on the DVB MENU. See page 37. 14.

**LANGUAGE** : Move to Language at CI Menu on DVB-T directly. See page 39. 15. **FAVOURITE** : Move to Favourites channel on DVB-T directly. See page 33.

16. **CANCEL/EXIT** : Using this button to move upper menu or exit the menu on DVB-T. 17. **MENU** : Menu display button. 7 **STILL** 8 0 9 **SLEEP TEXT REVEAL T.**

**CANCEL SIZE S-CODE HOLD MIX INDEX P.MODE P.STILL P.SWAP P.PR P.INPUT P.SIZE P.PR 22** Parts of the remote control **MUTE POWER 18. :** You can select sound modes in Mono, Stereo, Dual1, Dual2, NiCAM STEREO. It works only in TV mode.

Auto Full DVB/Analog **MULTI MEDIA AV NORMAL 19. ASPECT** : Selects the screen aspect ratio. Full 4:3 14:9 Zoom 14:9 Zoom16:9 **VOL PR / PAGE OK / SELECT 20. RECALL** : You can recall the present modes (TV, Video, Component, PC) and Signal information. In TV mode, the Programme number, Sound, and Clock. **PR / PAGE VOL 21. S.EFFECT** : Using this button, you can listen to the virtual surround sound. The sound will cycle through : Off SPATIAL 3D Panorama BBE Off 22. **NUMBER** : Press the numbers on this board, you can select PR directly in TV mode.

23. **STILL** : Press this button to freeze the picture. 24. **SLEEP** : Sleep Timer setting. **SLEEP TIMER : OFF 15 30 OFF 45 60 75 90 105 120 GUIDE SUBTITLE LANGUAGE FAVOURITE CANCEL / EXIT MENU ASPECT M RECALL S.**

**EFFECT ABC DEF GHI I JKL 2 MNO 3 PQR 4 STU 5 VWX 6 YZ&. 7 STILL 8 0 9 SLEEP 25. Colour Keys(Red, Green, Yellow, Blue) : Using on text or DVBT mode. 26. TEXT(TEXT, REVEAL, T.**

**CANCEL, SIZE, S.CODE, HOLD, MIX, INDEX) : see page 53. 27. PiP Keys(P.MODE, P.SIZE, P.SWAP, P.INPUT, P.PR 46. / ) : See page TEXT REVEAL T.**

**CANCEL SIZE S-CODE HOLD MIX INDEX** Inserting Batteries into the Remote Control Unit To load the batteries, turn the remote control handset over and open the battery compartment. Insert the batteries (Two 1.5v, type AAA). Make sure that the polarity matches with the (+) and (-) marks inside of the battery compartment. Note : To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time. **P.MODE P.STILL P.SWAP P.PR P.**

**INPUT P.SIZE P.PR 23 Method To Use Basic Menu Basic Menu -** The basic menu appears on the screen if you press the "MENU" button of the remote control. - There are 6 items Picture, Screen, Sound, Install, Function and DVB in the basic menu. - Each item has sub-items under it.

If the desired item is selected, the relevant sub-items are displayed upward. 1. Press the "MENU" button. · The main menu appears if you press the "MENU" button. **MENU Picture Screen Sound Install Function DVB Move Picture Mode Brightness Contrast Colour Sharpness Tint N.**

**R. Colour Temp Select R Dynamic 41 51 31 31 G Off Normal Exit 0 M VOL PR / PAGE 2. Press the "/ " button. · You may setup according to the directions on the screen after selecting the desired item by pressing the "/ " button. · If the setup is completed, exit from the menu by pressing the "MENU" button.**

**Picture OK / SELECT Picture Mode Brightness Contrast Dynamic 41 51 31 31 R Off Normal Exit G 0 Screen PR / PAGE VOL Sound Install Function DVB Move Colour Sharpness Tint N.R. Colour Temp Select P i c t u r e :** Adjusts Picture Mode, Brightness, Contrast, Colour, Sharpness and Tint (NTSC only), N.R. (Picture Noise Reduction) and Colour Temperature.

**S c r e e n :** Adjusts Aspect, PC (activated on PC mode only) and PiP (Picture in Picture) **Sound :** Adjusts AVC (Automatic Volume Control), Dynamic Bass, Effect, Balance and Equalizer. **I n s t a l l :** Adjusts Auto Tuning, Manual Tuning, Setup and Edit. **F u n c t i o n :** Adjusts Language, Child Lock, Clock, Wake Up, Wake Time and Wake Pr. **D V B :** Adjusts DVB Menu and Software Update (activated on DVB-T only). 24 To Watch TV On/Off, Number, Mute, Recall, **VOL , PR** Buttons with same name in the main body of the TV performs the same function. Press the "ON/OFF" button on the side of the set or Remote control. · The buttons on the remote control and the main body operate only when AC power is turned on. Note : You can also turn on the TV using " PR " key and number buttons in the ST-BY mode. **MUTE POWER DVB/Analog MULTI MEDIA AV NORMAL VOL PR / PAGE OK / SELECT** When pressing the Program button · Select two digits if using the number button for channel selection. For example, to watch channel No.

9, Press the number buttons 0 and 9. If pressing only number 9, it takes a longer time to select channel. **VOL PR / PAGE GUIDE SUBTITLE LANGUAGE FAVOURITE CANCEL / EXIT MENU ASPECT M RECALL S.EFFECT ABC DEF GHI I 2 MNO 3 PQR** To suddenly turn sound off · Press the "MUTE ( )" button. · No sound is heard if "MUTE( )" is displayed on the screen.

· Sound is heard again if you press the "MUTE ( )" button once again. For example, please use this button when the telephone rings or when guests arrive while watching TV. **JKL 4 STU 5 VWX 6 YZ&. 7 STILL 8 0 9 SLEEP TEXT REVEAL T.CANCEL SIZE S-CODE HOLD MIX INDEX P.**

**MODE P.STILL P.SWAP P.PR** To check TV operation status **P.INPUT P.SIZE P.PR** · Pressing the "RECALL" button, the status of channel or broadcasting currently being watched or entry status of video component is displayed on the screen. 25 To Watch TV - If the AV1 terminal on the TV set is connected with an external device, which is switched on, the TV will be ON at AV1 mode. Otherwise, TV will be ON at RF mode. 1.

Turning on the TV. · Plug the AC lead into a power outlet. · The **STANDBY LED** lamp turns on in red. · Press " " button of the main body or "POWER" button on the remote control. · The **STANDBY LED** lamp on the front panel begins to flicker in red and blue and the TV turns on. **POWER VOL PR / PAGE PR 19 Mono 12 : 00 2. Adjust program. · Select the desired program by pressing the " PR " button or the number button.**



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3403766)

[DLT-42G1 user guide](http://yourpdfguides.com/dref/3403766)

<http://yourpdfguides.com/dref/3403766>

OK / SELECT VOL PR / PAGE VOL PR / PAGE 3. Adjust volume.

· Sound reduces by pressing the "VOL" button. · Sound increases by pressing the "VOL" button. Note : Sound mutes by pressing the "MUTE" ( ton. ) but- OK / SELECT VOL PR / PAGE 16 4. Turning off the TV.

· Press " " button of the main body or "POWER" button on the remote control. · TV turns off and the power lamp changes to red. POWER 26 Setting Up TV Stations Auto Tuning - All stations that can be received are stored by this method. It is recommended that you use Auto tuning during installation of this set. 1. Press the "MENU" button to select the Install menu. · Move the selection bar to the Install menu with " / " buttons. VOL PR / PAGE Picture OK / SELECT Picture Mode Brightness Contrast Dynamic 41 51 31 31 R Off Normal Exit G 0 Screen PR / PAGE VOL Sound Install Function DVB Move Colour Sharpness Tint N.R. Colour Temp Select VOL PR / PAGE 2. Select the "Auto Tuning" . · Place the selection bar on Auto Tuning and press the " " button. VOL Picture OK / SELECT Auto Tuning Manual Tuning Setup Access Access Access Access Screen Sound PR / PAGE Edit Install Function DVB Move Select Exit VOL PR / PAGE 3. Select the country you require with the " / " button. · After selecting the country, to start Auto Tuning press the "OK" button.

OK / SELECT Auto Tuning PR / PAGE VOL Country Set GB PR 0 Euro Start Country Set Exit 4. Please wait until the Edit menu appears. · If you don't want to edit the programs now, escape from the menu with the "MENU" button. VOL PR / PAGE Picture OK / SELECT Edit Prog. 00 Name Channel C 04 C 33 C 25 C 02 C 12 C 21 Exit Skip Skip No No No No No No No No Screen Sound PR / PAGE VOL 01 02 03 04 05 Install Function DVB Move Delete Move 27 Setting Up TV Stations Manual tuning 1. Press the Number buttons(0~9) or the " PR " button to select a program number you want. VOL PR / PAGE OK / SELECT VOL PR / PAGE 2. Locate the selection bar on the Manual tuning at the Install menu. · Press the "MENU" button to select the Install menu. · Move the selection bar to the Install menu with " / " buttons.

· Place the selection bar on Manual Tuning and press the " " button. VOL PR / PAGE Picture OK / SELECT Auto Tuning Manual Tuning Setup Access Access Access Access Screen Sound PR / PAGE VOL Edit Install Function DVB Move Select Exit 3. Execute Manual Tuning. · A tuning screen will appear and cursor will move from left to right / from right to left. If you want to stop tuning press the "MENU" button.

· You should press the "OK" button to store a program then the PR number is changed to red. If you don't want to store the program, press " / " button to skip the program. · To store another program, select other PR number using " / " buttons and press " / " buttons. VOL PR / PAGE OK / SELECT VOL PR / PAGE Manual Tuning PR 0 Euro Access Exit Note : · If you are unable to get any programs using Auto Tuning due to a poor broadcasting signal, it may still be possible to store channels using the Manual tuning. · If present channel is SECAM L/L', TV set search SECAM L/L'.

And, if present channel is not SECAM L/L', TV set search all channels except SECAM L/L'. 28 Setting Up TV Stations Setup The Setup menu shows you information as follows: - Channel, System, Frequency, Station name, Program number and Store to PR number. 1. Searching for channels in the Setup menu · Press the " PR " buttons to select a program number you want. · Move to Setup in the Install menu. · Search a real channel informations(Channel, System and Program) with " / " buttons. · If you save the selected channel to favourite program number, move the cursor to Store To and select using the " / " buttons. 2. Fine tuning · Move to Setup in the Install menu. · Move the cursor to Frequency by pressing " / " buttons.

· Adjust the fine tuning with the " / " buttons. Note : · If you are unable to get a good picture or sound because of a poor broadcasting signal, adjustment of the fine tuning might improve it. 3. Enter a station name · Move to Setup in the Install menu. · Move the cursor to Name by pressing " / " buttons. · You can enter a station name with the " / " and " / " buttons. Note : Only English is supported in this station name. VOL PR / PAGE Picture OK / SELECT Auto Tuning Manual Tuning Setup Access Access Access Access Screen Sound PR / PAGE VOL Edit Install Function DVB Move Select Exit VOL PR / PAGE Picture OK / SELECT Channel System Frequency C 04 Euro 063.75 MHz 01 01 Screen Sound PR / PAGE VOL Name Program Store To Install Function DVB Move Access Adjust Exit VOL PR / PAGE Picture OK / SELECT Channel System Frequency C 04 Euro 063.75 MHz B 01 01 Screen Sound PR / PAGE VOL Name Program Store To Install Function DVB Move ABCDEFGHIJKLMNOPQRSTUVWXYZ0123 456789- .

=/+,"() Select Exit 29 Setting Up TV Stations Edit The Edit menu shows you information as follows: - Program position assignment: Program number and Station name, Real channel number. - Skip information: Yes or No. 1. Deleting the program positions. · Move to Edit in the Install menu.

· Move the selection bar to the program number to delete with the " / " buttons. · Press the Delete (Red) button. VOL PR / PAGE Picture OK / SELECT Edit Prog. 00 Name Channel C 04 C 33 C 25 C 02 C 12 C 21 Exit Skip Skip No No No No No No No No Screen Sound PR / PAGE VOL 01 02 03 04 05 Install Function DVB Move Delete Move 2. Moving the program positions · Move to Edit in the Install menu.

· Press the Move (Yellow) button. The program and station name is highlighted in yellow. · Move the yellow block to the desired position using the " / " buttons. · Press the Move (Yellow) button again, then the program is changed. VOL PR / PAGE Picture OK / SELECT Edit Prog.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3403766)

[DLT-42G1 user guide](http://yourpdfguides.com/dref/3403766)

<http://yourpdfguides.com/dref/3403766>



If this happens, you may need to improve your aerial system to provide a better signal. 38 DVB Menu Manual Search Channel Number 44 Signal Quality: Very Good Signal Level: 0 .. 9 Select Channel Select Search Cancel Exit i More Common Interface - This allows you to upgrade your TV set with additional features including access to extra channels (if available) using a conditional access module (eg. TopUp TV). - If there is no CI Card in the slot,,No common interface module detected" appears on the screen. - When you insert the CI Card,,Common interface module inserted" appears on the screen. Then, you can watch pay channels.

- If you remove the CI Card from the slot,,Common interface module removed" appears on the screen, then you can't watch pay channel any more until you insert the CI card again. - The Common Interface menu allows you to access a pay-per-view(PPV) service on your TV set. This feature operates once you have obtained a CI module and a viewing card. If you want to know the pay-per-view(PPV) service in your region, please contact your nearest PPV provider for detail. Note : A common interface is available to connect a CAM(conditional access module) and a smartcard. Please contact your service provider to get more information about these modules. VOL PR / PAGE Interface Commune ZCAS ZCAS OK / SELECT VOL PR / PAGE ZCAS V1.1 Card Information CI Resources Cas Setting Firmware Download Select one and press OK to continue OK Cancel 39 MUTE POWER Selection of AV and Multimedia Input Signal - See page 12 for connection method of Camcorder and Video. - When pressing " " button on the TV set, screen changes as follows: TV AV1 AV2 AV3/S-Video COMP PC HDMI1 HDMI2 TV 1. Pressing the "AV" button on the remote control.

· The screen changes as follows: TV AV1 AV2 AV3/S-Video TV PR 19 DVB/Analog MULTI MEDIA AV NORMAL VOL PR / PAGE When watching video, Camcorder, DVD, Cable TV with AV PR 19 Mono 12 : 00 AV1 CVBS 12 : 00 PR 19 PR 19 AV3 CVBS 12 : 00 AV2 CVBS 12 : 00 Note : Cautions in menu setup · The menu disappears if you do not operate any button for about 25 seconds from the menu appearing. · In the case of connecting both composite video signal and S-video signal at the AV3 terminal, the S-video signal has priority. · If sound signal is mono only, connect the white phono plug to the LEFT (L)-terminal of the sound input terminal on the TV. When connecting PC, STB, DVD with Multimedia 1. Pressing the "MULTIMEDIA" button on the remote control.

· The screen changes as follows: COMP PC HDMI1 HDMI2 COMP MUTE POWER DVB/Analog MULTI MEDIA AV NORMAL VOL PR / PAGE 40 Selection of AV and Multimedia Input Signal Comp PC 12 : 00 12 : 00 HDMI 2 HDMI 1 12 : 00 12 : 00 HDMI & PC mode 1. For optimum picture quality, use 1360(6)x768 computer or set top box output at a 60Hz refresh rate. Using other formats or refresh rates may result in reduced picture quality. 2. If the message 'No signal' appears on the screen, adjust the PC output to a format listed in the Multimedia Input table.

Multimedia Input Format Resolution V-freq 60Hz 640 x 480 72Hz 75Hz 60Hz 800 x 600 72Hz 75Hz 60Hz 1024 x 768 70Hz 75Hz 60Hz 1360(6) x 768 75Hz 720 x 480 60Hz 720 x 576 50Hz 50Hz 1280 x 720 60Hz 50Hz 1920 x 1080i 60Hz 720 x 480i 60Hz 720 x 576i 50Hz HDMI o o o o o o o o o o o o o o o o o o x x PC(D-Sub) o o o o o o o o o o o o x x o o x x x x Component x x x x x x x x x x o o o o o o o o Standard VESA Standard VESA Standard VESA Standard VESA Standard VESA Standard VESA Standard VESA Standard Note : · 1280 x 720 mode is commonly used for Component. · So if this mode is used at PC mode, the screen can be enlarged. 41 Screen Adjustment When setting up various screen modes - The user may select various screens designed for a good picture without adjusting the brightness, contrast or colour individually. 1. Pressing the "NORMAL" button. · The screen changes as follows: Normal Cinema Dynamic Favourite Normal · The screen adjustment status changes as the following screens are displayed sequentially whenever pressing the "NORMAL" button. MUTE POWER DVB/Analog MULTI MEDIA AV NORMAL VOL PR / PAGE OK / SELECT Picture Mode Normal Picture Mode Cinema Picture Mode Favourite Picture Mode Dynamic Note : · Normal : For a highly defined image in a normally bright room. · Cinema : Supports softer image than Normal mode. · Dynamic : Ideal for fast movement like sports. · Favourite : Allows the user to customize settings as desired.

42 Screen Adjustment When adjusting the screen to taste - You can enjoy various screens by adjusting Brightness, Contrast, Colour, Sharpness, etc to the user's taste. 1. Select "Picture" by pressing the "MENU" button. · The menu screen appears as follows. VOL PR / PAGE Picture Mode OK / SELECT Picture Mode Brightness Contrast Dynamic 41 51 31 31 R Off Normal Exit G 0 Screen PR / PAGE VOL Sound Install Function DVB Move Colour Sharpness Tint N.R. Colour Temp Select 2. Select and adjust each item. · Move to the Picture menu. · Whenever pressing the "/" button, you can select Picture Mode, Brightness, Contrast, Colour, Sharpness, N.

R and Colour Temperature EG. Warm or cool (if reddish bluish picture). Picture Screen Sound Install Function DVB Move Picture Mode Brightness Contrast Colour Sharpness Tint N.R. Colour Temp Select R Dynamic 41 51 31 31 G Off Normal Exit 0 · The screen appears, as on the right, if pressing the "/" buttons after selecting items desired to adjust with the "/" buttons.

· You can adjust all items by pressing the "/" button. Brightness 31 Note : · Picture Mode : Changing the picture mode, Normal Cinema Dynamic Favourite · Brightness: Adjusts the whole of screen brighter or darker. · Contrast: Adjusts difference between brightness and darkness between objects and background on the screen. · Colour: Adjusts colour saturation. · Sharpness: Adjusts outline of the screen smoothly or sharply.

· N.R : Noise reduction. · Colour Temperature: Changing the tone of colour: Normal: Normal white Warm : Reddish white Cool: Bluish white · Tint activates when receiving a NTSC signal. · The adjusted levels are stored automatically in Favourite mode. 43 Screen Adjustment Adjustment of Screen Size in TV and AV mode - Randomly change the size of the screen. - The AUTO screen operates when power is first turned on. 1. Pressing the "ASPECT" button on the remote control.



[You're reading an excerpt. Click here to read official DAEWOO DLT-42G1 user guide](http://yourpdfguides.com/dref/3403766)  
<http://yourpdfguides.com/dref/3403766>



· The screen changes as follows: Full 4:3 14:9 Zoom14:9 Zoom16:9 Auto Full GUIDE SUBTITLE LANGUAGE FAVOURITE CANCEL / EXIT MENU ASPECT M RECALL S.EFFECT ABC DEF GHI Aspect Full Screen Aspect 4:3 Aspect Auto Aspect 14 : 9 Aspect Zoom 16 : 9 Aspect Zoom 14 : 9 · Full : This mode will display full screen irrespective of signal information of a broadcasting station.

· 4:3 : General TV screen currently broadcasted." · 14:9 : This mode will display a 14:9 picture at its standard 14:9 size without any stretching. · Zoom 14:9 : Screen that enlarges image by 1.33 times bigger than 14:9 image. · Zoom 16:9 : Screen that enlarges image by 1.33 times bigger than 16:9 image. · Auto : This mode will display depending on the signal information of a broadcasting station. Notices: · Can't select Aspect in Multimedia(HDMI, PC, Component) mode. · "WSS" (Wide Screen Signaling) mode like 14:9 is only available with CVBS signal. 44 Screen Adjustment Adjustment of the screen in the PC mode 1.

Auto Adjustment · Move to Auto in the Screen menu. · Press the " / " buttons to detect optimal resolution automatically. VOL PR / PAGE Picture OK / SELECT PC Auto Adjustment H Position Start 31 31 54 Screen Sound PR / PAGE VOL V Position Phase Clock Install Function DVB Move -7058 On/Off Exit 2. Adjustment of the H-Position · Move to H-Position in the Screen menu. · Press the " / " buttons to adjust the horizontal position of displayed image.

VOL PR / PAGE Picture OK / SELECT PC Auto Adjustment H Position Start 31 31 54 Screen PR / PAGE VOL Sound Install Function DVB Move V Position Phase Clock -7058 Adjust Exit 3. Adjustment of the V-Position · Move to V-Position in the Screen menu. · Press the " / " buttons to adjust the vertical position of displayed image. VOL PR / PAGE Picture OK / SELECT PC Auto Adjustment H Position Start 31 31 54 Screen PR / PAGE VOL Sound Install Function DVB Move V Position Phase Clock -7058 Adjust Exit 4. Adjustment of the Phase · Move to Phase in the Screen menu.

· Press the " / " buttons to adjust the phase to get a clear picture. VOL PR / PAGE Picture OK / SELECT PC Auto Adjustment H Position Start 31 31 54 Screen PR / PAGE VOL Sound Install Function DVB Move V Position Phase Clock -7058 Adjust Exit 5. Adjustment of the Clock · Move to Clock in the Screen menu. · Press the " / " buttons to adjust the clock to fit the size of the screen. VOL PR / PAGE Picture OK / SELECT PC Auto Adjustment H Position Start 31 31 54 Screen PR / PAGE VOL Sound Install V Position Phase Note : Clock Function · During the Auto Adjust, you must not alter the screen on the monitor. DVB · During the moving picture, Auto Adjust is unable to work correctly. So Move Adjust you must execute Auto Adjust on a still image. · Auto Adjust works incorrectly on a part graphic card or picture. · When Auto Adjust is not correctly working, you can adjust with H/V position, and phase manually. -7058 Exit 45 PIP Mode - The user can enjoy two screens by using PiP function.

VOL PR / PAGE 1. Adjustment of PiP Mode (Picture in Picture) · Move to Mode in the PiP. · Press the " / " buttons to select, PiP mode changes as follow: Side by Side Small PiP Large PiP Off Picture OK / SELECT Aspect PC PIP Auto Access Access Screen Sound PR / PAGE VOL Install Function DVB Move Select Exit 2. Adjustment of Sound Output · Move to Sound Output in the PiP. · Press the " / " buttons to select, Sound Output changes as follows: Main Sub Main Note : · On the side by side, you can select the sound output directly by activating outline using " / " buttons on the remote controller. 3. Pressing the "P.MODE" button on the remote controller. · The PiP mode changes as follows: PiP off Side by Side PiP PiP off · Side by Side : This mode will display two screen left(Main) and right(Sub). · PiP : This mode will display two screens, Main is full screen and Sub is fixed on the right-bottom side.

Notices : PiP consists of one Analog(RF/DVB-T, AV, COMP and PC mode) and one Digital(HDMI mode). It means, if Main is on Analog then Sub must be on Digital. VOL PR / PAGE Picture OK / SELECT PIP Mode Sound Output Off Main Screen PR / PAGE VOL Sound Install Function DVB Move Adjust Exit Side by side 4. Pressing the "P.SIZE" button on the remote controller.

· On the Side by Side, the screen changes as full side by side. · On the PiP, Sub screen size is changed: large small large. Main Main Sub Main Sub Sub Sub PIP Main Side by side PIP 46 PIP Mode 5. Pressing the "P.SWAP" button on the remote controller.

· Switches over the Main and Sub screen. 6. Pressing the "P.INPUT" button on the remote controller. · If Sub is on Digital, Switch the Sub screen in the MULTIMEDIA cycle(HDMI1 HDMI2 HDMI...) PC and COMP aren't selected because they are on the Analogue side. · If Sub is on Analogue, Switch the Sub screen in the exterior input cycle(RF/DVB-T AV1 AV2 AV3 COMP PC RF/DVB-T..

.) 7. Pressing the "P.PR / " buttons on the remote controller. · Sub screen is switched to RF mode and you change channels by pressing PR. Up/Down buttons. Note : · In the PiP mode, you can't enter the Install and DVB in the MENU OSD. If you want to select the Install or DVB in the MENU, switch off the PiP mode. · On the PiP mode, The highest HDMI resolution is 720p. If the HDMI resolution is too high (ex:1080i), exit the PiP mode automatically.

PIP Main Sub Sub Main Main Sub HDMI 1 Main Sub HDMI 2 MAIN RF (DVB-T) X X X X X X O O AV1 (CVBS RGB) X X X X X X O O AV2 (CVBS) X X X X X X X X O O AV3 (CVBS) S-VHS X X X X X X O O COMPONENT X X X X X X O O PC X X X X X X O O HDMI 1 O O O O O O X x HDMI 2 O O O O O O x X RF (DVB-T) AV1 (CVBS RGB) AV2 (CVBS) AV3 (CVBS) S-VHS COMPONENT PC HDMI 1 HDMI 2 47 Sound Adjustment When adjusting sound to taste - The user can enjoy various sounds by adjusting AVC, Dynamic Bass, Effect, Balance and Equalizer. 1. Select AVC Mode · Select Auto Volume Control On/Off by pressing " / " button, then the volume is same every time you switch the TV on. VOL PR / PAGE Picture OK / SELECT AVC Dynamic Bass Effect On On Off \ Access 0 Screen PR / PAGE VOL Sound Install Function Balance Equalizer 2. Select Dynamic Bass Mode · Move to Dynamic Bass in the Sound menu. · Select either Dynamic Bass On or Off using the " / " button.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DLT-42G1 user guide](#)

<http://yourpdfguides.com/dref/3403766>

Note : · Dynamic Bass : Using this function, increases the bass response. DVB Move On/Off Exit VOL PR / PAGE Picture OK / SELECT AVC Dynamic Bass Effect On On Off \ Access 0 Screen PR / PAGE VOL Sound Install Function Balance Equalizer 3. To adjust the audio equalizer · Move to Equalizer in the Sound menu. · Select and use the relevant frequency by pressing the " / " button.

· You can adjust the degree of the frequency by using the " / " button. Note : · Whenever you adjust the audio equalizer, it stores in the Favourite mode. · Equalizer: High quality sound range adjustment method used for audio product. 120Hz, 500Hz: Low sound range / 1.5KHz, 5KHz: Middle sound range / 10KHz: High sound range 4. Select Balance Mode · Move to Balance in the Sound menu. · Select "Balance" by pressing " / " button, then the sound balance of left and right speaker can be adjusted for equal sound reception from both speakers according to where you are sitting. 5. Select S.EFFECT Mode · The S.

EFFECT changes as follows : Off SPATIAL 3D Panorama BBE DVB Move On/Off Exit VOL PR / PAGE Picture OK / SELECT Equalizer Preset 120Hz Normal 0 0 0 0 0 Screen PR / PAGE VOL Sound Install Function DVB Move 500Hz 1.5 kHz 5 kHz 10 kHz Adjust Exit VOL PR / PAGE Picture OK / SELECT AVC Dynamic Bass Effect On On Off \ Access 0 Screen PR / PAGE VOL Sound Install Function DVB Move Balance Equalizer Adjust Exit VOL PR / PAGE Picture AVC Dynamic Bass Effect Balance On On Off \ Access 0 Off VOL OK / SELECT Screen Sound PR / PAGE Note : · 3D PANORAMA: This function generates virtual surround sound from the left and right speaker by expanding the existing surround system function. 48 Install Function DVB Equalizer Move On/Off Exit Sound Adjustment Multi-Sound and Stereo 1. Mono Sound Selection · During Stereo sound reception if the stereo is weak, you can switch to MONO by pressing the " " button. Then the colour of "MONO" character will change to Red. In Mono reception the depth of sound is improved. · To switch back to stereo, press the " " button again. M RECALL S.EFFECT ABC DEF GHI 1 JKL 2 MNO 3 PQR 4 STU 5 VWX 6 YZ&. PR 19 PR 19 Mono 12 : 00 Mono 12 : 00 Note : · " " only works in RF mode.

C C / U S C M RECALL S.EFFECT 2. Adjustment of Bilingual sound · In bilingual broadcast reception, you can switch from Dual 1 to Dual 2 by pressing the " " button repeatedly. ABC DEF GHI 1 JKL 2 MNO 3 PQR 4 STU 5 VWX 6 YZ&. PR 19 PR 19 Dual 1 12 : 00 Dual 2 12 : 00 49 Selection of Language Selection of Language When you first turn on the TV set, the on screen display of language selection is displayed automatically.

1. Press the "MENU" button and select "Function" · VOL PR / PAGE Picture OK / SELECT Language Child Lock Clock English Off : Off 00 : 00 00 Screen PR / PAGE VOL Sound Install Function DVB Move Wake Up Wake Time Wake Pr Select Exit 2. Select "Language" by pressing " / " button. VOL PR / PAGE Picture OK / SELECT Language Child Lock Clock English Off : Off 00 : 00 00 Screen PR / PAGE 3.

Select your desired language by pressing the " / " button. Then it will set automatically. The language changes as follows. English German French Espanol Italian Danish Suomi Swedish Helinika Norska Dutch Portuguese Cesky Polish Romana Russian Magyar Bulgarian Welsh Gaelic VOL Sound Install Function DVB Move Wake Up Wake Time Wake Pr Adjust Exit 50 Adjustment of Time Adjustment of Time - You must previously adjust current time in order to activate Automatic On/Off, switching of Wake Up Time and Sleep Mode. However in the UK the time is set automatically from the broadcast received. 1. Manual clock setting · To go to the Clock, press the " " button. · Place the cursor to Hour / Minute with " / " buttons. · Set the Hour / Minute with the " / " buttons. · Place the cursor to Clock with " / " buttons and then press the "MENU" button to complete.

Note : · Manually set clock is not memorized any more when TV is completely powered off from the A/C mains. VOL PR / PAGE Picture OK / SELECT Language Child Lock Clock English Off : Off 00 : 00 00 Screen PR / PAGE VOL Sound Install Function DVB Move Wake Up Wake Time Wake Pr Adjust Exit 2. Setting the Wake up time / Program · To go to the Wake Up, press the " / " button. · Select the Wake Up to "On" · · Set the Wake up time and Program in the same way as above for the Clock. The set will turn on at the selected time. Note : · Confirm the Time is set. The Wake up time is only available when the Time is set. · If adjusted once, the On-time continues to operate every day unless you cancel setup or you turn the AC power off. · It is a convenient method to wake you up in the morning.

VOL PR / PAGE Picture OK / SELECT Language Child Lock Clock English Off : Off 00 : 00 00 Screen PR / PAGE VOL Sound Install Function DVB Move Wake Up Wake Time Wake Pr Adjust Exit 3. Sleep Mode · By pressing the "SLEEP" button on the remote controller repeatedly, you can select one of the following settings: Sleep Timer: OFF 15 30 45 60 75 90 105 120 OFF · The set will turn off after the time you select. Note : · If an active signal is not present for about 30 minutes, the set will automatically turn to ST-BY mode. 4 STU 5 VWX 6 YZ&. 7 STILL 8 0 9 SLEEP TEXT REVEAL T.

CANCEL SIZE S-CODE HOLD MIX INDEX 51 Other Functions 1. Setup of Child Lock · Move to Child Lock in the Function menu. · Select Child Lock to "On" using the " " button Note : · This prevents the use of the TV set without the remote control. · If the TV set is in Child Lock mode, the LED will cycle between red and blue. · If the Child Lock is "On" then the set can only be switched, back on using the remote control.

VOL PR / PAGE Picture OK / SELECT Language Child Lock Clock English Off : Off 00 : 00 00 Screen Sound PR / PAGE VOL Wake Up Wake Time Wake Pr Install Function DVB Move Adjust Exit 52 Teletext Analogue Teletext SWITCHING TELETEXT ON/OFF Press the "TEXT" button ( ).



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DLT-42G1 user guide](#)

<http://yourpdfguides.com/dref/3403766>