




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DR-2100P. You'll find the answers to all your questions on the DAEWOO DR-2100P in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAEWOO DR-2100P**  
**User guide DAEWOO DR-2100P**  
**Operating instructions DAEWOO DR-2100P**  
**Instructions for use DAEWOO DR-2100P**  
**Instruction manual DAEWOO DR-2100P**

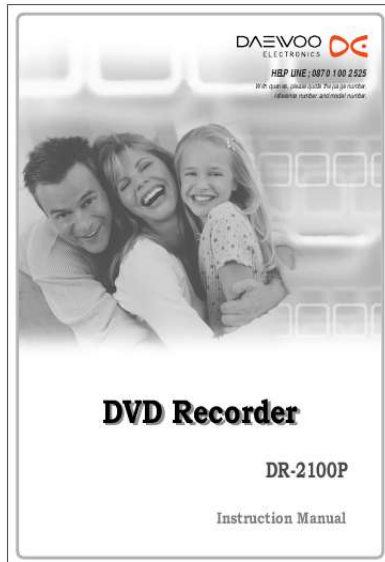

[You're reading an excerpt. Click here to read official DAEWOO DR-2100P user guide](http://yourpdfguides.com/dref/3406204)  
<http://yourpdfguides.com/dref/3406204>

**Manual abstract:**

· Do not open the DVD Recorder. Get a qualified technician to carry out any repairs. @@This can lead to condensation inside the DVD Recorder, which can damage it. Wait for approx. 2 hrs for it to reach room temperature. · Make sure the DVD Recorder is placed at least 10 cm apart from other home appliances or obstacles to ensure sufficient ventilation. · The apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases should be placed on top of the recorder. · Before a storm and/or lightning, unplug the DVD Recorder from the mains supply and aerial. · Put the recorder on a steady flat surface. · Only clean the recorder with a soft, lint-free cloth.

Do not use harsh or alcohol-based cleaning agents. For your own Safety · There are no components in this product you can service or repair yourself. · Do not open the case of the DVD Recorder. Only allow a qualified engineer to repair or service your DVD Recorder. · This DVD Recorder is designed to work continuously.

Switching it off (standby mode) does not disconnect it from the mains. To disconnect it from the mains you have to unplug it. i DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `ii mac001 1200DPI 90LPI Important Safeguards CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated `dangerous voltage `within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance. CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. WARNING TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN CAUTION OR MOISTURE. TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. IMPORTANT FOR LASER PRODUCTS LASER This Digital Video Disc Player employs a Laser System. To ensure proper use of this product please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure. Use of control adjustments or the performance of procedures other than those specified may result in hazardous radiation exposure.

To prevent direct exposure to the laser beam, do not try to open the enclosure. Visible laser radiation when open and interlocks defeated. DO NOT STARE INTO THE BEAM. Avoid direct exposure to beam. CLASS 1 LASER PRODUCT DANGER Visible laser radiation when open and interlock failed or defeated. CAUTION Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel. CAUTION Any changes or modification in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ii DW-Q73D2P-SA(GB) 2005.9.

2 9:30 AM `iii mac001 1200DPI 90LPI Important Safeguards INTRODUCTION This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user. 1 READ INSTRUCTIONS All the safety and operating instructions should be read before the unit is operated.

ventilation to ensure reliable operation of the unit and to protect it from overheating. These openings must not be blocked or covered. These openings must not be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat radiator. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

2 RETAIN INSTRUCTIONS The safety and operating instructions should be retained for future reference. 10 POWER SOURCES This unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions. 3 HEED WARNINGS All warnings on the unit and in the operating instructions should be adhered to. 4 FOLLOW INSTRUCTIONS All operating and use instructions should be followed. 11 POWER-CORD PROTECTION Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit. 5 CLEANING Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6 ATTACHMENTS Do not use attachments unless recommended by the unit's manufacturer as they may cause hazards. 12 LIGHTNING For added protection for this unit during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges. 7 WATER AND MOISTURE Do not use this unit near water- for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool. 8 ACCESSORIES Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury to a child or adult as well as serious damage to the unit. Use this unit only with a cart, stand, tripod, bracket, or table recommended by the manufacturer. 13 DISC TRAY Keep your fingers well clear of the disc as it is closing. It may cause serious personal injury. 14 OVERLOADING Do not overload wall outlets of extension cords as this can result in a risk of fire or electric shock.

15 OBJECT AND LIQUID ENTRY Never push objects of any kind into this unit through openings as they may touch dangerous voltage points or `short-out' parts that could result in a fire or electric shock. Never spill liquid of any kind on the unit. 8A A unit and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. PORTABLE CART WARNING (symbol provided by RETAC) 9 VENTILATION Slots and openings in the case are provided for 16 BURDEN Do not place a heavy object on or step on the product.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3406204)

[DR-2100P user guide](http://yourpdfguides.com/dref/3406204)

<http://yourpdfguides.com/dref/3406204>

The object may fall, causing serious injury and serious damage to the product. 23 HEAT The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 17 DISC Do not use a cracked, deformed or repaired disc.

These discs are easily broken and may cause serious personal injury and product malfunction. 24 To prevent battery electrolyte leakage, which may result in injury and damage to the unit or other objects, observe the following precautions; A. All batteries must be installed with the proper polarity. B. Do not mix new with old or used batteries. C. Only use batteries of the same type and brand. D. Remove the batteries when they are not to be used for a long period time. E.

When the batteries have become discharged, they must be disposed of in a safe manner which complies with all applicable laws. 18 SERVICING Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 19 DAMAGE REQUIRING SERVICE Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions. When the power-supply cord or plug is damaged. If liquid has been spilled, or objects have fallen into the unit. If the unit has been exposed to rain or water. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.

If the unit has been dropped or the cabinet has been damaged. When the unit exhibits a distinct change in performance-this indicates a need for service. When replacement parts are required, have the service technician verify that the replacements he uses have the same safety characteristics as the original parts. Use of replacements specified by the unit manufacturer can prevent fire, electric shock, or other hazards. A.

B. C. D. 25 WEEE (Waste Electrical and Electronic Equipment) The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste.

In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. E. F. 20 REPLACEMENT PARTS 21 SAFETY CHECK Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks recommended by the manufacturer to determine that the unit is in safe operating condition. 22 WALL OR CEILING MOUNTING The product should be mounted to a wall or ceiling only as recommended by the manufacturer. iv DW-Q73D2P-SA(GB) 2005.

9.2 9:30 AM 1 mac001 1200DPI 90LPI Table of Contents INTRODUCTION INTRODUCTION Overview \_\_\_\_\_ 2  
Identification of Controls \_\_\_\_\_ 6 RECORDING Basic Recording \_\_\_\_\_ 38 Recording from TV One  
Touch Record (OTR) Checking the Recording Time To Pause the Recording 38 39 39 39 CONNECTIONS Connecting Antenna/Cable  
\_\_\_\_\_ 11 Connecting a TV \_\_\_\_\_ 12 Connecting an Amplifier/Receiver \_\_\_\_\_ 13 Connecting  
Optional Equipment \_\_\_\_\_ 14 Timer Recording \_\_\_\_\_ 40 Recording from an External Input \_\_\_\_\_ 43  
DISC OPERATION Disc Initialize \_\_\_\_\_ 44 Disc Operation in DVD±RW disc \_\_\_\_\_ 44 Disc Operation in  
DVD±R, DVD-RW disc \_\_\_\_\_ 46 SETUP Initial Installation \_\_\_\_\_ 15 Initial  
Setup \_\_\_\_\_ 17 Setup Menu Overview Installation' Settings Recording Options' Settings Menu Language' Settings  
Preferences' / Video Settings Preferences' / At, or music album. Each title is assigned a title reference number enabling you to locate it easily. Chapter  
(DVD only) Sections of a movie or a musical piece that are smaller than titles. A title is composed of one or several chapters. Each chapter is assigned a  
number to enable you to easily locate the chapter you want. Depending on the disc, chapters may not be labeled. Track (Audio CD only) Sections of a movie  
or a musical piece on an audio CD. Each track is assigned a number, enabling you to easily locate the track you want. 3 DW-Q73D2P-SA(GB) 2005.

9.2 9:30 AM 4 mac001 1200DPI 90LPI Overview About DVD Recording Notes on Recording · The recording times shown are not exact because the DVD Recorder uses variable bit-rate video compression. This means that the exact recording time will depend on the material being recorded. · When recording a TV broadcast, if the reception is poor or the picture contains interference, the recording times may be shorter. · Discs recorded at high speeds (equal to or greater than 2X) may not be recognized.

· If you record still pictures or audio only, the recording time may be longer. · The displayed times for recording and time remaining may not always add up to the exact length of the disc. · The available recording time may decrease if you heavily edit a disc. · When using a DVD+R disc, you can keep recording until the disc is full, or until you finalize the disc. Before you start a recording session, check the amount of recording time left on the disc.

Recording TV Audio Channels The DVD Recorder can record one or two channel audio. For TV broadcasts, this usually means mono or stereo, but some programs are broadcast in bilingual audio channel. You can record either BIL I, BIL II or both. Restrictions on Video Recording · You cannot record copy-protected video using this DVD Recorder. Copy-protected video includes DVD-Video discs and some satellite broadcasts. If copy-protected material is encountered during a recording, recording will pause or stop automatically and an error message will be displayed on-screen.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3406204)

[DR-2100P user guide](http://yourpdfguides.com/dref/3406204)

<http://yourpdfguides.com/dref/3406204>

· Video that is 'copy-once only' can only be recorded using DVD+RW discs with CPRM. Copyright Notice · Audio and video recordings you make using the DVD Recorder are for your personal use only. You may not sell, lend, or rent them to other people. · This product incorporates copyright protection technology that is protected by method claims of certain U.

patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision corporation. Reverse engineering or disassembly is prohibited. Precautions Handling the Unit When shipping the unit The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packaged at the factory. When setting up the unit The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc. To keep the surface clean Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time.

They will leave marks on the surface. 4 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM 5 mac001 1200DPI 90LPI Overview INTRODUCTION Cleaning the Unit To clean the cabinet Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit. To obtain a clear picture The DVD Recorder is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.)

) For details, please contact your nearest dealer. Remote Control Operation Range Point the remote control at the remote sensor and press the buttons. Distance: Within 23 ft (7 m) of the remote sensor. Angle: Within 30° in each direction of the remote sensor. Remote Control Battery Installation Detach the battery cover on the rear of the remote control, and insert two AAA batteries. Make sure the polarities (+ and -) are aligned correctly. Caution Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.). AAA AAA Notes on Discs Handling Discs Do not touch the playback side of the disc.

Hold the disc by the edges so that fingerprints will not get on the surface. Do not stick paper or tape on the disc. Storing Discs After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car. Cleaning Discs Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center outward. Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records. Yes No About Symbols About the Symbol ` may appear on the TV screen during operation.

This icon means the function explained in this User's Guide is not available on that specific disc.

5 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM 6 mac001 1200DPI 90LPI Identification of Controls Front Panel % ^ & \* ( ) ! @ # \$ ! STANDBY/ON Turns the DVD Recorder on and off. @ Disc Tray (DVD deck) Insert a disc here. # Front Panel Display Shows the current status of the DVD Recorder.

\$ PR+/ Scans up or down through memorized channels. Also moves up and down in DVD navigation menus. % OPEN/CLOSE Opens or closes the disc tray. ^ REC Starts recording. Press repeatedly to set the recording time.

& PLAY/PAUSE Starts playback of a disc. Pauses playback or recording temporarily. \* STOP Stops playback. ( PREV Skips to previous chapter. ) NEXT Skips to next chapter. 1 AVF (VIDEO, L-AUDIO-R) Connects to the audio/video output of an external source (VCR, Camcorder, etc.). 6 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM 7 mac001 1200DPI 90LPI Identification of Controls INTRODUCTION Front Panel Display Channel PR10 Input mode TV Channel CC23 CATV Channel AV-1 F-AV AVI input Front AV input AV-2 AV2 input Recording on disc 11:15 11:15 RECP Others Indicates a DVD Timer recording is set.

Indicates the DVD is recording. Recording Pause mode 11:15 0:30 Indicates a DVD Timer Recording is in standby mode. OTR Recording mode SAFE TV Indicates when the DVD Recorder is locked. Indicates the DVD Recorder is in TV mode. Indicates the dts title is playing. 7 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM 8 mac001 1200DPI 90LPI Identification of Controls Remote Control Turns the DVD Recorder on and off. Lock/Unlock the front panel by pressing and holding it over 5 seconds. Opens and closes the disc tray in DVD mode.

Mutes the sound. Press and hold for 3 seconds to switch between Progressive Scan and Interlace Scan mode. Switches the DVD Recorder input to Tuner, AVI, AV2 or AVF. - Selects numbered options in menus. - Selects TV channels. Clears previous set timer recording or file name. Accesses DVD disc menus. Displays or exits the Setup menu. Displays the Timer Recording menu. Displays information about the currently loaded disc or TV channel.

- oe ... : Selects menu options. - PR(+/-) : Selects channels. Confirms menu selections. Starts recording. Press repeatedly to set the recording time. For more details, Refer to One Touch Record (OTR) on page 39. Selects Recording mode: - Approx 1 Hour (HQ mode), 2 Hours (SP mode), 4 Hours (EP mode), 8 Hours (SEP mode) Selects a subtitle language, if available.

Selects an audio language (DVD), audio channel (CD) or audio type (TV). - Starts playback. - Pauses playback or recording temporarily. Press again to exit Pause mode. Searches backward/forward. Stops playback or recording. 8 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM 9 mac001 1200DPI 90LPI Identification of Controls INTRODUCTION Skips to the next or previous chapter/track. Displays the edit menu for DVD+RW/+R discs or sets a chapter marker.

Enlarges the DVD video image. Increases or decreases the slow motion speed when playing a DVD. Displays the finalize menu for DVD±R, DVD-RW discs. Displays the digest menu for DVD+RW/+R discs. Displays a disc's Title menu, if available.

Selects a DVD camera angle, if available. Switches between the DVD Recorder tuner and your TV tuner. Repeats the current chapter, track, title or the entire disc.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3406204)

[DR-2100P user guide](http://yourpdfguides.com/dref/3406204)

<http://yourpdfguides.com/dref/3406204>

Repeats playback between two points (A and B). Virtual sound effect on and off.

**Progressive Scan Mode** · If your TV supports Progressive Scan, you can view high quality video by setting the DVD Recorder to Progressive Scan mode. If your TV does not support Progressive Scan, do NOT change to Progressive Scan mode. If you do so accidentally, press and hold the [P.SCAN] button for 3 seconds to restore normal viewing. · When video output mode is changed from RGB to Interlace or Progressive (Scart 1) will not be correct colour for Component video. · As component outputs have their own Jacks on the back side, change the TV input into Component input, after connecting the component cables from the DVD Recorder to TV. · Changing from Interlace or Progressive to RGB, should be the opposite of above. 9 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `10 mac001 1200DPI 90LPI Identification of Controls Rear panel !@ # \$ % ^ & \* ( ! RF OUT (TO TV) Connect to a TV with an RF coaxial input.

@ **RF IN (FROM ANT.)** Connect to your antenna or cable TV outlet. # **Scart socket 2** Connection of an additional device (satellite receiver, set-top box, video recorder, camcorder, etc.) \$ **Scart socket 1** Connection of a TV set. Composite-output and RGB-output. % **AUDIO OUT (L-AUDIO-R)** Connect to other equipment with audio inputs. Caution ^ **COMPONENT/PROGRESSIVE VIDEO OUT (Y Pb Pr)** Connect to a TV with Component Video (Y Pb Pr) inputs. & **COAXIAL (Digital Audio Out)** Connect to an amplifier with a coaxial digital audio input. \* **S-VIDEO OUT** Connect to a TV with an S-Video Input. ( AC Power Cord Plug into a power outlet.

Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the DVD Recorder. 10 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `11 mac001 1200DPI 90LPI Connections INTRODUCTION · There are a variety of ways to connect the DVD Recorder to your TV and other equipment.

Use only one of the connections described below. Whichever TV connection you use will work with all input sources. · Please refer to the manuals for your TV, VCR, stereo system, or other devices as necessary to make the best connections. · For better sound reproduction, connect the DVD Recorder's AUDIO OUT jacks to the audio in jacks of your amplifier, receiver, stereo, or audio/video equipment. See **Connecting an Amplifier/Receiver** on page 13.

**CONNECTIONS Caution** · Make sure the DVD Recorder is connected directly to the TV, and the TV is set to the correct video input. · Do not connect the DVD Recorder's AUDIO OUT jack to the phono in jack (record deck) of your audio system. · Do not connect the DVD Recorder via your VCR. The DVD image could be distorted by the copy protection system. **Connecting Antenna/Cable 1 2** Disconnect the antenna/cable from the rear of your TV. Connect this cable to the jack marked ANT IN (FROM ANT.) on the rear panel of the DVD Recorder. Antenna Antenna Antenna Antenna Cable TV Cable TV Wall Jack

Wall Jack Flat Wire Flat Wire (300 ohm) (300ohm) 300/75ohm Adaptor Adapter (Not supplied) (Not supplied) 300/75 ohm OR OR OR Rear of DVD Recorder If your cable wire is connected to your TV without a converter or descrambler box, unscrew the wire from your TV and attach it to the ANT IN (FROM ANT.) jack on the rear panel of the DVD Recorder. Use the supplied coaxial cable to connect between the DVD Recorder's OUT (TO TV) jack and the antenna input jack on your TV.

With this connection, you can receive all midband, superband, and hyperband channels (all cable channels). 11 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `12 mac001 1200DPI 90LPI Connections Connecting a TV Choose one of the following TV connections, depending on the capabilities of your equipment. **RF Connection** Connect the RF OUT (TO TV) jack on the DVD Recorder to the antenna in jack on your TV using the supplied 75-ohm RF cable (R). This set doesn't have a modulated channel output. It simply loops through the RF output. Rear of TV ANTENNA INPUT COMPONENT/PROGRESSIVE VIDEO INPUT S-VIDEO INPUT Pr Pb Y R V C S **Scart Connection 1** Plug a scart cable into the scart socket EURO AV1 at the back of the DVD Recorder and the corresponding scart socket at the back of the TV set. (V) 2 Plug a scart cable into the blue scart socket EURO AV2/DECODER at the back of the DVD Recorder and the corresponding scart socket at the back of a satellite decoder or set top box. Rear of DVD Recorder S-Video Connection 1 Connect the S-VIDEO OUT jack on the DVD Recorder to the S-Video in jack on your TV using an S-Video 2 cable (S).

Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the left/right audio in jacks on your TV using the supplied audio cables. **Component Video Connection 1** Connect the COMPONENT/PROGRESSIVE VIDEO OUT jacks on the DVD Recorder to the corresponding input 2 jacks on your TV using a Y Pb Pr cable (C) if the Component Video jacks (Y, Pb, Pr) are available on your TV. Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the left/right audio in jacks on your TV using the supplied audio cables. **Progressive Scan Connection** · If your television is a high-definition or digital ready television, you may take advantage of the DVD Recorder's Progressive Scan output for the highest video resolution possible. · If your TV does not accept the Progressive Scan format, the picture will appear scrambled.

1 2 Connect the COMPONENT/PROGRESSIVE VIDEO OUT jacks on the DVD Recorder to the corresponding in jacks on your TV using an optional Y Pb Pr cable (C). Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the left/right audio in jacks on your TV using the supplied audio cables. · Be sure to set the DVD Recorder to Progressive Scan mode by pressing and holding [P.SCAN] for 3 seconds (or changing the Video Output in the Setup Menu; see page 23). · Progressive Scan does not work with the RF, Audio/Video or S-Video connections.

12 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `13 mac001 1200DPI 90LPI Connections Connecting an Amplifier/Receiver Connecting to an amplifier equipped with two channel analog stereo or Dolby Pro Logic II/Pro Logic Connect the Left and Right AUDIO OUT jacks on the DVD Recorder to the left and right audio in jacks on your amplifier, receiver, or stereo system, using the supplied audio cables (A). Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/Video receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2, or DTS) **CONNECTIONS 1 2** Connect the DVD Recorder's DIGITAL AUDIO OUT jack (COAXIAL X) to the corresponding in jack on your amplifier. Use an optional digital coaxial audio cable. You will need to activate the DVD Recorder's digital output; see **AUDIO Settings** on page 24.



[You're reading an excerpt. Click here to read official DAEWOO DR-2100P user guide](http://yourpdfguides.com/dref/3406204)

<http://yourpdfguides.com/dref/3406204>

Digital Multi-Channel Sound? A digital multi-channel connection provides the best sound quality. For this you need a multi-channel audio/video receiver that supports one or more of the audio formats supported by your DVD Recorder (MPEG 2, Dolby Digital, and DTS). Check the receiver manual and the logos on the front of the receiver. · Due to the DTS Licensing agreement, the digital output will be in DTS digital out when DTS audio stream is selected.

· If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all. · 5.1 channel digital surround sound via the digital connection can only be obtained if your receiver is equipped with a digital multi-channel decoder. · To see the audio format of the current DVD on the on-screen display, press [AUDIO]. The DVD Recorder does not perform internal (2- channel) decoding of DTS sound tracks. To enjoy DTS multi-channel surround, you must connect the DVD Recorder to a DTS compatible receiver via one of the DVD Recorder's digital audio outputs. Rear of DVD Recorder A X L R COAXIAL DIGITAL INPUT AUDIO INPUT Amplifier (Receiver) 13 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `14 mac001 1200DPI 90LPI Connections Connecting Optional Equipment To receive audio/video signals from other equipment, connect the LINE1 or LINE2 jacks on the DVD Recorder to the audio/video out jacks on your external component, using optional audio/video cables. Jack Panel of Accessory Component (VCR, Camcorder, etc.

) Front of DVD Recorder 14 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `15 mac001 1200DPI 90LPI Initial Installation Initial Installation After successfully connecting your DVD Recorder to your TV and other devices, this chapter will show you how to complete the initial installation. You must follow the initial installation process to set the time, date, channels, and language preferences for the DVD Recorder. CONNECTIONS 1 Initial Setup Wizard `is displayed on the screen.

Make sure the RF cable from your antenna or cable TV jack is connected. Press [ENTER] to begin initial installation. Initial Setup Wizard Before using your recorder Please complete this setup Next ENTER 1/7 OK 2 'OSD Lang' message is displayed on the screen. Select the desired language for the on screen menu using [.

./]. Press [ENTER] to confirm. OSD Lang 2/7 English Spanish French Back SETUP ... Choose ENTER OK 3 'Country Setting' message is displayed on the screen. Select the desired country using [...

./]. Press [ENTER] to confirm. Country Setting 3/7 Australia Belgium Denmark Back ... Choose ENTER OK 4 'Auto Scan' message is displayed on the screen. The DVD Recorder detects channels automatically and stores them in memory. Auto Scan 4/7 Antenna 5 CHs found Back oe Cancel ENTER Choose OK 5 'Clock Set' message is displayed on the screen. Set the clock. Use [oe/] to move left/right and use [.

./] to change the settings. After setting the clock, press [ENTER] to confirm. If you cancel the process during Initial Installation, you should repeat this procedure.

Clock Setting ... 1 / 1 / 2005 Back ..

. 5/7 00 : 00 Choose ENTER OK 6 'CH List' message is displayed on the screen. Press [ENTER] to confirm. CH List NO. NAME PR1 BBC PR2 P-02 PR3 P-03 oe ... 6/7 OK Cancel ENTER Back OK Choose 15 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `16 mac001 1200DPI 90LPI Initial Installation 7 'Complete' message is displayed on the screen.

'Initial Installation' process is finished. Complete 7/7 Setup has been completed Enjoy using your recorder Back ENTER Finish OK Re-Installation This set is equipped with the multi-tuner for receiving many countries' broadcasting. In order to receive broadcasting of different countries, follow as below. 1 Press [SETUP] and select the 'Restore Defaults' using [oe /]. Then, RESET the set. (see page 28) 2 Power On, then you see the 'Initial Installation'. 3 Select the country which you want to (on page 26), then repeat the steps 4~10 on page 17~18. 16 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `17 mac001 1200DPI 90LPI Initial Setup Setup Menu Overview The DVD Recorder Setup menu includes four categories, including: Initial Setup, Disc Operation, Disc Edit and Timer Recording.

Press [SETUP], [oe/] and [ENTER] on the remote control to view the first and second levels of the Setup menu. 1. Initial Setup Screen go to page 17~28. 2. Disc Operation Screen go to page 44~46.

DVD Recorder Init Setup © Init Setup oe Select Init Setup Disc Oper Disc Edit Timer REC DVD Recorder Init Setup © Disc Operation oe Select Init Setup Disc Oper Disc Edit Timer REC 3. Disc Edit Screen go to page 47~49. DVD Recorder Init Setup © Disc Edit oe Select Init Setup Disc Oper Disc Edit Timer REC 4. Timer Recording Screen go to page 40~42. DVD Recorder Init Setup © Timer REC oe Select Init Setup Disc Oper Disc Edit Timer REC SETUP Installation' Settings Manual Setting To complete the set-up of your DVD Recorder when the auto set has not stored all of the channels or when you wish to store a new channel.

Installation ·Manual Setting Auto Scan Clock Setting Adjust channels 1 Press [SETUP]. The Setup menu appears. While Init Setup `is selected, press [ENTER] to go to the initial setup page. 2 3 4 5 Use [oe/] to select Installation ` While Installation `is selected, press [.] to select Manual Setting ` Press [ENTER]. The Manual Setup' menu appears. Select Standard `using [oe/]. Use [.

./] to select the desired 'Standard' (PAL BG, PAL DK, PAL II, or SECAM L), then press [ENTER]. This set is equipped with the Multi-Tuner. You can search broadcastings of other countries. If the set can not search the channels, please Re-Install. (see page 19.) oe ... Choose ENTER OK SETUP Exit Manual Setup Standard .

.. Reception Aerial Auto Search 25 Store Channel NAME P-04 Fine Tune 0 PAL BG Decoder Off PR No. 4 Store Channel Cancel 17 DW-Q73D2P-SA(GB) 2005.9.

2 9:30 AM `18 mac001 1200DPI 90LPI Initial Setup 6 Select Reception `using [oe/]. Use [.../] to select the desired broadcast system (Aerial or Cable), then press [ENTER].

Manual Setup Standard PAL BG Decoder Off PR No. -Reception ... Auto Search -Store Channel NAME P-04 Fine Tune 0 Cable Aerial: If you are using a standard antenna to receive channels. Cable: If you are using basic cable to receive channels. Store Channel Cancel 7 Select Auto Search `using [oe/].

Search the real channel number by pressing [oe/]. Manual Setup Standard PAL BG Decoder Off PR No. 4 Reception Aerial Auto Search .



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3406204)

[DR-2100P user guide](http://yourpdfguides.com/dref/3406204)

<http://yourpdfguides.com/dref/3406204>

.. Fine Tune 0 25 Store Channel NAME P-04 Store Channel Cancel 8 Select Fine Tune using [oe/]. You can adjust the fine tuning. Manual Setup Standard PAL BG Decoder Off PR No. 4 Reception Aerial Auto Search 25 Store Channel NAME P-04 Fine Tune ... 0 Store Channel Cancel 9 Select Decoder using [oe/]. When the program is encoded (and you have a decoder connected to socket EURO AV2), press [..] to select 'On' and press [ENTER] to confirm. Manual Setup Standard PAL BG Decoder ..

. Reception Aerial Auto Search 25 Store Channel NAME P-04 Fine Tune 0 Off PR No. 4 Store Channel Cancel 10 Select Store Channel using [oe/]. Use [..] to select program number to store and press [ENTER] to confirm. Manual Setup Standard PAL BG Decoder PR No. Off... Reception Aerial Auto Search 25 Store Channel NAME P-04 Fine Tune 0 4 Store Channel Cancel 11 Select Program Name using [oe/]. Press [ ] to move to the second level. If your DVD Recorder is showing no station name or is showing a station name incorrectly, you can correct this. Either select the name from the stored list or you create the station name and enter a 4-digit name.

Change the letters with the [..], move the next letter with the [oe/]. Manual Setup Standard PAL BG Decoder PR No. Off 4 Reception Aerial Auto Search 25 Store Channel NAME P-04 Store Channel Cancel Fine Tune 0 Program Name P-04 A H O BCD IJK PQR VWX Clear Space OK Cancel E L S Y FG MN TU Z NB. You must backspace any digits already in the name box before you can enter a new name. 18 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `19 mac001 1200DPI 90LPI Initial Setup Auto Scan The DVD Recorder has a frequency synthesized tuner capable of receiving up to 119 channels. These include VHF channels 2-20, 74-80, UHF channels 21-69 and CATV channels 1-41. Installation Manual Setting Auto Scan Clock Setting Adjust channels Preparation: Connect the DVD Recorder to the desired type of antenna or cable TV system, as shown in Connecting Antenna/Cable on page 11. 1 2 3 oe ...

Choose ENTER OK SETUP Exit TV Follow steps 1-2 as shown under Manual Setting'. Auto Scan While Installation is selected, press [..] to select Auto Scan :

1 CHs found Press [ENTER] to begin the channel search. The tuner will automatically search for all available channels in your area and place them in the tuner's memory. Cancel SETUP After Auto Scan is complete, follow the instructions above to make sure that Tuning Band is set correctly. Clock Setting 1 Follow steps 1-2 as shown under Manual Setting'. 2 Use [..] to select Clock Setting Installation Manual Setting Auto Scan Clock Setting Adjust channels oe ..

. Choose ENTER OK SETUP Exit 3 4 Press [ENTER]. The Clock Setting' menu appears. Enter the date and time. oe / (left/right): Moves the cursor to the previous or next column. ... / (up/down): Changes the setting at the current cursor position. Clock Setting .

.. 1 1 2005 00 40 5 Press [ENTER] to confirm your setting, then press [SETUP] to exit the Setup menu. 19 DW-Q73D2P-SA(GB) 2005.9. 2 9:30 AM `20 mac001 1200DPI 90LPI Initial Setup Adjust Channels 1 Follow steps 1-2 as shown under Manual Setting'. 2 Use [..] to select Adjust Channels :

3 Press [ENTER]. The CH List' menu appears. 4 Use [..] to select the PR number you want to adjust. Then press [ENTER]. Installation Manual Setting Auto Scan Clock Setting Adjust channels oe ...

Choose ENTER OK SETUP Exit CH List NO. PR1 PR2 PR3 PR3 PR3 ENTER NAME BBC P-02 P-03 P-03 P-03 ... OK Cancel oe ... Delete After tuning TV stations into your DVD Recorder, you may wish to delete a station. Select Highlight CH List NO. PR1 PR2 PR3 PR3 PR3 oe .

.. 1 2 3 Edit Select the PR number you want to delete using [..] . Press [oe]. The selected PR will be deleted. Press [ENTER] to confirm. NAME BBC P-02 ----- .

.. OK Cancel q ENTER Delete Sort channel Edit Confirm After tuning TV stations into your DVD Recorder, you may wish to put a name into any channel you want to. 1 2 3 Select the PR number you want to edit using [..]. Press [q]. You can put a name by pressing [..] and [oe /]. Press [ENTER] to confirm. Sort channels After tuning TV stations into your DVD Recorder, you may wish to change the order of PR's you have in your set, as your preference. 1 2 3 Select the PR number you want to move using [..]. Press [..] to select the PR number you want to move to. Press [ENTER]. The selected PR Will be moved to the new PR number. 20 DW-Q73D2P-SA(GB) 2005. 9.2 9:30 AM `21 mac001 1200DPI 90LPI Initial Setup Recording Options' Settings Mode You can set the default DVD recording quality to: HQ (High Quality - 1 hr/disc), SP (Standard Quality - 2 hrs/disc), EP (Extended Play - 4 hrs/disc) or SEP (Very Low Quality - 8 hrs/disc). Recording Options Mode Chapter Mark Overwrite HQ SP EP SEP 1 Press [SETUP]. The Setup menu appears. While Init Setup is selected, press [ENTER] to go to the initial setup page.

oe ... Choose ENTER OK SETUP Exit 2 3 4 5 6 Use [oe/] to select Recording Options While Recording Options : is selected, press [ ] to select Mode : Press [ ] to move to the second level. Use [..] to select the desired Record Quality (HQ, SP, EP or SEP).

Press [ENTER] to confirm your selection, then press [SETUP] to exit the menu. SETUP Chapter Mark During recording, chapter markers are added automatically at fixed intervals. You can set this interval to 5 min, 10 min or 15 min. But when you set DVD Record quality "SEP", Auto Chapter interval could be set only '10 min' or '15 min'. To turn off automatic chapter marking, select 'Off' Follow the same procedure as 'Mode'. Recording Options Mode Chapter Mark Overwrite Off 05 min 10 min 15 min oe ... Choose ENTER OK SETUP Exit Overwrite Immediately begins recording over the currently selected title.

Recording Options Mode Chapter Mark Overwrite -On Off oe ... Choose ENTER OK SETUP Exit 21 DW-Q73D2P-SA(GB) 2005.9. 2 9:30 AM `22 mac001 1200DPI 90LPI Initial Setup Menu Language' Settings OSD Language Select a language for the DVD Recorder Setup menu and on-screen displays. Menu Language OSD Lang Disc Menu Subtitle Audio English Français Español Portuguese Italian Deutsch Dutch Hungarian Russian ENTER 1 Press [SETUP]. The Setup menu appears. While Init Setup is selected, press [ENTER] to go to the initial setup page. 2 3 4 5 6 Use [oe] and [ ] to select Menu Language :

oe ... Choose OK SETUP Exit While Menu Language is selected, press [ ] to select OSD Lang : Press [ ] to move to the second level.



[You're reading an excerpt. Click here to read official DAEWOO DR-2100P user guide](http://yourpdfguides.com/dref/3406204)

<http://yourpdfguides.com/dref/3406204>

Use [...] to select the desired language. Press [ENTER] to confirm your selection, then press [SETUP] to exit the menu.

Menu/Subtitle/Audio Language Select your preferred language for Disc Menus, Subtitles, and Audio soundtracks. Menu Language OSD Lang · Disc Menu Subtitle Audio Auto English French Spanish Portuguese Italian German Dutch Hungarian ENTER Default : The disc's default language is selected. Follow the same procedure as the OSD Language. oe ... Choose OK SETUP Exit Menu Language OSD Lang Disc Menu · Subtitle Audio Off English French Spanish Portuguese Italian German Dutch Hungarian ENTER oe ... Choose OK SETUP Exit Menu Language OSD Lang Disc Menu Subtitle · Audio Auto English

French Spanish Portuguese Italian German Dutch Hungarian ENTER oe ... Choose OK SETUP Exit 22 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `23 mac001 1200DPI 90LPI Initial Setup Preferences' / Video Settings 1 Press [SETUP].

@@@ Use [...] to select the desired TV Aspect. Press [ENTER] to confirm your selection.

@@ Displays pictures cropped to fill your TV screen. Both sides of the picture are cut off. 4:3 LB : Select when a standard 4:3 TV is connected.

@@@@@ The Setup menu appears. @@@@ Use [...] to select the desired digital output type. Press [ENTER] to confirm your selection.

@@@@@@@ Set 'Dynamic Range' to any mode you want for this effect.

@@@@@@@ Enter a 4-digit password using the [0-9] buttons. @@@@@@@@ The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop. @@ Then press [ENTER]. oe ... Choose ENTER OK SETUP Exit 3 4 The 'Input Password' submenu appears. Enter your current 4-digit password then press [ENTER]. Enter a new 4-digit password, then press [ENTER].

Re-enter the new password to confirm, press [ENTER]. · Master Password : If you forget your password, press 3,3,0,8 on the remote control and then press [ENTER]. · Set the new password to something other than '0000'. Input Password Old Password New Password Confirm PWD OK 0-9 oe ..

. Cancel ENTER Input digits Select OK 26 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `27 mac001 1200DPI 90LPI Initial Setup Various Preferences' Settings 1 Press [SETUP]. The Setup menu appears.

While 'Init Setup' is selected, press [ENTER] to go to the initial setup page. Preferences Video Audio Parental Ctrl · Auto Settings 2 3 4 Use [oe/] to select Preferences While Preferences Settings : ` Auto Clock Set VPS/PDC Off Off ' is selected, press [ ] to select 'Auto oe ... Choose ENTER OK SETUP Exit Press [ ]. The 'Auto Settings' submenu is displayed. Auto Clock Set SETUP Auto Clock enables the DVD Recorder to set the clock automatically whenever it is in Standby mode (plugged in but powered off). Auto Clock is only available for models with the VPS/PDC function.

Some broadcasting stations may send the time and date along with the VPS/PDC data. The video will automatically use this time and date during the initial setting up procedure during normal use, and every time you switch the video off at the mains. If you find that this time and date is incorrect you can remove this feature by following the steps below changing it to the OFF mode, you will then have to manually set the time and date, see above. Preferences Video Audio Parental Ctrl Auto Settings · Auto Clock Set VPS/PDC On Off oe ... Choose ENTER OK SETUP Exit 1 2 Use [...] to select 'Auto Clock Set' and press [ENTER].

Use [...] to change the 'Auto Clock Set' status, and press [ENTER] to confirm. VPS/PDC VPS/PDC is a service provided by some stations to enable you to perform timer recordings precisely even if the broadcaster delays the start time of the programme slightly.

The time you enter is the VPS/PDC time so this must be correct. Not all stations offer VPS/PDC, in which case the player will start at the time you enter and not the actual start time of the programme. If you wish to start recording at a specific time without it being adjusted by the VPS/PDC system in the event of a delay, switch VPS/PDC off otherwise the player will not record. Follow the same procedure as 'Auto Clock Set' to set the 'VPS/PDC' status. · "VPS/PDC" and "Auto Clock Set" are not provided for some countries.

Preferences Video Audio Parental Ctrl Auto Settings Auto Clock Set · VPS/PDC On Off oe ... Choose ENTER OK SETUP Exit 27 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `28 mac001 1200DPI 90LPI Initial Setup System Information System Information helps service personnel identify key firmware information about your DVD Recorder in case service is required. System Info Version WP3000000FQ-050813 Loader Version AA003 A100 Micom Software 1.0.6 DivX (R) Video On Demand Your registration code is : - - - - - to learn more visit www.divx.

com/vod oe ... Choose ENTER OK SETUP Exit Restore Defaults If you wish, you can reset the DVD Recorder to its original factory settings. 1 2 3 4 Press [SETUP]. Use [oe/] to select 'Restore Defaults Press [ENTER]. The Initialize menu will appear. Use the [oe ] buttons to select 'OK' and press [ENTER]. ` Restore Defaults · Default Reset oe ...

Choose ENTER OK SETUP Exit · Some options cannot be reset, including Parental Controls, Password, and Country Code. · After Restoring Defaults the unit reboots automatically and the Installation menu appears. You must set the country, language, channel, and clock settings again. 28 DW-Q73D2P-SA(GB) 2005.9.

2 9:30 AM `29 mac001 1200DPI 90LPI On-Screen Display Overview The On-Screen Display provides feedback on the status of the DVD Recorder and/or the currently loaded disc. To access the On-Screen Display (or OSD), press the [DISPLAY] button. Displaying DVD Information During disc playback, press [DISPLAY] to show information about the current disc. Changing menu options in display menu 1 2 3 · Press [DISPLAY] during playback. The on-screen display appears on the TV screen. Use [oe] to select the desired icon on the on-screen display. Press [ENTER] to display a submenu. Use [...

] to change the numbers. Press [ENTER] to confirm. SETUP Displaying icons on DVD disc 02/17 Title : Shows the current title number and total number of titles, and skips to the desired title number. Chapter : Shows the current chapter number and total number of chapters, and skips to the desired chapter number. Time Elapsed : Shows the elapsed playing time, and skips to the desired time. Audio : Shows the current audio soundtrack language, encoding method, and channel number, and changes the setting; AC3 5.1 CH English or AC3 2 CH English 001/002 0:00:26 Off Subtitle : Shows the current subtitle language, and changes the setting Repeat : Shows the current repeat mode, and changes the setting; Chapter, Title, All or Off A-B Repeat : Shows the current A-B repeat mode, and changes the setting; A-, A-B or Off Random Repeat : Shows the current random repeat mode, and changes the setting; On or Off OSD Language : Shows the current OSD language, and changes the setting Off Off Off 1 29 DW-Q73D2P-SA(GB) 2005.



[You're reading an excerpt. Click here to read official DAEWOO DR-2100P user guide](http://yourpdfguides.com/dref/3406204)

<http://yourpdfguides.com/dref/3406204>



9.2 9:30 AM `30 mac001 1200DPI 90LPI On-Screen Display Overview · Displaying icons on CDDA disc Track : Shows the current track number and total number of tracks, and skips to the desired 01/16 track number. 0:00:41 Time Elapsed : Shows the elapsed playing time, and skips to the desired time. Audio Effect : Shows the current audio effect, and changes the setting; Stereo or Mix-Mono Sound Effect : Shows the current sound effect, and changes the setting; Off, Concert, Living Off Room, Hall, Bathroom, Cave, Area or Church Off Repeat : Shows the current repeat mode, and changes the setting; Track, All or Off A-B Repeat : Shows the current A-B repeat mode, and changes the setting; A-, A-B or Off Random Repeat : Shows the current random repeat mode, and changes the setting; On or Off OSD Language : Shows the current OSD language, and changes the setting Off Off 1 30 DW-Q73D2P-SA(GB) 2005.9.2

9:30 AM `31 mac001 1200DPI 90LPI On-Screen Display Overview Displaying TV Information While watching TV, press [DISPLAY] to display/remove the on-screen display. If no rewritable DVD disc is inserted, you would see a screen like the following: If a DVD+R or DVD+RW disc is inserted, the disc information is displayed at the first button press. If you press [DISPLAY] again then the TV information is displayed.

PR 1 : - - - STEREO PDC 12:30 SP Changing the TV Audio Channel You can change the TV audio using the [AUDIO] button. Press [AUDIO] repeatedly to change the TV audio, according to the Broadcast audio signal as shown below. · STEREO Audio Signal : Stereo Mono Stereo · MONO Audio Signal : Mono · BIL Audio Signal : BIL1 BIL2 BIL1 The current audio channel is displayed on-screen. · If the sound is poor quality when set to Stereo, you can often improve it by changing to Mono. · When an external input is selected, the audio channel can be switched only to Stereo.

PLAYBACK Changing TV Channels If no disc is playing, you can change TV channels using the [0-9] or [PR+/-] buttons on the remote control or [PR+/-] buttons on the front panel. 31 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `32 mac001 1200DPI 90LPI DVD Playback Playing a DVD/VCD 1 Press [EJECT] to open the disc tray. 2 Load your disc in the tray with the playback side down (label side up). 3 Press [EJECT] to close the tray. 4 READING appears on the front panel display, and playback starts automatically. If playback does not start, press [PLAY ()]. In some cases, the Disc menu might appear instead. Playing a DVD+R (+RW, -R, -RW) When a DVD+RW or unfinalized DVD+R (-R, -RW) is inserted, no title is played automatically but the current TV channel displays on the screen.

1 If you want to play a title on the DVD+R (+RW, -R, -RW), you must press [MENU] or [PLAY] to display the disc menu of a thumbnail index for each recorded title on the disc. The index picture screen of the title will be displayed. Also title information (name of recording, recorded day, time, recording quality) will be displayed. 2 Select a title to play using [oe ] then press [ENTER] or [PLAY]. If a Disc menu is displayed · A Disc menu may be displayed when you load a DVD. Use the [oe ...] buttons to select the title/chapter you want to view, then press [ENTER] to start playback. Press [TITLE] or [MENU] to return to the Disc menu.

· If the Parental Level feature is set and the disc is below the current Parental Level setting, the 4-digit code must be entered and/or the disc must be authorized; see 'Set Parental Level' on page 25. · The DVD Recorder will not play discs with Region codes different from the DVD Recorder. The Region code for this DVD Recorder is 2 (two). · Unless stated otherwise, all operations described below use the remote control. Some features may also be available in the Setup menu.

· A disc which is recorded by computer at high speeds (greater than or equal to 2x) may not be recognized. · A disc which is recorded with unauthorized movie material may not be played. · A disc which is recorded by other recorder or not recorded correctly may not be recognized or played. 32 DW-Q73D2P-SA(GB) 2005.9.

2 9:30 AM `33 mac001 1200DPI 90LPI DVD Playback Still Picture and Frame-by-Frame Playback 1 Press [PLAY/PAUSE] during playback. The DVD Recorder will go into Pause mode. 2 You can back up or advance the picture frame-by-frame by pressing [FF ()] repeatedly during Pause mode. Fast Forward/Backward 1 Press [REW (oeoe)] or [FF ()] during playback. The DVD Recorder will go into Search mode. 2 Press [REW] or [FF] to select the desired speed: X2, X4, X8, X16, X32, (forward) or oe, oe X2, oe X4, oe X8, oe X16, oe X32 (backward). oe oe oe oe oe Slow Motion Press [SLOW+] or [SLOW] to enter Slow Motion mode. The default speed is 1/2. When you press [SLOW+] or [SLOW] repeatedly, the speed will be set to 1/4, 1/8, 1/16, and normal speed. Changing the Audio Language (DVD) Press [AUDIO] and then press [AUDIO] repeatedly during playback to hear a different audio language or audio track.

Subtitles (DVD) Press [SUBTITLE] and then press [SUBTITLE] repeatedly during playback to select among all available subtitle languages. PLAYBACK Camera Angle (DVD) If a DVD contains scenes recorded at different camera angles, angle icon displays automatically. You can select among these angles during playback. Press [ANGLE] and then press it repeatedly during playback to select the desired angle. The number of the current angle appears on the TV screen. The Camera Angle icon is displayed on the TV screen when alternate angles are available. Zoom The Zoom function allows you to magnify the video image and scroll around the enlarged image. 1 2 3 Press [ZOOM] during Play mode to activate the Zoom function. Each press of the [ZOOM] button changes the Zoom level as follows: X1 (normal size) X2 X3 X4 X1/2 X1/3 X1/4 X1 (normal size) Use the [oe ..] buttons to scroll around the zoomed picture. To resume normal playback, press [ZOOM] repeatedly until the X1 (normal picture) appears. · The Zoom function may not work on some DVDs. 33 DW-Q73D2P-SA(GB) 2005.

9.2 9:30 AM `34 mac001 1200DPI 90LPI DVD Playback Repeat 1 To repeat the currently playing chapter, press [REPEAT]. REPEAT CHAPTER appears on the TV screen. 2 To repeat the currently playing title, press [REPEAT] a second time. REPEAT TITLE appears on the TV screen. 3 4 To repeat the whole disc, press [REPEAT] a third time. REPEAT DISC appears on the TV screen. You can play in other modes (including Repeat, A-B, Shuffle, or Scan) by pressing [REPEAT] repeatedly. You can repeat a scene that starts when Repeat A-` displays on the screen. To mark the end point, press [A-B]. Press [A-B] again to repeat the scene. A-B You can repeat a scene between two points (A and B): 1 2 3 4 5 Press [PLAY/PAUSE] play to the start of the desired scene.



[You're reading an excerpt. Click here to read official DAEWOO DR-2100P user guide](http://yourpdfguides.com/dref/3406204)  
<http://yourpdfguides.com/dref/3406204>

Press [A-B] to mark the start point. Use [FF], [NEXT] to search the end point. Press [A-B] to mark the end point.

The marked scenes are repeated continuously until you stop the repeat by pressing [A-B] button again. Selecting Titles When a disc has more than one title, you can select among all available titles as follows: 1 Press [DISPLAY] and use [oe ] to select the Title icon. Press [ENTER] to display a submenu. Use [...] to select the desired title number and press [ENTER] to confirm. Selecting Chapters When a title on a disc has more than one chapter, you can select among all available chapters as follows: 1 2 Press [PREV (\$)] or [NEXT ()] briefly during playback to select the next or previous chapter. To skip directly to any chapter during playback, press [DISPLAY]. Use [oe ] to select the Chapter icon, then press [ENTER] to display a submenu.

Use [...] to select the desired chapter number and press [ENTER] to confirm. 34 DW-Q73D2P-SA(GB) 2005.

9.2 9:30 AM `35 mac001 1200DPI 90LPI DVD Playback Disc Menus Many DVDs contain Disc menus that allow you to access special features. To open a Disc menu, press [MENU]. Then use the [0-9] buttons to directly select the desired options, or use the [..

] buttons to highlight your desired selection and press [ENTER]. 1 2 Press [MENU]. The Disc menu is displayed. To exit the Disc menu, press [STOP]. Title Menus 1 Press [TITLE]. If the current title has a menu, the Title menu will appear on the TV screen. Otherwise, the Disc menu may appear. 2 The Title menu may contain camera angles, spoken languages and subtitle options, as well as the chapters for the title. Digest For displaying the edit menu for DVD+RW / +R discs, for setting chapter markers.

1 2 Press [DIGEST]. The Digest menu is displayed. To exit the Disc menu, press [STOP]. "Track Interval" won't be displayed in PBC ON mode. Digest Title Digest Chapter Digest Title Interval Chapter Interval ... Select s Exit Digest Track Digest Disc Interval Track Interval PLAYBACK ...

Select s Exit ... DVD ... VCD ... 35 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `36 mac001 1200DPI 90LPI Other Disc Playback Audio CD/MP3 PLAYBACK The DVD Recorder can play audio CDs and MP3 files on CD-ROM, CD-R or CD-RW discs. 1 2 Insert the CD disc and close the tray. The Audio CD or MP3 CD menu appears on the TV screen after a few moments to load the disc.

Use [...] to select a track or a file, then press [PLAY] or [ENTER]. During playback, the current track's elapsed playing time will appear on the menu. Playback will stop at the end of the disc. On the MP3 CD menu, you can display the folders on the disc. Use [...oe ] to select the folder icon on the MP3 CD menu then press [ENTER] or [PLAY]. You can also display just the tracks in the folders. Use [...

oe ] to select a folder then press [ENTER]. ... MP3 ... 3 4 5 While playing an Audio CD, use [FF] or [REW] for 2X, 4X, 8X, 16X, 32X speed playback. Use [PLAY/PAUSE] to pause playback while the disc is playing. To stop playback at any time, press [STOP]. · Press [REPEAT] to repeat a track (file) and press again to repeat the whole disc. JPEG CD PLAYBACK The DVD Recorder can display JPEG files on CD-R/RW. 1 2 Insert your CD and close the tray. The JPEG CD folder tree appears. If there are folders which contain JPEG files, select the desired folder using [...

.oe ] and press [ENTER]. 3 4 Select the thumbnail you want to display using [...

oe ] and press [ENTER]. The full size image will be displayed and a slide show starts automatically with a time interval of 10 seconds. 36 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `37 mac001 1200DPI 90LPI Other Disc Playback 5 6 7 Press [NEXT] or [PREV] to manually skip to the next or previous image.

Press [ ] (or [oe]) to rotate the image (counter) clockwise. Press [STOP] to exit the slideshow. · When a CD contains both MP3 files and JPEG files, the default Play mode is JPEG image files. · The DVD Recorder can playback up to 1000 files per disc. · MP3 files encoded below 64kbps are not supported. PLAYBACK Playing MP3 Files During a Slide Show You can enjoy a slide show while listening to MP3 music files. 1 2 3 4 5 Prepare a CD which includes both MP3 and JPEG files. Insert the CD and play an MP3 file. Press [TITLE] while playing the MP3 file to change the Play mode. The music playback will not stop.

Select an image file and press [ENTER] to start the slide show. The MP3 file you selected continues to play during the JPEG slide show. 37 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `38 mac001 1200DPI 90LPI Basic Recording Recording from TV Follow the instructions below to record a TV program. 1 Turn on the DVD Recorder and load a recordable disc. Make sure your TV input is set to view the DVD Recorder. 2 Set the desired Recording mode by pressing [REC MODE] repeatedly. HQ (High Quality - 1 hr/disc), SP (Standard Play - 2 hrs/disc), EP (Extended Play - 4 hrs/disc), or SEP (Super Long Play - 8 hrs/disc). 3 If your DVD Recorder does not show a TV program, press [INPUT] on the remote control.

Use [PR +/-] to select the TV channel you wish to record. 4 Press [AUDIO] to select the audio channel to record (Stereo, BIL, or Mono). The table below shows what audio channel will be recorded with different settings and different types of broadcasts. The last column (Monitor Audio) shows what you will hear during recording. For example, if the TV broadcast is in Stereo, then setting the DVD Recorder to Stereo will record the broadcast in Stereo, and the Monitor Audio will also be in Stereo.

TV Broadcast MONO STEREO BIL Selected Audio MONO STEREO MONO BIL I BIL II Broadcast Audio L Ch R Ch MONO MONO L R MONO MONO BIL I BIL I BIL II BIL II Monitor Audio MONO STEREO MONO BIL I BIL II 5 Press [REC (q)] once. Recording will start. The REC indicator lights on the front panel display. Recording continues until you press [STOP] or the disc is full. To record for a fixed length of time, see One Touch Record on the next page.

6 Press [STOP (s)] to stop recording. · The maximum number of DVD titles per disc is 49. If the DVD Recorder is powered off during DVD recording, the recording will not be saved. · If a DVD+RW or unfinalized DVD+R (-R, -RW) disc is inserted in the tray, no title is played automatically after loading is finished. · If you are recording to a blank DVD+R (+RW, -R, -RW) disc, it may take up to 7 minutes for post processing after recording. 38 DW-Q73D2P-SA(GB) 2005.9.2 9:30 AM `39 mac001 1200DPI 90LPI Basic Recording One Touch Record (OTR) One Touch Recording allows you to add recording time in fixed increments at the touch of a button. 1 Follow steps 1-4 under Recording from TV. 2 Press [REC (q)] repeatedly to set the length of the recording.



[You're reading an excerpt. Click here to read official DAEWOO DR-2100P user guide](http://yourpdfguides.com/dref/3406204)  
<http://yourpdfguides.com/dref/3406204>