




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DRV-6705. You'll find the answers to all your questions on the DAEWOO DRV-6705 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO DRV-6705
User guide DAEWOO DRV-6705
Operating instructions DAEWOO DRV-6705
Instructions for use DAEWOO DRV-6705
Instruction manual DAEWOO DRV-6705

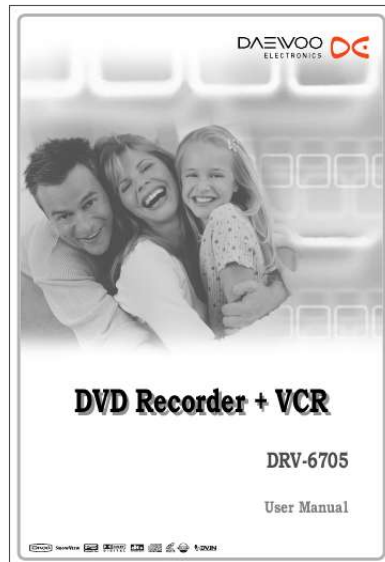

[You're reading an excerpt. Click here to read official DAEWOO DRV-6705 user guide](http://yourpdfguides.com/dref/3406142)
<http://yourpdfguides.com/dref/3406142>

Manual abstract:

Do not open the product. Get a qualified technician to carry out any repairs. @@This can lead to condensation inside the product, which can damage it. Wait for approx. 2 hrs for it to reach room temperature. Make sure the product is placed at least 10 cm apart from other home appliances or obstacles to ensure sufficient ventilation. The product should not be exposed to dripping or splashing and no objects filled with liquids, such as vases should be placed on top of the product. Before a storm and/or lightning, unplug the product from the mains supply and aerial. Put the product on a steady flat surface. Only clean the product with a soft, lint-free cloth.

Do not use harsh or alcohol-based cleaning agents. For your own Safety . . . There are no components in this product you can service or repair yourself. Do not open the case of the product. Only allow a qualified engineer to repair or service your product. This product is designed to work continuously.

Switching it off (stand-by mode) does not disconnect it from the mains. To disconnect it from the mains you have to unplug it. 1 DF-H7BD2D-JB-I(GB) 2008.4.11 1:52 PM 2 mac001 1200DPI 100LPI Important Safeguards CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).

NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance. IMPORTANT FOR LASER PRODUCTS LASER This Digital Video Disc Player employs a Laser System. To ensure proper use of this product please read this owner's manual carefully and retain for future reference.

Should the unit require maintenance, contact an authorized service location - see service procedure. Use of control adjustments or the performance of procedures other than those specified may result in hazardous radiation exposure. To prevent direct exposure to the laser beam, do not try to open the enclosure. Visible laser radiation when open and interlocks defeated.

DO NOT STARE INTO THE BEAM. DANGER Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam. CLASS 1 LASER PRODUCT WARNING TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. CAUTION TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. CAUTION Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel. CAUTION Any changes or modification in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. 2 DF-H7BD2D-JB-I(GB) 2008.4.

11 1:52 PM 3 mac001 1200DPI 100LPI Important Safeguards INTRODUCTION This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user. 1 READ INSTRUCTIONS All the safety and operating instructions should be read before the unit is operated.

RETAIN INSTRUCTIONS The safety and operating instructions should be retained for future reference. HEED WARNINGS All warnings on the unit and in the operating instructions should be adhered to. FOLLOW INSTRUCTIONS All operating and use instructions should be followed. CLEANING Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.

Use a damp cloth for cleaning. ATTACHMENTS Do not use attachments unless recommended by the unit's manufacturer as they may cause hazards. WATER AND MOISTURE Do not use this unit near water- for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool. ACCESSORIES Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury to a child or adult as well as serious damage to the unit. Use this unit only with a cart, stand, tripod, bracket, or table recommended by the manufacturer. PORTABLE CART WARNING (symbol provided by RETAC) ventilation to ensure reliable operation of the unit and to protect it from overheating. These openings must not be blocked or covered. These openings must not be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat radiator.

This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 10 POWER SOURCES This unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions. MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable. 11 POWER-CORD PROTECTION Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, mains sockets, and the point where they exit from the unit. 12 LIGHTNING For added protection for this unit during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges. 13 DISC TRAY Keep your fingers well clear of the disc tray as it is closing. It may cause serious personal injury.

14 OVERLOADING Do not overload wall outlets of extension cords as this can result in a risk of fire or electric shock. 15 OBJECT AND LIQUID ENTRY Never push objects of any kind into this unit through openings as they may touch dangerous voltage points or 'short-out' parts that could result in a fire or electric shock. Never spill liquid of any kind on the unit. 16 BURDEN Do not place a heavy object on or step on the product. The object may fall, causing serious 2 3 4 5 6 7 8 8A A unit and cart combination should be moved with care.

Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3406142)

[DRV-6705 user guide](http://yourpdfguides.com/dref/3406142)

<http://yourpdfguides.com/dref/3406142>

9 VENTILATION Slots and openings in the case are provided for 3 DF-H7BD2D-JB-I(GB) 2008.4.11 1:52 PM 4 mac001 1200DPI 100LPI Important Safeguards personal injury and serious damage to the product. 17 DISC Do not use a cracked, deformed or repaired disc.

These discs are easily broken and may cause serious personal injury and product malfunction. 18 SERVICING Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 19 DAMAGE REQUIRING SERVICE Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions. A. When the power-supply cord or plug is damaged. B. If liquid has been spilled, or objects have fallen into the unit. C. If the unit has been exposed to rain or water.

D. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation. E. If the unit has been dropped or the cabinet has been damaged. F. When the unit exhibits a distinct change in performance-this indicates a need for service. 20 REPLACEMENT PARTS When replacement parts are required, have the service technician verify that the replacements he uses have the same safety characteristics as the original parts. Use of replacements specified by the unit manufacturer can prevent fire, electric shock, or other hazards.

21 SAFETY CHECK Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks recommended by the manufacturer to determine that the unit is in safe operating condition. 22 WALL OR CEILING MOUNTING The product should be mounted to a wall or ceiling only as recommended by the manufacturer. 23 HEAT The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 24 To prevent battery electrolyte leakage, which may result in injury and damage to the unit or other objects, observe the following precautions; A. All batteries must be installed with the proper polarity.

B. Do not mix new with old or used batteries. C. Only use batteries of the same type and brand. D.

Remove the batteries when they are not to be used for a long period time. E. When the batteries have become discharged, they must be disposed of in a safe manner which complies with all applicable laws. 25 WEEE (Waste of electrical and electronic equipment) The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potential hazards to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

26 RoHS (Directive 2002/95/EC) Compliant This environment-friendly product does not contain the EU RoHS restricted substances(Pb,Hg,Cd,Cr6+, PBB,and PBDE). 4 DF-H7BD2D-JB-I(GB) 2008.4.11 1:52 PM 5 mac001 1200DPI 100LPI Table of Contents INTRODUCTION Introduction Safety Instructions _____1 Important Safeguards _____2 Table of Contents _____5 Overview

_____6 Identification of Controls _____10 Recording Basic Recording _____45

Recording to TV 45 One Touch Record (OTR) 45 Checking the Recording Time 46 To Pause the Recording 46 One Touch Copy - DVD to VHS 46 46 Copy Edit (DVD " VCR) One Touch Copy - VHS to DVD 47 47 Copy Edit (VCR " DVD) Timer Recording _____48 Timer Recording using

Manual Set Record Screen 48 Timer Recording using ShowView system 49 Canceling a Timer Recording 50 Stopping a Timer Recording in Progress 50

Timer Recording Troubleshooting 50 Recording from an External Input _____51 Connections Connecting Antenna/Cable _____15

Connecting a TV _____15 Connecting an Amplifier/Receiver _____17 Connecting Optional Equipment _____18

Connecting a Digital Camcorder _____18 Setup Initial Installation _____ User's Guide is not available on that specific disc. 6 DF-

H7BD2D-JB-I(GB) 2008.4.11 1:52 PM 7 mac001 1200DPI 100LPI Overview INTRODUCTION Which discs you can use The following discs can be used in

your DVD Recorder + VCR: Playback and recording DVD+RW (Digital Versatile Disc + ReWritable) DVD-RW (DVD-Rerecordable) DVD+R (Digital Versatile Disc + Recordable) DVD-R (DVD-Recordable) Playback only DVD Video (Digital Versatile Disc) VCD (Video CD) Audio CD (Compact Disc

Digital Audio) CD-R (CD recordable) Audio/ CD-RW (CD rewritable) Audio Video Format : JPEG Audio Format : CDDA / MP3 Not all recordable CDs may be played by your player. Disc-related Terms Title The main film, accompanying feature content, or music album. Each title is assigned a title reference

number enabling you to locate it easily. Chapter Sections of a movie or a musical piece that are smaller than titles.

A title is composed of one or several chapters. Each chapter is assigned a number to enable you to easily locate the chapter you want. Depending on the disc, chapters may not be labeled. Track (Audio CD only) Sections of a movie or a musical piece on an audio CD. Each track is assigned a number, enabling you to

easily locate the track you want.

7 DF-H7BD2D-JB-I(GB) 2008.4.11 1:52 PM 8 mac001 1200DPI 100LPI Overview About DVD Recording Notes on Recording · The recording times shown

are not exact because the DVD Recorder + VCR uses variable bit-rate video compression. This means that the exact recording time will depend on the material being recorded. · When recording a TV broadcast, if the reception is poor or the picture contains interference, the recording times may be shorter.

· Discs recorded at high speeds (equal to or greater than 2X) may not be recognized. · If you record still pictures or audio only, the recording time may be

longer. · The displayed times for recording and time remaining may not always add up to the exact length of the disc.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DRV-6705 user guide](#)

<http://yourpdfguides.com/dref/3406142>

· The available recording time may decrease if you heavily edit a disc. · When using a DVD+R disc, you can keep recording until the disc is full, or until you finalise the disc. Before you start a recording session, check the amount of recording time left on the disc. Recording TV Audio Channels The DVD Recorder + VCR can record one or two channel audio. For TV broadcasts, this usually means mono or stereo, but some programs are broadcast in bilingual audio channel. You can record either BIL I or BIL II. Restrictions on Video Recording · You cannot record copy-protected video using this DVD Recorder + VCR.

Copy-protected video includes DVD-Video discs and some satellite broadcasts. If copy-protected material is encountered during a recording, recording will pause or stop automatically and an error message will be displayed on-screen. Copyright Notice · Audio and video recordings you make using the DVD Recorder + VCR are for your personal use only. You may not sell, lend, or rent them to other people. · This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision corporation. Reverse engineering or disassembly is prohibited. What is DV? Using DV, also known as i.LINK, you can connect a DV-equipped camcorder to the DVD Recorder + VCR using a single DV cable for input and output of audio, video, data and control signals. The i.LINK interface is also known as IEEE 1394/1995. 'i.LINK' and the 'i.LINK' logo are trademarks. · The DVD Recorder + VCR is only compatible with DV-format (DVC-SD) camcorders. Digital satellite tuners and Digital VHS video recorders are not compatible. · You cannot connect more than one DV camcorder at a time to the DVD Recorder + VCR. · It may not always be possible to control the connected camcorder via the DV IN jack.

· Audio input to the DV IN jack should be 32 or 48kHz (not 44.1kHz). · Picture disturbance on the recording may occur if the source component pauses playback or plays an unrecorded section of tape, or if the power fails in the source component, or if the DV cable becomes disconnected. 8 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM 9 mac001 1200DPI 100LPI Overview INTRODUCTION Precautions Handling the Unit When shipping the unit The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packaged at the factory. When setting up the unit The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc. To keep the surface clean Do not use volatile liquids, such as insecticide spray, near the unit.

Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface. Cleaning the Unit To clean the cabinet Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinners, as these might damage the surface of the unit. To obtain a clear picture The DVD Recorder + VCR is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.) For details, please contact your nearest dealer. Remote Control Operation Range Point the remote control at the remote sensor and press the buttons. Distance: Within 23 ft (7 m) of the remote sensor. Angle: Within 30° in each direction of the remote sensor. Remote Control Battery Installation Detach the battery cover on the rear of the remote control, and insert two AAA batteries. Make sure the polarities (+ and -) are aligned correctly.

Caution Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.). Notes on Discs Handling Discs Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface. Do not stick paper or tape on the disc. Storing Discs After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car, which could distort the disc. Cleaning Discs Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the centre outward. Do not use strong solvents such as alcohol, benzene, thinners, commercially available cleaners, or anti-static spray intended for older vinyl records. Yes No 9 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM 10 mac001 1200DPI 100LPI Identification of Controls Front Panel ! @ # \$ ^ * % & () 1 2 3 4 5 6 ! STANDBY/ON Turns the DVD Recorder + VCR on and off.

@ Cassette Compartment (VCR deck) Insert a video cassette here. # Disc Tray (DVD deck) Insert a disc here. \$ VCR EJECT Ejects the tape in the VCR deck. % REC Starts recording. Press repeatedly to set the recording time. ^ STOP Stops playback or recording. & PLAY/PAUSE Starts playback of a disc or tape. Pauses playback or recording temporarily. * REW DVD: Skips to previous chapter. VCR: Rewinds the tape during Stop mode. Press during Play mode for fast reverse picture search. (FF DVD: Skips to next chapter. VCR: Advances the tape during Stop mode. Press during Play mode for fast forward picture search.) Front Panel Display Shows the current status of the DVD Recorder + VCR.

1 COPY Copies from DVD to VCR (or from VCR to DVD). 2 PR+/- Scans up or down through memorized channels. Also moves up and down in menus. 3 SELECT DVD/VCR Toggles control between the DVD mode and the VCR mode. 4 OPEN/CLOSE (DVD) Opens or closes the disc tray. 5 AVF Input (VIDEO, L-AUDIO-R) Connects to the audio/video output of an external source (VCR, Camcorder, etc.). 6 DV Input Connects to the DV output of an external source (VCR, Camcorder, etc.). 10 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM 11 mac001 1200DPI 100LPI Identification of Controls INTRODUCTION Front Panel Display Channel Recording on tape TV Channel PR23 Input mode 11:15 11:15 Indicates a VCR Timer Recording is set. Indicates a VCR Timer Recording is in standby mode. Indicates the VCR is recording. OTR Recording mode Recording Pause mode AV-1 AV-2 F-AV DV Copy AV1 input AV2 input Front - AV input REC 0:30 RECP DV input Others DVD to VCR copying VCR to DVD copying COPY COPY SAFE VCR Indicates when the DVD Recorder+ VCR is locked.

10 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM 11 mac001 1200DPI 100LPI Identification of Controls INTRODUCTION Front Panel Display Channel Recording on tape TV Channel PR23 Input mode 11:15 11:15 Indicates a VCR Timer Recording is set. Indicates a VCR Timer Recording is in standby mode. Indicates the VCR is recording. OTR Recording mode Recording Pause mode AV-1 AV-2 F-AV DV Copy AV1 input AV2 input Front - AV input REC 0:30 RECP DV input Others DVD to VCR copying VCR to DVD copying COPY COPY SAFE VCR Indicates when the DVD Recorder+ VCR is locked.

10 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM 11 mac001 1200DPI 100LPI Identification of Controls INTRODUCTION Front Panel Display Channel Recording on tape TV Channel PR23 Input mode 11:15 11:15 Indicates a VCR Timer Recording is set. Indicates a VCR Timer Recording is in standby mode. Indicates the VCR is recording. OTR Recording mode Recording Pause mode AV-1 AV-2 F-AV DV Copy AV1 input AV2 input Front - AV input REC 0:30 RECP DV input Others DVD to VCR copying VCR to DVD copying COPY COPY SAFE VCR Indicates when the DVD Recorder+ VCR is locked.



[You're reading an excerpt. Click here to read official DAEWOO DRV-6705 user guide](http://yourpdfguides.com/dref/3406142)

Indicates the DVD Recorder+VCR is in VCR mode (set by [TV/VCR] button). Indicates the DVD Recorder+VCR is in TV mode (set by [TV/VCR] button). Recording on disc 11:15 11:15 REC 0:30 RECP Indicates a DVD Timer recording is set. Indicates a DVD Timer Recording is in standby mode. Indicates the DVD is recording. OTR Recording mode Recording Pause mode TV 11 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `12 mac001 1200DPI 100LPI Identification of Controls Remote Control Turns the DVD Recorder+VCR on and off. - Opens and closes the disc tray in DVD mode. - Ejects the tape in the VCR deck in VCR mode.

Selects VCR mode. Selects DVD mode. Switches the DVD Recorder+VCR input to TV tuner, AV1, AV2, FAV or DV. - Selects numbered options in menus. - Selects TV channels.

- Manually adjusts tracking. Switches between the DVD Recorder+VCR tuner and your TV tuner. Resets the tape counter in VCR mode. Accesses DVD disc menus. Displays or exits the Setup menu.

Displays the Timer Recording menu. Displays information about the currently loaded disc, VHS tape, or TV channel. -oe ... : Selects menu options. - PR(+/-) : Selects channels. Confirms menu selections. Starts recording. Press repeatedly to set the recording time.

For more details, Refer to One Touch Record (OTR) on page 45. Selects Recording mode: - DVD : Approx 1 Hour (HQ mode), 2 Hours (SP mode), 4 Hours (EP mode), 8 Hours (SEP mode) - VCR : SP or LP. Selects a subtitle language, if available. Selects an audio language (DVD), audio channel (CD) or audio type (TV). - Starts playback. - Pauses playback or recording temporarily. Press again to exit Pause mode. 12 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `13 mac001 1200DPI 100LPI Identification of Controls INTRODUCTION - DVD: Searches backward/forward.

- VCR: Rewinds/advances during Stop mode. Press during Play mode for fast reverse/forward picture search. Stops playback or recording. Skips to the next or previous chapter/track. Commercial Skip skips forward 30 seconds.

Displays a disc's Title menu, if available. Increases or decreases the slow motion speed when playing a DVD or VHS tape. Repeats the current chapter, track, title or the entire disc. Repeats playback between two points (A and B). Enlarges the DVD video image.

Selects a DVD camera angle, if available. Progressive Scan Mode - If your TV supports Progressive Scan, you can view high quality video by setting the DVD Recorder+VCR to Progressive Scan mode. If your TV does not support Progressive Scan, do NOT change to Progressive Scan mode. - When video output mode is changed from RGB to Interlace or Progressive (Scart 1) will not be correct colour for Component video. - As component outputs have their own Jacks on the back side, change the TV input into Component input, after connecting the component cables from the DVD Recorder+VCR to TV. - Changing from Interlace or Progressive to RGB, should be the opposite of above. CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY 'WITH THIS DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTRE. 13 DF-H7BD2D-JB-I(GB) 2008.

4.11 1:53 PM `14 mac001 1200DPI 100LPI Identification of Controls Rear panel ! @# \$ % * & ^ ! AC Power Cord Plug into a power outlet. @ AUDIO OUT (L, R) Connect to a TV or other equipment with audio inputs. # COMPONENT VIDEO OUT (Y Pb Pr) Connect to a TV with Component Video (Y Pb Pr) inputs. \$ Scart socket 2 Connection of an additional device (satellite receiver, set-top box, video recorder, camcorder, etc.) % RF IN (FROM ANT.) Connect to your antenna or cable TV outlet. ^ RF OUT (TO TV) Connect to a TV with an RF input. & Scart socket 1 Connection of a TV set. Composite-output and RGB-output * COAXIAL (Digital Audio Out) Connect to an amplifier with a coaxial digital audio input.

Caution - Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the DVD Recorder + VCR. 14 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `15 mac001 1200DPI 100LPI CONNECTIONS INTRODUCTION Connecting Antenna/Cable To enable you to set up your new DVD recorder+VCR, it must be connected it to your TV using either a SCART cable or a COMPONENT and associated AUDIO cable.

- There are a variety of ways to connect the DVD Recorder + VCR to your TV and other equipment. Use only one of the connections described below. Whichever TV connection you use will work with all input sources. - Please refer to the manuals for your TV, VCR, stereo system, or other devices as necessary to make the best connections. - For better sound reproduction, connect the DVD Recorder + VCR's AUDIO OUT jacks to the audio in jacks of your amplifier, receiver, stereo, or audio/video equipment.

See 'Connecting an Amplifier/Receiver' on page 17. 1 2 Disconnect the antenna/cable from the rear of your TV. Connect this cable to the jack marked RF IN (FROM ANT.) on the rear panel of the DVD Recorder + VCR. Antenna Flat Wire (300ohm) 300/75ohm Adapter (Not supplied) CONNECTIONS Antenna Cable TV Wall Jack or or Caution - Make sure the DVD Recorder + VCR is connected directly to the TV, and the TV is set to the correct video input. - Do not connect the DVD Recorder + VCR's AUDIO OUT jack to the phone in jack (record deck) of your audio system. - Do not connect the DVD Recorder + VCR via your VCR. The DVD image could be distorted by the copy protection system. Rear of DVD Recorder + VCR If your cable wire is connected to your TV without a converter or descrambler box, unscrew the wire from your TV and attach it to the RF IN (FROM ANT.) jack on the rear panel of the DVD Recorder + VCR.

Use the supplied RF cable to connect between the DVD Recorder + VCR's OUT (TO TV) jack and the antenna input jack on your TV. With this connection, you can receive all midband, superband, and hyperband channels (all cable channels). 15 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `16 mac001 1200DPI 100LPI CONNECTIONS Connecting a TV Choose one of the following TV connections, depending on the capabilities of your equipment. Rear of TV HDMI COMPONENT/PROGRESSIVE VIDEO INPUT S-VIDEO INPUT ANTENNA INPUT Pr Pb Y Component Video Connection - If your television is a high-definition or 'digital ready' television, you may take advantage of the DVD Recorder + VCR's Progressive Scan output for the highest video resolution possible. - If your TV does not accept the Progressive Scan format, the picture will appear scrambled. 1 Connect the COMPONENT VIDEO OUT jacks on the DVD Recorder + VCR to the corresponding in jacks on your TV using a Y Pb Pr cable (C) if the component (Y, Pb, Pr) is available on your TV.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DRV-6705 user guide](#)

<http://yourpdfguides.com/dref/3406142>

2 Connect the Left and Right AUDIO OUT jacks from the DVD Recorder + VCR to the left/right audio in jacks on your TV using the audio cables. · Be sure to set the DVD Recorder + VCR to Progressive Scan mode by changing the Video Output' in the Setup Menu; see page 24. · Progressive Scan does not work with the RF, Audio/Video or S-Video connections. C V R Rear of DVD Recorder + VCR RF Connection Connect the RF OUT (TO TV) jack on the DVD Recorder + VCR to the antenna in jack on your TV using the supplied 75-ohm RF cable (R). This set doesn't have a modulator output. However it still applies the RF through Output. Scart Connection 1 Plug a scart cable into the scart socket EURO AV1 at the back of the DVD Recorder + VCR and the corresponding scart socket at the back of the TV set.

(V) Plug a scart cable into the blue scart socket EURO AV2/DECODER at the back of the DVD Recorder+VCR and the corresponding scart socket at the back of a satellite decoder or set top box. 2 16 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `17 mac001 1200DPI 100LPI Connections Connecting an Amplifier / Receiver Connecting to an amplifier equipped with two channel analog stereo or Dolby Pro Logic II/Pro Logic Connect the Left and Right AUDIO OUT jacks on the DVD Recorder + VCR to the left and right audio in jacks on your amplifier, receiver, or stereo system, using the supplied audio cables (A). Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/Video receiver equipped with a multi-channel decoder (Dolby DigitalTM, MPEG 2, or DTS) 1 Connect the DVD Recorder + VCR's DIGITAL AUDIO OUT jack (Coaxial) to the corresponding in jack on your amplifier. Use an optional digital coaxial audio cable. (X) 2 You will need to activate the DVD Recorder + VCR's digital output; see 'Audio' Settings on page 25. · Due to the DTS Licensing agreement, the digital output will be in DTS digital out when the DTS audio stream is selected. · If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all. · 5.1 channel digital surround sound via the digital connection can only be obtained if your receiver is equipped with a digital multi-channel decoder. · To see the audio format of the current DVD on the on-screen display, press [AUDIO]. The DVD Recorder + VCR does not perform (2channel) decoding of DTS sound tracks. To enjoy DTS multi-channel surround, you must connect the DVD Recorder + VCR to a DTS compatible receiver via one of the DVD Recorder + VCR's digital audio outputs. Rear of DVD Recorder + VCR CONNECTIONS Digital Multi-Channel Sound? A digital multi-channel connection provides the best sound quality.

For this you need a multi-channel audio/video receiver that supports one or more of the audio formats provided by your DVD Recorder + VCR (MPEG 2, Dolby Digital, and DTS). Check the receiver manual and the logos on the front of the receiver. A X L R COAXIAL DIGITAL INPUT AUDIO INPUT Amplifier (Receiver) 17 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `18 mac001 1200DPI 100LPI Connections Connecting Optional Equipment To receive audio/video signals from other equipment, connect the AVF (Audio/Video Front) jacks on the DVD Recorder + VCR to the audio/video out jacks on your external component, using optional audio/video cables. Jack Panel of Accessory Component (VCR, Analog Camcorder, etc.) Connecting a Digital Camcorder Using the front panel DV IN jack, it is possible to connect a DV digital camcorder, video deck or DVD+R/RW recorder and digitally transfer DV tapes or DVD+R/RW discs to DVD+R, DVD+RW. Use a DV cable (not supplied) to connect the DV In/Out jack of your DV camcorder/video deck to the front panel DV IN jack of the DVD Recorder + VCR. This jack is for connection to DV equipment only. It is not compatible with digital satellite tuners or DVHS video decks.

DV Digital Camcorder DV IN/OUT Front of DVD Recorder + VCR DV IN Front of DVD Recorder + VCR 18 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `19 mac001 1200DPI 100LPI Initial Installation After successfully connecting your DVD Recorder + VCR to your TV and other devices, this chapter will show you how to complete the initial installation. You must follow the initial installation process to set the time, date, channels, and language preferences for the DVD Recorder + VCR. Welcome Before using the recorder, please finish the Initial Wizard.

1/7 ENTER Next SETUP Exit 1 A 'Welcome' message is displayed on the screen. Make sure the RF cable from your antenna or cable TV jack is connected. Press [ENTER] to begin initial installation. Select the desired language for the on-screen menu using [.]. Press [ENTER] to confirm. Select the desired country using [...]. Press [ENTER] to confirm. OSD Language Select an OSD language. .

.. English French Spanish Portuguese MENU Prev ENTER Next 2/7 CONNECTIONS 2 SETUP Exit 3 Country Setting Select your current country. ... Greece Hungary India Italy MENU Prev ENTER Next 3/7 4 The DVD Recorder + VCR detects channels automatically and stores them in memory. Auto Scan Auto scan the channels. Channels found :1 Cancel MENU Prev ENTER Next 5 Press [oe] to select 'Move Up', 'Move Down', 'Delete' or 'Edit' while a channel is selected. If you press [ENTER] while 'Move Up' or 'Move Down' is selected, the channel's order will move up or down.

If you want to delete the channel, press [ENTER] while 'Delete' is selected. When you want to edit the channel, press [ENTER] while 'Edit' is selected. Keyboard screen will appear. To enter characters, see page 31~32. Rename BBC1 a Page A Page Symbol Edit MENU Prev ENTER Next SETUP Exit 0 a j s l b k t 2 c l u 3 d m v 4 e n w Save 5 f o x Backspace ENTER MENU Confirm Back CLEAR 6 7 Set the clock after adjusting channels. Use [oe] to move left/right and use [...] to change the settings. After setting the clock, press [ENTER] to confirm.

If you cancel the process during Initial Installation, you should repeat this procedure. Re-Installation This set is equipped with a multi-tuner for receiving many countries' broadcasts. In order to receive broadcasts when in different countries, follow as below. 1 Press [SETUP] and select the 'Restore Defaults' using [oe]. Then, RESET the set. (see page 29) 2 Power On, then you see the 'Initial Installation'. 3 Select the country which you want to (see step 3), then repeat the steps 4~7. ...

Clock Setting Set the system time. Date : 31 / 08 / 2010 Time: 01 : 50 : 42 MENU Prev ENTER Next SETUP Exit Finish Finished the Initial Wizard! Please enjoy using the recorder. MENU Prev ENTER Next After finishing Auto Channel Search, adjust channels.



[You're reading an excerpt. Click here to read official DAEWOO DRV-6705 user guide](http://yourpdfguides.com/dref/3406142)
<http://yourpdfguides.com/dref/3406142>

You can move up, move down, delete and edit channels. Adjust Channels No Move Up 1 Move Down 2 Delete 3 SETUP SETUP Exit 4/7 1% SETUP Exit 5/7 Name BBC1 RTP1 ---- 6 g p y 7 h q z Cancel 8 i r 9 _ . Space Clear 6/7 7/7 19 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `20 mac001 1200DPI 100LPI Setup menu Setup Menu Overview The DVD Recorder + VCR Setup menu includes six categories, including: Installation, Recording Options, Languages, Preference, System Info and Disc Options. Press [SETUP] and [.] on the remote control unit to view the first and second levels of the Setup menu. 6 Use [oe] to select the desired 'Standard' (PALBG, PAL-II or PAL-DK). Installation > Manual Set Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name PAL-II Antenna 2 0 OFF PR-1 --- Menu Navigation ENTER Confirm MENU Back SETUP Exit 1 2 3 4 5 Press [SETUP]. The Setup menu appears. Use [.] to select the desired category. While the desired category is selected, press [] to move to the second level. Press [ENTER] to move to the third level. Use [.] to select the desired setting, then press [ENTER] to confirm your selection. Some items require additional steps. Press [MENU] at any time to return to the previous menu. Press [SETUP] to exit the Setup menu. 7 8 This set is equipped with a Multi-Tuner. You can search broadcasts when in other countries.

If the set can not search the channels, please Re-Install. (see page 19.) Use [.] to select 'Reception'. Use [oe] to select the desired broadcast system (Antenna or Cable). Antenna: If you are using a standard antenna to receive channels. Cable TV: If you are using basic cable to receive channels. Installation > Manual Set Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name PAL-II Antenna 2 0 OFF PR-1 --- 6 INSTALLATION Settings Manual Set To complete the set-up of your DVD Recorder + VCR when the auto set has not stored all of the channels or when you wish to store a new channel. 1 Press [SETUP]. The Setup menu appears. 2 3 Use [.] to select 'Installation' and press [ENTER] to confirm. While 'Installation' is selected, press [.] to select 'Manual Set'. Installation Manual Set ENTER ENTER Confirm MENU Back SETUP Exit 9 Use [.] to select 'Auto Search'. 10 Search the real channel number by pressing [oe]. Installation > Manual Set Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name PAL-II Antenna 2 0 OFF PR-1 --- Auto Set Clock Setting Adjust Channels ENTER Confirm MENU Back SETUP Exit 11 Select 'Fine Tune'. You can adjust the fine tuning. Confirm MENU Back SETUP Exit 4 5 Press [ENTER]. The 'Manual Set' menu appears. Use [.] to select 'Standard'. 20 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `21 mac001 1200DPI 100LPI Setup menu Installation > Manual Set Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name PAL-II Antenna 2 0 OFF PR-1 ---- 18 After adjusting all items, move cursor to 'Store Channel' using [.] . 19 Press [ENTER] to store settings. ENTER Confirm MENU Back SETUP Exit 12 Use [.] to select 'Decoder'. 13 When the program is encoded (and you have a decoder connected to socket EURO AV2), press [oe] to select 'On'. Installation > Manual Set Standard Reception Auto Search Fine Tune Auto Set The DVD Recorder + VCR has a frequency synthesized tuner capable of receiving channels that include VHF Low E2~S6, VHF High S7~S36, and UHF S37~E69. Preparation: Connect the DVD Recorder + VCR to the desired type of antenna or cable TV system, as shown in 'Connecting Antenna/Cable' on page 15. 1 Press [SETUP]. The Setup menu appears. 2 3 Use [.] to select 'Installation'. While 'Installation' is selected, press [] or [ENTER] to select 'Auto Set'. Installation Manual Set PAL-II Antenna 2 0 ON PR-1 --- PAL-II Antenna 2 0 ON PR-1 --- SETUP Decoder Store Channel Program Name ENTER Confirm MENU Back SETUP Exit 14 Use [.] to select 'Store Channel'. 15 Use [oe] to select program number to store . Installation > Manual Set Standard Reception Auto Search Fine Tune Decoder Store Channel Program Name Auto Set Clock Setting Adjust Channels ENTER Confirm MENU Back SETUP Exit ENTER Confirm MENU Back SETUP Exit 16 Use [.] to select 'Program Name'. Press [] to move to the second level. If your DVD Recorder + VCR is showing no station name or is showing a station name incorrectly, you can correct this. 17 Keyboard screen will appear when you press [] to move to the second level. You can create the station name and enter 4 digit name. To enter characters, see page 31~32. Rename BBC1 a Page A Page Symbol 0 a j s 1 b k t 2 c l u 3 d m v 4 e n w Save 4 Press [ENTER] to begin the channel search. The tuner will automatically search for all available channels in your area and place them in the tuner's memory. Auto Scan Channels found : 6 22% Cancel After Auto Set is complete, follow the instructions above to make sure that the Tuning Band is set correctly. 6 g p y 7 h q z Cancel 5 f o x 8 i r 9 _ . Space Backspace ENTER MENU Confirm Back CLEAR Clear 21 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `22 mac001 1200DPI 100LPI Setup menu Clock Setting 1 2 Follow steps 1-2 as shown under 'Manual Set'. Use [.] to select 'Clock Setting'. Installation Manual Set Auto Set Clock Setting ENTER Adjust Channels 1 2 Follow steps 1-2 as shown under 'Manual Set'. Use [.] to select 'Adjust Channels'. Installation Manual Set Auto Set Clock Setting Adjust Channels ENTER Adjust Channels Confirm MENU Back SETUP Exit Confirm MENU Back SETUP Exit 3 Press [ENTER]. The 'Clock Setting' menu appears. Installation > Clock Setting Please set the clock. 3 4 Press [ENTER]. The Adjust Channels menu appears. Use [.] to select the PR number you want to adjust. Then press [ENTER]. Installation > Adjust Channels No PR-1 PR-2 PR-3 Name BBC1 -----MENU Date : 01 / 12 / 2006 Time : 04 : 11 : 33 Move Up Move Down Edit Delete ENTER Confirm MENU Back SETUP Exit PR-4 PR-5 PR-6 ENTER 4 Enter the date and time. oe (left/right): Moves the cursor to the previous or next column. ... (up/down): Changes the setting at the current cursor position. Confirm Back SETUP Exit 5 Press [ENTER] to confirm your setting, then press [SETUP] to exit the Setup menu. Move Up/Down After tuning TV stations into your DVD Recorder + VCR, you may wish to change the order of PR's you have in your set, to your preference. 1 Use [.] to select 'Move Up' (or 'Move Down') and press [ENTER].



You're reading an excerpt. [Click here to read official DAEWOO DRV-6705 user guide](http://yourpdfguides.com/dref/3406142)
<http://yourpdfguides.com/dref/3406142>

2 The selected PR will be moved up or moved down. Edit After tuning TV stations into your DVD Recorder + VCR, you may wish to put a name (4 digits) into any channel you want to. 1 Use [..

.] to select 'Edit' and press [ENTER]. 2 Keyboard screen will appear. To enter characters, see page 31~32. Delete After tuning TV stations into your DVD Recorder + VCR, you may wish to delete a station. 1 Use [...] to select 'Delete' and press [ENTER]. 22 DF-H7BD2D-JB-I(GB) 2008.

4.11 1:53 PM `23 mac001 1200DPI 100LPI Setup menu RECORDING Options Settings VCR Record Quality You can set the default VCR recording quality to SP (Standard Play) or LP (Long Play). SP is higher quality, but LP provides 2 times the recording time; e.g., a 2 hour tape will record for 4 hours in LP mode. 1 Press [SETUP]. The Setup menu appears. 2 3 4 5 6 Use [...

] to select 'Recording'. While 'Recording' is selected, press [] to select 'VCR Quality'. Press [ENTER] to move to the second level. Use [..] to select the desired Record Quality (SP or LP). Press [ENTER] to confirm your selection, then press [SETUP] to exit the menu. Recording VCR Quality ENTER Recording VCR Quality DVD Quality Chapter Mark Off 5 min 10 min 15 min 20 min Confirm MENU Back SETUP Exit LANGUAGE Settings OSD Language Select a language for the DVD Recorder + VCR Setup menu and on-screen displays. 1 Press [SETUP].

The Setup menu appears. 2 Use [...] to select 'Language'. While 'Language' is selected, press [] to select 'OSD Language'. Press [ENTER] to move to the second level. Use [...

] to select the desired language. Press [ENTER] to confirm your selection, then press [SETUP] to exit the menu. Language OSD Language SETUP SP LP 3 4 5 6 ENTER Confirm DVD Quality Chapter Mark MENU Back SETUP Exit DVD Record Quality You can set the default DVD recording quality to: HQ (High Quality - 1 hr/disc), SP (Standard Quality - 2 hrs/disc), EP (Extended Play - 4 hrs/disc) or SEP (Very Low Quality - 8 hrs/disc). Follow the same procedure as the 'VCR Record Quality'. Recording VCR Quality DVD Quality ENTER English French Spanish Portuguese Italian German Dutch Menu Language Audio Language Subtitle Language HQ SP EP SEP ENTER Confirm MENU Back SETUP Exit Chapter Mark Menu/Subtitle/Audio Language Select your preferred language for Disc Menus, Subtitles, and Audio soundtracks. Confirm MENU Back SETUP Exit Follow the same procedure as the OSD Language. Default : The disc's default language is selected. Chapter Mark During recording, chapter markers are added automatically at fixed intervals. You can set this interval to 5 minutes, 10 minutes, 15 minutes or 20 minutes. To turn off automatic chapter marking, select 'Off'.

Follow the same procedure as the 'VCR Record Quality'. 23 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `24 mac001 1200DPI 100LPI Setup menu Preference > Video Setting 1 2 3 4 Press [SETUP]. Use [oe] to select 'Preference :

While 'Preference' is selected, press [] to select 'Video' : Press [ENTER]. The 'Video' submenu is displayed. Preference Video ENTER Video Output The default video output is set to 576i (interlaced scan mode). RGB : Only if the DVD Recorder + VCR is in RGB interlace mode, you can watch RGB signal with connecting the recorder to analog television using the SCART jacks.

Interlace (576i) or Progressive (576p) : If you connect the DVD Recorder + VCR to a digital television (DTV) or Monitor using the COMPONENT jacks, set Video Output to '576i' or '576p' (i : Interlaced scan mode, p : Progressive scan mode). SETUP Audio Parental Control Change Password Auto Setting VCR Confirm MENU Back Exit Follow the same procedure as 'TV Aspect' to change the 'Video Output'. Preference > Video TV Aspect Ratio TV Aspect Video Output 576i 576p RGB 1 2 3 Use [ENTER] to select 'TV Aspect' while the 'Video' submenu is displayed. Press [ENTER] or [] to go to the second level. Use [...] to select the desired 'TV Aspect'. Preference > Video TV Aspect ENTER Confirm MENU Back SETUP Exit 4:3 PS 4:3 LB 16:9 ENTER Confirm Video Output MENU Back SETUP Exit 4 5 Press [ENTER] to confirm your selection. Press [SETUP] to exit the menu.

4:3 LB : Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture. The default TV screen is set to 4:3 LB. 4:3 PS : Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Both sides of the picture are cut off. 16:9 : Select when a 16:9 wide screen TV is connected. 24 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `25 mac001 1200DPI 100LPI Setup menu Preference > Audio Setting Follow the same procedure as 'Video' Settings to select 'Audio' Settings.

Preference Video Audio ENTER Dynamic Range While watching DVD movies, you may wish to compress the dynamic range of the audio output (the difference between the loudest and quietest passages). This allows you to listen to a movie at a lower volume without losing clarity of sound. Set 'Dynamic' to 'Full', 'Middle' or 'Off' for this effect. Follow the same procedure as 'Digital Output' to set the 'Dynamic'. Preference > Audio Parental Control Change Password Auto Setting VCR Confirm MENU Back SETUP Exit Digital Output 1 2 3 Use [ENTER] to select 'Digital Output' while the 'Audio' submenu is displayed.

Press [ENTER] or [] to go to the second level. Use [...] to select the desired digital output type.

Preference > Audio Digital Output ENTER Digital Output Dynamic Full Middle Off SETUP Confirm MENU Back SETUP Exit Bitstream PCM ENTER Confirm Dynamic MENU Back SETUP Exit 4 5 Press [ENTER] to confirm your selection. Press [SETUP] to exit the menu. Bitstream Select when connected to a Dolby Digital or DTS decoder (or an amplifier or other equipment with a Dolby Digital or DTS decoder). PCM Select when connected to a 2 channel digital stereo amplifier. The DVD Recorder + VCR's digital audio signal will be output in the PCM 2ch format when you play a DVD recorded with a Dolby

Digital (only for DVD) or MPEG soundtrack. If the DVD is recorded with a DTS sound track then no sound will be heard. 25 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `26 mac001 1200DPI 100LPI Setup menu Preference > Parental Control Set Parental Level The Parental Controls feature allows you to prevent DVDs from being played based on their ratings or to have certain discs played with alternative scenes. You can set the parental level from 'Adult' to 'Kid safe'.

1 Press [SETUP]. 2 3 Use [...] to select 'Preference :



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DRV-6705 user guide](#)

<http://yourpdfguides.com/dref/3406142>

While 'Preference' is selected, press [...] to select 'Parental Control'. And press [ENTER].

Preference Video Audio Parental Control ENTER The initial password is '0000'. You must enter this password before you can change the Parental Level. Set the new password to something other than '0000'. 6 7 Enter your new password. Use [...]

[...] to select the desired parental level and press [ENTER] to confirm. Adult to Kid safe: Some discs contain scenes not suitable for children. If you set a rating for the DVD Recorder + VCR, all scenes with the same rating or lower will be played.

Higher rated scenes will not be played unless an alternative scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc. Press [ENTER] to confirm your rating selection, then press [SETUP] to exit the menu. 1 KID SAFE 2G 3 PG 4 PG 13 5 PGR 6R 7 NC 17 Change Password Auto Setting VCR Confirm MENU Back SETUP Exit 4 Use [...] to select parental level and press [ENTER]. The Password Input dialog will appear.

Enter a 4digit password using the [0-9] buttons. If this is the first time you have entered a password, you will be prompted to enter the password again to confirm it. 8 5 After setting the password, press [ENTER]. Preference Video Audio Parental Control Change Password Auto Setting 8 ADULT ENTER Confirm MENU Back SETUP Exit Preference Password : - - - Enter the password with digit keys. ENTER Confirm MENU Back SETUP Exit 26 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `27 mac001 1200DPI 100LPI Setup menu Preference > Auto Setting Change Password 1 2 While 'Preference' is selected, press [...] to select 'Change Password'.

Press [ENTER]. The 'Change Password' submenu appears. Preference Video 1 2 While 'Preference' is selected, press [...] to select 'Auto Setting'. Press [ENTER] to display the submenu. Preference Video Audio Parental Control Change Password Auto Setting Audio Parental Control Change Password ENTER VCR Auto Setting VCR ENTER Confirm MENU Back SETUP Exit Confirm MENU Back SETUP Exit Auto Clock Setting Auto Clock enables the DVD Recorder + VCR to set the clock automatically whenever it is in Standby mode (plugged in but powered off). Auto Clock is only available for models with the VPS/PDC function. Some broadcasting stations may send the time and date along with the VPS/PDC data. The video will automatically use this time and date during the initial setting up procedure during normal use, and every time you switch the video off at the mains. If you find that this time and date is incorrect you can remove this feature by following the steps below changing it to the OFF mode, you will then have to manually set the time and date, see above. SETUP 3 The 'Change Password' submenu appears. Enter your current 4-digit password. Preference > Change Password Old Password * * * * New Password * * * * Confirm New Password * * - ENTER Confirm MENU Back SETUP Exit 4 Enter a new 4-digit password. Re-enter the new password to confirm, press [ENTER]. · Master Password : If you forget your password, press 3,3,0,8 on the remote control and then press [ENTER]. · Set the new password to something other than '0000'. 1 2 Use [...]

[...] to select 'Auto Clock Setting' and press [ENTER]. Use [...] to change the 'Auto Clock Setting' status, and press [ENTER] to confirm. Preference > Auto Setting Auto Clock Setting VPS/PDC On Off ENTER Confirm MENU Back SETUP Exit 27 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `28 mac001 1200DPI 100LPI Setup menu Preference > VCR VPS/PDC VPS/PDC is a service provided by some stations to enable you to perform timer recordings precisely even if the broadcaster delays the start time of the program slightly. The time you enter is the VPS/PDC time so this must match exactly the start time of the programme as advertised.

NB: Do not allow 5 mins before the correct start time otherwise the machine will not record. Not all stations offer VPS/PDC, in which case the player will start at the time you enter and not the actual start time of the programme. If you wish to start recording at a specific time with it being adjusted by the VPS/PDC system in the event of a delay, switch VPS/PDC on. Follow the same procedure as 'Auto Clock Setting' to set the 'VPS/PDC' status. Preference > Auto Setting Auto Clock Setting VPS/PDC This feature enables you to search for Index marks or specific times on your VHS tapes.

While 'Preference' is selected from the setup menu, press [] to select 'VCR'. 2 3 4 Press [ENTER]. The 'VCR' submenu is displayed. Select 'Index+', 'Index-' or 'Go To Zero'. If you select 'Index+' (or 'Index-') and press [ENTER], your DVD Recorder+VCR will locate your index mark and begin playback. If you select 'Go To Zero' and press [ENTER], your DVD Recorder+VCR will wind to the position 0:00:00 and stop. Preference Video Audio Parental Control Index + Index Go To Zero On Off ENTER Change Password Auto Setting VCR Confirm MENU Back SETUP Exit ENTER Confirm MENU Back SETUP Exit "VPS/PDC" and "Auto Clock Set" is not provided in some countries. The VCR menu is activated only when a video cassette tape is inserted and DVD Recorder+VCR is in VCR mode. 28 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `29 mac001 1200DPI 100LPI Setup menu System > System Info 'System Info' helps service personnel identify key firmware information about your DVD Recorder + VCR in case service is required. System System Info ENTER ENTER ENTER System > Restore Default If you wish, you can reset the DVD Recorder + VCR to its original factory settings. 1 While 'System' is selected, press [] to select 'Restore Default'. 2 3 Press [ENTER]. The 'Restore Default' menu will appear.

Use [...] to select 'OK' and press [ENTER]. System System Info DivX (R) VOD DRM Restore Default Confirm MENU Back SETUP Exit DivX (R) VOD DRM Restore Default System > System Info SETUP Version FD300007TCU-070716 Loader Version BH07T A100 Micom Software 02.09 Restore Default Do you want to Restore Default? Confirm MENU ENTER Confirm MENU Back SETUP Exit Back SETUP Exit OK Cancel System > DivX(R) VOD DRM We provide you the DivX® VOD (Video On Demand) registration code that allows you to rent and purchase videos using the DivX® VOD service. For more information, visit www.divx.com/vod. System > DivX(R) VOD DRM · Some options cannot be reset, including Parental Controls and Password.



[You're reading an excerpt. Click here to read official DAEWOO DRV-6705 user guide](http://yourpdfguides.com/dref/3406142)

· After Restoring Defaults, the unit is powered off automatically. At this time, if you power on again, the Installation menu appears.

@@@ Use [...]

] to select 'Disc'. While 'Disc' is selected, press [...] to select 'Format'.

And press [ENTER]. @@ Use [...] to select 'Disc' : @@ And press [ENTER]. The Finalise menu will appear. Select 'OK' and press [ENTER].

@@@ The disc name can be up to 32 characters long. @@ Press [SETUP].

2 3 MENU Use [...] to select 'Disc' : While 'Disc' is selected, press [...] to select 'Disc Label' : @@ Enter a name for the label. @@ Save : Save a new label after finishing entering characters.

@@ OK Cancel Unprotect Unprotecting DVD, please wait... @@ [CLEAR]: Cancels all entered characters. @@ When recording on DVD-R, DVD+R or DVD-RW discs, the entered name is displayed on the DVD player only after finalisation.

Disc > Disc Info Disc Info includes : Label, numbers of titles, media type, status, space, remainder. Disc Format Finalize Protect Disc Label Disc Info ENTER ENTER Confirm MENU Back SETUP Exit Disc > Disc Info Label Title No. Media Status Space Remainder No label 2 DVD+RW Recordable (PAL) 2595/4418MB SP : 48 minutes Confirm MENU Back SETUP Exit 32 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `33 mac001 1200DPI 100LPI On-Screen Display Overview The On-Screen Display provides feedback on the status of the DVD Recorder + VCR and/or the currently loaded disc or VCR.

To access the OnScreen Display (or OSD), press [DISPLAY]. Disc Information options for DVD 1/4 Displaying Disc/VCR Information To display information about the currently loaded disc or VCR: Displaying information while watching TV During viewing the TV, press [DISPLAY] to display/remove the information displayed on-screen. See the descriptions below for detailed explanations of the on-screen displays for each media type. Some discs may not provide all the features shown in the on-screen display examples. Shows the current title number and total number of titles, and skips to the desired title number. 1 Press [DISPLAY] during playback. The on-screen display appears on the TV screen. 2 3 1/1 00:00:04 Stereo Off Off A-B Off Use [...]

] to select the 'Title' icon on the onscreen display. Use [oe] to change the numbers. Chapter SETUP Temporary Feedback Icons Action prohibited or not available Record mode Indicates operation mode (DVD or VCR) Audio signal (STEREO, MONO, BIL) Indicates the number of channel, station name VPS/PDC Current time PRI : RTP1 13:18 PDC MONO VCR SP Shows the current chapter number and total number of chapters, and skips to the desired chapter number. 1 Press [DISPLAY] during playback. The on-screen display appears on the TV screen. 2 Use [...] to select the 'Chapter' icon on the onscreen display. 3 Use [oe] to change the numbers.

Title DVD+VR PLAYBACK Elapsed Shows the elapsed playing time, and skips to the desired time. 1 Press [DISPLAY] during playback. The on-screen display appears on the TV screen. 2 Use [...]

] to select the 'Elapsed' icon on the onscreen display. 3 Press [ENTER] to search by time. Use [0-9] to change the numbers. 4 Press [ENTER] to confirm the start time.

Playback starts from the selected time on the disc. For the title recorded without DVD navigation information, such as the one from broadcast or line input, Elapsed function does not work. Audio VPS/PDC is provided by some stations. If 'VPS' or 'PDC' appears on the screen, it means the station provides the VPS/PDC service. Shows selected audio language (DVD VIDEO only) or audio channel (STEREO, MONO, RIGHT or LEFT). Subtitle Shows the current subtitle language, and changes the setting. 1 Press [DISPLAY] during playback. The on-screen display appears on the TV screen. 33 DF-H7BD2D-JB-I(GB) 2008.4.

11 1:53 PM `34 mac001 1200DPI 100LPI On-Screen Display Overview 2 3 Use [...] to select the 'Subtitle' icon on the onscreen display. Use [oe] repeatedly to select desired subtitle language. Changing TV Channels When your DVD Recorder+VCR is in live mode, you can change TV channels using the [0-9] or [PR+/-] buttons on the remote control or [PR+/-] buttons on the front panel. Repeat 1 2 3 Press [DISPLAY] during playback. The on-screen display appears on the TV screen. Use [...]

] to select the 'REPEAT' icon on the onscreen display. Use [oe] repeatedly to select a desired repeat mode. [DVD] Title " Chapter " All " Off [Video CD / Audio CD] Random " Single " Repeat One " Repeat Folder " Off [MP3] Random " Single " Repeat One " Repeat Folder " Off Changing the TV Audio Channel You can change the TV audio using the [AUDIO] button. Press [AUDIO] repeatedly to change the TV audio, according to the Broadcast audio signal as shown below.

· STEREO Audio Signal STEREO " MONO " STEREO · BIL (Bilingual) Audio Signal BIL- I " BIL- II " BIL- I · MONO Audio Signal MONO The current audio channel is displayed on-screen. · If the sound is poor quality when set to Stereo, you can often improve it by changing to Mono. · When an external input is selected, the audio channel can be switched only to Stereo. A-B Repeat 1 2 3 Press [DISPLAY] during playback. The on-screen display appears on the TV screen.

Use [...] to select the 'A-B REPEAT' icon on the on-screen display. Use [oe] repeatedly to set a desired repeat part. 34 DF-H7BD2D-JB-I(GB) 2008.4.11 1:53 PM `35 mac001 1200DPI 100LPI VCR Playback Before You Begin 1 2 Press the [VCR] button to set the remote control to operate the VCR deck. Turn the TV on and select the video input source connected to it from the DVD Recorder+VCR. Audio system: Turn the external audio system on if connected and select the input source connected to it from the DVD Recorder+VCR.

Tracking Control Auto Tracking The automatic tracking function adjusts the picture to remove snow or streaks. It works in the following cases: · When a tape is played for the first time. · When the tape speed (SP, LP) changes. · When streaks or snow appear because of scratches on the tape. Playing a VHS Tape 1 Insert a prerecorded video cassette. If the DVD Recorder+VCR is powered off, it will power on automatically. Make sure the TIMER indicator on the front panel display is not lit. If it is, press [POWER] once. If a tape without a safety tab is inserted, the DVD Recorder+VCR will start playback automatically. If the DVD Recorder+VCR is powered on by inserting a video cassette with a safety tab, playback will not start automatically.

Manual Tracking If noise appears on the screen during playback, press and hold the [TRACKING +/-] buttons on the remote control until the noise on the screen is reduced. · If vertical jitter occurs, adjust these controls very carefully. · Tracking is automatically reset to normal when the tape is ejected or the power cord is unplugged for more than 3 seconds.



[You're reading an excerpt. Click here to read official DAEWOO DRV-6705 user guide](http://yourpdfguides.com/dref/3406142)

<http://yourpdfguides.com/dref/3406142>