



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DSL-19M1WC. You'll find the answers to all your questions on the DAEWOO DSL-19M1WC in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAEWOO DSL-19M1WC**  
**User guide DAEWOO DSL-19M1WC**  
**Operating instructions DAEWOO DSL-19M1WC**  
**Instructions for use DAEWOO DSL-19M1WC**  
**Instruction manual DAEWOO DSL-19M1WC**

**DAEWOO** DE  
ELECTRONICS

**TFT LCD TV**  
Instruction Manual  
**DSL19M1WC**

PAL B/G, D/K  
VIDEO/S-VIDEO/PC  
MULTI-LANGUAGE OSD



[You're reading an excerpt. Click here to read official DAEWOO DSL-19M1WC user guide](http://yourpdfguides.com/dref/3403779)  
<http://yourpdfguides.com/dref/3403779>

### Manual abstract:

@@@2. To reduce the risk of electric shock, do not remove the cover (back). No user-serviceable parts inside. Refer servicing to qualified service personnel. Unplug the product from the wall outlet before servicing or when it is unused for a long period of time. 3. The manufacturer will not be held responsible for the damage caused by any substitutions and modification of the product without authorisation from the manufacturer's or authorised service agent. **WARNING** The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. Copyright Protection This product incorporates copyright protection technology that is protected by U.S.

patents and other intellectual property rights. Use of this copyright protection technology must be authorised by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision. Reverse engineering or disassembly is prohibited. The images in this manual are for reference only and may differ from your model. -1- Important Safety Instructions 1.

Read these instructions 2. Keep these instructions 3. Heed all warnings. 4. Follow all instructions.

5. Do not use this apparatus near water. 6. Clean only with dry cloth. **IMPORTANT FOR LASER PRODUCTS 1. CLASS 1 LASER PRODUCT 2. DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam. 3. **CAUTION:** Do not open the back cover.

There are no user serviceable parts inside the unit. Leave all servicing to qualified service personnel. 7. Do not block any ventilation openings. 8. Install according to the manufacturer instructions. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat. 9. Read, heed and follow all instructions to ensure correct and safe installation and interconnection of the apparatus; 10. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

11. The mains socket-outlet shall be installed near the apparatus and the mains plug shall remain readily operable. 12. Protect the power cord from being walked on or pinched particularly at plugs, power sockets, and the point where they exit from the apparatus. 13.

Only use attachments/accessories specified by the manufacturer. 14. Use only with stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. 15. Unplug the apparatus during lightning storms or when unused for long periods of time.

16. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Note: Do not touch the colour TFT LCD screen directly by hand. -2- Disc Information Discs Supported **DISC LOGO CONTENTS** Audio+Video (active picture) **SIZE MAXIMUM TIME** 133min(SS-SL) DVD 12cm 242min(SS-DL) 266min(DS-SL) 484min(DS-DL) CD Audio 12cm 74min JPEG Still high resolution 12cm The operating method of some DVD discs is specified by the software maker. Please refer to the instruction manual of the disc. The unit will play most recordable (CD-R) or erasable (CD-RW) CDs, but playback of CD-R or CD-RW discs created on a computer requires proper formatting and finalization of the disc for audio playback. Some computers and/or software programs may not be capable of creating compatible discs. About Disc Terms Title Generally, pictures or music compressed on a DVD are divided into several sections, "title". Chapter The smaller section unit of pictures or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching.

But some discs may not have a recording by chapter facility. Track A segment of picture or music on a CD. Each track is numbered for searching. -3- Front Panel 1. Colour TFT screen 2. **SOURCE** button Press repeatedly to select inputs: choose from TV, SCART, COMPOSITE, S-VIDEO, COMPONENT, VGA and DVD mode. In setup menu, use the **ENTER** button for the same function. 3. **MENU** button Press to enter or exit the setup menu. 4.

**Pr /** button In TV mode, press to select channels. In setup menu, use the / direction buttons for the same function. 5. **VOL /** button In TV mode, press to increase or decrease the volume. In setup menu, use the /direction buttons for the same function.

6. **PLAY** button Press to start disc playback in DVD mode. 7. **STOP** button Press to stop disc playback. 8.

**Eject** button Press to eject the disc. 9. **STANDBY/ON** button Press to enter or exit the standby mode. 10. **SD/MS/MMC Card Port** Insert SD/MS/MMC card into this slot. 11. **Disc Tray Slot** Insert disc into this slot. 12. **Earphone Jack** When earphone is connected, the internal speakers will automatically turn off. 13.

**USB Port** Connect the USB memory. 14. **Remote Sensor** 15. **Power Indicator** During normal operation, it is blue; In standby mode, it is red 16. **Speakers -4- Rear Panel** Open the back cover on the right side of the unit's rear panel and you will see all jacks, as shown below: 1. **Y/Pb/Pr Input Jacks** Connect the Y/Pb/Pr input in Component mode. 2. **Y/Pb/Pr L/R Audio Input Jacks** Connect the L/R audio input in Component mode. 3. **Composite A/V Output Jacks** Connect to output the Audio/Video signals in Composite mode.

4. **S-VIDEO and Composite A/V Input Jacks** Connect to the S-VIDEO input in S-VIDEO mode or composite input in Composite mode. The L/R audio input jacks can be used in both S-VIDEO and Composite modes. 5. **VGA Input Jack** Connect the VGA input in VGA mode.

6. **PC AUDIO Input Jack** Connect to the PC audio output jack. 7. **TV Antenna Input Jack** Connect the external TV signal input source. 8.

**SCART Input Jack** Connect to the Scart input in Scart mode. 9. **DC 12V Input Jack** Connect the power supply. -5- **Remote Control Preparation of Remote Control** Softly push the back cover to open the battery compartment. Using of Remote control Point the remote control unit from no more than about 7 metres from the remote control sensor and within about 60 degrees of the front of the unit. Insert two batteries (1.5V, size AAA), please make sure the polarity matches the marks inside the compartment. Softly press the back cover to close it. · The operating distance may vary depending on the brightness in the room.

Notes: · · Under normal use the battery will last for six months.

Take out battery when the remote is not in use for a long time. · Do not point bright lights directly at the remote control sensor. Do not place objects between the remote control unit and the remote control sensor. Do not use this remote control unit while simultaneously operating the remote control unit of any other equipment.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DSL-19M1WC user guide](#)

<http://yourpdfguides.com/dref/3403779>

-6- Remote Control Remote Control Drawing 1. POWER button Press to enter or exit the standby mode. 2. TV button Press to select TV mode. 3. DVD button Press to select DVD mode.

4. P.M. button Press repeatedly to select the screen picture modes, choose from User, Standard, Soft, Bright or Shine. 5. S.M. button Press repeatedly to select the sound mode: choose from: User, Standard, Music, Movie or Speech. 6. 0~9 Number buttons Press to select numbers such as TV channel.

7. FAV button Press to enter your favourite channel. 8. STEREO/AUDIO button Press to shift sound track in TV mode (Please see P23 for details). Press to select audio language or audio track in DVD mode. 9. VOL+/- button Press to increase or decrease the volume. 10. MUTE button Press to turn on or off the speaker output. 11.

EXIT button Press to exit from the setup menu. 12. Direction buttons ( ) In the setup menu, press the button to select a desired item and press the button to adjust or set. 13. ENTER button Press to confirm your operation in setup menu. 14. SOURCE button Press repeatedly to select TV, SCART, Composite, S-VIDEO, Component, VGA and DVD mode. 15. PLAY button Press to play a disc in DVD mode. 16. PAUSE button In DVD mode, press to pause playback. Press the PLAY button to resume normal playback. / button Press to search backward or forward in DVD mode. In teletext mode, they are the teletext colour buttons. 18.

TITLE button During disc normal playback, press to enter or exit the disc title menu if the disc contains. Under TV, Composite, S-Video or SCART-COMPOSITE mode, press to display or close the teletext. 17. -7- Remote Control 19. MENU button (under DVD mon the rear panel of the unit. And the other end of the cables into the corresponding sockets on the TV (see below). After connection, turn on the power of the unit and external AV signal source and then press the SOURCE button to select COMPONENT mode. Note: Ensure the AV signal source is also switched to component video mode. Connecting to External AV Signal Source (SCART) Use a SCART cable (not supplied) to connect the external AV signal source to the SCART input jacks on the rear panel of the unit. After connection, turn on the power of the unit and the external AV signal source and then press the SOURCE button to select SCART mode. - 10 - System Connections Connecting to External AV Input Device (AV Output) Use the AV cables to connect the external AV input device to the AV output jacks on the side panel of the unit. Note: The unit can output TV, COMPOSITE, S-VIDEO and SCART-COMPOSITE signals. After connection, turn on the power of the unit and external AV input device and then press the SOURCE button to select the corresponding mode. Connecting to Earphones Connect earphones (headphones) to the earphone jack on the rear panel of the unit for listening to the audio output in seclusion. The internal speakers output will turn off automatically after the earphones have been connected.

Note: Excessively loud volume could damage your hearing. So turn down the volume before connecting earphone, and then raise the volume to a comfortable level. - 11 - System Connections Connecting to a PC Follow the steps and figure below to connect a PC to the unit. 1. 2. 3. Connect one end of the VGA cable to the VGA input jack on the rear panel of the unit and the other end to the PC. Connect one end of the audio cable to the PC audio input jack on the rear panel of the unit and the other end to the PC audio output jack. Set the PC's resolution to 1440 x 900 or 1024 x 768; and the fresh frequency to 60Hz. After connection, turn on the unit and the PC and then press the SOURCE button to select VGA mode.

- 12 - System Connections Connecting to a TV Antenna Connect TV signal source from the aerial to the TV jack on the rear panel of the unit. After connection, turn on the power of the unit. Then press the SOURCE button to select TV mode and conduct program selection. You can follow the steps below to select channels: However, if this is the first time the TV has been used, you must first search and store the channels by following the steps on pages 18, 19, 20 and 21. 1.

For 1~9 channel: Press one of the number buttons to select the desired channel X, and wait several seconds and it will go to the selected channel. Or press the number buttons to select the desired channel X, and press the ENTER button to go to the selected channel immediately. Or press the number buttons to select channel 0X, and it will go to the selected channel immediately. 2. For 10~99 channel: Press the number buttons to select channel XX, and it will go to the selected channel immediately.

X is the channel number. - 13 - TV Function NOTE: In other mode, you can refer to the following instructions in TV mode to go on with some settings. Only when there are signals, the menus can appear and be set. Preparation 1. After connection, press the POWER button to turn on the unit. 2. Press the SOURCE button to select TV mode and you can conduct the following operation: Image Setting Press the MENU button once to enter the setup menu. Press the button to select Image and press the ENTER button to enter the menu shown right. In this setup menu, press the button to select the desired item. Press the EXIT button to exit from the menu.

Scheme Setup Press the button to select Scheme and press the ENTER button to enter. Press the button to select the desired item and press the ENTER button to confirm your selection. Press the MENU button to return to the previous menu. Picture Setup Press the button to select Picture and press the ENTER button to enter. Press the button to select the desired item and press the ENTER button to confirm your selection. Press the MENU button to return to the previous menu. - 14 - TV Function Brightness Setup Press the button to select Brightness and press the button to adjust the value. Press the MENU button to return to the previous menu. Contrast Setup Press the button to select Contrast and press the button to adjust the value. Press the MENU button to return to the previous menu.

Hue Setup Press the button to select Hue and press the button to adjust the value. Press the MENU button to return to the previous menu. Note: This item is only available under NTSC TV signal mode. Saturation Setup Press the button to select Saturation and press the button to adjust the value. Press the MENU button to return to the previous menu.

Sharpness Setup Press the button to select Sharpness and press the button to adjust the value. Press the MENU button to return to the previous menu. Advanced Setup Press the button to select Advanced and press the ENTER button to enter. In the menu, press the direction button to move the image. Press the MENU button to return to the previous menu.

Note: This item is only available in DVD, VGA and Component modes. - 15 - TV Function Audio Setting Press the MENU button once to enter the setup menu. Press the button to select Audio and press the ENTER button to enter the menu shown right.



[You're reading an excerpt. Click here to read official DAEWOO DSL-19M1WC user guide](http://yourpdfguides.com/dref/3403779)  
<http://yourpdfguides.com/dref/3403779>

In this setup menu, press the button to select the desired item. Press the EXIT button to exit from the menu. Volume Setup Press the button to select Volume and press the button to adjust the level. Press the MENU button to return to the previous menu. Bass Setup Press the button to select Bass and press the button to adjust the level. Press the MENU button to return to the previous menu. Treble Setup Press the button to select Treble and press the button to adjust the level.

Press the MENU button to return to the previous menu. Balance Setup Press the button to select Balance and press the button to adjust the level. Press the MENU button to return to the previous menu. Auto Volume Setup Press the button to select Auto Volume and press the ENTER button to enter the menu. Press the button to select "On" or "Off" and press the ENTER button to confirm. Press the MENU button to return to the previous menu. - 16 - TV Function Sound Mode Setup Press the button to select Sound Mode and press the ENTER button to enter. Press the button to select the desired item and then press the ENTER button to confirm your selection. Press the EXIT button to exit from the menu. Timer Setting Press the MENU button once to enter the setup menu.

Press the button to select Timer and press the ENTER button to enter the menu shown right. In this setup menu, press the button to select Off, 15Min, 30Min, 45Min, 60Min, 75Min, 90Min, 105Min or 120Min. Press the MENU button to return to the previous menu. Press the EXIT button to exit from the menu. Setup Setting Press the MENU button once to enter the setup menu.

Press the button to select Setup and press the ENTER button to enter the menu as shown on the right. In this menu, press the button to select the desired item. Press the EXIT button to exit from the menu. - 17 - TV Function Tuner/Channel Press the button to select the Tuner/Channel and press the ENTER button to enter the menu shown right. Press the button to select the desired item.

Press the EXIT button to exit from the menu. Country Press the button to select the Country and press the ENTER button to enter the menu shown right. Press the button to select the desired item. Press the MENU button to return to the previous menu. Auto Scan Press the button to select the Auto Scan and press the ENTER button to start auto scan. The screen will display as shown below: Auto scan will take a few minutes, when the tuning operation is complete the unit will exit and automatically memorise the programs in sequence. If you want to cancel auto scanning, press the MENU button. - 18 - TV Function Prog Organizer Press the button to select the Prog Organizer and press the ENTER button to enter the menu shown right. In the Prog Organizer setup menu, press the button to select the desired item. Press the EXIT button to exit from the menu.

Pr. Name Press the button to select the Pr. Name and press the ENTER button to enter. Then press the button to select letters or press the number button to input numbers. Press the MENU button to return to the previous menu. Skip Press the button to select Skip and press the ENTER button to activate or cancel this function. Press the MENU button to return to the previous menu. Swap Press the button to select Swap from Pr and press the ENTER button to enter.

Press the number buttons to select program number. Repeat the above operations to Swap To Pr.

Then Press the button to select Perform Swap and press the ENTER button to confirm. Manual Install Press the button to select the Manual Install and press the ENTER button to enter the menu shown on the right. In the Manual Install setup menu, press the button to select the desired item. Press the EXIT button to exit from the menu. - 19 - TV Function Search Press the button to select Search and press the or to start searching forward or backward.

Press the MENU button to return to the previous menu. Colour System Press the button to select Colour System and press the ENTER button to enter the setup, press the button to select item. Press the MENU button to return to the previous menu. Note: "PAL" is used in most of Europe and the UK except France which uses "SECAM". Sound System Press the button to select Sound System and press the ENTER button to enter the setup, press the button to select item.

Press the MENU button to return to the previous menu. Note: The sound system "B/G" is used in Western Europe, "D/K" is used in Eastern Europe, "I" is used in the UK and "L" & "L'" is used in France. Fine Tune When the effect of the picture and the accompanied sound are not in the best, you can set up the fine tuning to improve. @@@@Press the number buttons to enter the channel number. Press the MENU button to return to the previous menu.

@@@@@@@@@@@@@@@@@@@@Press the MENU button to return to the previous menu. @@@@@@@@@@@@@@@@@@button Press this button to select the index page. @@@@@@@@@@@@@@@@@@Press the colour buttons on the remote control to select, then use the number buttons to input the corresponding number to display the page. Repeat the above procedures for each page to be stored, using a different colour button each time. button Press this button to display the real clock and press this button again or the EXIT button to exit.

- 22 - NICAM Function The unit supports NICAM function when in TV mode. Under NICAM TV broadcast: 1. When receiving stereo audio signals, press the STEREO/AUDIO button on the remote control repeatedly to select the sound tracks between Nicam Stereo and Mono and the screen will show the corresponding display as shown below: 2. When receiving bilingual audio signals, press the STEREO/AUDIO button on the remote control repeatedly to shift the sound tracks between Nicam I, Nicam II, Nicam I+II and Mono and the screen will show the corresponding display as shown below: 3. When receiving mono audio signals, press the STEREO/AUDIO button on the remote control repeatedly to shift the sound tracks between Nicam Mono and Mono and the screen will show the corresponding display as shown below: Under A2 TV broadcast: 1. When receiving stereo audio signals, press the STEREO/AUDIO button on the remote control repeatedly to shift the sound tracks between Stereo and Mono and the screen will show the corresponding display as shown below: 2. When receiving bilingual audio signals, press the STEREO/AUDIO button on the remote control repeatedly to shift the sound tracks between I, II and I+II and the screen will show the corresponding display as shown below: 3. When receiving mono audio signals, press the STEREO/AUDIO button on the remote control to display sound track Mono on the screen. - 23 - DVD Playback Operation Preparation 1. 2.

3. Connect the unit to the power supply and press the POWER button to turn on the unit. Press the SOURCE button and select DVD mode. Holding the disc with its printed side outward vertically to the disc tray and gently insert the 4.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3403779)

[DSL-19M1WC user guide](http://yourpdfguides.com/dref/3403779)

<http://yourpdfguides.com/dref/3403779>

disc into the disc tray slot.

It will automatically be taken fully into the disc tray and the player will search the disc and play it automatically in DVD mode. Warning: Do not play poor quality discs that may damage the unit. DVD Playback Region Code DVD players and discs are coded by region. These regional codes must match the played discs. If the codes don't match, the disc cannot be played.

This player's default code is region 2. Play After loading a DVD disc, disc menu will appear on the screen if the disc includes the menu. Press the PLAY button to start playback. Stop Press the STOP button once to stop playback and press the PLAY button to resume normal playback. Press the STOP button twice repeatedly to stop playback completely. Pause Press the PAUSE button to pause the playback and then press the normal playback. Previous and Next Press the button to go to the next chapter. Press the PLAY button to resume button once to return to the beginning of the current chapter or track; press it twice to go to the previous chapter or track. - 24 - DVD Playback Operation Fast Playback Press the button on the remote control to activate fast backward or forward playback. SLOW During DVD disc playback, press the SLOW button on the remote control to start slow playback.

During slow playback, press the Repeat Use the REPEAT button repeatedly to repeat a chapter, title or all. Some discs do not support the repeat function.

Menu Normally there is a selecting menu for DVD discs and you can press the MENU button (in DVD mode) to enter the menu. On the menu, use the direction buttons to highlight an item and press the ENTER button to confirm. Title & Chapter Normally there are several titles in a DVD disc and several chapters (sections) in a title. You can select any title or chapter by entering the relevant number. GOTO During DVD disc playback, press the GOTO button on the remote control once, there will be a menu displayed on the screen. You can set or select items for your preference. Use the buttons to select items and press the ENTER button to enter and use the buttons to select the desired item. Press the direction button to return.

When selecting Title/Chapter, TT Time/CH Time, use the number buttons to input the desired title/chapter number time. Some DVD discs do not support the search function. Audio Language There are up to 8 audio languages on a DVD disc. Press the AUDIO button to select audio language if the disc includes multi-audio languages. Subtitle Language The unit supports multi-subtitle languages function.

Press the SUBTITLE button to select subtitle language if the disc includes multi-subtitle languages. PLAY button to resume normal playback. - 25 - DVD Playback Operation Various Camera Angles The movies on some discs have been recorded from various camera positions, which can make you enjoy the same scene from different perspectives. When playing a disc containing various camera angles, the camera symbol appears on the screen. Press the ANGLE button repeatedly until the desired perspective is shown.

The picture will be adjusted in 12 seconds. CD Playback The player will play all tracks on a CD disc by default. You can use the buttons to select a track. Stop

Press the STOP button once to stop playback and press the button, or number PLAY button to resume normal playback. Press the STOP button twice repeatedly to stop playback completely and the unit will return to the previous system mode. Pause Press the PAUSE button to pause the playback and then press the PAUSE button again or button to resume normal playback. Previous and Next Press the button once to go to the beginning of this track. Press twice repeatedly to go to the previous track. Press the button to play from the beginning of the next track. PLAY Fast Playback Press the button on the remote control to activate fast backward or forward playback.

Repeat Use the REPEAT button repeatedly to repeat Track, All or to cancel repeat. Some discs do not support the repeat function. Audio During CD playback, press the AUDIO button on the remote control to select the audio output mode: Mono Left, Mono Right, Mix-Mono and Stereo. Goto Press the GOTO button to enter the time-selected state. You can select Disc Go To, Track Go To or Select Track respectively by pressing this button repeatedly. Use the 0-9 buttons to enter the desired time and then the player will play according to the selected time. - 26 - DVD Playback Operation JPEG Playback JPEG is a common picture format that requires small amounts of storage per image and has low loss in resolution. Hundreds of pictures can be stored on a disc in this format. In order to view JPEG photo albums, you can ask your film development company to make a "PICTURE CD" when they develop your film. Normal Playback Load a JPEG disc there will be a root menu displayed on the screen.

Use the ENTER button and the direction button to select a submenu, and then use the direction button to select the contents. For Picture CD disc, it will display the pictures automatically. During playback, press the button to select picture. Many discs have other contents besides pictures. Stop Press the STOP button to preview the pictures in thumb nail form.

Press the resume normal playback. Pause Press the PAUSE button to pause playback, press the PAUSE button again or resume playback. PLAY button to PLAY button to Repeat During playback, press the REPEAT button repeatedly, and the repeat modes are Shuffle, Random, Single, Repeat One, Repeat All and Repeat Off. Previous and Next During playback, press the button to select picture. Menu Press the MENU button once to stop playback and return to the root menu.

GOTO During playback, press the GOTO button on the remote control once, use the number buttons to input the file number. Picture Rotation This can be used only when the picture is normally displayed. Once another picture is selected, rotation will be cancelled automatically. Use the button to rotate the picture. Some JPEG disc's may not support the rotating function. - 27 - USB and SD/MS/MMC Card Function Preparation In DVD mode, connect USB memory to the USB port or insert SD/MS/MMC card into the SD/MS/MMC card slot on the right side of the unit. Make sure that files are stored on USB memory or the SD/MS/MMC card before connection. File Playback 1. Press the CARD button to select disc playback, USB playback or SD/MS/MMC playback. The default state is disc playback.

Please see the figure below: 00:00 00:00 001/002 BAK JPEG 2. 3. 4. Press the Press the button to select folder and press ENTER button to enter. button to select file and press PLAY button to play. button to return to STOP button to stop playback; press the During playback, press the the folder menu. Note Screen display varies from disc to disc. After disconnection USB memory or SD/MS/MMC card from the unit, the unit will return to the disc playback mode. - 28 - DVD System Setup Preparation 1.



[You're reading an excerpt. Click here to read official DAEWOO DSL-19M1WC user guide](http://yourpdfguides.com/dref/3403779)  
<http://yourpdfguides.com/dref/3403779>

2.

3. In DVD mode, press the SETUP button to open DVD setup menu. Press the button to select setup menu Press the SETUP button again to exit from DVD setup menu. General Setup Page Press the SETUP button to enter General Setup Page and the screen will display as below: 1. In the menu, use the button to select the desired item.

2. Press the ENTER button to enter the item. 3. Press the button to return. TV Display 1.

Press the button to select TV Display. 2. Press the ENTER button to enter. 3. Use the buttons to select items. 4. Press the ENTER button again to confirm selection and return to the previous menu. Angle Mark 1. Press the button to select Angle Mark. 2.

Press the ENTER button to enter. 3. Use the button to select On or Off. 4. Press the ENTER button again to confirm selection and return to the previous menu.

- 29 - DVD System Setup OSD Lang 1. Press the button to select OSD Lang. 2. Press the ENTER button to enter. 3.

Use the button to select items. 4. Press the ENTER button again to confirm selection and return to the previous menu. Captions 1. Press the button to select Captions.

2. Press the ENTER button to enter. 3. Use the button to select On or Off. 4.

Press the ENTER button again to confirm selection and return to the previous menu. Screen Saver 1. Press the button to select Screen Saver. 2. Press the ENTER button to enter. 3. Use the button to select On or Off. 4. Press the ENTER button again to confirm selection and return to the previous menu. Last Memory 1.

Press the button to select Last Memory. 2. Press the ENTER button to enter. 3. Use the button to select On or Off. 4. Press the ENTER button again to confirm selection and return to the previous menu. - 30 - DVD System Setup Media Center button to select Media Center. 1. Press the 2.

Press the ENTER button to enter. 3. Use the button to select DVD, USB, SD/MMC or MS. 4. Press the ENTER button again to confirm selection and return to the previous menu.

Audio Setup Page Press the SETUP button to enter General Setup Page and then use the Audio Setup Page, the screen will display as below: buttons to select 1. In the menu, use the button to select the desired item. 2. Press the ENTER button to enter the item. 3.

Press the button to return. Dolby Digital Setup 1. Press the button to select Dolby Digital. 2. Press the ENTER button to enter. 3. In the menu, use the button to select items. 4. Press the ENTER button to enter the setup. Press the button to return.

Dual Mono 1. Press the button to select Dual Mono. 2. Press the ENTER button to enter. 3. Use the button to select items. 4. Press the ENTER button again to confirm selection and return to the previous menu. - 31 - DVD System Setup Dynamic 1. Press the button to select Dynamic.

2. Press the ENTER button to enter. 3. Use the button to adjust. 4.

Press the ENTER button again to confirm setting and return. 5. Press the button to return. HDCD Setup On the Audio Setup Page, use the direction buttons to select HDCD Setup. Press the ENTER button to enter the setup and the screen will display as below: 1.

In the menu, press the ENTER button to enter the setup. 2. Use the button to select items. 3. Press the ENTER button again to confirm selection and return. 4.

Press the button to return. Video Setup Page Press the SETUP button to enter General Setup Page and then use the select Video Setup Page, the screen will display as the below: direction buttons to 1. In the menu, use the desired item. button to select the 2.

Press the ENTER button to enter the item. 3. Press the button to return. - 32 - DVD System Setup Video Quality Setup Select Quality in the Video Setup Page and press the ENTER button to enter the menu as below: 1. In the menu, use the desired item. button to select the 2. Press the ENTER button to enter the item.

3. Press the button to return. Sharpness 1.

Press the button to select Sharpness. 2. Press the ENTER button to enter. 3. Use the Low.

button to select High, Medium or 4. Press the ENTER button again to confirm selection and return to the previous menu. Brightness 1. Press the button to select Brightness. 2.

Press the ENTER button to enter. 3. Use the button to adjust the level. 4. Press the ENTER button again to confirm setting and return to the previous menu.

Contrast 1. Press the button to select Contrast. 2. Press the ENTER button to enter. 3.

Use the button to adjust the level. 4. Press the ENTER button again to confirm setting and return to the previous menu. - 33 - DVD System Setup Preference

Page Press the SETUP button to enter the General Setup Page and then use the Preference Page, the screen will display as the below: button to select 1. In the menu, use the button to select the desired item. 2. Press the ENTER button to enter the item. 3. Press the button to return. Audio 1.

Press the button to select Audio. 2. Press the ENTER button to enter. 3. Press the button to select audio language.

4. Press the ENTER button again to confirm setting and return to the previous menu. Subtitle 1. Press the button to select Subtitle. 2.

Press the ENTER button to enter. 3. Press the button to select Subtitle language. 4. Press the ENTER button again to confirm setting and return to the previous menu. Disc Menu 1. Press the button to select Disc Menu. 2. Press the ENTER button to enter. 3.

Press the button to select Menu language. 4. @@@@1. Press the button to select Parental. 2. Press the ENTER button to enter. 3. Press the button to select item. 4. @@The Default Password is 3308.

5. @@Press the button to select Default. 2. Press the ENTER button to select Reset. 3.

Press the ENTER button, all the settings will return to the default status. Password Setup Page Press the SETUP button to enter the setup menu and then use the Setup Page, the screen will display as the below: button to select Password 1. In the menu, use the desired item. button to select the 2. Press the ENTER button to enter.

3. Press the button to return. - 35 - DVD System Setup Password Mode 1. Press the button to select Password Mode. 2. Press the ENTER button to enter. 3.

Press the button to select On or Off. 4. Press the ENTER button again to confirm setting and return.

Password Change You can change the password by yourself. 1. Press the button to select Password. 2. Press the ENTER button to enter the setup, see the picture on the left. 3. Press the ENTER button again to change the password. 4. According to the indication on the menu, use the number buttons to input the old password, then input the new password, then input again to confirm. Press the ENTER button again to confirm setting and return.

The password has been changed successfully. 5. The Default Password is 3308. - 36 - Other Function External AV Input Function The unit has an external AV input function. It supports Composite, S-VIDEO and Component modes.

Use the audio, video and S-Video cable to connect the unit to the external AV signal source such as a DVD or VCR recorder, camcorder, satellite receiver or

*game player etc.*



[You're reading an excerpt. Click here to read official DAEWOO  
DSL-19M1WC user guide  
http://yourpdfguides.com/dref/3403779](http://yourpdfguides.com/dref/3403779)

Then turn on the unit and the external AV signal source. Press the SOURCE button to select the corresponding mode. Then you can go on to the set up the menu in a certain mode. Computer Screen Function The TFT LCD screen of the unit can be used as a computer screen.

Take the steps of connecting the unit to the PC as show on page14 and then you can set up the menu. Ensure you set the PC's resolution to: 1440 x 900@60Hz or 1024 x 768@60Hz. The operations of these menus in SCART, Composite, S-VIDEO, Component and VGA modes are the same with those in the TV mode.

Please refer to the introduction in "TV Function". Note: 1. Only when there are signals, can the menus appear and be set. 2. Some of these menus are not available in these modes. - 37 - Troubleshooting SYMPTOM There is no display on the screen. correct.

Make sure the unit is turned on and all connections are correct. Make sure the volume is not turned down or muted. Make sure the sound setup is correct. In DVD mode, make sure disc is not dirty or warped. There is no picture or picture jitters up and down. Make sure all connections are correct. Make sure the unit is in correct video mode. Make sure disc is loaded in correctly. Make sure disc is not dirty or warped. The unit can't play discs.

Make sure the region code is the same as region code of DVD disc. Make sure water condensation has not occurred. If it occurs, take out the disc and leave the unit on for at least one hour. The unit does not continue to play discs or plays the same section repeatedly. Make sure disc is not dirty or damaged.

Make sure the unit is not in any repeat status. Make sure there are no obstructions between remote control and the unit. The remote control does not work.

Make sure the remote control is pointing at the unit. Make sure the battery is installed into the remote control correctly.

Make sure battery is not too weak. CHECK ITEM Make sure the unit is turned on and all connections are There is no sound. Other Notes: Static or other external interference may cause the unit to behave abnormally. If this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the unit. If the problem persists, then please disconnect the power and consult a qualified technician. - 38 - Specifications TFT-LCD Resolution TFT-LCD Screen Size Power 1440 x 900 19 inches AC100240V50/60Hz DC 12V DVD+/-RW, DVD+/-R, CD, CD-R, CD-RW, JPEG, MS, SD, MMC 3 in 1 Card reader and USB 1.0/2.0 Multi Media USB Memory Reader compatible Max Volume up to 2 GB 15 Pin, Analog RGB signal, 0.7Vp-p, 75input (VGA, VGA SVGA, XGA computer signal compatibility) 1024\*768@60Hz, 800\*600@60Hz, 640\*480@ 60Hz, 1440\*900@60Hz Speaker Output Files supported in the USB memory and MS/SD/MMC Card Subtitle languages supported Dimension Weight Ambient Temperature 3W+3W JPEG, MPEG 2 English, French, Spanish, German, Italian, etc 494mm x 184mm x 412mmLXWXD About 9.2 Kg 10~45 DVD Player DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992 -1997 Dolby Laboratories, Inc. All rights reserved. If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive) - 39 - .



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3403779)

[DSL-19M1WC user guide](http://yourpdfguides.com/dref/3403779)

<http://yourpdfguides.com/dref/3403779>