



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DTB-21S7. You'll find the answers to all your questions on the DAEWOO DTB-21S7 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAEWOO DTB-21S7**  
**User guide DAEWOO DTB-21S7**  
**Operating instructions DAEWOO DTB-21S7**  
**Instructions for use DAEWOO DTB-21S7**  
**Instruction manual DAEWOO DTB-21S7**

DAEWOO  
ELECTRONICS



## **Colour Television MANUAL INSTRUCTION**

**DTB-21S6  
DTB-21S7**

**GB**



[You're reading an excerpt. Click here to read official DAEWOO DTB-21S7 user guide](http://yourpdfguides.com/dref/3404215)  
<http://yourpdfguides.com/dref/3404215>



*RoHS (Directive 2002/95/EC) Compliant This environment-friendly product does not contain the EU RoHS restricted substances (Pb, Hg, Cd, Cr6+, PBB, and PBDE). DISPOSAL OF USED ELECTRICAL & ELECTRONIC EQUIPMENT The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. INSTALLATION*

*Batteries Open remote control battery compartment (at the rear) and insert two 1.5V type AAA batteries.*

*Warning: be careful to respect battery polarities. Insert the main plug into a 230V 50Hz AC power socket. Connect aerial to aerial jack (C3). SWITCHING ON AND OFF Power on the TV set using front panel MAIN POWER button (B1). Select your preferred language from the LANGUAGE menu (see section START UP on page 5).*

*Press the remote control MENU button (A19) to enter the main menu. Select Install menu to tune and memorise TV programs. 4 START UP LANGUAGE MENU The very first time that you turn on the TV, the LANGUAGE menu will appear on the screen. Its purpose is to enable you to select the language that will be used for all the OSD (On Screen Display) menus. The user must enter a choice of language before proceeding further.*

*The language entered at this stage can still be modified at any later time, by entering the LANGUAGE menu (accessed from the FEATURES menu: see later section under MENU DESCRIPTION). The descriptions used in the menu are those of the country code (e.g. GB = English, NL = Holland etc). LANGUAGE BG F I RO CZ FIN N RUS D GB NL S DK GR P E H PL Selection is made by use of the remote control CURSOR UP (A6) / CURSOR DOWN (A21) keys and*

*CURSOR RIGHT (A20) / LEFT (A7) keys. Once you are satisfied with your selection, push the OK button (A18) to confirm your choice. The choice will briefly highlight in red, after which the menu will disappear. Note : The languages shown are subject to modification without prior notice. AUTOMATIC TUNING Automatic Tuning System If you have a satellite decoder: If your decoder is connected to the TV set by the aerial jack (C3), you must power on the demodulator and tune Sky News before starting ATSS . ATSS = Automatic Tuning and Sorting System.*

*To start the ATSS function: - Select „ATSS „, function. - Adjust to the required country. - Press and hold the OK button (A18) to start the automatic tuning. The ATSS function has started when the phrase „Please Wait !" appears (in red characters ) in the help instructions box, below the Install menu. When the ATSS function is finished, the stored programs are displayed on screen using Edit menu presentation (to Exit tuning before automatic tuning is finished, press the remote control MENU button (A19) ). CONNECTING EXTERNAL EQUIPMENT The rear Scart1 (C1), Scart2 (C2) sockets and the front AV socket (B8) (B9) are three dedicated sockets to connect audio-video equipment. Rear REAR SCART 1 SOCKET (AV1) This socket (C1) has video / audio inputs and outputs. It is recommended to connect to this socket automatic AV switching equipment such as pay-TV decoders, video games, DVD players and most VCR's. In most cases, when connecting powered equipment to this socket, the TV set switches automatically to AV mode. If not, then use the TV/AV buttons (A5) or (B6) to select AV1.*

*REAR SCART 2 SOCKET (AV2) This socket (C2) has video / audio inputs and outputs. Automatic AV switching equipment (for example most VCR's) can be connected to this socket. In most cases, when connecting powered equipment to this socket, the TV set switches automatically to AV mode. If not, then use the TV/AV buttons (A5) or (B6) to select AV2. You can also receive an S-VHS signal with REAR SCART2 socket, by selecting SVHS2 with the TV / AV buttons (A5) or (B6).*

*VCR / DVD / Video Game / Pay-TV decoder Important: If your video equipment does not have SCART socket(s), or if you wish to use only the aerial (RF) connection (not recommended), then you should make use of PR 00 on the TV set for best performance.*



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3404215)

[DTB-21S7 user guide](http://yourpdfguides.com/dref/3404215)

<http://yourpdfguides.com/dref/3404215>

5 Side TV/AV SELECTION Allows to switch between TV and external modes. By repeatedly pressing the remote control TV / AV (A5) or the TV side panel TV / AV (B7) button, the on-screen display is changed as shown : AV1 AV2 S-VIDEO 2 AV3 TV Remark: If the signal source from the rear SCART1 socket (AV1) is RGB (e.g. normally from a DVD player) then AV1 RGB will be displayed.

Video OUT Side AV SOCKET (AV3) The side AV socket (B8) - (B9) has audio and video inputs. To switch from TV to these inputs, use the TV / AV buttons (A5) or (B6) and select AV3. VCR DVD PLAYER CAMCORDER VIDEO GAME Audio OUT HEADPHONE SOCKET To hear TV sound with headphones, insert a 3.5mm headphone plug into the headphone socket (B10). The speaker's sound will be automatically cut off. DAILY USE SWITCHING ON TV SET 1) If stand-by indicator (B2) is red, then the TV set is in stand-by mode. You can switch on using the remote control POWER button (A1), the NUMBER 0...

9 buttons (A3), or PROGRAM UP (A6) / DOWN (A21) buttons. The front panel PROGRAM UP/DOWN buttons (B4) can also be used. Once on, the stand-by indicator turns to green and the picture appears on the screen. 2) If stand-by indicator (B2) is not lit, then the TV set is powered off. You must press the TV set front panel MAIN POWER button (B1). If a picture does not appear, then the stand-by indicator will be lighted red. In this case, use the remote control as indicated in 1). 3) If stand-by indicator (B2) is flashing red, and green then the TV set is in child-lock mode. It is necessary to use the remote control POWER button (A1), NUMBER 0..

..9 buttons (A3), or PROGRAM UP (A6) / DOWN (A21) buttons. The front panel PROGRAM UP/DOWN buttons (B4) will not function. Once on, the stand-by indicator turns to green and the picture appears on the screen.

SWITCHING OFF TV SET 1) Pressing the remote control POWER button (A1), you can switch off to stand-by mode (low power consumption mode) which also allows quick restart by remote control (see above: SWITCHING ON TV SET). 2) Pressing the TV set front panel MAIN POWER button (B1), you can completely power off the TV set. In this case, you must use the same front panel POWER button (B1) to switch on again (see above: SWITCHING ON TV SET). Remark: If a broadcast signal is not present after 30 minutes, the TV set will be automatically turned to stand-by mode. 6 PROGRAM SELECTION (FROM 0 TO 99) Direct selection Use the remote control NUMBER 0.

...9 buttons (A3). For two digits program numbers, enter the second digit within 2 seconds. Up / Down selection Use the remote control PROGRAM UP (A6) / DOWN (A21) buttons or the TV set front panel PROGRAM UP / DOWN buttons (B4). SOUND CONTROL Volume adjustment Use the remote control VOLUME UP (A20) / DOWN (A7) buttons or the TV set front panel VOLUME UP / DOWN buttons (B5). Mono forcing, dual language - If you are unable to get good sound quality for a program due to poor reception, you can force a change from stereo to mono transmission by pressing the remote control MODE button (A14). Then the program status display will indicate „MONO" with a icon. - On the other hand, during a program with dual language transmission, the MODE button (A14) allows you to toggle between the first and second language.

The program status display will indicate „DUAL 1" or „DUAL 2" (plus NICAM according to the received signal). - To return to initial state, press again the MODE button (A14). Mute Mute the sound by pressing the remote control SOUND MUTE button (A2). Then, logo is displayed. The previous sound setting is returned after pressing the same button a second time. If a sound related function is used (e.g. VOLUME, 3D) then the MUTE will also be cancelled. Sound effects A SPATIAL sound effect is available, using the remote control 3D (A13) button. The following display appears: SPATIAL STEREO 18:30 Spatial sound effect Sound transmission mode Clock To return to initial sound effect, press again the 3D (A13) button.

The following display appears: OFF STEREO 18:30 No sound effect Sound transmission mode Clock As an option, the sound effects PANORAMA and Dolby Virtual are available with the same button. For other adjustments such as BALANCE, EQUALIZER or AVL(option), use the SOUND menu (page10).

Manufactured under license from Dolby Laboratories, „Dolby" and the double-D symbol are trademarks of Dolby Laboratories. 7 PICTURE CONTROL You can select three pictures settings, by using the remote control NORMAL button (A17) : - Normal I (standard hard picture) - Normal II (standard soft picture) - Favourite For other adjustments: BRIGHTNESS, CONTRAST, COLOUR, SHARPNESS, NOISE REDUCTION, use the PICTURE menu. If an NTSC signal is received, then the TINT adjustment will also be available.

01 BBC1 01 18:30 BBC1 01 18:30 BBC1 NORMAL I NORMAL he remote control CURSOR LEFT (A7) or RIGHT (A20) buttons if you want to modify the function value - The remote control NUMBER 0...9 buttons (A3) to enter directly new data. - Store (if needed) by pressing the remote control OK button (A18).

- Then Exit to main menu by pressing the MENU button (A19). 9 PICTURE MENU (For operating instructions, see page 9, HOW TO USE THE SUB-MENUS) - Select and adjust the level of each function : BRIGHTNESS, CONTRAST, COLOUR, SHARPNESS, TINT (if available). @@- NOISE REDUCTION feature can be activated or not. - The OK (A18) or NORMAL button will select the picture presets FAVOURITE, NORMAL I, NORMAL II. The currently selected preset is displayed in the menu header. - The FAVOURITE preset contains the settings that you last entered. If the NTSC standard is detected (eg from VHS player connected to AV1), then TINT will be available. Otherwise TINT will be displayed, but not selectable. PICTURE BRIGHTNESS CONTRAST COLOUR SHARPNESS TINT NOISE RED. FAVOURITE ON SOUND MENU (For operating instructions, see page 9, HOW TO USE THE SUB-MENUS) SOUND VOLUME BALANCE EQUALIZER AVL NORMAL OFF - Select VOLUME function to adjust the volume level.

- Select BALANCE function to adjust sound balance between the left and right speakers. If the indicator is highlighted in red, then the central balance position has been found. @@@@The currently selected preset is displayed in the menu header. @@ATSS = Automatic Tuning and Sorting System. To start the ATSS function: - Select „ATSS" function. - Adjust to the required country. - Press and hold the OK button (A18) to start the automatic tuning. @@@@In the above case, the current program is PR00. The 3 previous, and 3 following programs, are always displayed. @@@@- Press the remote control YELLOW „Delete" button (A26).

@@@@- Press, and hold for more than 1 second, the remote control CURSOR RIGHT (A20) [LEFT (A7)] buttons to start up [down] manual tuning. - Searching will stop automatically at the next channel found (to stop tuning, press the remote control MENU button (A19)). Note: You can directly locate a program by entering the data into the „channel" or the „frequency" function.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DTB-21S7 user guide](#)

<http://yourpdfguides.com/dref/3404215>

Enter station name It is possible to enter your own choice of name for each program. You can change an existing name, or enter a name where none exists. If none exists „- - - - -“ will be shown in the Install menu, and program status display ( see the section PROGRAM STATUS DISPLAY on page 8). - Select the „NAME“ function. - Select one of the 7 character positions by using the remote control CURSOR RIGHT (A20) / LEFT (A7) buttons to move the cursor. - Then use the CURSOR UP (A6) /DOWN (A21) buttons to select the desired character for that position. - Repeat the last two instructions for other positions, as desired.

- Once the name has been entered, press the OK button (A18) to store it. The name will be memorised to the program number currently shown on the „Store To“ line. The „Store To“ program number will highlight in red briefly. TV system modification If necessary, you can modify the TV system : - Select „system“ function. - Adjust choosing between FRANCE (L/L'), GB (I), EURO (B/G), E/ EURO (D/K) systems. Then, the program displayed on the screen is changed to the chosen system. Perform fine tuning - If you are unable to get a good picture or reasonable quality sound due to poor reception, it is possible to perform fine tuning. - Select the „frequency“ function. - Press, for less than 1 second, the remote control CURSOR RIGHT(A20) [LEFT(A7)] buttons to perform up [down] fine tuning in steps of 0.05MHz (50 kHz).

Store program in memory - Select the „store to“ function - Enter the program number you want to store to either by using the remote control CURSOR RIGHT (A20) / LEFT (A7) buttons, or directly by using the remote control NUMBER 0...9 buttons (A3). - Press the OK button (A18) to confirm. Remarks: this function can also be used if you want to copy a program already memorised to another program number. 12 FEATURES MENU See section near the end of section DAILY USE for a more detailed explanation of these functions. (For operating instructions see page 9, HOW TO USE THE SUB-MENUS) 1. When switched to ON: Prevents the use of the TV set without remote control 2. Wake up function This function is only selectable when the clock is set.

The TV set turns on from stand-by at the WAKE TIME with the programme entered on the WAKE PROG. line. Put the TV set on stand-by with the remote control 3. Shared with WAKE TIME. 1.

Adjust this value ON or OFF. - In stand-by mode, the stand-by indicator flashes red and green to indicate the CHILD LOCK is set. - The front panel TV buttons (B4, B5, B6) become inactive and the TV will only respond to the remote control. 2. Switch the WAKE UP function OFF or 'ON' (the time will be shown e.

g. 07:15) with the remote control CURSOR LEFT (A7) /RIGHT (A20) buttons - Enter the wake up time with the remote control 0...9 NUMBER (A3) buttons. FEATURES 4. TV clock setting This function allows user to enter the time manually. Note : If you turn off the set with the main power button, the clock setting is lost. An automatic attempt is made to set the clock again at power on. 5.

This function is only selectable when the default picture format is currently active (see also FORMAT SELECTION, AUTO setting, page 8). This selects the default format to be used only when the format selected with the ZOOM button (A15) is AUTO, and no picture format signalling data is received. 6.

LANGUAGE menu entry. 3. Adjust TV turn-on program number CHILD LOCK WAKE TIME WAKE PROG. CLOCK CLOCK PROG ZOOM AUTO LANGUAGE OFF OFF 04 - :- 01 4:3 GB 5. Choose your preferred default format with the remote control CURSOR LEFT (A7) /RIGHT (A20) buttons. 6. The currently selected LANGUAGE is displayed.

Press the OK button (A18) to access the menu and change the selection. 4. Adjust TV clock. Clock will start at 0 seconds upon entry of the 4th figure. The prog.

no. which can be used to automatically seize the time at turn on can be entered here. LANGUAGE MENU - Select the preferred LANGUAGE by use of the CURSOR LEFT (A7), RIGHT (A20) buttons, and the CURSOR UP (A6) or DOWN (A21) buttons. - Press the OK button (A18) to confirm the selection (the choice will be highlighted in red). Note : The languages shown are subject to modification without prior notice.

LANGUAGE BG F I RO CZ FIN N RUS D GB NL S DK GR P E H PL 13 TELETEXT ENTERING/LEAVING TELETEXT MODE - Select the desired program with teletext. - Press the remote control TELETEXT ( ) button (A22) to select teletext mode. The initial page (or the last page viewed if you have already used teletext in the present channel) appears. - To return to TV mode, press again the TELETEXT ( ) button (A22). PAGE SELECTION - You can directly enter the 3 figure page number by using the remote control NUMBER 0...9 buttons (A3). - You can sequentially select teletext pages by pressing the remote control PAGE UP (A6) / DOWN (A21) buttons. - At the base of the screen a menu of coloured page links is available, showing either page numbers or a title with headings (eg Sport, News) in RED, GREEN, YELLOW or CYAN colour.

These pages can be accessed by using the corresponding coloured buttons (A11, A12, A26, A25) on the remote control. Once a request is made, the page number is shown in the extreme top left corner of the screen. @@@@In the extreme top left corner, instead of the page number, 'S. . . ' will be displayed. This is ready to accept the subpage number. - Enter directly the subpage number you want with the remote control NUMBER 0..

9 buttons (A3): for example to request the 2nd subpage, type 0002. - After a few seconds the subpage number is replaced by the page number in the header. You can press again SUBPAGE button (A10), to display the subpage number. - If the requested page is not immediately available the rolling header will be active until the page arrives. Warning: If the subpage is not available (does not exist), then the header will roll continuously and no new page will be found.

Note : Teletext specification allows for subpage numbers 0000 to 3979 (the first figure is limited to the range 0..3, and the third figure 0..7).

REVEAL ( ) button (A24): Press this button to reveal, on certain pages, hidden information such as the answer to a quiz. - Press the button again to hide the information. 14 TELETEXT FORMAT PICTURE & SOUND CONTROL Doubling character height Repeatedly pressing the HEIGHT ( ) button (A23) doubles the character height in the following order: Upper half of the page (UP) > Lower half of the page (DOWN) > Return to normal height. If the page is in UP or DOWN mode, then normal size is automatically set if : - A new page request is made (e.g. CYAN, INDEX or PAGE UP/DOWN). - CANCEL mode (A8) function is used. - VOLUME menu is activated the with the MENU button (A19). Note : The menu at the base of the screen is always visible Volume and brightness control in teletext mode VOLUME ( and sound MUTE), BRIGHTNESS controls are all possible in teletext. The BRIGHTNESS control are dedicated to the teletext display.



[You're reading an excerpt. Click here to read official DAEWOO DTB-21S7 user guide](http://yourpdfguides.com/dref/3404215)  
<http://yourpdfguides.com/dref/3404215>

- Access the **VOLUME** control by pressing the **MENU** button (A19) in teletext mode. A bargraph will appear in the lower part of the screen (as in TV mode). If **MUTE** is active a mute icon is also shown. - A second press on the **MENU** button (A19) will access the **BRIGHTNESS** control. - The active bargraph will timeout after 3-4 seconds (as in TV mode **VOLUME** control) or by pressing on the **MENU** button (A19) a third time after brightness control - Each control can be adjusted by using the remote control **CURSOR RIGHT** (A20) / **LEFT** (A7) buttons. - Mute can always be activated by pressing the **SOUND MUTE** button (A2). - Any change to the **VOLUME** level will cancel the **SOUND MUTE**. **WATCHING TV WHILE PAGE SEARCHING** The **CANCEL** function can be used to make the teletext page transparent, thus revealing the TV picture: - To enter cancel mode, press the **CANCEL** ( ) button (A8) while in teletext mode. The TV program will reappear on the screen, while only the teletext page number or the cancel icon remains at the top and left corner of the screen. - You can enter a new page number in this mode only by using the remote control **NUMBER 0**.  
..9 buttons (A3), or with the **INDEX** ( ) button (A18). - If a page has been requested, but has not yet arrived, cancel icon will be displayed until the page arrives. Once arrived the page number will be displayed.

- The teletext page can be made visible again by pressing the **CANCEL** ( ) button (A8). - It should be noted that the TV program cannot be changed while in cancel mode. **WATCHING TV WITH TELETEXT SUBTITLES** If the actual teletext page is a news flash or subtitle page, then most of the TV picture becomes visible. 15 DMP3902061 .



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3404215)

[DTB-21S7 user guide](http://yourpdfguides.com/dref/3404215)

<http://yourpdfguides.com/dref/3404215>