




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DTB-21U7 S. You'll find the answers to all your questions on the DAEWOO DTB-21U7 S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAEWOO DTB-21U7 S**  
**User guide DAEWOO DTB-21U7 S**  
**Operating instructions DAEWOO DTB-21U7 S**  
**Instructions for use DAEWOO DTB-21U7 S**  
**Instruction manual DAEWOO DTB-21U7 S**

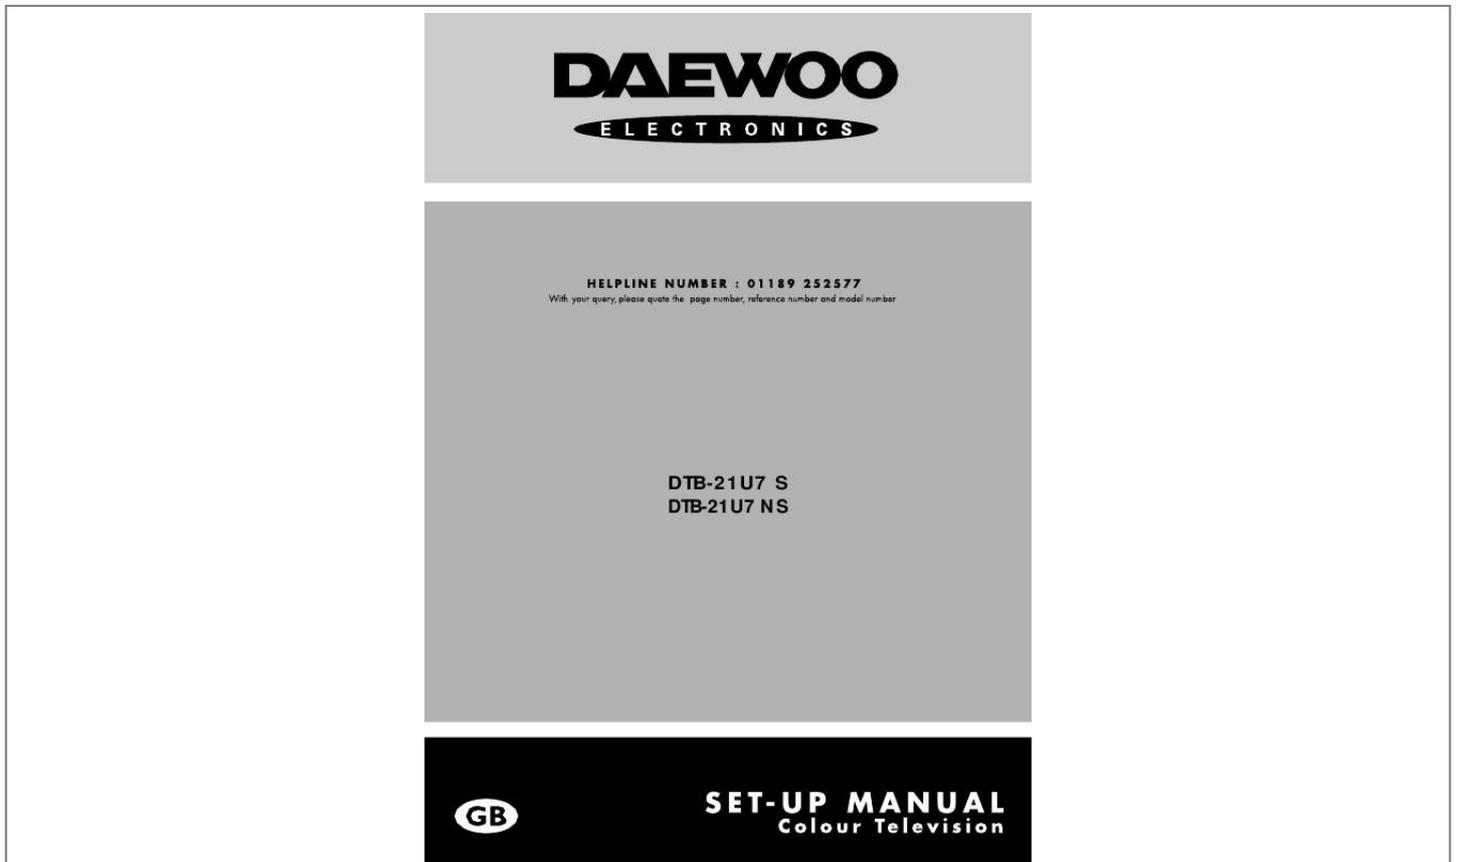

[You're reading an excerpt. Click here to read official DAEWOO DTB-21U7 S user guide](http://yourpdfguides.com/dref/3405497)  
<http://yourpdfguides.com/dref/3405497>

**Manual abstract:**

If a replacement plug is to be fitted, please observe the wiring code shown below. The wires in the mains lead are coloured in the accordance with the following code: Blue-neutral Brown-live As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. Do not make any connections to the terminal in the plug which is marked by the letter E by the safety earth symbol or coloured green or green and yellow.

**1 CONTENT  
REMOTE CONTROL & TV CONNECTIONS.....**

.....  
.....  
.....

.....  
.....  
.....

**.3 IMPORTANT SAFEGUARDS.....**

.....  
.....  
.....  
.....  
.....  
.....  
.....

**..4 INSTALLATION.....**

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

**....4 START UP.....**

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

**....5 CONNECTING EXTERNAL EQUIPMENT.**

.....  
.....  
.....  
.....  
.....

.....5 DAILY USE.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

....6 MENUS DESCRIPTION.

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

...8 TELETEXT.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

.11 2 REMOTE CONTROL & TV CONNECTIONS LOCAL CONTROL Front VIDEO L-AUDIO-R ON/OFF B1 B2 B3 B4 B5 B6 B7 B8 PR B9 B1 B2 B3 B4 B5 MAIN POWER button FRONT VIDEO INPUT socket FRONT AUDIO INPUT (L + R) socket HEADPHONE socket STAND-BY indicator B6 B7 B8 B9 REMOTE sensor TV / AV button VOLUME UP/DOWN buttons PROGRAM UP/DOWN buttons Rear ANT C3 C1 C2 AV1 AV2 C1 C2 C3 SCART 1 socket SCART 2 socket AERIAL jack ANT AV1 AV2 REMOTE CONTROL UNIT TV mode A1 A2 A3 A4 A5 A6 A7 A8 A9 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 A21 A22 A23 A24 A25 A26 POWER SOUND MUTE NUMBER 0..9 SLEEP TV / AV PROGRAM UP (CURSOR UP) VOLUME DOWN (CURSOR LEFT) . .

. SKIP MOVE 3D(SOUND EFFECT) MODE ZOOM RECALL NORMAL OK MENU VOLUME UP (CURSOR RIGHT) PROGRAM DOWN (CURSOR DOWN) TV > TELETEXT . . . DELETE A2 A1 A13 A3 A14 A15 A17 A4 A6 A5 A7 A16 A18 A19 A20 A21 A8 A9 A10 A11 A12 A22 A23 A24 A25 A26 TELETEXT mode A1 A2 A3 A4 A5 A6 A7 A8 A9 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 A21 A22 A23 A24 A25 A26 POWER SOUND MUTE NUMBER 0.

.9 . . PAGE UP VOLUME DOWN BRIGHT. DOWN CANCEL PAGE HOLD SUBPAGE RED GREEN . . . . INDEX MENU VOL.

/ BRIGHT. SELECTION VOLUME UP BRIGHT. UP PAGE DOWN TELETEXT > TV HEIGHT REVEAL CYAN YELLOW 3 IMPO RT A N T SA FEG U A RD S WATER AND MOISTURE Never install the set in the following places: In a wet basement, bathroom. Do not place any container with liquid on the set. HEAT Never place the set near heat sources. VENTILATION Do not cover the ventilations openings in the cabinet and never place the set in a confined space such as in a bookcase or built-in cabinet unless proper ventilation is provided. Leave a minimum 10 cm gap all around the unit. OBJECT ENTRY Do not insert foreign objects, such as needles and coins, in the ventilation openings. LIGHTNING STRIKING You should disconnect the set from the mains and the aerial system during thunderstorms. CLEANING Unplug the set from the mains during cleaning. AFTER MOVING THE SET If the set is moved or turned, the MAIN POWER button must be switched off for at least 15 minutes in order to take out colour patches on the screen. IN ST A LLAT IO N Batteries ANT AV1 AV2 Open remote control battery compartment (at the rear) and insert two 1.5V type AAA batteries. Warning: be careful to respect battery polarities. Insert the main plug into a 230V 50Hz AC power socket.

Connect aerial to aerial jack (C3). SWITCHING ON AND OFF VIDEO L-AUDIO-R ON/OFF Power on the TV set using front panel MAIN POWER button (B1). Select your preferred language from the LANGUAGE menu (see section START UP on page 5). Press the remote control MENU button (A19) to enter the main menu. Select Install menu to tune and memorise TV programs.

**4 START UP LANGUAGE MENU** The very first time that you turn on the TV, the LANGUAGE menu will appear on the screen. It's purpose is to select the language that will be used for all the OSD (On Screen Display) menus. The user must enter a choice of language before proceeding further. The language entered at this stage can still be modified at any later time, by entering the FEATURES menu (see later section under MENU DESCRIPTION). The descriptions used in the menu are those of the country code (e.g. GB = English, RUS = Russian etc). LANGUAGE PR CZ FIN N S D GB NL SLO DK GR PL E H R O F I RUS MENU Selection is made by use of the remote control CURSOR UP (A6) / CURSOR DOWN (A21) keys and CURSOR RIGHT (A20) / LEFT (A7) keys. Once you are satisfied with your selection, push the OK button (A18) to confirm your choice, after which the menu will disappear. The menu will never appear again.

**PR C O N N E C T I N G E X T E R N A L E Q U I P M E N T** The rear Scart 1 (C1), Scart 2 (C2) sockets and the front AV socket (B2) (B3) are three dedicated sockets to connect audio-video equipment. Rear ANT AV1 AV2 ANT AV1 AV2 REAR SCART 1 SOCKET (AV1) This socket (C1) has video / audio inputs and outputs It is recommended to connect to this socket automatic AV switching equipment such as pay-TV decoders, video games, DVD players and most VCR's.

In most cases, when connecting powered equipment to this socket, the TV set switches automatically to AV mode. If not, then use the TV/AV buttons (A5) or (B7) to select AV1. VCR / DVD / Video Game / Pay-TV decoder REAR SCART 2 SOCKET (AV2) This socket (C2) has video / audio inputs and outputs (Note : DTB-21U7 NS has no sound outputs and sound input is common with front socket AV3). Automatic AV switching equipment (for example most VCR's) can be connected to this socket. In most cases, when connecting powered equipment to this socket, the TV set switches automatically to AV mode. If not, then use the TV/AV buttons (A5) or (B7) to select AV2. You can also receive an S-VHS signal with REAR SCART2 socket, by selecting SVHS2 with the TV / AV buttons (A5) or (B7). Important: If your video equipment does not have SCART socket(s), or if you wish to use only the aerial (RF) connection (not recommended), then you should make use of PR 00 on the TV set for best performance.

**HEADPHONE SOCKET** To hear TV sound with headphones, insert a 3.5mm headphone plug into the headphone socket (B4). The speaker's sound will be automatically cut off. Front FRONT AV SOCKET (AV3) The front AV socket (B2) (B3) has audio and video inputs. To switch from TV to these inputs, use the TV / AV buttons (A5) or (B7) and select AV3.

**OR CAMCORDER VIDEO GAME** Note : DTB-21U7 NS, sound input is common with rear SCART2 socket (AV2). TV/AV SELECTION Allows to switch between TV and external modes. By repeatedly pressing the remote control TV / AV (A5) or the TV front panel TV / AV (B7) button, the onscreen display is changed as shown AV1 > AV2 > SVHS2 > AV3 > TV 5 DAILY USE SWITCHING ON TV SET 1) If stand-by indicator (B5) is red, then the TV set is in stand-by mode. You can switch on using the remote control POWER button (A1), the NUMBER 0..

..9 buttons (A3), or PROGRAM UP (A6) / DOWN (A21) buttons.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3405497)

[DTB-21U7 S user guide](http://yourpdfguides.com/dref/3405497)

<http://yourpdfguides.com/dref/3405497>

The front panel PROGRAM UP/DOWN buttons (B9) can also be used. Once on, the stand-by indicator turns to green and the picture appears on the screen. 2) If stand-by indicator (B5) is not lit, then the TV set is powered off. You must press the TV set front panel MAIN POWER button (B1). If a picture does not appear, then the stand-by indicator will be red. In this case, use the remote control as indicated in 1). 3) If stand-by indicator (B5) is flashing red, and green then the TV set is in child-lock mode.

It is necessary to use the remote control POWER button (A1), NUMBER 0...9 buttons (A3), or PROGRAM UP (A6) / DOWN (A21) buttons. The front panel PROGRAM UP/DOWN buttons (B9) will not function. Once on, the stand-by indicator turns to green and the picture appears on the screen. PR MENU PR SWITCHING OFF TV SET 1) Pressing the remote control POWER button (A1), you can switch off to stand-by mode (low power consumption mode) which also allows quick restart by remote control (see above: SWITCHING ON TV SET). 2) Pressing the TV set front panel MAIN POWER button (B1), you can completely power off the TV set. In this case, you must use the same front panel POWER button (B1) to switch on again (see above: SWITCHING ON TV SET).

Remark: If a broadcast signal is not present after 30 minutes, the TV set will be automatically turned to stand-by mode. PROGRAM SELECTION (FROM 0 TO 99) Direct selection Use the remote control NUMBER 0...

9 buttons (A3). For two digits program numbers, enter the second digit within 2 seconds. Up / Down selection Use the remote control PROGRAM UP (A6) / DOWN (A21) buttons or the TV set front panel PROGRAM UP / DOWN buttons (B9). SOUND CONTROL Volume adjustment Use the remote control VOLUME UP (A20) / DOWN (A7) buttons or the TV set front panel VOLUME UP / DOWN buttons (B8). MENU Mono forcing, dual language - If you are unable to get good sound quality for a program due to poor reception, you can force a change from stereo to mono transmission by pressing the remote control MODE button (A14).

Then the program status display indicates "MONO" (in red). - On the other hand, during a program with dual language transmission, the MODE button (A14) allows you to toggle between the first and second language. The program status display will indicate "DUAL 1" or "DUAL 2" (plus NICAM according to the received signal). - To return to initial state, press again the MODE button (A14). Mute Mute the sound by pressing the remote control SOUND MUTE button (A2). Then, logo is displayed. The previous sound setting is returned after pressing the same button a second time. Sound effects A SPATIAL sound effect is available, using the remote control 3D (A13) button. The following display appears: SPATIAL Spatial sound effect Sound transmission mode Clock To return to initial sound effect, press again the 3D (A13) button. The following display appears: STEREO 11:11 STEREO 11:11 OFF No sound effect Sound transmission mode Clock 6 PICTURE CONTROL You can select three pictures settings, by using the remote control NORMAL button (A17) : - Normal I (standard hard picture) - Normal II (standard soft picture) - Favourite For other adjustments: brightness, contrast, colour, sharpness, use the Picture menu.

If an NTSC signal is received, then a tint adjustment will also be available. PRO1 TF1 NORMAL I 11:11 PRO1 TF1 NORMAL II 11:11 PRO1 TF1 FAVOURITE 11:11 PROGRAM STATUS DISPLAY Channel number Clock PRO1 TF1 STEREO 11:11 Channel name Sound transmission Mode : Displayed in red colour only if forced to mono by MODE button (A14) Use the remote control RECALL button (A16) to display (for 4 seconds only) program status information. This display appears also after a program selection or after switching on the TV set. SLEEP FUNCTION The set will turn off (to stand-by mode) after a period of time that you can select. By repeated use of the remote control SLEEP button (A4), you can enter one of the following settings : OFF >20 min > 40 min >60 min >80 min >100 min >120 min >OFF. PRO1 TF1 STEREO SLEEP 18 Remaining time (minutes) before TV set switches off The SLEEP time remaining (before TV turn-off) can be seen again at parties: Using the remote control CURSOR LEFT (A7) or RIGHT (A20) buttons, you can choose between 2 user-definable set-ups: favourite 1, favourite 2 and 3 pre-defined equalizer set-ups: music, speech, normal. Selecting "favourite 1" allows you to adjust the five equalizer bars: 120Hz, 500Hz, 1500Hz, 5000Hz, 10KHz. The levels you select are automatically stored in "favourite 1". SOUND VOLUME BALANCE PRESET 120HZ 500HZ 1500HZ 5000HZ 10KHZ FAVOURITE 1 For DTB-21U7 NS Selecting "favourite 2" allows you to adjust bass and treble levels. The levels you select for bass and treble are automatically stored in "favourite2".

BASS and TREBLE controls are available. The levels that you select are automatically stored. SOUND VOLUME BALANCE PRESET BASS TREBLE FAVOURITE 2 VOLUME BASS TREBLE BALANCE SOUND 8 INSTALL MENU (For operating instructions, see "HOW TO USE THE SUB-MENUS ") Automatic tuning system Program list edition TV system modification Channel number Channel Frequency Channel name Program number Program storage number ATSS EDIT SYSTEM CHANNEL FREQUENCY NAME PROGRAM STORE TO INSTALL GB GB C47 679,25 ABCDE 00 00 Country TV system Channel number Channel Frequency Channel name Program number Program storage number Automatic Tuning System If you have a satellite decoder: If your decoder is connected to the TV set by the aerial jack (C3), you must power on the satellite decoder and tune Sky News before starting ATSS. ATSS = Automatic Tuning and Sorting System. To start the ATSS function: - Select "ATSS" function.

- Adjust to the required country. - Press and hold the OK button (A18) to start the automatic tuning. @@@@In the above case, the current program is PR00. The 3 previous, and 3 following programs, are always displayed. @@@@- Press the remote control YELLOW "Delete" button (A26). @@@@You can change an existing name, or enter a name where none exists. @@- Select the "name" function. @@@@- Repeat the last two instructions for other positions, as desired. @@@@Then, the program displayed on the screen is changed to the chosen system. Perform fine tuning - If you are unable to get a good picture or reasonable quality sound due to poor reception, it is possible to perform fine tuning. - Select the "frequency" function. - Press, for less than 2 seconds, the remote control CURSOR RIGHT(A20) [LEFT(A7)] buttons to perform up [down] fine tuning in steps of 0.05 MHz (50 kHz). Store program in memory - Select the "store to" function - Enter the program number you want to store to either by using the remote control CURSOR RIGHT (A20) / LEFT (A7) buttons, or directly by using the remote control NUMBER 0.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DTB-21U7 S user guide](#)

<http://yourpdfguides.com/dref/3405497>

..9 buttons (A3). - Press the OK button (A18) to confirm. Remarks: this function can also be used if you want to copy a program already memorised to another program number. FEATURES MENU (For operating instructions see " HOW TO USE THE SUB-MENU ") 1. Menus Language selection 2. Prevents the use of the TV set without remote control 3. TV clock setting This function allows user to enter the time manually. (Note that if you turn off the set with the main power button, the clock setting is lost but it is automatically set again at power on if prog.n°1 is a channel with teletext).

4. Wake up function This function is only available when the clock is set. The TV set turns on from stand-by at the WAKE time with the program entered on the WAKE PR line. Put the stand-by with the remote control POWER button. 1.

Select the desired language from the available country codes. 2. Adjust this value ON or OFF. When switched to ON: - In stand-by mode, the stand-by indicator flashes red and green to indicate the child lock is set. - The front panel TV buttons (B7, B8, B9) become inactive and the TV will only respond to the remote control.

3. Adjust TV clock. Clock will start upon entry of the 4th figure. 4. -Switch the "wake up" function ON/OFF with the remote control CURSOR LEFT (A7) /RIGHT (A20) buttons - Enter the wake up time with the remote control 0...9 NUMBER (A3) buttons 5. Adjust TV turn-on program number FEATURES LANGUAGE CHILD LOCK CLOCK WAKE TIME WAKE PR NR GB OFF 00 : 00 OFF 01 ON TV set on 6. NR is a picture noise reduction feature.

6. Adjust to be ON or OFF: -When ON, the NR feature is active for all programs (0 to 99). -When OFF, the function is inactive. VIDEO L-AUDIO-R ON/OFF 10 TELETEXT ENTERING/LEAVING TELETEXT MODE - Select the desired program with teletext. - Press the remote control TELETEXT button (A22) to select teletext mode. The initial page (or the last page viewed if you have already used teletext in the present channel) appears. - Option (DTB-21U7 S only): If you want to watch the TV program and use teletext at the same time, press the remote control teletext button (A22) again. Teletext will be displayed on the right half of the screen, and the whole TV picture will be compressed into left half of the screen (split screen operation). - To return to TV mode, press again the remote control TELETEXT button (A22). PAGE SELECTION - You can directly enter the 3 figure page number by using the remote control NUMBER 0.

..9 buttons (A3). - You can sequentially select teletext pages by pressing the remote control PAGE UP (A6) / DOWN (A21) buttons. - Sometimes a menu of page links is available at the base of the screen, showing either page numbers or page title headings (eg Sport, News) in red, green, yellow or cyan colour.

If these are available, the pages can be accessed by using the corresponding coloured buttons on the remote control. - While awaiting the arrival of a requested page, the page number (in the top left corner of the screen) will be highlighted in red. The rolling header will also be active. - Once the requested page arrives, the rolling header stops, and the requested page number returns to cyan. (Option) - In a TOP teletext transmission (most common in Germany, Austria, Switzerland), the menu of page links at the bottom of the screen will display "TOP" for the cyan link.

If this option is available, and you use the remote control CYAN (A25) button, a special teletext page will appear, with page titles sorted by themes (see adjacent diagram). You can then directly access pages according to the theme which interests you. Explanation of how to navigate inside this chart: - The list of the themes (blocks) appears on left side of the screen. - A list of the subsubjects (groups) appears on right side of the screen, relating to the left menu theme selection. - To select the block or group you want, use the remote control PAGE UP (A6) / PAGE DOWN (A21) keys and CURSOR RIGHT (A20) / LEFT (A7) keys. @@@@The letter before the page number in the teletext will change from "P" to "S" to indicate that the subpage function is active. - In place of the teletext clock, in the top right hand corner of the display, - - - - will appear in red. This is ready to accept the subpage number. - Enter directly the subpage number you want with the remote control NUMBER 0.

..9 buttons (A3): for example to request the 2nd page, type 0002. - The clock will then be replaced in the header. Once found, only the requested subpage will be displayed. - At any time, another subpage number can be entered with the remote control NUMBER 0...9 buttons (A3), and new figures displayed in place of the clock. - To exit subpage mode, press the SUBPAGE button (A10) again. The letter before the page number will change back from "S" to "P" again.

Warning: If the requested subpage does not exist, the rolling header will roll continuously, and no new page will be found. REVEAL ? button (A24): Press this button to reveal, on certain pages, hidden information such as the answer to a quiz. - Press the button again to hide the information. 11 TELETEXT FORMAT

PICTURE & SOUND CONTROL Doubling character height Repeatedly pressing the HEIGHT button (A23) doubles the character height in the following order : Upper half of the page (UP) > Lower half of the page (DOWN) > Return to normal height. Warning: In the TOP teletext menu (option), this control is inactive.

In certain situations, the UP to DOWN (or DOWN to UP) change is automatic. For example, requesting a new page will force a change to UP. Pressing the menu key for volume control (see below) will force a change to DOWN. Volume and brightness control in teletext mode Volume and brightness (of teletext) control are possible in teletext. - Volume change is always possible, but brightness control is only possible if teletext covers all of the screen (eg brightness is disabled when in split screen mode, or teletext is being used for subtitles) - Access the volume control by pressing the MENU button (A19) in teletext mode.

- A bargraph will appear at the base of the screen. A second press on the MENU button (A19) will access the brightness control (if available). - Then, the brightness or volume can be adjusted by using the remote control CURSOR RIGHT (A20) / LEFT (A7) buttons. Any change to the volume level will cancel the volume mute. - If volume mute is active, the volume bargraph indicator will flash. - Mute can be reactivated in teletext mode at any time by pressing the SOUND MUTE button (A2). WATCHING TV WHILE PAGE SEARCHING The CANCEL function can be used to 'hide' the teletext page, thus revealing the TV picture: - To enter cancel mode, press the CANCEL button (A8) while in teletext mode. The TV program will reappear on the screen, while only the teletext header remains at the top of the screen. - If you enter a new page number in this mode: the requested page number will be in red and the rolling header active.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3405497)

[DTB-21U7 S user guide](http://yourpdfguides.com/dref/3405497)

<http://yourpdfguides.com/dref/3405497>

*Once the page has arrived, the rolling header will stop, and the requested page number return to cyan.*

*- The teletext page can be replaced at any time by pressing the CANCEL button (A8) again. - It should be noted that the TV program cannot be changed while teletext is active, or in cancel mode. - CANCEL mode is not available when using split screen operation. 12 .*



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DTB-21U7 S user guide](#)

<http://yourpdfguides.com/dref/3405497>