




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DVR-06. You'll find the answers to all your questions on the DAEWOO DVR-06 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO DVR-06
User guide DAEWOO DVR-06
Operating instructions DAEWOO DVR-06
Instructions for use DAEWOO DVR-06
Instruction manual DAEWOO DVR-06

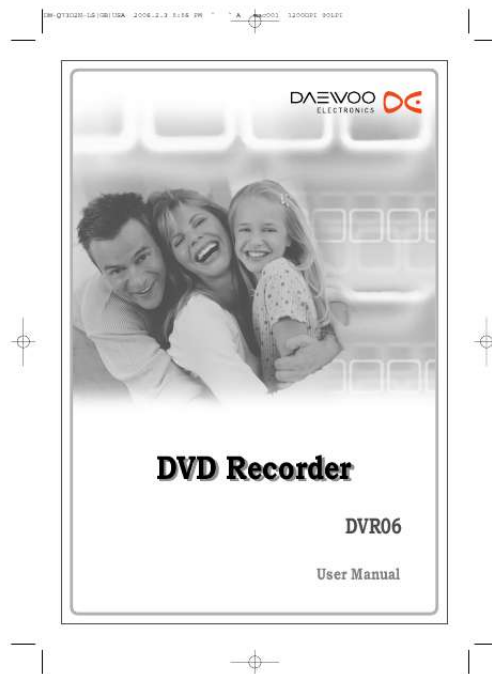

[You're reading an excerpt. Click here to read official DAEWOO
DVR-06 user guide
http://yourpdfguides.com/dref/3406209](http://yourpdfguides.com/dref/3406209)

Manual abstract:

@@@The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. CAUTION: This DVD Recorder employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the DVD Recorder require maintenance, contact an authorized service center. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM. CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus. FCC WARNING: This equipment may generate or use radio frequency energy.

Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made. i DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `ii mac001 1200DPI 90LPI Important Safeguards INTRODUCTION REGULATORY INFORMATION: FCC Part 15 This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the product is operated in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the product and receiver.

- Connect the product into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. FCC COMPLIANCE: The responsible party for this product's compliance is: GoVideo, 7835 East McClain Drive, Scottsdale, AZ 85260, USA. SERIAL NUMBER: The serial number is found on the back of the DVD Recorder. This number is for this unit only. You should record requested information here and retain this guide as a permanent record of your purchase. Model No. _____ Serial No. _____

IMPORTANT SAFETY INSTRUCTIONS CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE PRODUCT. RETAIN THIS MANUAL FOR FUTURE REFERENCE.

This product has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this product will protect you if you observe the following procedures for installation, use, and servicing. This product does not contain any parts that can be repaired by the user. DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY. 1 2 Read these instructions. All these safety and operating instructions should be read before the product is operated. 3 4 Heed all warnings. All warnings on the product and in the operating instructions should be adhered to.

Keep these instructions. The safety, operating and use instructions should be retained for future reference. Follow all instructions. All operating and use instructions should be followed. ii DW-Q73D2N-LS(GB)USA 2006.

2.3 5:56 PM `iii mac001 1200DPI 90LPI Important Safeguards 5 Do not use this product near water. For example: near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement; or near a swimming pool; and other areas located near water. 13 Unplug this product during lightning storms or 14 when unused for long periods of time. Refer all servicing to qualified service personnel.

Servicing is required when the product has been damaged in any way, such as: Power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the product; the product has been exposed to rain or moisture, does not operate normally, or has been dropped. Do not connect the product to the power supply if you have just moved it from a cold environment to a warm room. This can lead to condensation inside the product, which can damage it. Wait for approximately 2 hrs for it to reach room temperature. Make sure the product is placed at least 4 inches (10 cm) apart from other home appliances or obstacles to ensure sufficient ventilation. This product is designed to work continuously. Switching if off does not disconnect if from the power outlet. To disconnect if from the power outlet you have to unplug it. 6 7 Clean only with dry cloth. Unplug this product from the wall outlet before cleaning.

Do not use liquid cleaners. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 15 Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat. 9 Make sure that rating of your household electricity supply matches that shown on the back of your product. 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product. 11 Only use attachments/accessories specified by the manufacturer.

12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with apparatus. When a cart is used, use caution when moving the cart/ product combination to avoid injury from tip-over. 16 17 iii DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `i mac001 1200DPI 90LPI Table of Contents INTRODUCTION INTRODUCTION Important Safeguards _____ i Table of Contents _____

1 Overview	2 Identification of Controls	6
RECORDING Basic Recording	37 Recording from TV One Touch Record (OTR) Checking the Recording Time To Pause the Recording	37 38 38 38 CONNECTIONS Connecting Antenna/Cable
	11 Connecting a TV	
	12 Connecting an Amplifier/Receiver	13 Connecting Optional Equipment
	14	14
Connecting a Digital Camcorder	14 Timer Recording	39 Recording from an External Input
	41 DISC OPERATION Disc Initialize	43 Disc Operation in DVD±RW disc
	43	43
Disc Operation in DVD±R, DVD-RW disc	45 SETUP Initial Installation	15 Initial
Setup	17 Setup Menu Overview INSTALLATION Settings RECORDING OPTIONS Settings LANGUAGE Settings PREFERENCE / Video Settings PREFERENCE / Audio Settings PREFERENCE / Parental Controls Various PREFERENCE Settings System Information Restore Defaults	17 17 20 21 22 23 24 26 27 27 DISC EDIT Title Menu
	46 REFERENCE Troubleshooting	
	49 Technical Specifications	52 On-Screen Display Overview
	28	28
PLAYBACK DVD Playback	31 Other Disc Playback	35 1 DW-Q73D2N-LS(GB)USA
	2006.	



[You're reading an excerpt. Click here to read official DAEWOO
DVR-06 user guide](http://yourpdfguides.com/dref/3406209)
<http://yourpdfguides.com/dref/3406209>

2.3 5:56 PM 2 mac001 1200DPI 90LPI Overview DVD, DVD+R, DVD+RW? What is a DVD? DVD (Digital Versatile Disc) is a storage medium that combines the convenience of the compact disc with the latest digital video technology. DVD video uses modern MPEG2 data compression technology that enables an entire feature film to be stored on a single five inch disc. How good is the resolution of DVD compared with VHS? The razor-sharp digital images have more than 500 lines of resolution at 720 pixels per line. This is more than twice as high as VHS and even better than laser disc quality.

DVD picture quality is easily comparable to the digital masters produced in recording studios. What is a DVD+RW? DVD+ReWritable uses phase change media, the same technology on which rewritable CDs are based. A highperformance laser is used to change the reflective properties of the recording layer; this process can be repeated more than a thousand times. What is a DVD+R? Unlike a DVD+RW disc, a DVD+R (write-once DVD) can only be written to once. If it is not finalized after a recording, further recordings can be added to it. Old recordings can be deleted but they can no longer be overwritten. The deleted recordings (titles) are marked 'deleted title'. Before a DVD+R can be played in a DVD player, it must be finalized in the DVD Recorder. Once this process is complete, no further recordings can be added. What can I do with my DVD Recorder? Your DVD Recorder is a machine for recording and playing back digital video discs with two-way compatibility with the universal DVD video standard.

This means: · existing DVD video discs can be played on the recorder. · recordings made on your DVD Recorder can be played on other DVD video players and DVD-ROM drives. Dual Media Supporting Disc Recording Format Finalize After finalize other DVD playback Consumer Remark : ±RW / ±R ±Disc +

VR format -RW, -R, +R All disc can playback Does not need selection (recording format) A DVD Recorder that supports 'dual media' recording allows DVD+RW format recording (+VR) on either DVD-R, DVD-RW, DVD+R or DVD+RW media. Any editing feature that is available with the +RW logical format is available on any of the media types. This system allows the flexibility for the consumer to use any of the above media formats for recording in the same system. Since the +VR format is DVD-Video compatible, the consumer can take any disk recorded on this platform and should be capable of playing it back on the majority of DVD players on the market. 2 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM 3 mac001 1200DPI 90LPI Overview INTRODUCTION Regional code 1 ALL If the region number on the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc. To keep the surface clean Do not use volatile liquids, such as insecticide spray, near the unit.

Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface. 4 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM 5 mac001 1200DPI 90LPI Overview INTRODUCTION Cleaning the Unit To clean the cabinet Use a soft, dry cloth.

If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit. To obtain a clear picture The DVD Recorder is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.) For details, please contact your nearest dealer. Remote Control Operation Range Point the remote control at the remote sensor and press the buttons. Distance: Within 23 ft (7 m) of the remote sensor. Angle: Within 30° in each direction of the remote sensor. Remote Control Battery Installation Detach the battery cover on the rear of the remote control, and insert two AAA batteries. Make sure the polarities (+ and -) are aligned correctly. Caution Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

AAA AAA Notes on Discs Handling Discs Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface.

Do not stick paper or tape on the disc. Storing Discs After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car. Cleaning Discs Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center outward. Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records. Yes No About

Symbols About the Symbol ` may appear on the TV screen during operation.

This icon means the function explained in this User's Guide is not available on that specific disc. 5 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM 6 mac001 1200DPI 90LPI Identification of Controls Front Panel % ^ & * () ! @ # \$! 2 ! POWER (STANDBY/ON) Turns the DVD Recorder on and off. @ Disc Tray (DVD deck) Insert a disc here.

Front Panel Display Shows the current status of the DVD Recorder. \$ CH+/- Scans up or down through memorized channels. Also moves up and down in DVD navigation menus. % OPEN/CLOSE Opens or closes the disc tray. ^ REC Starts recording.

Press repeatedly to set the recording time. & PLAY/PAUSE Starts playback of a disc. Pauses playback or recording temporarily. * STOP Stops playback. (PREV Skips to previous chapter.) NEXT Skips to next chapter. 1 LINE1 (VIDEO, L-AUDIO-R) Connects to the audio/video output of an external source (VCR, Camcorder, etc.). 2 DV IN Connects to the DV output of an external source (VCR, Camcorder, etc.).

6 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM 7 mac001 1200DPI 90LPI Identification of Controls INTRODUCTION Front Panel Display Channel CH23 Input mode TV Channel C123 CATV Channel AW-1 DW AV1 input DV input AW-2 AV2 input Recording on disc 11:15 11:15 RECP Others Indicates a DVD Timer recording is set. Indicates the DVD is recording. Recording Pause mode 11:15 0:30 Indicates a DVD Timer Recording is in standby mode. OTR Recording mode SAFE TW I-S Indicates when the DVD Recorder is locked. Indicates the DVD Recorder is in TV mode (set by [TV/DVD] button). Indicates when the DVD Recorder+ VCR is outputting the video signal in Interlaced Scan mode. Indicates the dts title is playing. P-S Indicates when the DVD Recorder+ VCR is outputting the video signal in Progressive Scan mode.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3406209)

[DVR-06 user guide](http://yourpdfguides.com/dref/3406209)

<http://yourpdfguides.com/dref/3406209>

7 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM 8 mac001 1200DPI 90LPI Identification of Controls Remote Control Turns the DVD Recorder on and off. Opens and closes the disc tray in DVD mode. Mutes the sound.

Progressive scan mode Switches the DVD Recorder input to TV tuner, Line 1, Line 2, or DV. - Selects numbered options in menus. - Selects TV channels. - Manually adjusts tracking. Displays "Disc Info" when inserting recordable disc.

Accesses DVD disc menus. Displays or exits the Setup menu. Displays the Timer Recording menu. Displays information about the currently loaded disc or TV channel. - oe ... : Selects menu options. - CH(+/-) : Selects channels. Confirms menu selections.

Starts recording. Press repeatedly to set the recording time. For more details, Refer to One Touch Record (OTR) on page 39. Selects Recording mode: - Approx 1 Hour (HQ mode), 2 Hours (SP mode), 4 Hours (EP mode), 8 Hours (SEP mode) Selects a subtitle language, if available. Selects an audio language (DVD), audio channel (CD) or audio type (TV). - Starts playback. - Pauses playback or recording temporarily. Press again to exit Pause mode. Searches backward/forward. Stops playback or recording.

8 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM 9 mac001 1200DPI 90LPI Identification of Controls INTRODUCTION Skips to the next or previous chapter/track. Displays the edit menu for DVD+RW/+R discs or sets a chapter marker. Enlarges the DVD video image.

Increases or decreases the slow motion speed when playing a DVD. Displays the finalize menu for DVD+R discs. Displays the digest menu for DVD+RW/+R discs. Displays a disc's Title menu, if available. Selects a DVD camera angle, if available.

Switches between the DVD Recorder tuner and your TV tuner. Repeats the current chapter, track, title or the entire disc. Repeats playback between two points (A and B). Virtual sound effect on and off. 9 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM 10 mac001 1200DPI 90LPI Identification of Controls Rear panel

!@ # \$ % ^ & * (! RF OUT (TO TV) Connect to a TV with an RF coaxial input. @ RF IN (FROM ANT.) Connect to your antenna or cable TV outlet. # AV OUT (VIDEO, L-AUDIO-R) Connect to a TV with video and audio inputs.

\$ LINE2 (VIDEO, L-AUDIO-R) Connect to the audio/video outputs of an external source (VCR, Camcorder, etc.). % AUDIO OUT (L-AUDIO-R) Connect to other equipment with audio inputs. Caution ^ COMPONENT/PROGRESSIVE VIDEO OUT (Y Pb Pr) Connect to a TV with Component Video (Y Pb Pr) inputs. & COAXIAL (Digital Audio Out) Connect to an amplifier with a coaxial digital audio input. * S-VIDEO OUT Connect to a TV with an S-Video Input. (AC Power Cord Plug into a power outlet. Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the DVD Recorder. 10 DW-Q73D2N-LS(GB)USA 2006.

2.3 5:56 PM 11 mac001 1200DPI 90LPI Connections INTRODUCTION · There are a variety of ways to connect the DVD Recorder to your TV and other equipment. Use only one of the connections described below. Whichever TV connection you use will work with all input sources. · Please refer to the manuals for your TV, VCR, stereo system, or other devices as necessary to make the best connections.

· For better sound reproduction, connect the DVD Recorder's AUDIO OUT jacks to the audio in jacks of your amplifier, receiver, stereo, or audio/video equipment. See 'Connecting an Amplifier/Receiver' on page 13. CONNECTIONS Caution · Make sure the DVD Recorder is connected directly to the TV, and the TV is set to the correct video input. · Do not connect the DVD Recorder's AUDIO OUT jack to the phono in jack (record deck) of your audio system. · Do not connect the DVD Recorder via your VCR.

The DVD image could be distorted by the copy protection system. Connecting Antenna/Cable 1 2 Disconnect the antenna/cable from the rear of your TV. Connect this cable to the jack marked ANT IN (FROM ANT.) on the rear panel of the DVD Recorder. Antenna Antenna Cable TV Wall Jack Flat Wire (300 ohm) 300/75 ohm Adaptor (Not supplied) OR OR Rear of DVD Recorder Cable Service Without Cable Box If your cable wire is connected to your TV without a converter or descrambler box, unscrew the wire from your TV and attach it to the ANT IN (FROM ANT.) jack on the rear panel of the DVD Recorder. Use the supplied coaxial cable to connect between the DVD Recorder's OUT (TO TV) jack and the antenna input jack on your TV. With this connection, you can receive Cable TV all midband, superband, and hyperband channels (all Wall Jack Back Panel of cable channels). Typical Cable Box Cable Service With Cable Box If a cable box is required in your cable system, follow the instructions shown at right. This hookup permits both TV and DVD Recorder operation.

To view or record a CATV channel: 1 2 3 Tune the TV to the correct video input channel. Rear of DVD Recorder Set the DVD Recorder to the output channel of the cable box using the [CH .../] or the [0-9] buttons on your DVD Recorder (e.g., CH3). Select the channel you wish to view on the cable box. If you are using a cable box to tune channels, it is not necessary to run Auto Channel Search as indicated on page 18. 11 DW-Q73D2N-LS(GB)USA 2006.

2.3 5:56 PM 12 mac001 1200DPI 90LPI Connections Connecting a TV Choose one of the following TV connections, depending on the capabilities of your equipment. All video signals are available from all video outputs. That means that whichever TV connection you use, it will work with all input sources, including VHS out of the Component/Progressive Video Output. RF Coaxial Connection Connect the RF OUT (TO TV) jack on the DVD Recorder to the antenna in jack on your TV using the supplied coaxial cable (R).

If you use this connection, tune your TV to the DVD Recorder's RF output channel (CH 3 or 4). Rear of TV ANTENNA INPUT AUDIO INPUT VIDEO INPUT COMPONENT/PROGRESSIVE VIDEO INPUT S-VIDEO INPUT L R Pr Pb Y R A V C S How to set the DVD Recorder's RF output channel Press [SETUP] and select Installation Modulator Out to change the RF out channel. For details refer to page 18. Audio/Video Connection 1 Connect the VIDEO OUT jack on the DVD 2 Recorder to the video in jack on your TV Rear of DVD Recorder using the supplied video cable (V). Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the left/right audio in jacks on your TV using the supplied audio cables (A).

S-Video Connection 1 Connect the S-VIDEO OUT jack on the DVD Recorder to the S-Video in jack on your TV using an S-Video 2 cable (S). Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the left/right audio in jacks on your TV using the supplied audio cables (A). Component Video Connection 1 Connect the COMPONENT/PROGRESSIVE VIDEO OUT jacks on the DVD Recorder to the corresponding input 2 jacks on your TV using a Y Pb Pr cable (C) if the Component Video jacks (Y, Pb, Pr) are available on your TV.



[You're reading an excerpt. Click here to read official DAEWOO
DVR-06 user guide
http://yourpdfguides.com/dref/3406209](http://yourpdfguides.com/dref/3406209)

Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the left/right audio in jacks on your TV using the supplied audio cables (A). Progressive Scan Connection · If your television is a high-definition or 'digital ready' television, you may take advantage of the DVD Recorder's Progressive Scan output for the highest video resolution possible. · If your TV does not accept the Progressive Scan format, the picture will appear scrambled. 1 2 Connect the COMPONENT/PROGRESSIVE VIDEO OUT jacks on the DVD Recorder to the corresponding in jacks on your TV using an optional Y Pb Pr cable (C). Connect the Left and Right AUDIO OUT jacks from the DVD Recorder to the left/right audio in jacks on your TV using the supplied audio cables (A). · Be sure to set the DVD Recorder to Progressive Scan mode by pressing and holding [P.SCAN] for 3 seconds (or changing the Scan Mode in the Setup Menu; see page 21).

· Progressive Scan does not work with the RF, Audio/Video or S-Video connections. 12 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `13 mac001 1200DPI 90LPI Connections Connecting an Amplifier/Receiver Connecting to an amplifier equipped with two channel analog stereo or Dolby Pro Logic II/Pro Logic Connect the Left and Right AUDIO OUT jacks on the DVD Recorder to the left and right audio in jacks on your amplifier, receiver, or stereo system, using the supplied audio cables (A). Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/Video receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2, or DTS) CONNECTIONS 1 2 Connect the DVD Recorder's DIGITAL AUDIO OUT jack (COAXIAL X) to the corresponding in jack on your amplifier. Use an optional digital coaxial audio cable. You will need to activate the DVD Recorder's digital output; see AUDIO Settings `on page 22. Digital Multi-Channel Sound? A digital multi-channel connection provides the best sound quality. For this you need a multi-channel audio/video receiver that supports one or more of the audio formats supported by your DVD Recorder (MPEG 2, Dolby Digital, and DTS). Check the receiver manual and the logos on the front of the receiver.

· Due to the DTS Licensing agreement, the digital output will be in DTS digital out when DTS audio stream is selected. · If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all. · 5.1 channel digital surround sound via the digital connection can only be obtained if your receiver is equipped with a digital multi-channel decoder. · To see the audio format of the current DVD on the on-screen display, press [AUDIO].

The DVD Recorder does not perform internal (2- channel) decoding of DTS sound tracks. To enjoy DTS multi-channel surround, you must connect the DVD Recorder to a DTS compatible receiver via one of the DVD Recorder's digital audio outputs. Rear of DVD Recorder A X L R COAXIAL DIGITAL INPUT AUDIO INPUT Amplifier (Receiver) 13 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `14 mac001 1200DPI 90LPI Connections Connecting Optional Equipment To receive audio/video signals from other equipment, connect the LINE1 or LINE2 jacks on the DVD Recorder to the audio/video out jacks on your external component, using optional audio/video cables.

Rear of DVD Recorder Front of DVD Recorder Connecting a Digital Camcorder Using the front panel DV IN jack, it is possible to connect a DV digital camcorder, video deck or DVD+R/RW recorder and digitally transfer DV tapes or DVD+R/RW discs to DVD+R/RW. Use a DV cable (not supplied) to connect the DV In/Out jack of your DV camcorder/video deck to the front panel DV IN jack of the DVD Recorder. This jack is for connection to DV equipment only. It is not compatible with digital satellite tuners or D-VHS video decks. DV IN/OUT DV IN Front of DVD Recorder 14 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `15 mac001 1200DPI 90LPI Initial Installation Initial Installation After successfully connecting your DVD Recorder to your TV and other devices, this chapter will show you how to complete the initial installation. You must follow the initial installation process to set the time, date, channels, and language preferences for the DVD Recorder. CONNECTIONS 1 A Initial Setup Wizard `is displayed on the screen. Make sure the RF cable from your antenna or cable TV jack is connected.

Initial Setup Wizard Before using your recorder Please complete this setup Next Setup - Exit 1/8 2 Select the desired language for the on-screen menu using [.../]. Press [ENTER] to confirm. OSD Language Setting 2/8 SETUP English Spanish French Back Enter - Confirm Setup - Exit Move ... 3 Select the desired disc menu language using [..

./]. Press [ENTER] to confirm. Disc Menu Language Setting 3/8 Default English Spanish Back Enter - Confirm Setup - Exit Move ..

. 4 Select the desired disc playback audio language using [.../].

Press [ENTER] to confirm. Audio Language Setting 4/8 Default English Spanish Back Enter - Confirm Setup - Exit Move ... 5 Select the desired disc playback subtitle language using [.../]. Press [ENTER] to confirm. Subtitle Language Setting 5/8 Off English Spanish Back Enter - Confirm Setup - Exit Move .

.. 6 Select the desired signal type using [.../]. Press [ENTER] to confirm. TV/CATV TV CATV Auto Detect Back Enter - Confirm Setup - Exit Move 6/8 ... 15 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `16 mac001 1200DPI 90LPI Initial Installation 7 The DVD Recorder detects channels automatically and stores them in memory. Auto Scan 7/8 TV 20/69 Back Setup - Exit Cancel 8 9 After finishing Auto Channel Search, set the clock. Use [oe/] to move left/right and use [

../] to change the settings. Clock Setting ..

. 2005 / 1 / 1 8/8 12 : 00 AM Back 10 After setting the clock, press [ENTER] to confirm. If you cancel the process during Initial Installation, you should repeat this procedure. Enter - Confirm Setup - Exit Move ... 16 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `17 mac001 1200DPI 90LPI Initial Setup Setup Menu Overview The DVD Recorder Setup menu includes four categories, including: Initial Setup, Disc Operation, Disc Edit and Timer Recording. Press [SETUP], [oe/] and [ENTER] on the remote control to view the first and second levels of the Setup menu.

1. Initial Setup Screen go to page 17~27. 2. Disc Operation Screen go to page 43~45. DVD Recorder Init Setup © Init Setup oe Select Init Setup Disc Oper Disc Edit Timer REC DVD Recorder Init Setup © Disc Operation oe Select Init Setup Disc Oper Disc Edit Timer REC 3. Disc Edit Screen go to page 46~48. DVD Recorder Init Setup © Disc Edit oe Select Init Setup Disc Oper Disc Edit Timer REC 4.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DVR-06 user guide](#)

<http://yourpdfguides.com/dref/3406209>

Timer Recording Screen go to page 39~40. DVD Recorder Init Setup © Timer REC oe Select Init Setup Disc Oper Disc Edit Timer REC SETUP
INSTALLATION Settings Tuning Band 1 Press [SETUP]. The Setup menu appears.

While Init Setup `is selected, press [ENTER] to go to the initial setup page. - - Installation Page - TV/CATV Auto Scan CH Add/Del Modulator Out Clock
Setting TV · CATV 2 3 4 5 Use [oe/] to select Installation Page While Installation Page TV/CATV : ` is selected, press [] to select oe ..

. Choose ENTER OK SETUP Exit Press [] to move to the second level. Use [...
/] to select TV or CATV, then press [ENTER]. TV: If you are using a standard antenna to receive channels. CATV: If you are using basic cable to receive
channels. If you are receiving channels from a cable box or satellite receiver connected to the LINE1 or LINE2 inputs, there is no need to set Tuning Band or
search for channels. Set the DVD Recorder to its LINE1 or LINE 2 input and select the desired channel on your cable box or satellite receiver. 17 DW-
Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `18 mac001 1200DPI 90LPI Initial Setup Auto Channel Search The DVD Recorder has a frequency synthesized
tuner capable of receiving up to 181 channels. These include VHF channels 2-13, UHF channels 14-69 and CATV channels 1-125. - - Installation Page -
TV/CATV · Auto Scan CH Add/Del Modulator Out Clock Setting Preparation: Connect the DVD Recorder to the desired type of antenna or cable TV system,
as shown in `Connecting Antenna/Cable ` on page 11.

oe ... Choose ENTER OK SETUP Exit CATV 113/125 1 2 3 Follow steps 1-2 as shown under Tuning Band. While Installation Page `is selected, press [.../] to
select `Auto Scan ` Auto Scan Cancel Please wait.

. Press [ENTER] to begin the channel search. The tuner will automatically search for all available channels in your area and place them in the tuner's
memory. After Auto Channel Search is complete, follow the instructions above to make sure that Tuning Band is set correctly (TV or CATV). Add/Remove
Channels This feature allows you to manually add or delete channels from your channel list.

- - Installation Page - TV/CATV Auto Scan · CH Add/Del Modulator Out Clock Setting 1 2 3 4 5 Follow steps 1-2 as shown under Tuning Band. Use [.../] to
select `CH Add/Del `

Press [ENTER]. The Channel Add/Delete menu appears. oe ... Choose ENTER OK SETUP Exit Use [CH+/-] or [0-9] to select a channel then toggle the
add/delete selection by pressing [oe/]. Press [SETUP] to exit the Channel Add/Delete menu. CH Add/Del oe Confirm Delete CH + ENTER Exit CH Select
OK Modulator Out This feature allows you to set the RF Output channel to your TV (you only need to set this if you are using the RF Out connection to your
TV). - - Installation Page - TV/CATV Auto Scan CH Add/Del · Modulator Out Clock Setting 1 2 3 4 5 Follow steps 1-2 as shown under Tuning Band. Use [.

../] to select Modulator Out ` Press [] to move to the second level. · CH3 CH4 oe ... Choose ENTER OK SETUP Exit Use [...
/] to set the Modulator Out channel to `CH3' or `CH4'. Press [ENTER] to confirm. 18 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `19 mac001 1200DPI
90LPI Initial Setup Set Clock 1 Follow steps 1-2 as shown under Tuning Band.

2 Use [.../] to select `Set Clock ` 3 Press [ENTER].

The Set Clock menu appears. 4 Enter the date and time. oe / (left/right): Moves the cursor to the previous or next column. .../ (up/down): Changes the setting
at the current cursor position. - - Installation Page - TV/CATV Auto Scan CH Add/Del Modulator Out · Clock Setting oe ...

Choose ENTER OK SETUP Exit 5 Press [ENTER] to confirm your setting, then press [SETUP] to exit the Setup menu. Clock Setting ... 2005 1 1 2 42 AM
SETUP 19 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `20 mac001 1200DPI 90LPI Initial Setup RECORDING OPTIONS Settings DVD Record Quality
You can set the default DVD recording quality to: HQ (High Quality - 1 hr/disc), SP (Standard Quality - 2 hrs/disc), EP (Extended Play - 4 hrs/disc) or SEP
(Very Low Quality - 8 hrs/disc). - - Record Options Page - DVD Quality Chapter Mark · HQ SP EP SEP 1 Press [SETUP]. The Setup menu appears. While
Init Setup `is selected, press [ENTER] to go to the initial setup page.

oe ... Choose ENTER OK SETUP Exit 2 3 4 5 6 Use [oe/] to select Record Options Page While Record Options Page ` is selected, press [] to select DVD
Quality `

Press [] to move to the second level. Use [.../] to select the desired Record Quality (HQ, SP, EP or SEP).

Press [ENTER] to confirm your selection, then press [SETUP] to exit the menu. Auto Chapter During recording, chapter markers are added automatically at
fixed intervals. You can set this interval to 5 Min, 10 Min or 15 Min. But when you set DVD Record quality "SEP", Auto Chapter interval could be set only 10
Min' or 15 Min'. To turn off automatic chapter marking, select `Off ` Follow the same procedure as the DVD Record Quality. - - Record Options Page -
DVD Quality · Chapter Mark Off · 5Min 10Min 15Min oe ... Choose ENTER OK SETUP Exit 20 DW-Q73D2N-LS(GB)USA 2006.

2.3 5:56 PM `21 mac001 1200DPI 90LPI Initial Setup LANGUAGE Settings OSD Language Select a language for the DVD Recorder Setup menu and on-
screen displays. - - Languages Page - OSD Lang Menu Lang Subtitle Lang Audio Lang · English Français Espanol 1 Press [SETUP]. The Setup menu
appears. While Init Setup `is selected, press [ENTER] to go to the initial setup page. 2 3 4 5 6 Use [oe] and [] to select Languages Page ` oe ... Choose
ENTER OK SETUP Exit While Language `is selected, press [] to select `OSD Lang `

Press [] to move to the second level. Use [.../] to select the desired language.

SETUP Press [ENTER] to confirm your selection, then press [SETUP] to exit the menu. Menu/Subtitle/Audio Language Select your preferred language for
Disc Menus, Subtitles, and Audio soundtracks. - - Languages Page - OSD Lang · Menu Lang Subtitle Lang Audio Lang · Default English Spanish French
Italian Japanese Chinese ENTER Default : The disc's default language is selected. Follow the same procedure as the OSD Language. oe .

.. Choose OK SETUP Exit - - Languages Page - OSD Lang Menu Lang · Subtitle Lang Audio Lang · Off English Spanish French Italian Japanese Chinese
ENTER oe ... Choose OK SETUP Exit - - Languages Page - OSD Lang Menu Lang Subtitle Lang · Audio Lang · Default English Spanish French Italian
Japanese Chinese ENTER oe ... Choose OK SETUP Exit 21 DW-Q73D2N-LS(GB)USA 2006.



[You're reading an excerpt. Click here to read official DAEWOO
DVR-06 user guide
http://yourpdfguides.com/dref/3406209](http://yourpdfguides.com/dref/3406209)

3 5:56 PM `22 mac001 1200DPI 90LPI Initial Setup PREFERENCE / Video Settings 1 Press [SETUP]. The Setup menu appears. -- Preference Page -- While Init Setup `is selected, press [ENTER] to go to the initial setup page. 2 3 4 Use [oe/] to select Preference Page While Preference Page ` Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD ` TV Aspect Scan Mode 4:3 PS Interlace `is selected, press [] to select Video ` oe ... Choose ENTER OK SETUP Exit Press []. The Video `submenu is displayed.

TV Aspect Ratio 1 Use [.../] to select TV Aspect `while the Video `submenu is displayed. -- Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD TV Aspect Scan Mode ` 4:3 LB 4:3 PS 16:9 2 3 4 5 Press [] to go to the second level.

Use [.../] to select the desired TV Aspect. Press [ENTER] to confirm your selection.

Press [SETUP] to exit the menu. oe ... Choose ENTER OK SETUP Exit 4:3 LB : Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture. 4:3 PS : Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Both sides of the picture are cut off. 16:9 : Select when a 16:9 wide screen TV is connected.

Scan Mode Progressive Scan Video provides the highest picture quality with reduced flickering. · If you are using the COMPONENT/PROGRESSIVE VIDEO OUT jacks, but are connecting the DVD Recorder to a standard (analog) television, set Scan Mode to Interlace. · If you are using the COMPONENT/PROGRESSIVE VIDEO OUT jacks for connection to a TV or monitor that is compatible with a Progressive Scan signal, set Scan Mode to Progressive. Follow the same procedure as TV Aspect Ratio to change the Scan Mode. Caution Once the Progressive Scan setting is entered, an image will only be visible on a Progressive Scan compatible TV or monitor. -- Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD TV Aspect Scan Mode ` Interlace Progressive oe ... Choose ENTER OK SETUP Exit 22 DW-Q73D2N-LS(GB)USA 2006.2.

3 5:56 PM `23 mac001 1200DPI 90LPI Initial Setup PREFERENCE / Audio Settings Follow the same procedure as Video Settings to select Audio Settings. - Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD ` Digital Output Dynamic V SURR Bitstream Off Off oe ... Choose ENTER OK SETUP Exit Digital Output 1 Use [

../] to select Digital Output `while the Audio submenu is displayed. -- Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD Digital Output Dynamic V SURR ` Bitstream LPCM 2 3 4 5 Press [] to go to the second level. Use [

../] to select the desired digital output type. Press [ENTER] to confirm your selection. SETUP oe ... Choose ENTER OK SETUP Exit Press [SETUP] to exit the menu. LPCM Select when connected to a 2 channel digital stereo amplifier. The DVD Recorder's digital audio signal will be output in the PCM 2ch format when you play a DVD recorded with a Dolby Digital (only for DVD) or MPEG soundtrack.

If the DVD is recorded with a DTS sound track then no sound will be heard. Bitstream Select when connected to a Dolby Digital or DTS decoder (or an amplifier or other equipment with a Dolby Digital or DTS decoder). Dynamic Range While watching DVD movies, you may wish to compress the dynamic range of the audio output (the difference between the loudest and quietest passages). This allows you to listen to a movie at a lower volume without losing clarity of sound. Set `Dynamic `to Low or High for this effect. Follow the same procedure as Digital Output `to set the Dynamic Range. -- Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD Digital Output Dynamic V SURR ` Off Low High oe ... Choose ENTER OK SETUP Exit Virtual Surround You can enjoy a simulated 3D effect from two speakers by setting ` V SURR (Virtual Surround)' to On.

Follow the same procedure as Digital Output `to set the Virtual Surround option. -- Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD Digital Output Dynamic V SURR ` Off On oe ... Choose ENTER OK SETUP Exit 23 DW-Q73D2N-LS(GB)USA 2006.

2.3 5:56 PM `24 mac001 1200DPI 90LPI Initial Setup PREFERENCE / Parental Controls Set Parental Level The Parental Controls feature allows you to prevent DVDs from being played based on their ratings or to have certain discs played with alternative scenes. You can set the parental level from 1 to 8. 1 2 3 Press [SETUP]. The Setup menu appears.

While Init Setup `is selected, press [ENTER] to go to the initial setup page. Use [oe/] to select Preference Page While Preference Page Ctrl ` : -- Preference Page - Video Audio `Parental Ctrl Auto Clock AutoPlay YourDVD Parental Password 8 ADULT `is selected, press [] to select Parental oe ... Choose ENTER OK SETUP Exit 4 Press [] to select Parental ` Then press [] again to change parental level. -- Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD ` Parental Password 8 ADULT oe ..

. Choose ENTER OK SETUP Exit 5 Use [.../] to select the desired parental level and press [ENTER] to confirm. -- Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD 8 ADULT ` 7 6 5 4 3 2 1 KID SAFE OFF SETUP Off : If you select Unlock, the Lock feature is not active. All discs will play in full. Parental Password Level 1 to 8 : Some discs contain scenes not suitable for children. If you set a rating for the DVD Recorder, all scenes with the same rating or Choose OK Exit lower will be played. Higher rated scenes will not be played unless an alternative scene is available on the disc.

The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc. oe ..

. ENTER 6 The Password Input dialog will appear. Enter a 4-digit password using the [0-9] buttons. If this is the first time you have entered a password, you will be prompted to enter the password again to confirm it. The initial password is `3308 `

You must enter this password before you can change the Parental Level. Input Password Password OK Input digits Select Cancel ENTER 0-9 oe ... OK 7 8 After setting the password, press [ENTER] while 'Set Parental Level' is displayed. Press [ENTER] to confirm your rating selection, then press [SETUP] to exit the menu. -- Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD ` Parental Password 7 oe ... Choose ENTER OK SETUP Exit 24 DW-Q73D2N-LS(GB)USA 2006.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3406209)

[DVR-06 user guide](http://yourpdfguides.com/dref/3406209)

<http://yourpdfguides.com/dref/3406209>

2.3 5:56 PM `25 mac001 1200DPI 90LPI Initial Setup Change Password 1 While Preference Page Ctrl : ` is selected, press [] to select Parental - - Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD Parental - Password Change oe ... Choose ENTER OK SETUP Exit 2 Select Password ` then press [] to select Change : - - Preference Page - Video Audio Parental Ctrl Auto Clock AutoPlay YourDVD Parental Password - Change SETUP oe ... Choose ENTER OK SETUP Exit 3 4 Press [ENTER].

The Input Password submenu appears. Enter your current 4-digit password then press [ENTER]. Enter a new 4-digit password, then press [ENTER]. Re-enter the new password to confirm, press [ENTER]. · Master Password : If you forget your password, press 3,3,0,8 on the remote control and then press [ENTER].

@@Press [] to go to the second level. Use [.../] to set the Auto Clock Status to On or Off.

@@Press [] to go to the second level. Use [.../] to set the AutoPlay Status to On or Off. @@Press [] to go to the second level. Use [.../] to set the YourDVD Status to On or Off.

@@Use [oe/] to select Restore Defaults Page Press [ENTER]. The Initialize menu will appear. Use the [...oe] buttons to select OK `and press [ENTER].

@@@The on-screen display appears on the TV screen. Use [oe] to select the desired icon on the on-screen display. Press [ENTER] to display a submenu. Use [

...] to change the numbers. @@@@Cable channels are numbered 1 through 125. 30 DW-Q73D2N-LS(GB)USA 2006.

2.3 5:56 PM `31 mac001 1200DPI 90LPI DVD Playback Before You Begin 1 2 Press the [DVD] button to set the remote control to operate the DVD deck.

Turn the TV on and select the video input source connected to the DVD Recorder. Audio system: Turn the audio system on and select the input source connected to the DVD Recorder. DVD Selected Actions are now for DVD 1 Stop Playing a DVD 1 Press [EJECT] to open the disc tray.

2 Load your disc in the tray with the playback side down (label side up). 3 Press [EJECT] to close the tray. 4 READING appears on the front panel display, and playback starts automatically. If playback does not start, press [PLAY ()]. In some cases, the Disc menu might appear instead. PLAYBACK Playing a DVD+R (+RW, -R, -RW) When a DVD+RW or unfinalized DVD+R (-R, -RW) is inserted, no title is played automatically but the current TV channel displays on the screen. 1 If you want to play a title on the DVD+R (+RW, -R, -RW), you must press [MENU] or [PLAY] to display the disc menu of a thumbnail index for each recorded title on the disc. The index picture screen of the title will be displayed. Also title information (name of recording, recorded day, time, recording quality) will be displayed. TITLE CH10 10:29AM 12/21/04 0:01:00SEP TITLE CH10 10:34AM 12/25/04 0:01:00HQ EMPTY 1:50:54SP G Press REC to overwrite title(s).

2 Select a title to play using [oe] then press [ENTER] or [PLAY]. If a Disc menu is displayed · A Disc menu may be displayed when you load a DVD. Use the [oe ...] buttons to select the title/chapter you want to view, then press [ENTER] to start playback. Press [TITLE] or [MENU] to return to the Disc menu. · If the Parental Level feature is set and the disc is below the current Parental Level setting, the 4-digit code must be entered and/or the disc must be authorized; see Set Parental Level `on page 24. · The DVD Recorder will not play discs with Region codes different from the DVD Recorder. The Region code for this DVD Recorder is 1 (one).

· Unless stated otherwise, all operations described below use the remote control. Some features may also be available in the Setup menu. · A disc which is recorded by computer at high speeds (greater than or equal to 2x) may not be recognized. · A disc which is recorded with unauthorized movie material may not be played. · A disc which is recorded by other recorder or not recorded correctly may not be recognized or played.

31 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `32 mac001 1200DPI 90LPI DVD Playback Still Picture and Frame-by-Frame Playback 1 Press [PLAY/PAUSE] during playback. The DVD Recorder will go into Pause mode. 2 You can back up or advance the picture frame-by-frame by pressing [FF ()] repeatedly during Pause mode.

Fast Forward/Backward 1 Press [REW (oeoe)] or [FF ()] during playback. The DVD Recorder will go into Search mode. 2 Press [REW] or [FF] to select the desired speed: X2, X4, X8, X16, X32, (forward) or oe, oe X2, oe X4, oe X8, oe X16, oe X32 (backward). oe oe oe oe oe Slow Motion Press [SLOW+] or [SLOW] to enter Slow Motion mode. The default speed is 1/2. When you press [SLOW+] or [SLOW] repeatedly, the speed will be set to 1/4, 1/8, 1/16, and normal speed. Changing the Audio Language Press [AUDIO] and then press [AUDIO] repeatedly during playback to hear a different audio language or audio track. Subtitles Press [SUBTITLE] and then press [SUBTITLE] repeatedly during playback to select among all available subtitle languages. Camera Angle If a DVD contains scenes recorded at different camera angles, angle icon displays automatically. You can select among these angles during playback.

Press [ANGLE] and then press it repeatedly during playback to select the desired angle. The number of the current angle appears on the TV screen. The Camera Angle icon is displayed on the TV screen when alternate angles are available. Zoom The Zoom function allows you to magnify the video image and scroll around the enlarged image. 1 2 3 Press [ZOOM] during Play mode to activate the Zoom function. Each press of the [ZOOM] button changes the Zoom level as follows: X1 (normal size) X2 X3 X4 X1/2 X1/3 X1/4 X1 (normal size) Use the [oe ...] buttons to scroll around the zoomed picture. To resume normal playback, press [ZOOM] repeatedly until the X1 (normal picture) appears.

· The Zoom function may not work on some DVDs. 32 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `33 mac001 1200DPI 90LPI DVD Playback Repeat 1 To repeat the currently playing chapter, press [REPEAT]. REPEAT CHAPTER appears on the TV screen.

2 To repeat the currently playing title, press [REPEAT] a second time. REPEAT TITLE appears on the TV screen. 3 4 To repeat the whole disc, press [REPEAT] a third time. REPEAT DISC appears on the TV screen. You can play in other modes (including Repeat, A-B, Shuffle, or Scan) by pressing [REPEAT] repeatedly.

You can repeat a scene that starts when Repeat A- `displays on the screen. To mark the end point, press [A-B]. Press [A-B] again to repeat the scene. A-B

You can repeat a scene between two points (A and B): 1 2 3 4 5 Press [PLAY/PAUSE] play to the start of the desired scene. Press [A-B] to mark the start point. Use [FF], [NEXT] to search the end point. Press [A-B] to mark the end point. The marked scenes are repeated continuously until you stop the repeat by pressing [A-B] button again.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3406209)

[DVR-06 user guide](http://yourpdfguides.com/dref/3406209)

<http://yourpdfguides.com/dref/3406209>

PLAYBACK Selecting Titles When a disc has more than one title, you can select among all available titles as follows: 1 Press [DISPLAY] and use [..

] to select the Title icon. Press [ENTER] to display a submenu. Use [...] to select the desired title number and press [ENTER] to confirm. **Selecting Chapters** When a title on a disc has more than one chapter, you can select among all available chapters as follows: 1 2 Press [PREV (§)] or [NEXT ()] briefly during playback to select the next or previous chapter. To skip directly to any chapter during playback, press [DISPLAY]. Use [..

] to select the Chapter icon, then press [ENTER] to display a submenu. Use [..] to select the desired chapter number and press [ENTER] to confirm. 33 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `34 mac001 1200DPI 90LPI DVD Playback Disc Menus Many DVDs contain Disc menus that allow you to access special features.

To open a Disc menu, press [MENU]. Then use the [0-9] buttons to directly select the desired options, or use the [...] buttons to highlight your desired selection and press [ENTER]. 1 2 Press [MENU]. The Disc menu is displayed. To exit the Disc menu, press [STOP] or [TV VIEW]. **Title Menus** 1 Press [TITLE]. If the current title has a menu, the Title menu will appear on the TV screen.

Otherwise, the Disc menu may appear. 2 The Title menu may contain camera angles, spoken languages and subtitle options, as well as the chapters for the title. **Digest For** displaying the edit menu for DVD+RW / +R discs, for setting chapter markers. 1 2 Press [DIGEST]. The Digest menu is displayed. To exit the Disc menu, press [STOP] or [TV VIEW]. **Digest Title Digest Chapter Digest Title Interval Chapter Interval ... Select I Exit** 34 DW-Q73D2N-LS(GB)USA 2006.

2.3 5:56 PM `35 mac001 1200DPI 90LPI **Other Disc Playback Audio CD/MP3 PLAYBACK** The DVD Recorder can play audio CDs and MP3 files on CD-ROM, CD-R or CD-RW discs. 1 2 Insert the CD disc and close the tray. The Audio CD or MP3 CD menu appears on the TV screen after a few moments to load the disc. Use [..

] to select a track or a file, then press [PLAY] or [ENTER]. During playback, the current track's elapsed playing time will appear on the menu. Playback will stop at the end of the disc.

On the MP3 CD menu, you can display the folders on the disc. Use [...oe] to select the folder icon on the MP3 CD menu then press [ENTER] or [PLAY]. You can also display just the tracks in the folders. Use [...oe] to select a folder then press [ENTER].

... MP3 ... 3 4 5 While playing an Audio CD, use [FF] or [REW] for 2X, 4X, 8X, 16X, 32X speed playback. Use [PLAY/PAUSE] to pause playback while the disc is playing. To stop playback at any time, press [STOP]. · Press [REPEAT] to repeat a track (file) and press again to repeat the whole disc. **PLAYBACK JPEG CD PLAYBACK** The DVD Recorder can display JPEG files on CD-R/RW. 1 2 Insert your CD and close the tray. The JPEG CD folder tree appears. If there are folders which contain JPEG files, select the desired folder using [...

oe] and press [ENTER]. 3 4 Select the thumbnail you want to display using [...oe] and press [ENTER].

The full size image will be displayed and a slide show starts automatically with a time interval of 10 seconds. 35 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `36 mac001 1200DPI 90LPI **Other Disc Playback** 5 6 7 Press [NEXT] or [PREV] to manually skip to the next or previous image. Press [] (or [oe]) to rotate the image (counter) clockwise.

Press [STOP] to exit the slideshow. · When a CD contains both MP3 files and JPEG files, the default Play mode is JPEG image files. · The DVD Recorder can playback up to 1000 files per disc. · MP3 files encoded below 64kbps are not supported. 36 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `37 mac001 1200DPI 90LPI **Basic Recording Recording from TV** Follow the instructions below to record a TV program. 1 Turn on the DVD Recorder and load a recordable disc. · Make sure your TV input is set to view the DVD Recorder. 2 Set the desired Recording mode in DVD Record Quality menu by pressing [SETUP] button.

Approx 1 Hour (HQ mode), 2 Hours (SP mode), 4 Hours (EP mode), 8 Hours (SEP mode) 3 If your DVD Recorder does not show a TV program, press [TV VIEW] on the remote control. Use [CH ... /] to select the TV channel you wish to record. 4 Press [AUDIO] to select the audio channel to record (Stereo, SAP, or Mono). The table below shows what audio channel will be recorded with different settings and different types of broadcasts. The last column (Monitor Audio) shows what you will hear during recording. For example, if the TV broadcast is in Stereo, then setting the DVD Recorder to Stereo will record the broadcast in Stereo, and the Monitor Audio will also be in Stereo. · If you set the audio channel to SAP, but no SAP channel is broadcast, the main audio (Mono or Stereo) will be recorded.

TV Broadcast MONO STEREO Selected Audio MONO STEREO Left Right MONO MONO MONO SAP STEREO SAP MONO Broadcast Audio L Ch R Ch MONO MONO L R L L L R MONO MONO MONO MONO SAP SAP L R SAP SAP MONO MONO Monitor Audio MONO STEREO Left Right MONO MONO SAP STEREO SAP MONO **PLAYBACK MONO+ SAP STEREO+SAP RECORDING** 5 Press [REC (G)] once. Recording will start. The REC indicator lights on the front panel display. Recording continues until you press [STOP] or the disc is full. To record for a fixed length of time, see One Touch Record on the next page.

6 Press [STOP (I)] to stop recording. · The maximum number of DVD titles per disc is 49. If the DVD Recorder is powered off during DVD recording, the recording will not be saved. · If a DVD+RW or unfinalized DVD+R (-R, -RW) disc is inserted in the tray, no title is played automatically after loading is finished. · If you are recording to a blank DVD+R (+RW, -R, -RW) disc, it may take up to 7 minutes for post processing after recording.

37 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `38 mac001 1200DPI 90LPI **Basic Recording One Touch Record (OTR) One Touch Recording** allows you add recording time in fixed increments at the touch of a button. 1 Follow steps 1-4 under Recording from TV. 2 Press [REC (G)] repeatedly to set the length of the recording. Recording starts after the first press. Each subsequent press increases the recording time by 30 minutes within the available space. The recording time is displayed on the front panel display. Checking the Recording Time Total time and recorded time are displayed on the TV screen after pressing [DISPLAY]. Recorded time is displayed on the OSD.

To Pause the Recording 1 2 Press [PLAY/PAUSE] to pause the disc during recording. When you want to continue recording, press [PLAY/PAUSE] or [REC (G)]. Note · To quit One Touch Recording, press [STOP]. · The DVD Recorder will automatically power off when One Touch Recording ends.



[You're reading an excerpt. Click here to read official DAEWOO
DVR-06 user guide
http://yourpdfguides.com/dref/3406209](http://yourpdfguides.com/dref/3406209)

38 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `39 mac001 1200DPI 90LPI Timer Recording The Timer Recording function allows you to record up to 8 programs within a period of one month. 1 Insert recordable media such as DVD±R, DVD±RW. 2 Press [TIMER]. or Press [SETUP] and select 'Timer REC'. Then press [ENTER]. DVD Recorder Init Setup © Timer REC oe Select Init Setup Disc Oper Disc Edit Timer REC The 'Timer Recording' menu appears. Use [...]

] to move to a timer recording slot, and press [ENTER] to modify it. If you did not set the clock on the DVD Recorder, you must do so before programming a timer recording. Timer Recording 01/07 08:08:40 AM Date Start Stop Input Media Repeat Mode Result New DVD Once 1/1 1:00AM 2:00AM CH2 Input SP Overdus I Delete § Prev Page ENTER Edit Next Page TIMER Exit 3 Enter the necessary information for your Timer Recording(s). · Date Choose a date up to 1 month in advance, or select a daily or weekly program. · Start Set the recording start time.

· Stop Set the recording end time. · Input Choose the desired channel, or one of the external inputs from which to record. · Repeat Choose frequency of the recording. Once, Daily, Weekly, Weekday. · Title - Enter into title edit mode pressing [G]. · Mode Choose a Record mode. HQ, SP, EP or SEP [oe] Moves the cursor left/right. [...]

] Changes the setting at the current cursor position. Press [SETUP] to exit the Timer Record menu. Press [ENTER] after filling in all the program information. Press [TIMER] to display the Timer Record List. Date ... Timer Recording Start 7 : 0 PM Stop 7 : 0 PM 1/7 01/07 08:08:40 AM Input CH 2 Repeat Once Wed Media Title TITLE CH2 0-9 TIMER Mode SP Input Digits Prev Page ENTER SETUP Confirm and Exit Exit timer rec Timer Recording Date 1/7 Wed Media Title TITLE CH2 ENTER TIMER RECORDING 01/07 08:08:40 AM Input CH 2 Repeat Once Start 7 : 0 PM Stop 7 : 0 PM Mode SP Confirm and Exit Exit timer rec G Edit 4 Press [ENTER] to save the program. The Timer Record List will appear. 5 Press [SETUP] to exit the Timer Record List.

6 Timer indicator will light or blinking. Power Off the DVD Recorder to start the Timer Recording. 39 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `40 mac001 1200DPI 90LPI Timer Recording · The Timer indicator lights on the front panel display when the DVD Recorder is ready for the Timer Recording. · The disc timer indicator is blinking if disc timer recordings are overlapped. · The DVD Recorder will record the audio according to the current TV tuner setting (Stereo, Mono or SAP). Use the [AUDIO] button to set the audio before switching the DVD Recorder to Standby mode. · The DVD Recorder will automatically power off when the Timer Recording ends. · There is a short delay when a timer recording finishes to confirm the recorded program.

If two timer recordings are set to record sequentially (one right after the other), the very beginning of the later program may not be recorded. Canceling a Timer Recording You can clear a Timer Recording any time before the recording actually starts. · Use [...] to select the program you want to erase on the Timer Recorder List. Press [ISTOP] to delete the program. Stopping a Timer Recording in Progress After a Timer Recording has started, you can still cancel the program by pressing and holding [ISTOP] for 3 seconds. Timer Recording Troubleshooting Even if a Timer Recording is set, the DVD Recorder will not record if: · · · · No disc is loaded. A non-recordable disc is loaded.

Disc is protected in the 'Disc Operation' menu; see page 47. There are already 49 titles recorded on the disc. You cannot enter a Timer Recording if: · A recording is already under way. · The start time has already passed. · Eight Timer Recordings have already been set. If two or more Timer Recordings overlap: · You should set only one Timer Recording. · You can choose replace old Timer Recording or not. · Only one Timer recording will work. Timer Recording Recording time is overlapped with existing entry. Replace it? OK Cancel Confirmation is not possible when: · Disc is protected in the 'Disc Operation' menu; see page 47.

· There are already 49 titles recorded on the disc. If the disc is damaged, the recording may not complete successfully, even if the Check field shows 'Rec. OK'. 40 DW-Q73D2N-LS(GB)USA 2006.2.

3 5:56 PM `41 mac001 1200DPI 90LPI Recording from an External Input Recording from External Components You can record from an external component, such as a camcorder or VCR, connected to any of the DVD Recorder's external inputs. 1 Make sure the component you want to record from is connected properly to the DVD Recorder; see pages 11 and 14. 2 Use [...] to select the external input to record from. · · · · Tuner: Built-in tuner LINE1 : Audio/Video on front panel LINE2 : Audio/Video Input on back panel DV: DV input on front panel. 3 Load a recordable disc. 4 Set the desired Recording mode in DVD Record Quality menu by pressing [SETUP] button. HQ (High Quality - 1 hr/disc), SP (Standard Play - 2 hrs/disc), EP (Extended Play - 4 hrs/disc), SEP (Very Low Quality - 8 hrs/disc) 5 Press [REC (G)] once. Recording will start. The REC indicator lights on the front panel display. Recording continues until you press [STOP] or the disc is full. To record for a fixed length of time, see 'One Touch Record' on page 39. 6 Press [STOP (I)] to stop recording.

Note If your source is copy-protected, you will not be able to record it using the DVD Recorder. See 'Copyright Notice' on page 4 for more details. RECORDING 41 DW-Q73D2N-LS(GB)USA 2006.2.3 5:56 PM `42 mac001 1200DPI 90LPI Recording from an External Input Recording from a Digital Camcorder You can record from a digital camcorder connected to the DV IN jack on the front panel of the DVD Recorder. You can use the DVD Recorder remote to control both the camcorder and the DVD Recorder. Before recording, make sure the digital camcorder is properly connected to the front panel DV IN jack; see page 14. The source signal must be DVC SD format. Some camcorders cannot be controlled using the DVD Recorder remote. If you connect a second DVD recorder using a DV cable, you cannot control the second recorder from this one.

You cannot control the DVD Recorder remotely from a component connected to the DV IN jack. You cannot record date and time information from a DV cassette. 1 Make sure your digital camcorder is connected to the front panel DV IN jack; see page 14. 2 Press [TV VIEW] repeatedly to select the DV input. DV appears on the front panel display and the TV screen.

3 Find the place on the camcorder tape from which you want to start recording.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DVR-06 user guide](#)

<http://yourpdfguides.com/dref/3406209>