




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DVR-S05. You'll find the answers to all your questions on the DAEWOO DVR-S05 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO DVR-S05
User guide DAEWOO DVR-S05
Operating instructions DAEWOO DVR-S05
Instructions for use DAEWOO DVR-S05
Instruction manual DAEWOO DVR-S05

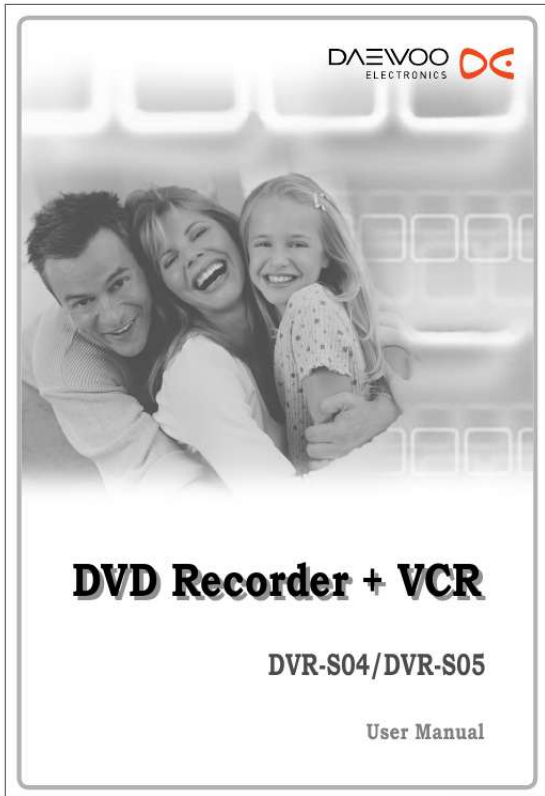

[You're reading an excerpt. Click here to read official DAEWOO DVR-S05 user guide](http://yourpdfguides.com/dref/3406208)

<http://yourpdfguides.com/dref/3406208>

Manual abstract:

If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the product and receiver. - Connect the product into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. WARNING TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. FCC COMPLIANCE: The responsible party for this product's compliance is: GoVideo, 7835 East McClain Drive, Scottsdale, AZ 85260, USA. CAUTION TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

ATTENTION POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND. SERIAL NUMBER: The serial number is found on the back of the DVD Recorder+VCR. This number is for this unit only. You should record requested information here and retain this guide as a permanent record of your purchase. Model No.

Serial No. _____ WARNING: Do not install this equipment in a confined space such as a bookcase or similar unit. CLASS 1 KLASSE 1 LUOKAN 1 KLASSE 1 LASER PRODUCT LASER PRODUKT LASER LAITE LASER APPARAT PRODUIT LASER NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.

). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. IMPORTANT SAFETY INSTRUCTIONS CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE PRODUCT. RETAIN THIS MANUAL FOR FUTURE REFERENCE. This product has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this product will protect you if you observe the following procedures for installation, use, and servicing. This product does not contain any parts that can be repaired by the user. DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

CAUTION: This DVD Recorder+VCR employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the DVD Recorder+VCR require maintenance, contact an authorized service center. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM. CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus. FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual.

The user could lose the authority to operate this equipment if an unauthorized change or modification is made. 1 2 Read these instructions. All these safety and operating instructions should be read before the product is operated. 3 4 Heed all warnings. All warnings on the product and in the operating instructions should be adhered to.

Keep these instructions. The safety, operating and use instructions should be retained for future reference. Follow all instructions. All operating and use instructions should be followed. i ii Important Safeguards Table of Contents INTRODUCTION 5 Do not use this product near water.

For example: near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement; or near a swimming pool; and other areas located near water. 13 Unplug this product during lightning storms or when unused for long periods of time. INTRODUCTION Important Safeguards

i Table of Contents _____ 1 Overview _____ 2

Identification of Controls _____ 6 RECORDING Basic Recording _____ 38 Recording from TV One Touch Record (OTR) Checking the Recording Time To Pause the Recording One Touch Copy - DVD to VHS Copy Edit (DVD VCR) One Touch Copy - VHS to DVD Copy Edit (VCR DVD) 38 39 39 40 40 41 41 14 Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as: Power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the product; the product has been exposed to rain or moisture, does not operate normally, or has been dropped. 15 Do not connect the product to the power supply if you have just moved it from a cold environment to a warm room. This can lead to condensation inside the product, which can damage it. Wait for approximately 2 hrs for it to reach room temperature. 16 Make sure the product is placed at least 4 inches (10 cm) apart from other home appliances or obstacles to ensure sufficient ventilation. 17 This product is designed to work continuously. Switching if off does not disconnect if from the power outlet.

To disconnect if from the power outlet you have to unplug it. 6 7 Clean only with dry cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.

9 Make sure that rating of your household electricity supply matches that shown on the back of your product. 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.



[You're reading an excerpt. Click here to read official DAEWOO DVR-S05 user guide](http://yourpdfguides.com/dref/3406208)
<http://yourpdfguides.com/dref/3406208>

11 Only use attachments/accessories specified by the manufacturer. 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with apparatus. When a cart is used, use caution when moving the cart/ product combination to avoid injury from tip-over.

CONNECTIONS Connecting Antenna/Cable _____ 11 Connecting a TV _____ 12 Connecting an Amplifier/Receiver _____ 13 Connecting Optional Equipment _____ 14 Connecting a Digital Camcorder _____ 14 Timer Recording _____ 42 Recording from an External Input _____ 44 EDITING DISC Initialize _____ 46 Disc Menu _____ 46 Title Menu _____ 49 Editing _____ 51 SETUP Initial Installation _____ 15 Initial Setup _____ 17 Setup Menu Overview Menu Navigation INSTALLATION

Settings RECORDING OPTIONS Settings LANGUAGE Settings PREFERENCE / Video Settings PREFERENCE / Audio Settings PREFERENCE / Parental Controls Various PREFERENCE Settings System Information Restore Defaults 17 17 17 19 20 21 22 24 26 27 27 REFERENCE Troubleshooting _____ 53 Technical Specifications _____ 56 On-Screen Display Overview _____ 28

PLAYBACK DVD Playback _____ 31 VCR Playback _____ 34 Other Disc Playback _____ 36 iii 1 Overview DVD, DVD+R, DVD+RW? What is a DVD? DVD (Digital Versatile Disc) is a storage medium that

combines the convenience of the compact disc with the latest digital video technology. DVD video uses modern MPEG2 data compression technology that enables an entire feature film to be stored on a single five inch disc. Overview INTRODUCTION Which discs you can use The following discs can be used in your DVD Recorder+VCR: Playback and recording DVD+RW (Digital Versatile Disc + ReWritable) DVD+R (Digital Versatile Disc + Write-Once) How good is the resolution of DVD compared with VHS? The razor-sharp digital images have more than 500 lines of resolution at 720 pixels per line. This is more than twice as high as VHS and even better than laser disc quality. DVD picture quality is easily comparable to the digital masters produced in recording studios.

Playback only DVD Video (Digital Versatile Disc) DVD-R (DVD-Recordable): These discs can only be played back if the recording was made in Video mode and the recording was finalized. DVD-RW (DVD-Rerecordable): These discs can only be played back if the recording was made in Video mode and the recording was finalized. Audio CD (Compact Disc Digital Audio) CD-R (CD recordable) Audio/ MP3 files CD-RW (CD rewritable) Audio/ MP3 files · Not all recordable CDs may be played by your player. What is a DVD+RW? DVD+ReWritable uses phase change media, the same technology on which rewritable CDs are based. A highperformance laser is used to change the reflective properties of the recording layer; this process can be repeated more than a thousand times. What is a DVD+R? Unlike a DVD+RW disc, a DVD+R (write-once DVD) can only be written to once. If it is not finalized after a recording, further recordings can be added to it. Old recordings can be deleted but they can no longer be overwritten. The deleted recordings (titles) are marked 'deleted title'. Before a DVD+R can be played in a DVD player, it must be finalized in the DVD Recorder+VCR.

Once this process is complete, no further recordings can be added. Disc-related Terms Title (DVD only) The main film, accompanying feature content, or music album. Each title is assigned a title reference number enabling you to locate it easily. What can I do with my DVD Recorder+VCR? Your DVD Recorder+VCR is a machine for recording and playing back digital video discs with two-way compatibility with the universal DVD video standard. This means: · existing DVD video discs can be played on the recorder. · recordings made on your DVD Recorder+VCR can be played on other DVD video players and DVD-ROM drives. Chapter (DVD only) Sections of a movie or a musical piece that are smaller than titles. A title is composed of one or several chapters.

Each chapter is assigned a number to enable you to easily locate the chapter you want. Depending on the disc, chapters may not be labeled. Track (Audio CD only) Regional code plastic products in contact with the unit for a long period of time. They will leave marks on the surface. Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center outward.

Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records. Yes No About Symbols About the Symbol `` may appear on the TV screen during operation. This icon means the function explained in this User's Guide is not available on that specific disc. Cleaning the Unit To clean the cabinet Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution.

Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit. To obtain a clear picture The DVD Recorder+VCR is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.) For details, please contact your nearest dealer. Remote Control Operation Range Point the remote control at the remote sensor and press the buttons. Distance: Within 23 ft (7 m) of the remote sensor. Angle: Within 30° in each direction of the remote sensor. 4 5 Identification of Controls Front Panel ! @ # \$ % ! @ # \$ % ^ & * () Identification of Controls INTRODUCTION Front Panel Display 12 ^ *) 2 & (1 3 4 5 6 7 3 4 5 6 ! STANDBY/ON Turns the DVD Recorder+VCR on and off.

Lock/Unlock the front panel and Remote control by pressing and holding it over 5 seconds. @ Cassette Compartment (VCR deck) Insert a video cassette here. # VCR EJECT Ejects the tape in the VCR deck. \$ Disc Tray (DVD deck) Insert a disc here. % OPEN/CLOSE Opens or closes the disc tray. ^ REW DVD: Skips to previous chapter. VCR: Rewinds the tape during Stop mode. Press during Play mode for fast reverse picture search. & DISC MENU Displays disc menu or title menu of DVD disc. * PLAY/PAUSE Starts playback of a disc or tape. Pauses playback or recording temporarily. (STOP Stops playback.) FF DVD: Skips to next chapter. VCR: Advances the tape during Stop mode. Press during Play mode for fast forward picture search.



[You're reading an excerpt. Click here to read official DAEWOO DVR-S05 user guide](http://yourpdfguides.com/dref/3406208)
<http://yourpdfguides.com/dref/3406208>

1 REC SPEED Changes Record speed. 2 SELECT DVD/VCR Toggles control between the DVD deck and the VCR deck. Reset the DVD Recorder+VCR by pressing and holding it for 5 seconds. 3 Front Panel Display Shows the current status of the DVD Recorder+VCR. 4 CH+/ Scans up or down through memorized channels.

Also moves up and down in DVD navigation menus. 5 REC Starts recording. Press repeatedly to set the recording time. Lights red when the DVD Recorder+VCR is recording. 6 LINE1 (VIDEO, L-AUDIO-R) Connects to the audio/video output of an external source (VCR, Camcorder, etc.). 7 DV IN Connects to the DV output of a digital camcorder, video deck, or DVD+R/RW recorder. ! Indicates a VHS tape is inserted in the VCR deck. @ Circle : Indicates the VCR is recording. Clock : Indicates a VCR Timer Recording is set.

Indicates that a stereo broadcast is being received. \$ Indicates when a Second Audio Program (SAP) broadcast is being received. % Indicates when the DVD Recorder+VCR is playing or recording a tape with Hi-Fi sound. ^ Indicates the DVD Recorder+VCR is in TV mode (as set by the TV/VCR button). & Indicates the current Repeat mode. * Indicates when the DVD Recorder+VCR is locked. (Indicates when the DVD Recorder+VCR is outputting the video signal in Progressive Scan mode.) Disc Type indicators Indicates the type of disc loaded. 1 Circle : Indicates a DVD+R(+RW) is recording. Clock : Indicates a DVD Timer recording is set.

2 Indicates a disc is inserted in the DVD deck. 3 Indicates the current Recording mode. 4 Indicates AM or PM. 5 Front Panel Display Message Indicates clock, total playing time, elapsed time, remaining time, title number, chapter/track number, channel, VCR counter, etc. 6 DTS: Indicates a DVD is playing with a DTS soundtrack.

Dolby : Indicates a DVD is playing with a Dolby Digital soundtrack. 6 7 Identification of Controls Identification of Controls INTRODUCTION Remote Control Turns the DVD Recorder+VCR on and off. - Opens and closes the disc tray in DVD mode. - Ejects the tape in the VCR deck in VCR mode. Selects DVD mode.

Selects VCR mode. Switches between the DVD Recorder+VCR tuner and your TV tuner. Switches the view on your TV to the DVD Recorder+VCR tuner. - Selects numbered options in menus. - Selects TV channels. - Manually adjusts tracking. Press and hold for 3 seconds to switch between Progressive Scan and Interlace Scan mode. Resets the tape counter in VCR mode. Accesses DVD disc menus. Displays or exits the Setup menu.

Edits chapters or splits titles of DVD+R(+RW) discs. Displays information about the currently loaded disc, VHS tape, or TV channel. - oe ... : Selects menu options. - CH(+/-) : Selects channels. Confirms menu selections. Increases or decreases the slow motion speed when playing a DVD or VHS tape. Skips to the next or previous chapter/track.

Progressive Scan Mode · If your TV supports Progressive Scan, you can view high quality video by setting the DVD Recorder+VCR to Progressive Scan mode. If your TV does not support Progressive Scan, do NOT change to Progressive Scan mode. If you do so accidentally, press and hold the [P.SCAN] key for 3 seconds to restore normal viewing. - DVD: Searches backward/forward.

- VCR: Rewinds/advances during Stop mode. Press during Play mode for fast reverse/forward picture search. Starts recording. Press repeatedly to set the recording time. For more details, Refer to One Touch Record (OTR) on page 39.

- Starts playback. - Pauses playback or recording temporarily. Press again to exit Pause mode. Stops playback or recording. Copies from DVD to VCR(or from VCR to DVD). Selects Recording mode: - DVD : HQ (1hr), SP (2hrs), EP (4hrs) or SLP (6hrs). - VCR : SP or SLP. Switches the DVD Recorder+VCR input to Tuner, LINE1, LINE2, or DV. Selects a subtitle language, if available. Selects a DVD camera angle, if available.

Enlarges the DVD video image. Repeats the current chapter, track, title or the entire disc. Repeats playback between two points (A and B). Searches for a specific title or a chapter. Selects an audio language (DVD), audio channel (CD) or audio type (TV). Displays a disc's Title menu, if available. Displays the Timer Recording menu. 8 9 Identification of Controls Connections INTRODUCTION · There are a variety of ways to connect the DVD Recorder+VCR to your TV and other equipment. Use only one of the connections described below. Whichever TV connection you use will work with all input sources.

· Please refer to the manuals for your TV, VCR, stereo system, or other devices as necessary to make the best connections. · For better sound reproduction, connect the DVD Recorder+VCR's AUDIO OUT jacks to the audio in jacks of your amplifier, receiver, stereo, or audio/video equipment. See Connecting an Amplifier/Receiver on page 13. Rear panel ! @# \$%^ ^ Caution DVD & VCR OUT AUDIO OUT COMPONENT OUT OUT LINE 2 ANT. IN CONNECTIONS R S-VIDEO OUT Pr R AUDIO L COAXIAL DIGITAL AUDIO OUT Pb L Y VIDEO RF OUT · Make sure the DVD Recorder+VCR is connected directly to the TV, and the TV is set to the correct video input.

· Do not connect the DVD Recorder+VCR's AUDIO OUT jack to the phono in jack (record deck) of your audio system. · Do not connect the DVD Recorder+VCR via your VCR. The DVD image could be distorted by the copy protection system. (* ! AC Power Cord Plug into a power outlet. @ AUDIO OUT (L, R) Connect to a TV or other equipment with audio inputs.

COMPONENT/PROGRESSIVE VIDEO OUT (Y Pb Pr) Connect to a TV with Component Video (Y Pb Pr) inputs. \$ AV OUT (VIDEO, L-AUDIO-R) Connect to a TV with video and audio inputs. % LINE2 (VIDEO, L-AUDIO-R) Connect to the audio/video outputs of an external source (VCR, Camcorder, etc.). Caution & Connecting Antenna/Cable 1 Disconnect the antenna/cable from the rear of your TV. Connect this cable to the jack marked RF IN (FROM ANT.) on the rear panel of the DVD Recorder+VCR. DVD & VCR OUT AUDIO OUT COMPONENT OUT Antenna Antenna Cable TV Wall Jack Flat Wire (300 ohm) 300/75 ohm Adaptor (Not supplied) ^ RF IN (FROM ANT.) Connect to your antenna or cable TV outlet. & RF OUT (TO TV) Connect to a TV with an RF coaxial input.

* COAXIAL (Digital Audio Out) Connect to an amplifier with a coaxial digital audio input. (S-VIDEO OUT Connect to a TV with an S-Video Input. 2 OR OR OUT LINE 2 ANT. IN R DEO T Pr R AUDIO L COAXIAL DIGITAL AUDIO OUT Pb L Y VIDEO RF OUT Cable Service Without Cable Box Rear of DVD Recorder+VCR · Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the DVD Recorder+VCR. If your cable wire is connected to your TV without a converter or descrambler box, unscrew the wire from your TV and attach it to the RF IN (FROM ANT.) jack on the rear panel of the DVD Recorder+VCR. Use the supplied coaxial cable to connect between the DVD Recorder+VCR's OUT (TO TV) jack and the antenna input jack on your TV.



[You're reading an excerpt. Click here to read official DAEWOO DVR-S05 user guide](#)

<http://yourpdfguides.com/dref/3406208>

With this connection, you can receive all midband, superband, and hyperband channels (all cable channels). Cable Service With Cable Box If a cable box is required in your cable system, follow the instructions shown at right.

This hookup permits both TV and DVD Recorder+VCR operation. Back Panel of Typical Cable Box Cable TV Wall Jack To view or record a CATV channel:
1 2 3 Tune the TV to the correct video input channel. Set the DVD Recorder+VCR to the output channel of the cable box using the [CH ... /] or the [0-9] keys on your DVD Recorder+VCR (e.g., CH3). Select the channel you wish to view on the cable box. EO T DVD & VCR OUT AUDIO OUT COMPONENT OUT OUT LINE 2 ANT.

IN R Pr R AUDIO L COAXIAL DIGITAL AUDIO OUT Pb L Y VIDEO RF OUT Rear of DVD Recorder+VCR · If you are using a cable box to tune channels, it is not necessary to run Auto Channel Search as indicated on page 18. 10 11 Connections Connections Connecting a TV Choose one of the following TV connections, depending on the capabilities of your equipment. All video signals are available from all video outputs. That means that whichever TV connection you use, it will work with all input sources, including VHS out of the Component/Progressive Video Output. Connecting an Amplifier/Receiver Connecting to an amplifier equipped with two channel analog stereo or Dolby Pro Logic II/Pro Logic Connect the Left and Right AUDIO OUT jacks on the DVD Recorder+VCR to the left and right audio in jacks on your amplifier, receiver, or stereo system, using the supplied audio cables (A). RF Coaxial Connection Connect the RF OUT (TO TV) jack on the DVD Recorder+VCR to the antenna in jack on your TV using the supplied coaxial cable (R). If you use this connection, tune your TV to the DVD Recorder+VCR's RF output channel (CH 3 or 4). Rear of TV S-VIDEO INPUT COMPONENT/PROGRESSIVE VIDEO INPUT VIDEO INPUT AUDIO INPUT ANTENNA INPUT Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/Video receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2, or DTS) CONNECTIONS Pr Pb Y L R 1 2 R Connect the DVD Recorder+VCR's DIGITAL AUDIO OUT jack (COAXIAL X) to the corresponding in jack on your amplifier. Use an optional digital coaxial audio cable. You will need to activate the DVD Recorder+VCR's digital output; see AUDIO Settings `on page 22.

S C V A How to set the DVD Recorder+VCR's RF output channel Press [SETUP] and select Installation Modulator Out to change the RF out channel. For details refer to page 18. DVD & VCR OUT Digital Multi-Channel Sound? A digital multi-channel connection provides the best sound quality. For this you need a multi-channel audio/video receiver that supports one or more of the audio formats supported by your DVD Recorder+VCR (MPEG 2, Dolby Digital, and DTS). Check the receiver manual and the logos on the front of the receiver. Audio/Video Connection 1 Connect the VIDEO OUT jack on the DVD 2 AUDIO OUT COMPONENT OUT OUT LINE 2 ANT. IN R S-VIDEO OUT Pr R AUDIO · Due to the DTS Licensing agreement, the digital output will be in DTS digital out when DTS audio stream is selected. · If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all. · 5.1 channel digital surround sound via the digital connection can only be obtained if your receiver is equipped with a digital multi-channel decoder.

· To see the audio format of the current DVD on the on-screen display, press [AUDIO]. The DVD Recorder+VCR does not perform internal (2- channel) decoding of DTS sound tracks. To enjoy DTS multichannel surround, you must connect the DVD Recorder+VCR to a DTS compatible receiver via one of the DVD Recorder+VCR's digital audio outputs. Rear of DVD Recorder+VCR DVD & VCR OUT AUDIO OUT COMPONENT OUT OUT LINE 2 L COAXIAL DIGITAL AUDIO OUT Pb L Recorder+VCR to the video in jack on your TV using the supplied video cable (V). Rear of DVD Recorder+VCR Connect the Left and Right AUDIO OUT jacks from the DVD Recorder+VCR to the left/right audio in jacks on your TV using the supplied audio cables (A).

RF OUT Y VIDEO S-Video Connection 1 Connect the S-VIDEO OUT jack on the DVD Recorder+VCR to the S-Video in jack on your TV using an S2 Video cable (S). Connect the Left and Right AUDIO OUT jacks from the DVD Recorder+VCR to the left/right audio in jacks on your TV using the supplied audio cables (A). Component Video Connection 1 Connect the COMPONENT/PROGRESSIVE VIDEO OUT jacks on the DVD Recorder+VCR to the corresponding 2 input jacks on your TV using a Y Pb Pr cable (C) if the Component Video jacks (Y, Pb, Pr) are available on your TV. Connect the Left and Right AUDIO OUT jacks from the DVD Recorder+VCR to the left/right audio in jacks on your TV using the supplied audio cables (A). ANT.

IN R S-VIDEO OUT Pr R AUDIO L COAXIAL DIGITAL AUDIO OUT Pb L Y VIDEO RF OUT Progressive Scan Connection · If your television is a high-definition or `digital ready `television, you may take advantage of the DVD Recorder+VCR's Progressive Scan output for the highest video resolution possible. · If your TV does not accept the Progressive Scan format, the picture will appear scrambled. A X 1 2 Connect the COMPONENT/PROGRESSIVE VIDEO OUT jacks on the DVD Recorder+VCR to the corresponding in jacks on your TV using an optional Y Pb Pr cable (C). Connect the Left and Right AUDIO OUT jacks from the DVD Recorder+VCR to the left/right audio in jacks on your TV using the supplied audio cables (A). · Be sure to set the DVD Recorder+VCR to Progressive Scan mode by pressing and holding [P.SCAN] for 3 seconds (or changing the Scan Mode in the Setup Menu; see page 21). · Progressive Scan does not work with the RF, Audio/Video or S-Video connections. L R COAXIAL DIGITAL INPUT AUDIO INPUT Amplifier (Receiver) 12 13 Connections Initial Installation Initial Installation After successfully connecting your DVD Recorder+VCR to your TV and other devices, this chapter will show you how to complete the initial installation. · You must follow the initial installation process to set the time, date, channels, and language preferences for the DVD Recorder+VCR. Connecting Optional Equipment To receive audio/video signals from other equipment, connect the LINE1 or LINE2 jacks on the DVD Recorder+VCR to the audio/video out jacks on your external component, using optional audio/video cables.

CONNECTIONS 1 A Welcome `message is displayed on the screen. Make sure the RF cable from your antenna or cable TV jack is connected. Installation Welcome. Press [Enter] to begin auto channel search. Ensure antenna is connected.



[You're reading an excerpt. Click here to read official DAEWOO DVR-S05 user guide](http://yourpdfguides.com/dref/3406208)

<http://yourpdfguides.com/dref/3406208>

OUT LINE 2 ANT. IN Instructions Setup-Exit SETUP RAUDIO L 2 VIDEO RF OUT Select the desired language for the on-screen menu using [.../]. Press [ENTER] to confirm. Installation Please select your language to begin auto install procedure: English Spanish French Connecting a Digital Camcorder Using the front panel DV IN jack, it is possible to connect a DV digital camcorder, video deck or DVD+R/RW recorder and digitally transfer DV tapes or DVD+R/RW discs to DVD+R/RW. Use a DV cable (not supplied) to connect the DV In/Out jack of your DV camcorder/video deck to the front panel DV IN jack of the DVD Recorder+VCR. This jack is for connection to DV equipment only. It is not compatible with digital satellite tuners or D-VHS video decks.

DV Digital Camcorder DV IN/OUT Instructions Enter-Confirm Setup-Exit Move ... 3 Select the desired disc menu language using [.../]. Press [ENTER] to confirm. Installation Please select disc menu language: Default English Spanish French Italian Japanese Chinese Instructions Enter-Confirm Setup-Exit Move ... 4 Select the desired disc playback audio language using [.../].

Press [ENTER] to confirm. Installation Please select disc play back audio language: Default English Spanish French Italian Japanese Chinese Instructions Enter-Confirm Setup-Exit Move ... DV IN Front of DVD Recorder+VCR 14 15 Initial Installation Initial Setup Setup Menu Overview The DVD Recorder+VCR Setup menu includes six categories, including: Installation, Recording Options, Languages, Preferences, System Info, and Restore Defaults. Press [SETUP] and [oe/] on the remote control to view the first and second levels of the Setup menu. 5 Select the desired disc playback subtitle language using [.../].

Press [ENTER] to confirm. Installation Please select disc play back subtitle language: Default English Spanish French Italian Japanese Chinese Off Instructions Enter-Confirm Setup-Exit Move ... Menu Navigation 1 Press [SETUP]. The Setup menu appears. 6 Select the desired signal type using [.../].

Press [ENTER] to confirm. Installation What type of signal are you using? Cable TV Antenna Detect Automatically 2 3 4 5 6 Use [oe/] to select the desired category. While the desired category is selected, press [.../] to move to the second level. SETUP Press [ENTER] to move to the third level. Use [.../] to select the desired setting, then press [ENTER] to confirm your selection. Some items require additional steps. Press [SETUP] at any time to return to the previous menu. Press [SETUP] to exit the Setup menu. Instructions Enter-Confirm Setup-Exit Move ... 7 The DVD Recorder+VCR detects channels automatically and stores them in memory. Installation Searching for available TV stations: INSTALLATION Settings 2 channels found Please wait.. . Instructions Setup-Exit Tuning Band 1 Press [SETUP]. The Setup menu appears. 8 9 10 After finishing Auto Channel Search, set the clock. Use [oe/] to move left/right and use [.../] to change the settings. After setting the clock, press [ENTER] to confirm. If you cancel the process during Initial Installation, you should repeat this procedure.

Set Clock Please set the clock: ... Time : 12 : 00 AM Date : Jan / 01 / 2005 (SAT) Instructions Enter-Confirm Setup-Exit Move ... 2 3 4 5 Use [oe/] to select Installation ` While Installation `is selected, press [] to select TV/CATV ` Press [ENTER] to move to the second level. Use [.../] to select TV or CATV, then press [ENTER]. Installation TV/CATV CATV Auto Channel Search Add/Remove Channels Modulator Out CH3 Set Clock Instructions Enter-Confirm Setup-Exit Move ... Select The TV Standard TV CATV TV: If you are using a standard antenna to receive channels. CATV: If you are using basic cable to receive channels. ` If you are receiving channels from a cable box or satellite receiver connected to the LINE1 or LINE2 inputs, there is no need to set Tuning Band or search for channels. Set the DVD Recorder+VCR to its LINE1 or LINE 2 input and select the desired channel on your cable box or satellite receiver.

16 17 Initial Setup Initial Setup Auto Channel Search The DVD Recorder+VCR has a frequency synthesized tuner capable of receiving up to 181 channels. These include VHF channels 2-13, UHF channels 14-69 and CATV channels 1-125. Installation TV/CATV CATV Auto Channel Search Add/Remove Channels Modulator Out CH3 Set Clock Instructions Enter-Confirm Setup-Exit Move ...

Preparation: Connect the DVD Recorder+VCR to the desired type of antenna or cable TV system, as shown in `Connecting Antenna/Cable `on page 11. Set Clock 1 Follow steps 1-2 as shown under Tuning Band. 2 Use [.../] to select Set Clock ` 3 Press [ENTER]. The Set Clock menu appears. 4 Enter the date and time. oe / (left/right): Moves the cursor to the previous or next column. .../ (up/down): Changes the setting at the current cursor position. Installation TV/CATV CATV Auto Channel Search Add/Remove Channels Modulator Out CH3 Set Clock Instructions Enter-Confirm Setup-Exit Move ..

.. 1 2 3 Follow steps 1-2 as shown under Tuning Band. While Installation `is selected, press [.../] to select `Auto Channel Search ` Press [ENTER] to begin the channel search. The tuner will automatically search for all available channels in your area and place them in the tuner's memory. `After Auto Channel Search is complete, follow the instructions above to make sure that Tuning Band is set correctly (TV or CATV).

Installation Searching for available TV stations: 5 channels found Please wait... Instructions Setup-Exit 5 Press [ENTER] to confirm your setting, then press [SETUP] to exit the Setup menu. Set Clock Please set the clock: .. SETUP Time : 12 : 00 AM Date : Jan / 01 / 2005 (SAT) Instructions Enter-Confirm Setup-Exit Move ...

RECORDING OPTIONS Settings Add/Remove Channels This feature allows you to manually add or delete channels from your channel list. Installation TV/CATV CATV Auto Channel Search Add/Remove Channels Modulator Channel Out CH30 1 0 Set Clock Enter-Add/Remove Setup-Exit Instructions Channel ... Change Enter-Confirm Setup-Exit Move ... DVD Record Quality You can set the default DVD recording quality to: HQ (High Quality - 1 hr/disc), SP (Standard Quality - 2 hrs/disc), EP (Average Quality - 4 hrs/disc), or SLP (Low Quality - 6 hrs/disc). Recording Options DVD Record Quality VCR Record Quality Auto Chapter Instructions Enter-Confirm Setup-Exit Move ..

. 1 2 3 4 5 Follow steps 1-2 as shown under Tuning Band. Use [.../] to select `Add/Remove Channels ` Press [ENTER]. The Channel Edit menu appears. Use [.../] to select a channel then toggle the add/delete selection by pressing [ENTER]. Press [SETUP] to exit the Channel Edit menu. .. 1 2 3 4 5 6 Press [SETUP]. The Setup menu appears. Use [oe/] to select Recording Options ` While Recording Options `is selected, press [] to select DVD Record Quality ` Press [ENTER] to move to the second level.



[You're reading an excerpt. Click here to read official DAEWOO DVR-S05 user guide](http://yourpdfguides.com/dref/3406208)
<http://yourpdfguides.com/dref/3406208>

HQ SLP Off Select Record Quality SLP EP SP HQ Modulator Out This feature allows you to set the RF Output channel to your TV (you only need to set this if you are using the RF Out connection to your TV). Installation TV/CATV CATV Auto Channel Search Add/Remove Channels Modulator Out CH3 Set Clock Instructions Enter-Confirm Setup-Exit Move ... Use [...] to select the desired Record Quality (HQ, SP, EP, or SLP). Press [ENTER] to confirm your selection, then press [SETUP] to exit the menu.

VCR Record Quality Select Output Channel CH3 CH4 1 2 3 4 5 18 Follow steps 1-2 as shown under Tuning Band. Use [...] to select Modulator Out : Press [ENTER] to move to the second level. Use [...] to set the Modulator Out channel to 'CH3' or 'CH4'.

Press [ENTER] to confirm. You can set the default VCR recording quality to SP (Standard Play) or SLP (Super Long Play). SP is higher quality, but SLP provides 3 times the recording time; e.g., a 2 hour tape will record for 6 hours in SLP mode.

Follow the same procedure as the DVD Record Quality. Recording Options DVD Record Quality VCR Record Quality Auto Chapter Instructions Enter-Confirm Setup-Exit Move ... HQ SLP Off Select VCR Quality SLP SP 19 Initial Setup Initial Setup Auto Chapter During recording, chapter markers are added automatically at fixed intervals.

You can set this interval to 5 minutes, 10 minutes or 15 minutes. To turn off automatic chapter marking, select 'Off': Follow the same procedure as the DVD Record Quality. Recording Options DVD Record Quality VCR Record Quality Auto Chapter Instructions Enter-Confirm Setup-Exit Move ... PREFERENCE / Video Settings 1 2 3 4 Press [SETUP]. Use [oe/] to select 'Preference' : While 'Preference' is selected, press [] to select 'Video' : Press [ENTER].

The 'Video' submenu is displayed. Preference Video Audio Parental Controls Auto Play Auto Clock VCR Instructions Enter-Confirm Setup-Exit Move ... HQ SLP Off Select Auto Chapter Off 5min 10min 15min LANGUAGE Settings OSD Language Select a language for the DVD Recorder+VCR Setup menu and on-screen displays. TV Aspect Ratio 1 Use [...] to select 'TV Aspect' while the 'Video' submenu is displayed. Video 1 2 3 4 5 6 Press [SETUP].

The Setup menu appears. Use [oe] and [] to select 'Language' : While 'Language' is selected, press [] to select 'OSD Language' : Press [ENTER] to move to the second level. Use [

...] to select the desired language. Press [ENTER] to confirm your selection, then press [SETUP] to exit the menu. Language OSD Language Menu Language Subtitle Language Audio Language Instructions Enter-Confirm Setup-Exit Move .

.. English Default Default Default Select OSD Language English Spanish French 2 3 4 5 Press [ENTER] or [] to go to the second level. Use [...] to select the desired TV Aspect. Press [ENTER] to confirm your selection. Press [SETUP] to exit the menu. SETUP TV Aspect Scan Mode Auto Interlace Select Picture Format 4:3 LB 4:3 PS 16:9 4:3 LB : Select when a standard 4:3 TV is connected.

Displays theatrical images with masking bars above and below the picture. Instructions Enter-Confirm Setup-Exit Move ... Auto 4:3 PS : Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Both sides of the picture are cut off. 16:9 : Select when a 16:9 wide screen TV is connected. Auto : Convert to the appropriate aspect ratio automatically. Menu/Subtitle/Audio Language Select your preferred language for Disc Menus, Subtitles, and Audio soundtracks.

Language OSD Language Menu Language Subtitle Language Audio Language Instructions Enter-Confirm Setup-Exit Move ... Default : The disc's default language is selected. Follow the same procedure as the OSD Language.

English Default Default Default Scan Mode Select Menu Language Default English Spanish French Language OSD Language Menu Language Subtitle Language Audio Language Instructions Enter-Confirm Setup-Exit Move ... Language English Default Default Default Select Subtitle Language Default English Spanish French OSD Language Menu Language Subtitle Language Audio Language Instructions Enter-Confirm Setup-Exit Move ..

. English Default Default Default Select Audio Language Default English Spanish French Progressive Scan Video provides the highest picture quality with Video reduced flickering. TV Aspect Auto · If you are using the COMPONENT/PROGRESSIVE VIDEO OUT Scan Mode Interlace jacks, but are connecting the DVD Recorder+VCR to a standard (analog) television, set Scan Mode to Interlace. · If you are using the COMPONENT/PROGRESSIVE VIDEO OUT jacks for connection to a TV or monitor that is compatible Instructions with a Progressive Scan signal, set Scan Mode to Enter-Confirm Setup-Exit Move ...

Progressive. Follow the same procedure as TV Aspect Ratio to change the Scan Mode. Caution Select Scan Mode Interlace Progressive · Once the Progressive Scan setting is entered, an image will only be visible on a Progressive Scan compatible TV or monitor. Press and hold [P.

SCAN] for 3 seconds to return to Interlace Scan mode. 20 21 Initial Setup Initial Setup PREFERENCE / Audio Settings Follow the same procedure as Video Settings to select Audio Settings. Preference Video Audio Parental Controls Auto Play Auto Clock VCR Instructions Virtual Surround You can enjoy a simulated 3D effect from two speakers by setting Audio Virtual Surround to On. Follow the same procedure as 'Digital Output' to set the Virtual Digital Output Dynamic Range Surround option. Off Off Off Stereo Hi-Fi Virtual Surround VCR Reception Tape Play Back Instructions Select Virtual Surround Off On Digital Output 1 Use [...] to select 'Digital Output' while the Audio submenu is displayed. Enter-Confirm Setup-Exit Move ..

. Enter-Confirm Setup-Exit Move ... VCR Reception Select your desired audio source for VCR recording (Stereo, Mono, or SAP). Follow the same procedure as 'Digital Output' to set the VCR Reception option. Audio Digital Output Dynamic Range Virtual Surround VCR Reception Tape Play Back Instructions Enter-Confirm Setup-Exit Move ... Audio Digital Output Dynamic Range Virtual Surround VCR Reception Tape Play Back Instructions Enter-Confirm Setup-Exit Move .

.. 2 3 4 5 Off Press [ENTER] or [] to go to the second level. Use [...] to select the desired digital output type. Press [ENTER] to confirm your selection. Press [SETUP] to exit the menu. Off Off Off Stereo Hi-Fi Select Digital Output Off Bitstream LPCM Off Off Off Stereo Hi-Fi SETUP Select VCR Reception Stereo Mono SAP No signal will be output from the Digital Audio Out jacks.

Tape Play Back Select your desired audio signal for VHS tape playback (Hi-Fi, Audio Linear, or Mix). Follow the same procedure as 'Digital Output' to change the Tape Digital Output Dynamic Range Play Back option. Off Off Off Stereo Hi-Fi LPCM Select when connected to a 2 channel digital stereo amplifier.



[You're reading an excerpt. Click here to read official DAEWOO DVR-S05 user guide](http://yourpdfguides.com/dref/3406208)

<http://yourpdfguides.com/dref/3406208>

The DVD Recorder+VCR's digital audio signal will be output in the PCM 2ch format when you play a DVD (or VHS tape) recorded with a Dolby Digital (only for DVD) or MPEG soundtrack. If the DVD is recorded with a DTS sound track then no sound will be heard. Bitstream Select when connected to a Dolby Digital or DTS decoder (or an amplifier or other equipment with a Dolby Digital or DTS decoder). Virtual Surround VCR Reception Tape Play Back Instructions Select Tape Playback Hi-Fi Linear Mix Enter-Confirm Setup-Exit Move ... Dynamic Range While watching DVD movies, you may wish to compress the dynamic range of the audio output (the difference between the loudest and quietest passages).

This allows you to listen to a movie at a lower volume without losing clarity of sound. Set Dynamic Range to Low or High for this effect. Follow the same procedure as Digital Output to set the Dynamic Range. Audio Digital Output Dynamic Range Virtual Surround VCR Reception Tape Play Back Instructions Enter-Confirm Setup-Exit Move ..

. Off Off Off Stereo Hi-Fi Select Dynamic Range Off Low High 22 23 Initial Setup Initial Setup PREFERENCE / Parental Controls Set Parental Level The Parental Controls feature allows you to prevent DVDs from being played based on their ratings or to have certain discs played with alternative scenes. You can set the parental level from 1 to 8. Preference Video Audio Parental Controls Auto Play Auto Clock VCR Instructions Enter-Confirm Setup-Exit Move .. 8 Press [ENTER] to confirm your rating selection, then press [SETUP] to exit the menu. Parental Control Set Parental Level Change Password Level3 1 2 3 4 Press [SETUP]. Use [oe/] to select Preference While Preference is selected, press [] to select Parental Controls : Instructions Enter-Confirm Setup-Exit Move ... The Password Input dialog will appear. Enter a 4-digit password using the 09 buttons.

If this is the first time you have entered a password, you will be prompted to enter the password again to confirm it. The initial password is 0000 : You must enter this password before you can change the Parental Level. Change Password Current Code Enter New Code Confirm Code Instructions Setup-Exit _____ Change Password 1 While Preference is selected, press [] to select Parental Controls : 2 Press [ENTER]. The Parental Controls submenu appears. 3 Use [...] to select Change Password then press [ENTER].

4 The Change Password submenu appears. Enter your current 4-digit password then press [ENTER]. SETUP Parental Control Set Parental Level Change Password Off 5 After setting the password, press [ENTER] while 'Set Parental Level' is displayed. Parental Control Set Parental Level Change Password Off 5 Enter a new 4-digit password, then press [ENTER]. Re-enter the new password to confirm, press [ENTER]. Instructions Enter-Confirm Setup-Exit Move ... Change Password Instructions Enter-Confirm Setup-Exit Move ..

. Master Password : If you forget your password, press 3,3,0,8 on the remote control and then press [ENTER]. Set the new password to something other than '0000'. Current Code Enter New Code Confirm Code Instructions Setup-Exit **** * 6 Enter your new password. Set the new password to something other than '0000'. Password Enter Password Instructions Setup-Exit ** 7 Use [...] to select the desired parental level and press [ENTER] to confirm. Parental Control Set Parental Level Change Password Off Select the .

.. parental level Level6 Level5 Level4 Level3 Off : If you select Unlock, the Lock feature is not active. All discs will play in full. Level 1 to 8: Some discs contain scenes not suitable for children. If you set a rating for the DVD Recorder+VCR, all scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternative Instructions scene is available on the disc. The alternative must have the same rating or Enter-Confirm Setup-Exit Move ...

a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc. 24 25 Initial Setup Initial Setup Various PREFERENCE Settings AutoPlay With Auto Play turn ON (the factory default setting), the VCR automatically starts playback when you insert a tape with its safety tab removed. Preference Video Audio Parental Controls Auto Play Auto Clock VCR Instructions Enter-Confirm Setup-Exit Move .

.. System Information System Information helps service personnel identify key firmware information about your DVD Recorder+VCR in case service is required. System Info Version FN300BBAAVL Main Build 3.2.

8 Main Software 3.1.1 DVD Navigation 2.0.0 Loader Version BDR-Z172 Instructions Enter-Confirm Setup-Exit Move ... 1 2 3 4 Use [...]

/] to select AutoPlay : Press [ENTER] or [] to go to the second level. Use [...] to set the AutoPlay Status. Press [ENTER] to confirm. Select AutoPlay Status Off On Auto Clock Auto Clock enables the DVD Recorder+VCR to set the clock automatically whenever it is in Standby mode (plugged in but powered off). Follow the same procedure as 'AutoPlay' to set the 'Auto Clock' status. Not available function on this model.

Preference Video Audio Parental Controls Auto Play Auto Clock VCR Instructions Enter-Confirm Setup-Exit Move ... SETUP Restore Defaults Select Auto Clock Status Off On If you wish, you can reset the DVD Recorder+VCR to its original factory settings. VCR This feature enables you to search for Index marks or specific times on your VHS tapes.

Preference Video Audio Parental Controls Auto Play Auto Clock VCR Instructions Enter-Confirm Setup-Exit Move ... 1 2 3 4 Press [SETUP]. Use [oe/] to select Restore Defaults :

Press [ENTER]. The Initialize menu will appear. Use the [...] buttons to select Yes and press [ENTER]. Restore Defaults If you select this function all settings will be removed and Are you sure the product will be set into you want to restore default initial (factory) mode. settings? Yes Instructions No Enter-Confirm Setup-Exit Move ...

1 2 3 4 5 6 While Preference is selected, press [] to move to the second level. Use [...] to select VCR : Press [ENTER] to display the submenu. Select Index Search' or 'Go-To Search'. If you select Index Search' and press [ENTER], a submenu appears. Use [..

./] to select the index number you want to search and press [REW] or [FF]. Some options cannot be reset, including Parental Controls, Password, and Country Code. After Restoring Defaults the unit reboots automatically and the Installation menu appears. You must set the country, language, channel, and clock settings again.

If you select 'Go-To Search' and press [ENTER], a submenu appears. Use [...] to change the time counter number and press [REW] or [FF].



[You're reading an excerpt. Click here to read official DAEWOO DVR-S05 user guide](http://yourpdfguides.com/dref/3406208)

<http://yourpdfguides.com/dref/3406208>

· The VCR menu is activated only when a video cassette tape is inserted. VCR Index Search Go-To Search VCR Index Search Go-To Search Index Search Instructions Enter-Confirm Setup-Exit Go-To Search Instructions Enter-Confirm Setup-Exit Move ... Press REW or FF to begin search or enter a specific Index number Move ... Setup-Exit Current Tape Counter is :: Press REW or FF to go to : : 00 Setup-Exit 26 27 On-Screen Display Overview The On-Screen Display provides feedback on the status of the DVD Recorder+VCR and/or the currently loaded disc or tape. To access the On-Screen Display (or OSD), press the [DISPLAY] button. On-Screen Display Overview Changing the TV Audio Channel Some TV programs are broadcast with both a main and a Secondary Audio Program (SAP).

You can change the TV audio using the [AUDIO] button. Displaying Disc Information To display information about the currently loaded disc or tape: Press [AUDIO] repeatedly to change the TV audio, according to the Broadcast audio signal as shown below. · STEREO+SAP Audio Signal Stereo Mono (No display) SAP Stereo On-screen display operation 1 2 · STEREO Audio Signal Stereo Mono(No display) Stereo Press [DISPLAY] repeatedly to display/change the information displayed on-screen. To remove the on-screen display, press [DISPLAY] repeatedly until it disappears. See the descriptions below for detailed explanations of the on-screen displays for each media type. · Some discs may not provide all the features shown in the on-screen display examples. · SAP Audio Signal Mono SAP Mono · MONO Audio Signal Mono(No display) The current audio channel is displayed on-screen. · If SAP is selected, but there is no SAP channel being broadcast, you will still hear the main audio channel. · If the sound is poor quality when set to Stereo, you can often improve it by changing to Mono. · When an external input is selected, the audio channel can be switched only to Stereo.

Temporary Feedback Icons Action prohibited or not available Displaying TV Information PLAYBACK While watching TV, press [DISPLAY] to display/remove the on-screen display. If no rewritable DVD disc is inserted, you would see a screen like the following: If a DVD+R or DVD+RW disc is inserted, the disc information is displayed at the first key press. If you press [DISPLAY] again then the TV information is displayed. OSD Menu Options for DVD During DVD playback, press [DISPLAY] to show information about the current disc. While the disc information is displayed, press [DISPLAY] again to show the disc remaining time.

current date and time channel number audio output signal CH-02 10:24PM AUDIO:Stereo DVD+R 00:00:00 Title 01:04:02 Shows the current title number and total number of titles, and skips to the desired title number. Changing TV Channels If no disc is playing, you can change TV channels using the [0-9] or [CH +/-] buttons on the remote control or [CH .../] buttons on the front panel.

· Antenna channels are numbered 2 through 69. Cable channels are numbered 1 through 125. 1 2 3 4 Press [DISPLAY] during playback. The on-screen display appears on the TV screen. Use [...] to select the Title icon on the on-screen display. Press [ENTER] to display a submenu. Use [.

...] to change the numbers. Press [ENTER] to confirm. 28 29 On-Screen Display Overview DVD Playback Playing a DVD 1 Press the [DVD] button to set the remote control to operate the DVD deck. Turn the TV on and select the video input source connected to the DVD Recorder+VCR. Audio system: Turn the audio system on and select the input source connected to the DVD Recorder+VCR. Chapter Shows the current chapter number and total number of chapters, and skips to the desired chapter number. 1 2 3 4 Press [DISPLAY] during playback. The on-screen display appears on the TV screen.

Use [...] to select the Chapter icon on the on-screen display. Press [ENTER] to display a submenu.

Use [...] to change the numbers. Press [ENTER] to confirm.

Angle Shows the current angle number and total number of angles, and changes the angle number. 2 Press [EJECT] to open the disc tray. 3 Load your disc in the tray with the playback side down (label side up). 4 Press [EJECT] to close the tray. 5 READING appears on the front panel display, and playback starts automatically. If playback does not start, press [PLAY ()]. @@The on-screen display appears on the TV screen. Use [...

] to select the Angle icon on the on-screen display. Press [ENTER] to display a submenu. Use [...] to change the numbers. @@@@Select a title to play then press [ENTER]. @@@@Press [TITLE] or [MENU] to return to the Disc menu. @@@@The Region code for this DVD Recorder+VCR is 1 (one). @@Some features may also be available in the Setup menu.

@@@@@The on-screen display appears on the TV screen. Use [...] to select the Audio icon on the on-screen display.

Press [ENTER] to display a submenu. Use [...] to change the numbers.

@@The on-screen display appears on the TV screen. Use [...] to select the Subtitle icon on the on-screen display. Press [ENTER] to display a submenu. Use [...] to change the numbers.

@@The DVD Recorder+VCR will go into Pause mode. @@The on-screen display appears on the TV screen. Use [...] to select the Elapsed icon on the on-screen display. Press [ENTER] to search by time. The submenu appears. Use [...

] to change the numbers and use [oe] to move left or right. Within 7 seconds, press [ENTER] to confirm the start time. @@The DVD Recorder+VCR will go into Search mode. @@@@The default speed is 1/2.

@@Press [A-B] to mark the start point. Use [FF], [NEXT] to search the end point. Press [A-B] to mark the end point. @@You can select among these angles during playback. @@@@ Selecting Titles When a disc has more than one title, you can select among all available titles as follows: 1 Press

[DISPLAY] and use [.

...] to select the Title icon. Press [ENTER] to display a submenu. Use [...] to select the desired title number and press [ENTER] to confirm. PLAYBACK Zoom The Zoom function allows you to magnify the video image and scroll around the enlarged image. Selecting Chapters When a title on a disc has more than one chapter, you can select among all available chapters as follows: 1 2 3 Press [ZOOM] during Play mode to activate the Zoom function.

Each press of the [ZOOM] button changes the Zoom level as follows: X1 (normal size) X2 X4 X1 (normal size) Use the [oe ...] buttons to scroll around the zoomed picture. To resume normal playback, press [ZOOM] repeatedly until the X1 (normal picture) appears. · The Zoom function may not work on some DVDs. · The Zoom function does not work in PAUSE mode. 1 2 Press [PREV (\$) or [NEXT ()] briefly during playback to select the next or previous chapter.

To skip directly to any chapter during playback, press [DISPLAY]. Use [.

...] to select the Chapter icon, then press [ENTER] to display a submenu.



[You're reading an excerpt. Click here to read official DAEWOO DVR-S05 user guide](http://yourpdfguides.com/dref/3406208)

<http://yourpdfguides.com/dref/3406208>

Use [..

] to select the desired chapter number and press [ENTER] to confirm. Disc Menus Many DVDs contain Disc menus that allow you to access special features.

To open a Disc menu, press [MENU]. Then use the [0-9] buttons to directly select the desired options, or use the [.

...] buttons to highlight your desired selection and press [ENTER]. Repeat 1 To repeat the currently playing chapter, press [REPEAT]. REPEAT CHAPTER appears on the TV screen. 2 To repeat the currently playing title, press [REPEAT] a second time. REPEAT TITLE appears on the TV screen. 1 2 Press [MENU]. The Disc menu is displayed. To exit the Disc menu, press [STOP] or [TV VIEW].

3 4 To repeat the whole disc, press [REPEAT] a third time. REPEAT DISC appears on the TV screen. You can play in other modes (including Repeat, A-B, Shuffle, or Scan) by pressing [REPEAT] repeatedly. · You can repeat a scene that starts when Repeat A-` displays on the screen. To mark the end point, press [A-B]. Press [A-B] again to repeat the scene. Title Menus 1 Press [TITLE]. If the current title has a menu, the Title menu will appear on the TV screen. Otherwise, the Disc menu may appear. 2 The Title menu may contain camera angles, spoken languages and subtitle options, as well as the chapters for the title.

32 33 VCR Playback Before You Begin Press the VCR button to set the remote control to operate the VCR deck. Turn the TV on and select the video input source connected to the DVD Recorder+VCR. Audio system: Turn the audio system on and select the input source connected to the DVD Recorder+VCR. VCR Playback Special Playback Features Notes on special playback features Horizontal lines (noise bars) will appear on the TV screen. This is normal. The audio is automatically muted during special playback modes, so there is no sound during search, slow motion, etc. During high-speed picture search, a short time is needed to stabilize tape speed when re-entering Play mode. Slight interference may be observed during this time. Fast Forward/Backward This function lets you visually search forward and backward for a desired scene on your tape. Playing a VHS Tape 1 Insert a prerecorded video cassette. If the DVD Recorder+VCR is powered off, it will power on automatically. Make sure the TIMER indicator on the front panel display is not lit. If it is, press [POWER] once. If a tape without a safety tab is inserted, the DVD Recorder+VCR will start playback automatically. · If the DVD Recorder+VCR is powered on by inserting a video cassette, playback will not start automatically. 1 Press [REW] or [FF] during playback. Search mode will be activated. If the DVD Recorder+VCR is left in Search mode for more than 3 minutes, the DVD Recorder+VCR will automatically resume Play mode to protect the tape and video heads. 2 To return to normal playback, press [PLAY]. 2 Press [PLAY].

The PLAY icon appears on the TV screen. It is not necessary to select the tape speed (SP, SLP) for playback. It will be automatically selected by the DVD Recorder+VCR. Still Picture 1 Press [PLAY/PAUSE] during playback. A still picture appears on the TV screen. If a still picture vibrates vertically, stabilize it by using the [TRACKING +/-] buttons on the remote control. If the DVD Recorder+VCR is left in Still mode for more than 5 minutes, the DVD Recorder+VCR will automatically enter Stop mode to protect the tape and video heads. PLAYBACK 3 Press [STOP] to stop playback. The STOP icon appears on the TV screen. If the tape reaches the end before [STOP] is pressed, the DVD Recorder+VCR will automatically stop, rewind, and eject the tape.

2 To return to normal playback, press [PLAY]. Slow Motion 1 Press [SLOW+] for Slow Motion playback. 2 Press [SLOW+] and [SLOW-] repeatedly to adjust the Slow Motion playback speed. Counter Memory Function This is useful if there is a section of tape you want to view immediately after recording or if you want to return to the same point several times. Tracking Control Auto Tracking The automatic tracking function adjusts the picture to remove snow or streaks.

It works in the following cases: · When a tape is played for the first time. · When the tape speed (SP, SLP) changes. · When streaks or snow appear because of scratches on the tape. 1 2 3 4 Begin recording or playing a tape. At the point you want to locate later, reset the real-time counter to 0:00:00 by pressing [CLEAR].

Continue to play or record. Press [STOP] when recording or playback finishes. You can make the tape automatically stop when the counter returns to about 0:00:00 `by setting the counter to 0:00:00 `in the 'Go-To Search `function under 'Setup' 'Preference' 'VCR'; see page 26. Manual Tracking If noise appears on the screen during playback, press the [TRACKING +/-] buttons on the remote control until the noise on the screen is reduced. · In case of vertical jitter, adjust these controls very carefully. · Tracking is automatically reset to normal when the tape is ejected or the power cord is unplugged for more than 3 seconds. 34 35 Other Disc Playback Audio CD/MP3 PLAYBACK The DVD Recorder+VCR can play audio CDs and MP3 files on CD-ROM, CD-R or CD-RW discs. Other Disc Playback 3 ... Audio CD ... Select the thumbnail you want to display using [...

oe] and press [ENTER]. 1 2 Insert the CD disc and close the tray. The Audio CD or MP3 CD menu appears on the TV screen after a few moments to load the disc. Use [...] to select a track or a file, then press [PLAY] or [ENTER]. During playback, the current track's elapsed playing time will appear on the front panel display and menu. Playback will stop at the end of the disc. · On the MP3 CD menu, you can display the folders on the disc.

Use [...oe] to select the folder icon on the MP3 CD menu then press [ENTER] or [PLAY]. You can also display just the tracks in the folders.

Use [...oe] to select a folder then press [ENTER]. 4 5 ... MP3 ... The full size image will be displayed and a slide show starts automatically with a time interval of 10 seconds.

Press [NEXT] or [PREV] to manually skip to the next or previous image. 3 4 5 While playing an Audio CD, use [FF] or [REW] for 2x speed playback. Use [PLAY/PAUSE] to pause playback while the disc is playing. To stop playback at any time, press [STOP]. · Press [REPEAT] to repeat a track (file) and press again to repeat the whole disc. · If the disc contains JPEG files as well as MP3 files, you can change the Play mode to display JPEG image files by pressing [TITLE]. 6 7 Press [] (or [oe]) to rotate the image (counter) clockwise. Press [STOP] to exit the slideshow. PLAYBACK · If the disc contains MP3 files as well as JPEG files, you can change the Play mode to play MP3 files by pressing [TITLE]. · When a CD contains both MP3 files and JPEG files, the default Play mode is JPEG image files.



[You're reading an excerpt. Click here to read official DAEWOO DVR-S05 user guide](http://yourpdfguides.com/dref/3406208)

<http://yourpdfguides.com/dref/3406208>