




Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DW-800C. You'll find the answers to all your questions on the DAEWOO DW-800C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO DW-800C
User guide DAEWOO DW-800C
Operating instructions DAEWOO DW-800C
Instructions for use DAEWOO DW-800C
Instruction manual DAEWOO DW-800C

DESCRIPTION OF PARTS

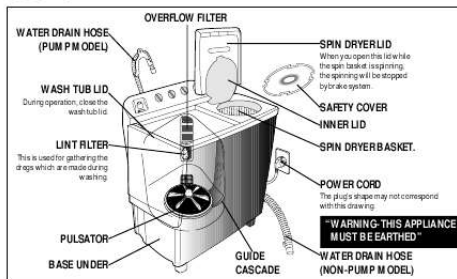

CONTROL PANEL

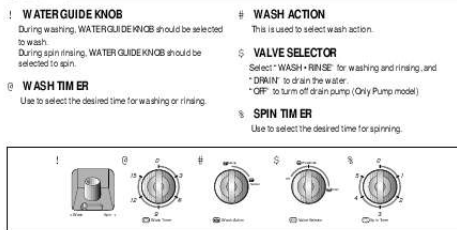

[You're reading an excerpt. Click here to read official DAEWOO DW-800C user guide](http://yourpdfguides.com/dref/3408229)
<http://yourpdfguides.com/dref/3408229>

Manual abstract:

3.26 9:32 PM 1 DESCRIPTION OF PARTS OVERFLOW FILTER SPIN DRYER LID When you open this lid while the spin basket is spinning, the spinning will be stopped by brake system. WATER DRAIN HOSE (PUMP MODEL) WASH TUB LID During operation, close the wash tub lid. SAFETY COVER INNER LID LINT FILTER This is used for gathering the dregs which are made during washing. SPIN DRYER BASKET. POWER CORD The plug's shape may not correspond with this drawing. PULSATOR GUIDE CASCADE "WARNING-THIS APPLIANCE MUST BE EARTHED" WATER DRAIN HOSE (NON-PUMP MODEL) BASE UNDER CONTROL PANEL # WASH ACTION This is used to select wash action. During washing, WATER GUIDE KNOB should be selected to wash. During spin rinsing, WATER GUIDE KNOB should be selected to spin. ! @@@@ (See page 5) ^ Load laundry in the wash tub. & Put the wash tub lid. * Set the WASH TIMER 1~15 minutes. (After washing, set the VALVE SELECTOR to "DRAIN" for drain. ! Before starting washing, check followings. Lay the drain hose down toward a sink hole.

(In case no drain pump model) Place the drain hose in sink or bath. (In case drain pump model) Connect the water supply hose and open the water tap. Connect the power cord to the power supply outlet. s TO WASH @ Set the WASH ACTION SELECTOR to the desired mode. # Set the VALVE SELECTOR to "WASH · RINSE".

(In case drain pump model "WASH · RINSE" OR "OFF") s TO RINSE ! Set the VALVE SELECTOR to "WASH · RINSE". (In case drain pump model "WASH · RINSE" or "OFF") @ Supply the proper amount of water. # Set the WASH TIMER 2~3 minutes. \$ Drain the water. Set the VALVE SELECTOR to "DRAIN". % Repeat this cycle until drain water is clean. (2~3 cycles) s TO OVER FLOW RINSE ! Set the VALVE SELECTOR to "WASH · RINSE". (In case drain pump model "WASH · RINSE" or "OFF") @ Keep supplying water. (Adjust water pressure to ensure that the amount of supplied dose not exceed the amount of drain.) # Set the WASH TIMER 6~8 minutes.

\$ As soon as the WASH TIMER shuts off or the rinsing water became clear, turn off the water tap. % Drain the water. Set the VALVE SELECTOR to "DRAIN". s TO SPIN RINSE(ADDITIONAL COURSE) After rinsing you can select this course for more effective rinse. ! Load the laundry evenly into the spin basket. @ Cover the laundry with safety cover and close the inner lid. # Close the spin dryer lid. \$ Set the WATER GUIDE KNOB to "SPIN". % Supply water for about 1 minute. Adjust the water flow not to overflow to the side of the wash tub.

^ After water supply, Set the SPIN TIMER 1~2 minutes. & Repeat % ~^, if you want. s TO SPIN DRY ! Transfer the landry into the spin basket and arrange it evenly. @ Be sure to put the safety cover and close the inner lid. # Close the spin dryer lid.

\$ Set the SPIN TIMER 1~5 minutes. 2 ; ; ; ; DW-800C(¿)-Deme 01.3.26 9:32 PM 3 CAUTIONS To avoid electrical shock, use a metal pipe for the ground connection. @@@@ It is possible to overflow under high pressure.

@@@Also, clothing may be deformed or decolored. @@(Below 50°C) s Before washing, check all pockets. s Close the water tap a little if the water pressure is too high. @@@@ The other end of drain hose setting toward the bath or sinkhole. # Install the drain hose under 85cm from the ground. (In case DRAIN PUMP model) (NO DRAIN PUMP) Leave some space. Space at least 10cm between the washer and the wall. Place washer on a sturdy and flat surface. @@(Allowable inclination is max. 2°) Never install the washer near water.

@@@Avoid direct sunlight or heating devices. @@Do not place it under direct sunlight. Avoid cold place. @@@Close the wash tub lid. s CLEANING THE DRAIN FILTER In case of incomplete drain, remove the lint from the drain filter with soft brush. s CLEANING THE WASHER BODY Wipe of stains on the base and the control panel with soft cloth. Do not use benzene, thinner, cleanser or wax. (Painted surface or plastic parts will be damaged.) 4 ; ; ; ; DW-800C(¿)-Deme 01.3.

26 9:33 PM 5 LAUNDRY GUIDE s WATER LEVEL & DETERGENT AMOUNT OF DET. WATER LEVEL 44g LOW(44l) 52g MID(52l) 60g HIGH(60l) The amount of detergent is average. Follow the instructions printed on the package of detergent for amount of detergent. Choose the amount of detergent depending on the fabric type. e" s WASHING TIME & WASH ACTION TABLE KIND OF CLOTHING WASHING TIME WASH ACTION STRONG Extremely soiled heavy fabric 10~15 minutes Linen, cotton, etc.

8~10 minutes 7 minutes 2~5 minutes NORMAL Ordinary clothes (underwear, etc.) Slightly soiled synthetic fabric 100% wool, mixed wool knitting, thin synthetic fabric with tags 2~5 minutes indicating hand washing When you fill the water up in the wash tub, refer the upper line of each marksd on the overflow filter. H M L e" e" s WHEN YOU PUT THE LAUNDRY INTO THE SPIN BASKET TYPE OF LAUNDRY thin (synthetic fabric) wool cotton thick (cotton) Press the laundry evenly and put the safety cover into the spin basket drum as shown in figures. s SPIN DRY TIME TIME 1 min. 1~2 min.

3~5 min. 5 min. BEFORE YOU CALL FOR SERVICE TROUBLE CHECK POINT Check the power cord is connected to a power outlet well. Power stoppage? Is the laundry overloaded? Is the laundry arranged evenly? TROUBLE Incomplete draining CHECK POINT Is the drain filter clogged with lint? Power stoppage? Is the spin dryer lid closed completely? The washer does not work. Clothes will not move freely. @@s Never splash water on the control panel. @@Especially blanket, long skirt and blue jean. s Spin rinse function that helps rinsing. @@s Lint filter that seperates lint from the laundry. DW-800C(¿)-Deme 01.

3.26 9:33 PM 7 VISION CREATIVE, INC. ; ,. °fi 5 j 526 .¿ . " ø ° 16 ^ . a . TEL DWM-800CN(¿) Deme , DW-800C 1 ' 2 ' 00.9.19 6 ' 7 ' 8 ' 9 ' 10 ' MODEL BUYER 7 3 ' 4 ' 5 ' ` (2000.9.22) ¿... , µ¿ ¿ MEMO ¿ ¶ ^ < Û ^ VISION . a . Á ` TEL: 757-9340 FAX: 774-1039 .



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DW-800C user guide](#)

<http://yourpdfguides.com/dref/3408229>